



ICP DAS GW-2492M BACnet IP Server to Modbus RTU Master Gateway User Manual

[Home](#) » [ICP DAS](#) » ICP DAS GW-2492M BACnet IP Server to Modbus RTU Master Gateway User Manual 

ICP DAS GW-2492M BACnet IP Server to Modbus RTU Master Gateway User Manual



Contents

- [1 Important Information](#)
- [2 General Information](#)
- [3 Features](#)
- [4 Hardware](#)
- [5 Getting Started With GW-2492M](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)

Important Information

Warranty

All products manufactured by ICP DAS are under warranty regarding defective materials for a period of one year, beginning from the date of delivery to the original purchaser.

Warning

ICP DAS assumes no liability for any damage resulting from the use of this product. ICP DAS reserves the right to change this manual at any time without notice. The information furnished by ICP DAS is believed to be accurate and reliable. However, no responsibility is assumed by ICP DAS for its use, not for any infringements of patents or other rights of third parties resulting from its use.

Copyright

Copyright © 2021 by ICP DAS Co., Ltd. All rights are reserved.

Trademark

Names are used for identification purpose only and may be registered trademarks of their respective companies.

Contact us

If you encounter any problems while operating this device, feel free to contact us via mail at: service@icpdas.com.

General Information

BACnet/IP Protocol

BACnet is a communications protocol for building automation and control networks. It is an ASHRAE, ANSI, and ISO standard protocol. BACnet was designed to allow communication of building automation and control systems for applications such as heating, ventilating, and air-conditioning control, lighting control, access control, and fire detection systems and their associated equipment. The protocol provides mechanisms for computerized building automation devices to exchange information, regardless of the particular building service they perform. BACnet/IP is based on Ethernet and used UDP to transmit BACnet network packets (NPDU).

Messages are transmitted such as “Who-is” and “Who-has” through broadcast feature of UDP.

The feature allows that the user could search for device information without knowing the actual location of the device.

Modbus Protocol

Modbus protocol mainly has two versions RTU and TCP. RTU can be realized through COM interface and TCP can be realized through Ethernet. These two protocols are commonly used in industrial control and automation industry.

Modbus RTU is used to transmit and exchange data via RS-485. It's a serial communication between master and slave. Every slave has a unique address to identify. Users could implement communication through using different function codes.

MODBUS TCP is a variant of MODBUS RTU. MODBUS messages are passed in an


"Intranet" or "Internet" environment by using the TCP/IP protocol. The most common use of this protocol is to connect PLCs and gateways to other simple fieldbus or I/O networks via Ethernet.

About GW-2492M

GW-2492M is a BACnet/IP Server to Modbus RTU Master Gateway. It allows BACnet client application to access Modbus RTU devices via GW-2492M module. The BACnet/IP protocol is used to relay and exchange information between building devices. GW-2492M contains a large number of BACnet objects (AI, AO, AV, BI, BO, BV, MSI, MSO, MSV) gives you flexibility in mapping Modbus RTU registers to any combination of BACnet objects. Multiple BIBBs (DS-RP-B, DS-RPM-B, DS-WP-B, DS-WPM-B,...etc.) are supported. All the data transfer is configurable using a standard web browser.

Features

- Read/Write Modbus registers via BACnet objects.
- Configurable BACnet/IP Server.
- Configurable Modbus RTU Master.
- Supports BACnet AI, AO, AV, BI, BO, BV, MSI, MSO, MSV Object Types
- Supports Modbus discrete inputs, coils, input registers and holding registers
- Supports up to 180 DI, 180 DO, 180 AI and 180 AO to transfer to BACnet Objects
- Simple data translation allows you to manipulate data as it passes between protocol

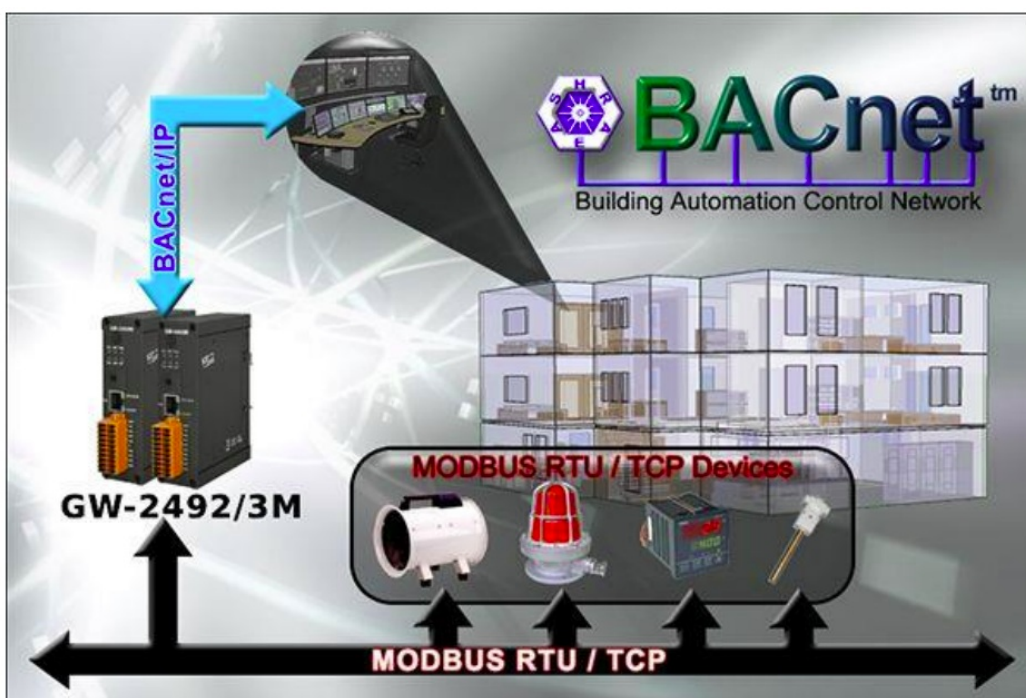


GW-2492M (BACnet/IP Server to Modbus RTU Master Gateway)

Ethernet	
Controller	10/100Base-TX Ethernet Controller (Auto-negotiating, Auto_MDIX)
Connector	RJ-45 with Ethernet indicator
Protocol	BACnet/IP Server
Max. Connections	8
BIBBS	DS-RP-B, DS-RPM-B, DS-WP-B, DS-WPM-B, DM-DDB-B, DM-DOB-B, DM-DCC-B, DM-RD-B
COM Interface	
Connector	Terminal block (RS485:D+, D- ; RS232:TXD, RXD, GND)
Baud Rate (bps)	1200, 2400, 4800, 9600, 19200, 38400, 57600, 115200
Comm. format	N81, N82, O71, O81, E71, E81
Terminator Resistor	Built-in 120 ohm terminator resistor, enabled/disabled via Jump
Isolation	3 kV VDC for DC to DC, 2500 Vrms for photo couple
Protocol	BACnet RTU Master
Maximum Slaves	32
Power	
Protection	Power reverse polarity protection
EMS Protection	ESD, Surge, EFT
Supply Voltage	+10 VDC ~ +30 VDC
Consumption	5 W @ 24 VDC
LED Indicator	
LED (Round)	Power (1), BACnet MS/TP Status (1), BACnet MS/TP Net(1), Modbus TCP TxD / Rx D / Link (3)
Ethernet LED	Ethernet LED Ethernet Status (RJ-45) (2)
Mechanism	
Installation	DIN-Rail
Casing	Metal
Dimensions	33 x 120 x 116 mm (W x L x H)
Environment	
Operating Temp.	-25°C ~ +75°C
Storage Temp.	-30°C ~ +85°C
Humidity	10 ~ 90% RH, non-condensing


Hardware

Size (Unit : mm)

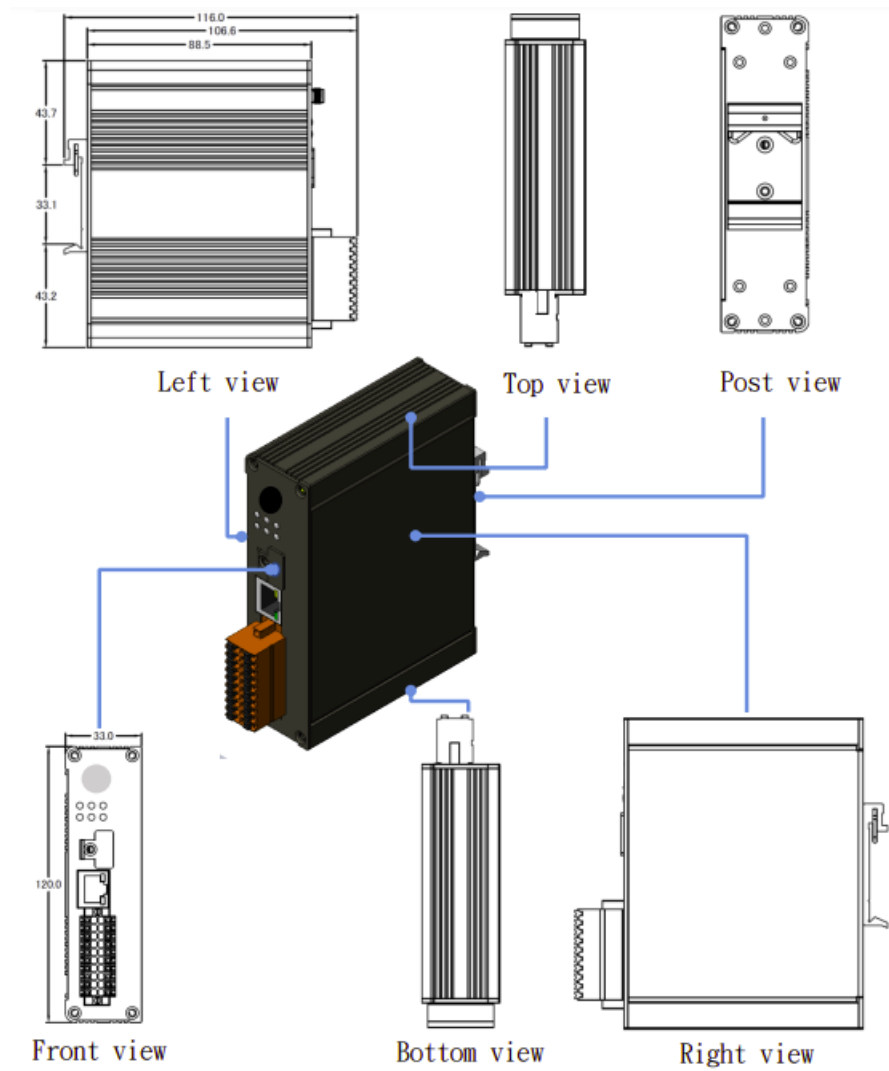


Appearance

The GW-2492M is equipped with a RJ45 port for Ethernet LAN connection. When 100BASE-TX is operating, the 10/100M LED is lit orange. When an Ethernet link is detected and an Ethernet packet is received, the Link/Act LED is lit green.

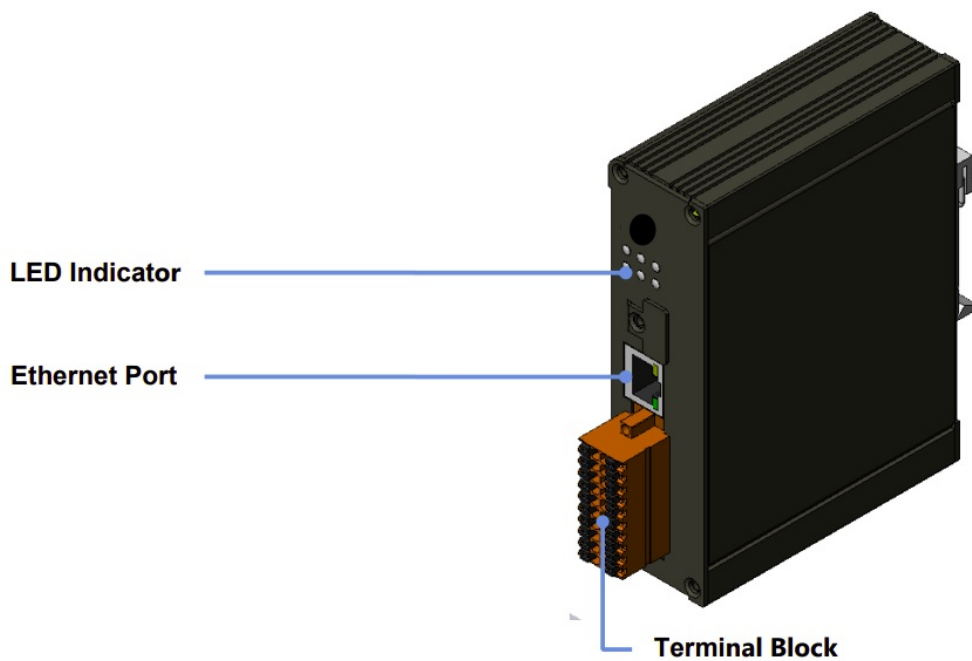

GW-2492M

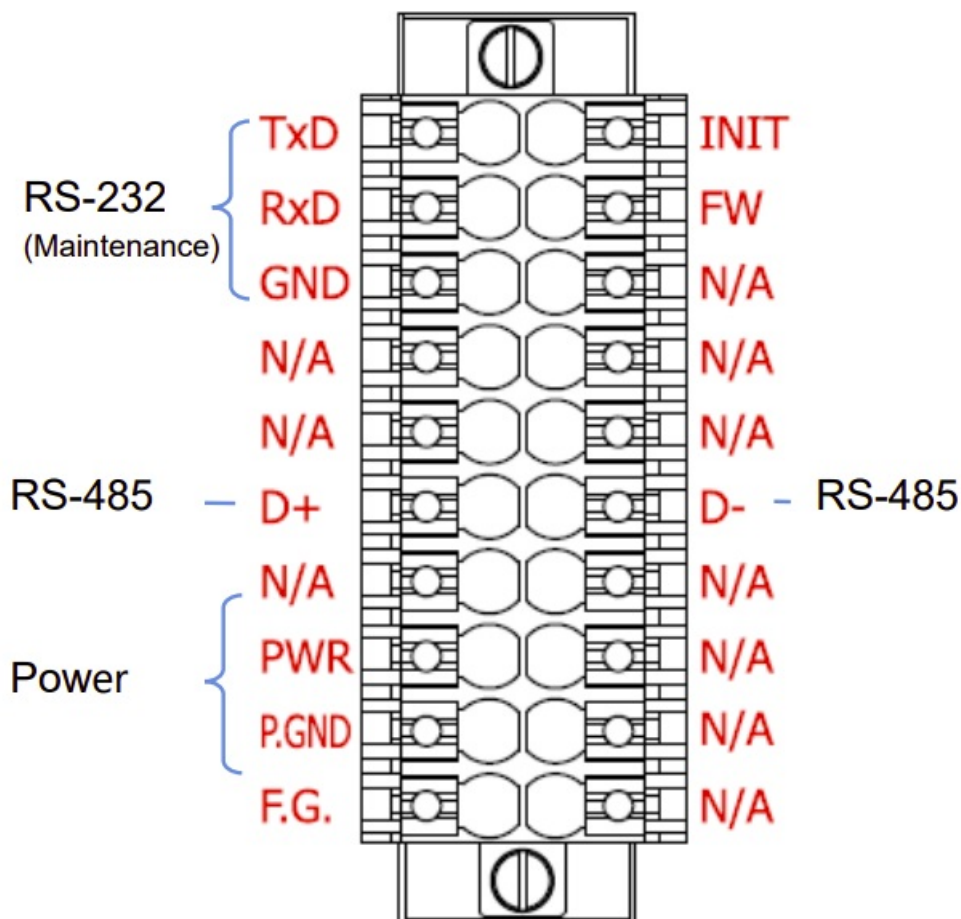

LED Indicator

There are six LEDs to indicate the various states of the GW-2492M. The following is the illustration of these six LEDs.

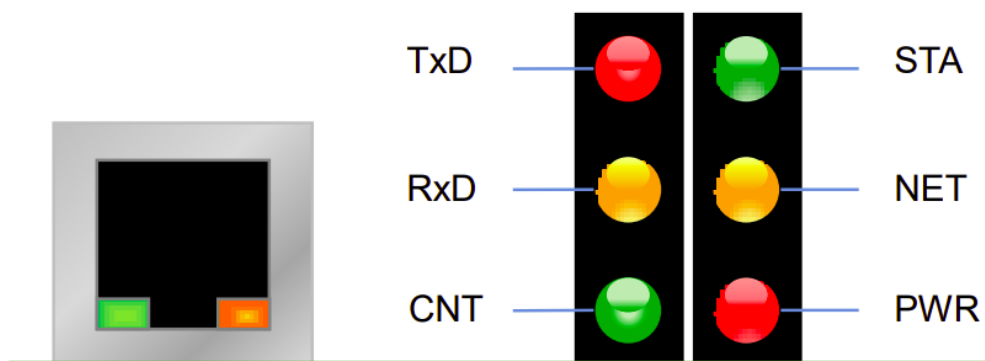


Figure 2.1 LED position of the GW-2492M

LED Name	GW-2492M Status	LED Status
ALL LEDs	FW Updating Mode	LED will be twinkled sequentially.
	FW Initial Mode	LED will be twinkled per 500ms.
PWR(Module)	Power On	On
	Power Failure	Off
NET(BACnet/IP)	Connected by least one client	On
	No clients connect	Blink per 200 ms
STA(BACnet/IP)	Communication OK	On
	Communication Failure	Blink per 200 ms
CNT(Modbus)	Connect to least one device	On
	No devices are connected	Blink per 200 ms
RxD(Modbus)	Data reception	On
	No Data reception	Off
TxD (Modbus)	Data transmission	On
	No Data reception	Off

Getting Started With GW-2492M

This chapter mainly describes the operation process of the GW-2492M.

Wiring Preparation

Before setting up the GW-2492M, please complete the necessary preparation about wiring.

Please follow Figure 2.1 wiring diagram, to wire the following items:

1. **Power Supply** : +10 VDC ~ +30 VDC
2. **RS-485 D+ & D-** (for GW-2492M's serial communication)

3. **Ethernet** Connect the GW-2492M and computer into the same LAN through cable or Ethernet Switch/Hub.
4. **INIT** Connect to GND to initial mode. (Address IP:192.168.255.1)
5. **FW** Connect to GND and insert RJ45 to download mode. (LED will be twinkled.)

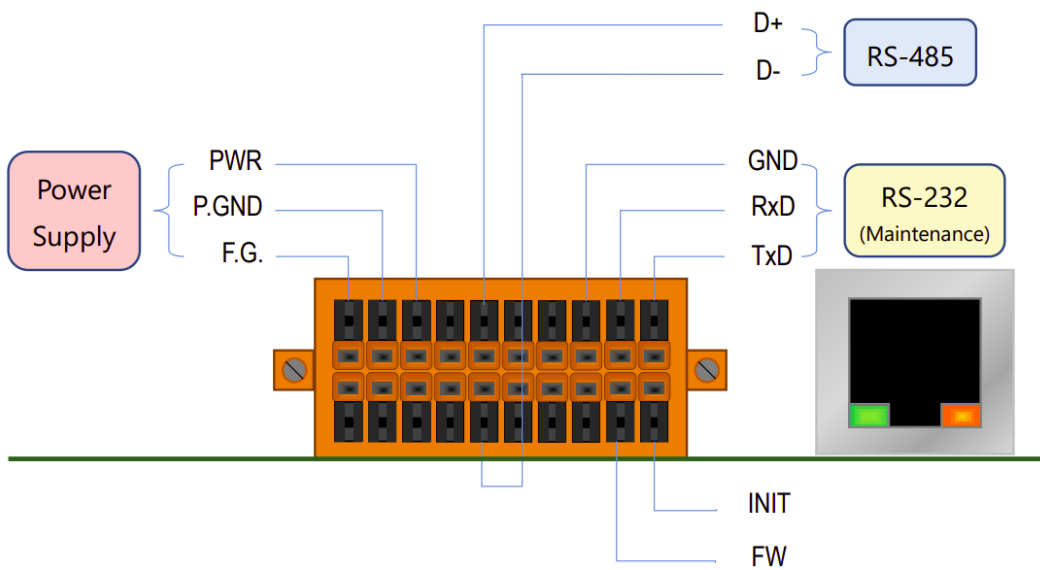


Figure 3.1 GW-2492M Wiring Diagram

GW-2492M Web Configuration

Please follow those steps to configure the GW-2492M via web browser.

Step0

Use the default account “admin” and the password “admin” to enter the main setting page.

The login form for the GW-2492M web configuration interface. It features the ICP DAS logo and the product name GW-2492M. Below the product name, it says 'BACnet/IP to Modbus Gateway' and includes the BACnet logo. The form has two input fields: 'Account:' and 'Password:'. Below these fields is a 'Login' button.

Step1

The firmware version is shown on the web.



ICP DAS GW-2492M BACnet/IP to Modbus Gateway

System Information

System

Firmware Version

Account Management


Module Information

Model Name	GW-2492M
Firmware Version	v1.100

© ICP DAS Co., Ltd. All Rights Reserved

Step2

The GW-2492M is based on the information security law. Users need to change account or password for the first time before using it.

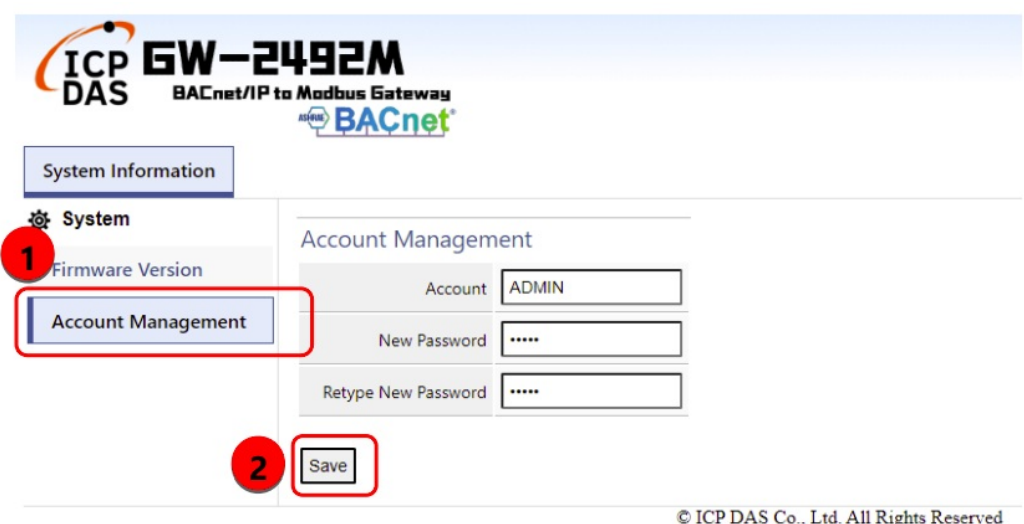

ICP DAS GW-2492M BACnet/IP to Modbus Gateway

System Information

System

1 Account Management

Account Management


Account	ADMIN
New Password	*****
Retype New Password	*****

2 Save

© ICP DAS Co., Ltd. All Rights Reserved

Step3

Please refresh the web page and login again with new account and password. "Module Setting" page will appear. Users could set the IP of the module.

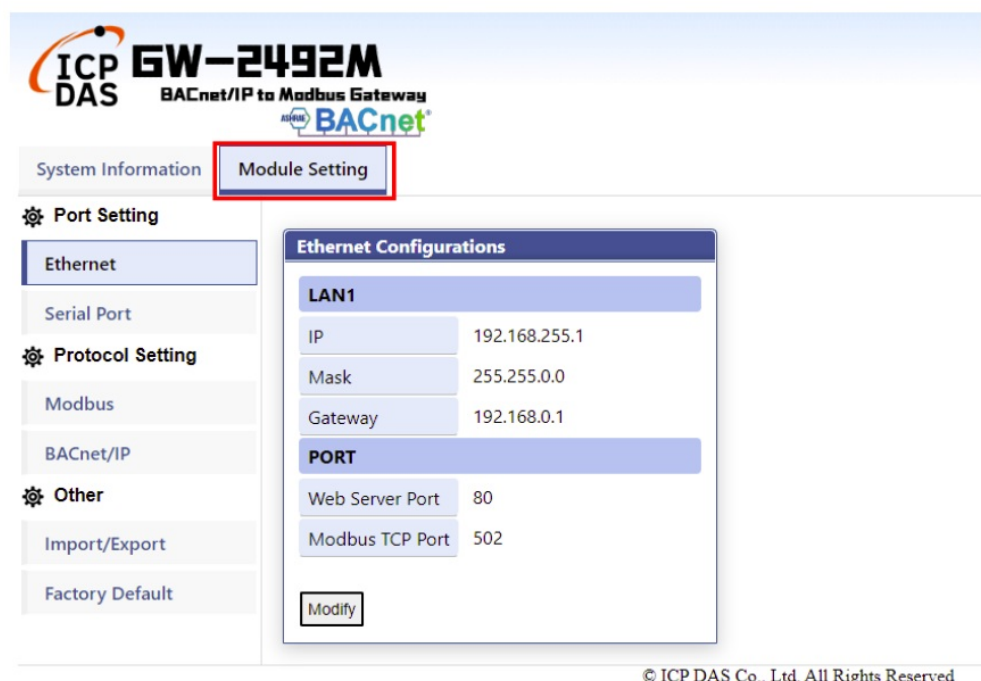

ICP DAS GW-2492M BACnet/IP to Modbus Gateway

System Information

Module Setting

Port Setting

Ethernet

Serial Port

Protocol Setting

Modbus

BACnet/IP

Other

Import/Export

Factory Default

Ethernet Configurations

LAN1	
IP	192.168.255.1
Mask	255.255.0.0
Gateway	192.168.0.1
PORT	
Web Server Port	80
Modbus TCP Port	502

Modify

© ICP DAS Co., Ltd. All Rights Reserved

Step4

Press “Serial Port” to modify the parameters of the Modbus.

The screenshot shows the ICP DAS GW-2492M web interface. The top navigation bar includes "System Information" and "Module Setting". Under "Module Setting", there are three main sections: "Port Setting", "Protocol Setting", and "Other". The "Port Setting" section is expanded, showing "Ethernet" and "Serial Port". The "Serial Port" option is highlighted with a red box. To the right, the "Modbus Configurations" window is open, displaying the following settings:

Modbus Configurations	
COM	RS-485
Baud Rate	115200
Data Format	N,8,1
<input type="button" value="Modify"/>	

At the bottom right of the interface, the copyright notice "© ICP DAS Co., Ltd. All Rights Reserved" is visible.

Step5-1

Press “Modify” to configure the parameters of Modbus in the Modbus page.


The screenshot shows the ICP DAS GW-2492M web interface. The top navigation bar includes "System Information" and "Module Setting". Under "Module Setting", there are three main sections: "Port Setting", "Protocol Setting", and "Other". The "Protocol Setting" section is expanded, showing "Modbus", "BACnet/IP", and "Other". The "Modbus" option is highlighted with a red box and a red circle with the number "1". To the right, the "Modbus Configurations" window is open, displaying the following settings:

Modbus Information	
Modbus Mode	RTU Master
Modbus Timeout	500
Modbus Retry	0
Polling Interval	200
<input type="button" value="Modify"/>	


The "Modify" button is highlighted with a red box and a red circle with the number "2". At the bottom right of the interface, the copyright notice "© ICP DAS Co., Ltd. All Rights Reserved" is visible.

Step5-2

1. Press “+” button to add a Modbus RTU node.
2. After editing “Modbus Name” and “Address”, press “+” button to add Modbus registers.
3. Press “+” button to add Modbus function codes and registers range.
4. Finally, the users need to press “save” to save all Modbus configuration into GW-2492M.
5. The users need to restart GW-2492M to make configuration work

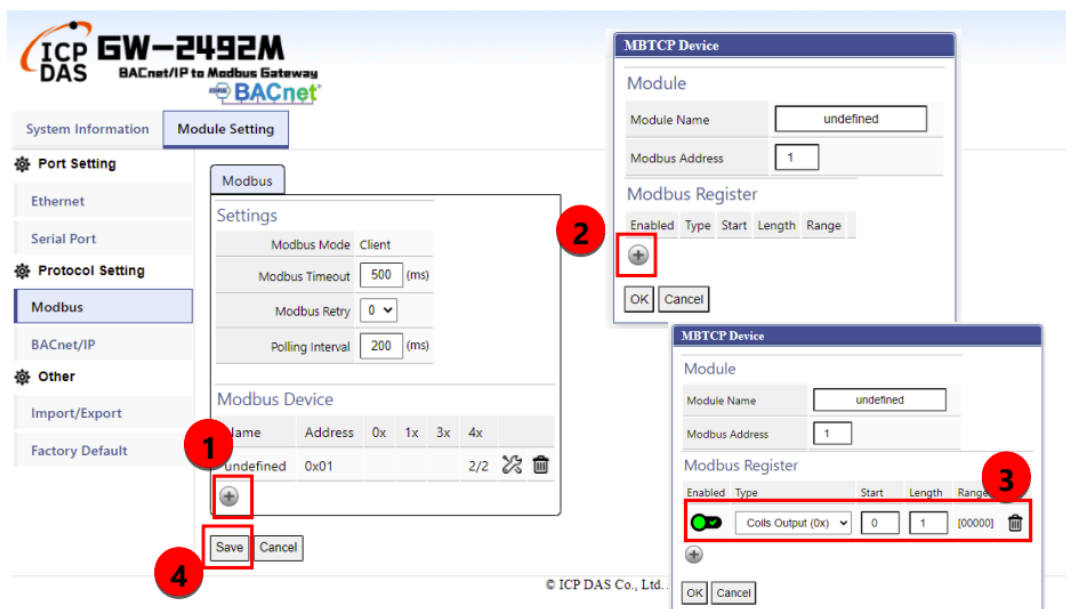

1. Press the icon to edit a Modbus registers of that node
2. Press the icon to delete that Modbus node.

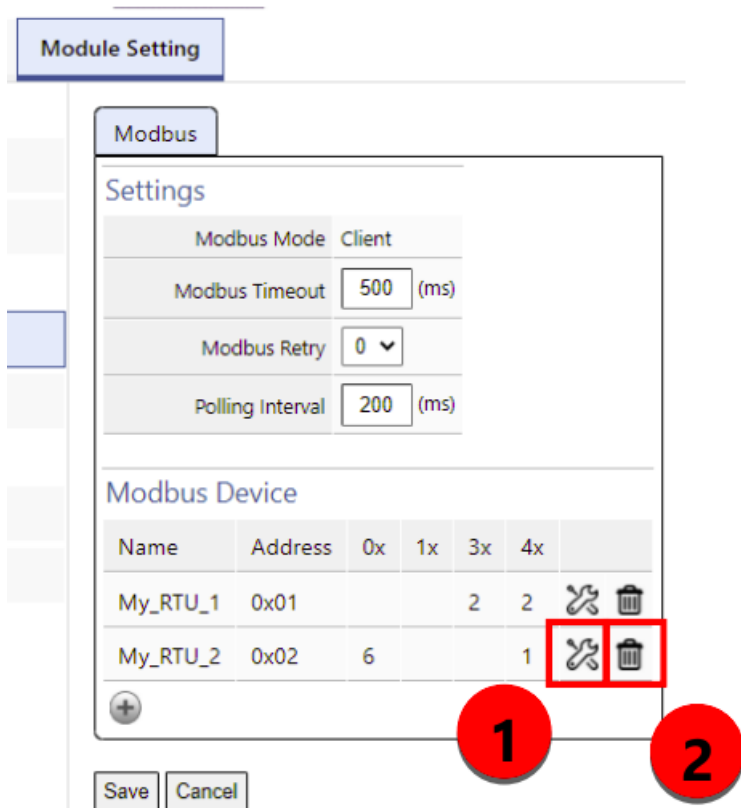

Step6

Press "+" button to add a BACnet object.

Port Setting

Ethernet

Serial Port

Protocol Setting

Modbus

BACnet/IP

Other

Import/Export

Factory Default

BACnet

BACnet Objects

Object	No(0-255)	Type	Address	Format	Index	Range
<div style="border: 1px solid red; padding: 2px; display: inline-block;">+</div>						



Save

1. The "Object" field is BACnet object which support AI/AO/AV/BI/BO/BV/MI/MO/MV.
2. The "No" field is the serial number of the BACnet object. If you have AI*3 and AO*4, you need assign the No as AI-0, AI-1, AI-2, AO-0, AO-1, AO-2, AO-3.
3. The "Type" field is the Modbus register type. The common configuration is shown below.
 - BACnet BO object maps to Modbus Coil Output(0x)
 - BACnet BI object maps to Modbus Input Status(1x)
 - BACnet AO object maps to Modbus Holding Register(4x)
 - BACnet AI object maps to Modbus Input Register(3x)
4. The "Address" field is the start address of the Integrated Modbus Register (Note1).
5. The "Format" field is the data format which support bool/int16/uint16/int32/uint32/float.
6. The "Index" field is reserved.
7. The "Range" field is the exact Modbus address of the register.

ICP DAS GW-2492M
BACnet/IP to Modbus Gateway

System Information | **Module Setting**

Port Setting
Ethernet
Serial Port

Protocol Setting
Modbus
BACnet/IP
Other

Other
Import/Export
Factory Default

BACnet


BACnet Objects

Object	No(0-255)	Type	Address	Format	Index	Range	
AI	0	3x	0	Int16	0	[30000]	
AI	1	3x	1	Int16	0	[30001]	
AO	0	4x	0	Int16	0	[40000]	
AO	1	4x	1	Bool	0	[40001]	
BI	0	1x	0	Bool	0	[10000]	
BI	1	1x	1	Bool	0	[10001]	
BI	2	1x	2	Bool	0	[10002]	

Save

Note 1.

In the GW-2492M, all remote Modbus data which come from different remote Modbus RTU devices will be integrated by their register type. It means that all remote Coil Output data will be putted into a Coil Output integrated buffer. All remote Input Status data will be putted into an Input Status integrated buffer. There are also have Holding Register integrated buffer and Input Register integrated buffer in the GW-2492M. They were integrated as the illustration shown below.

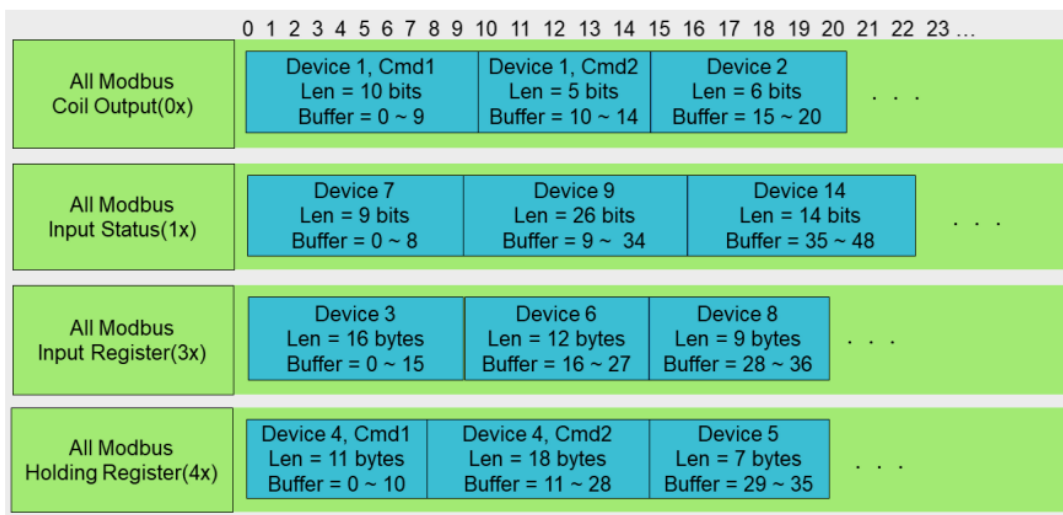

The BACnet object will read or write the data from those integrated buffers. Those Modbus data with the same type will be ordered by the Modbus Configuration Index in the integrated buffer. The first configuration Modbus command will be in the first address of the buffer. The order was shown below.

Modbus Retry
0

Polling Interval
200
(ms)

Modbus Device

Name	Address	0x	1x	3x	4x	
Device1	0x01	10/5				
Device7	0x01		9			
Device2	0x01	6				
Device3	0x01			16		
Device9	0x01		26			
Device6	0x01			12		
Device4	0x01				11/18	
Device8	0x01			9		
Device5	0x01				7	
Device14	0x01		14			

+

Save
Cancel

For example by the illustration in Holding Register(4x), the Device4 and command 1 is the first configuration item of all Holding Register(4x). The Device4 and command 1 occupies the first address of the Holding Register buffer. The “Address” field of the BACnet object means that the address in those integrated buffers. For example by the illustration, if the address of the BACnet “BO” object is 11, it means that the data of the “BO” object comes from the second bit of the

Device 1 and command 2 in the Coil Output buffer. If the address of the BACnet “AO” object(int16) is 7, it means that the output data of the “AO” object(int16) will be written to the 8-th words of Device 4 and command 1 in the Holding Register buffer.

Import/Export Configuration


Export All Configurations to CSV file:

The GW-2492M supports export function to write all configurations into a csv file.



Import All Configurations from CSV file :

The users could import all configurations from a CSV file. It is convenient to move all configurations from one GW-2492M to another one. Firstly, the users select the CSV file. And then, they can press “Import” button to import configurations into the GW-2492M modules.

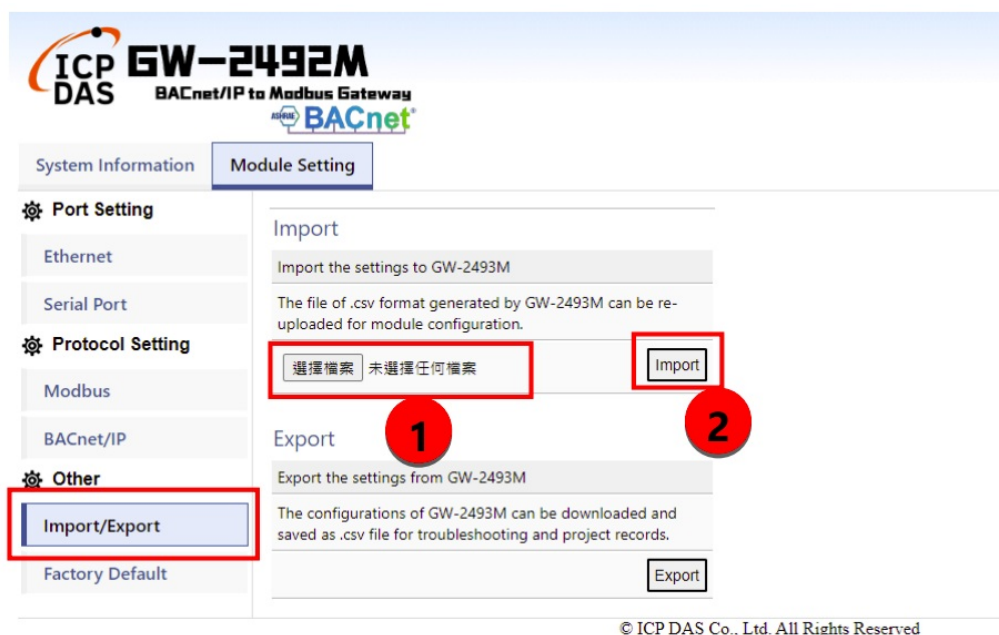


How to restore default Account/Password

If the users have forgotten the login information, they can follow the steps to restore default login information.

1. Short the “INIT” and “GND” pin of GW-2492M and turn on the power.
2. The GW-2492M will restore the login information.

- **IP** : 192.168.255.1
- **Mask** : 255. 255. 0 .0

- **Gateway:** 192.168.0.1
- **Login Account:** admin
- **Login Password:** admin

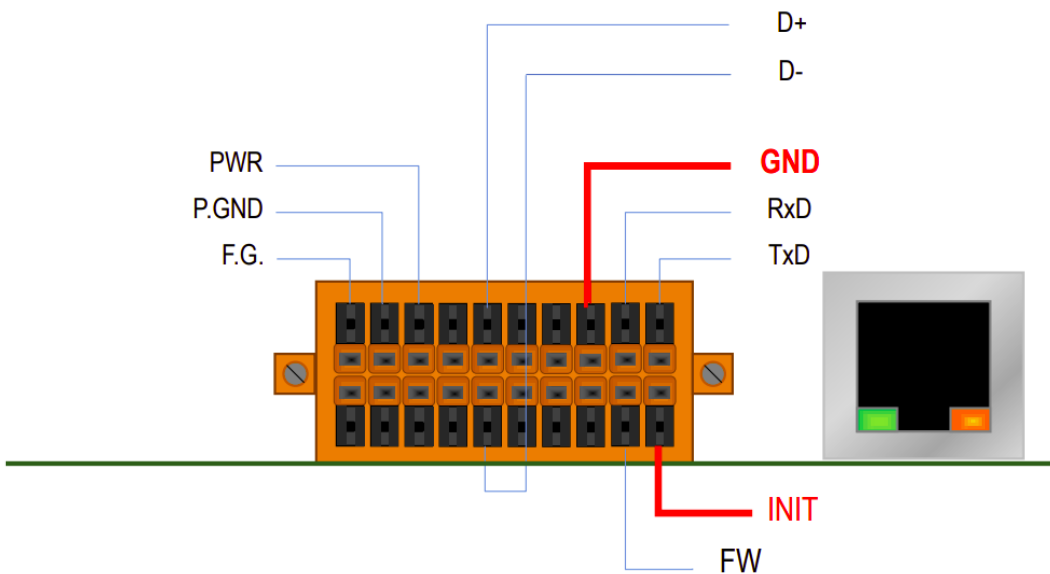

How to update the firmware

The GW-2492M can update the firmware via a software tool (Windows) by the following:

1. Download the latest version of the firmware program and update Tool (FW_Update_Tool) on the website of the GW-2492M and store it in a computer that you want to connect to GW-2492M.

Update Tool: Please refers to ->

<https://www.icpdas.com/en/download/show.php?num=7823&model=GW-2492M>

2. Short the "FW" and "GND" pin of the GW-2492M and turn on the power. When the six LEDs of the GW-2492M turn blinking alternately, the GW-2492M is successfully entered the firmware updating mode.

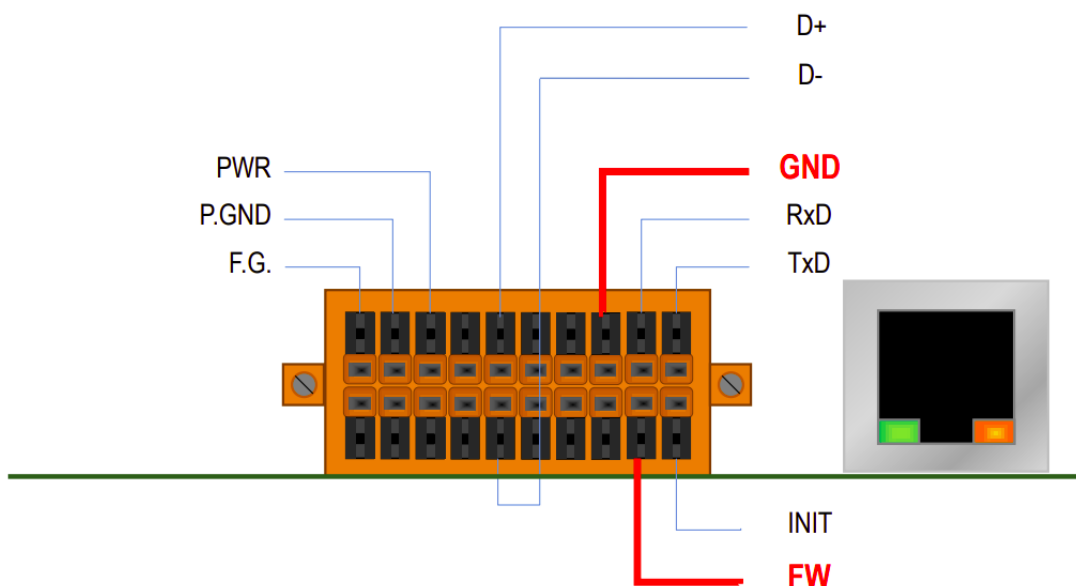


Figure 3.2 GW-2492M FW & GND Pin

Execute "FW_Update_Tool.exe" with the administrator privileges () and follow the steps as

Figure 3.3:

- In "Download Interface", select a network port for connecting to GW-2492M
- In "Firmware Path", select the latest firmware update file (GW_2492M_XXXX.fw).
- In "Firmware Update", click "Update" to start the firmware updating.

When the update is completed, "Update OK" will be displayed in the "FW_Update_Tool" window to indicate that the firmware updating is successful. Next, remove the short connection between FW and GND, and reboot the power supply, then check the current firmware version on the Web interface.

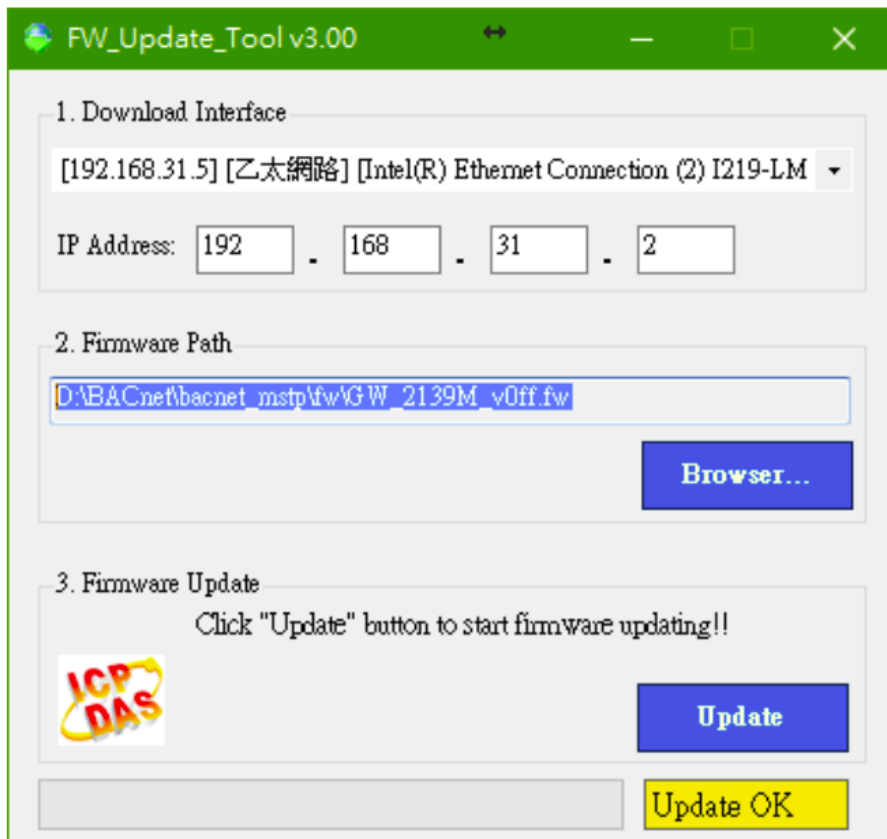



Figure 3.3 FW_Update_Tool firmware update steps

GW-2492M (BACnet/IP Server to Modbus RTU Master Gateway) User Manual Ver 1.10

Copyright © 2021 ICP DAS Co., Ltd. All Rights Reserved E-mail: service@icpdas.com



Documents / Resources

 The image shows the cover of the ICP DAS GW-2492M User Manual. It features the ICP DAS logo at the top left, the title 'User Manual' and 'GW-2492M' in the center, and a photograph of the two black industrial gateway units at the bottom. The text 'BACnet IP Server to Modbus RTU Master Gateway' is also visible.	<p>ICP DAS GW-2492M BACnet IP Server to Modbus RTU Master Gateway [pdf] User Manual GW-2139M CR, GW-2492M, GW-2492M BACnet IP Server to Modbus RTU Master Gateway, BACnet IP Server to Modbus RTU Master Gateway, IP Server to Modbus RTU Master Gateway, Server to Modbus RTU Master Gateway, Modbus RTU Master Gateway, RTU Master Gateway, Master Gateway, Gateway</p>
--	---

References

-  [ICP DAS](#)