

InfiRay SD2 Dual Spectrum Network Speed Dome



# InfiRay SD2 Dual Spectrum Network Speed Dome User Guide

[Home](#) » [InfiRay](#) » InfiRay SD2 Dual Spectrum Network Speed Dome User Guide 

## Contents

- [1 InfiRay SD2 Dual Spectrum Network Speed Dome](#)
- [2 Product Information](#)
- [3 Preface](#)
- [4 Important Safety Notice](#)
- [5 Camera Introduction](#)
- [6 Camera Installation](#)
- [7 Operation Guide](#)
- [8 Appendix A Camera Maintenance](#)
- [9 Appendix B Emissivity of Common Materials](#)
- [10 Documents / Resources](#)
  - [10.1 References](#)



**InfiRay SD2 Dual Spectrum Network Speed Dome**



## Product Information

### Specifications

- **Product Name:** Dual-spectrum Network Speed Dome
- **Model:** V1.0.0

### Frequently Asked Questions





- **Q:** What should I do if the camera stops working?
  - **A:** Contact the seller or manufacturer for assistance. Do not attempt to repair the camera yourself.
- **Q:** Can I clean the camera with water?
  - **A:** No, use a soft dry cloth for cleaning. Do not soak the camera in water.

### Preface

The following is about the correct use of the camera. In order to prevent danger and loss of property, please read this manual carefully before using the camera and strictly follow it during use. Please keep the manual properly after reading.

### Symbol Description

For the symbols that appear in the document, the description is as follows.

 <b>Instruction</b>	The instructions are an emphasis and supplement to the main text.
 <b>Caution</b>	Cautions indicates potential risks. If ignored, it may lead to product damage, data loss, product performance degradation, or unpredictable results.
 <b>Warning</b>	Warnings indicate that low or medium potential risk exists. Ignorance of the warnings may lead to light or medium damage for people.
 <b>Danger</b>	Dangerous text indicates that there is a high potential risk. If it is not avoided, a major risk of personal injury or even death may be caused.

## Important Safety Notice

### Warnings

The local electrical safety standards should be rigorously followed in the process of installation and usage.

- Please use power adapter which is produced by regular companies. Please check whether the power is normal or not before starting the camera. (Power supply requirements should comply with that on the product labels.)
- In order to make emergency power off when necessary, please install power-off equipment which is easy to use when installing the wires.
- Please protect power lines from being treaded or pressed, especially the connecting points which are led from the plug, power socket or other unit.
- Please make sure the camera is fixed firmly in case of being installed on walls or ceilings.
- If the camera does not work normally, please contact the purchased shops or factories. Do not disassemble or revise the camera in any way (The manufacturing company is not responsible for problems that are caused by unauthorized modification or maintenance.)

### Cautions

- Please do not put the camera in damp, dusty, extremely hot or cold places, or places with corrosive gas or unstable light.
- Please transport, use and store the camera within the allowable humidity and temperature range.
- Avoid making the lens aiming at strong light (e.g. sun or laser), otherwise the imaging sensor would be damaged.
- Please do not block the vents near the camera in case of heat accumulated.
- Please use the factory packaging or materials of the same quality when shipping the device.
- Please do not press, vibrate violently or soak the camera during transportation, storage or installation.
- It is advised to use the camera with lighting protector.
- Soft dry cloth can be used to clean the camera. For the dirt difficult to clean, please use soft cloth with little neutral detergent and then wipe dry. Do not use volatile detergent like alcohol, benzene or diluent, or strong and abrasive detergent, otherwise the camera coating would be damaged and also the camera performance could be degraded.
- The lens cover is optical device, so please do not touch directly or wipe the cover. Soft brush or hairdryer can be used to blow the dust away. For the grease or fingerprint, soft cloth can be used to wipe it away. Cotton cloth

or lens cleaning paper with cleaning solution can be used to wipe repeatedly until it's clean.

- Please revise the password promptly after logging in.

## **Instruction**

- Please use the accessories or parts specified by the manufacturer and have them installed and repaired by professional service personnel.
- Quality requirements for installation and maintenance personnel:
  - Personnel should have the qualification certificate or experience to engage in the installation and maintenance of video surveillance systems, and have the qualification to engage in related jobs (such as high-altitude operations, etc.), in addition to the following knowledge and operating skills.
  - Equipped with basic knowledge and installation skills of video surveillance system and its components.
  - Equipped with basic knowledge and operating skills of low-voltage wiring and low-voltage electronic circuit wiring. Equipped with basic network security knowledge and skills, and have good knowledge of this manual.
- Requirements for lifting equipment:
  - Safe lifting equipment suitable for site and method of camera installation.
  - The lifting equipment is able to reach enough height of installation position.
  - The lifting equipment has good safety performance.


## **Camera Introduction**

### **Camera Description**

The dual-spectrum network speed dome is a new-type thermal imaging net camera integrated with the functions of infrared imaging and high-definition visible light, including dual-spectrum network camera and thermal imaging network camera. Equipped with advanced passive infrared imaging detectors, industrial thermographic analysis tools, smoke & fire detecting algorithm, dual spectrum behavior analysis algorithm and multi linkage alarm function, it can realize 24/7 safety surveillance and fire alarm.

It can also be widely used in the intelligent safety surveillance fields of indoor and outdoor scenarios monitoring, such as perimeter prevention, industrial temperature measurement and fire alarm.


### **Camera Appearance**

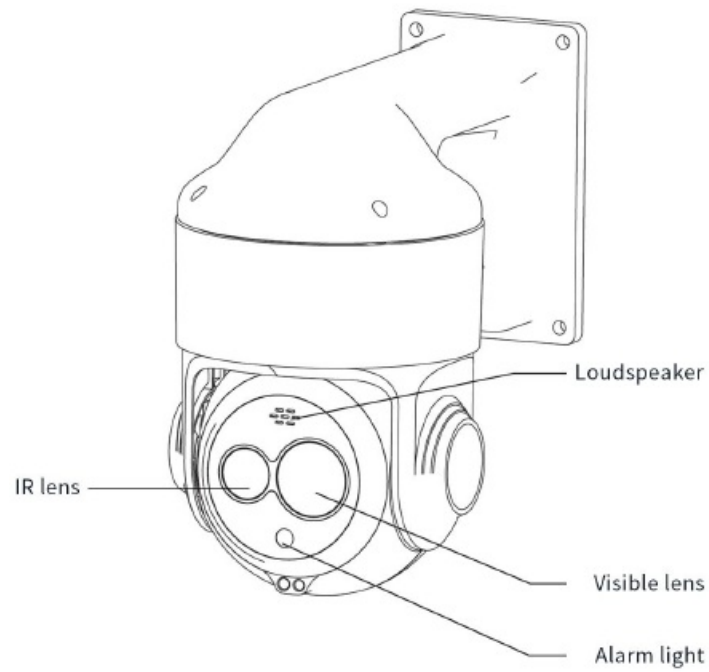

• Figure 1.1 Appearance and Interface of Dual-spectrum Network Speed Dome

### Cable Introductions

The cable includes interfaces for RJ-45 network, power, audio, alarm, and RS-485, etc. Please see the following figure for interface instructions.

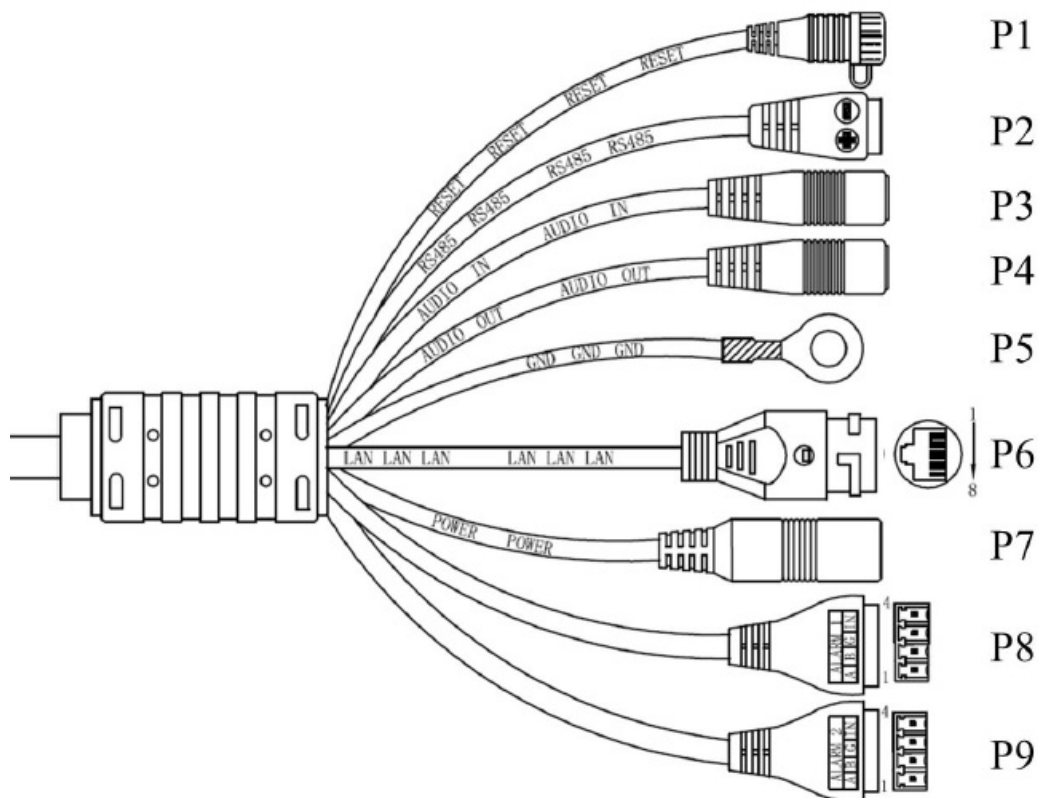

**Figure 1.2 Cable Introductions**


- **P1 Reset Button RESET** : restore to factory default settings.
- **P2 RS-485 interface RS485** : connect with peripherals with RS-485 interfaces.

- **P3 Audio Input AUDIO IN** : input audio signals, able to connect with sound pick-up to collect sound.
- **P4 Audio Output AUDIO OUT** : output audio signal to speakers and other equipment for sound output.
- **P5 Ground GND**): used for grounding protection.
- **P6 network interface LAN** : output network signal and connect to standard Ethernet cable.
- **P7 power interface DC12V** : support DC 12V power supply and please connect the positive and negative poles of the power supply correctly.
- **P8 alarm interface 1 ALARM 1** : alarm interface 1, among which PIN 1 ALARM-OUT1 and PIN 2 ALARM-COM1 are alarm output in channel 1; PIN 3 GND is ground, PIN 4 ALARM-IN1 is alarm input in channel 1;
- **P9 alarm interface 2 ALARM 2** : alarm interface 2, among which PIN 1 ALARM-OUT2 and PIN 2 ALARM-COM2 are alarm output in channel 2; PIN 3 GND is ground, PIN 4 ALARM-IN2 is alarm input in channel 2;

### Alarm Interface Connection

The camera can be connected to alarm switch signal input and switch output. An external power supply is required when connecting the alarm.

The specific wiring method is shown in the figure below.

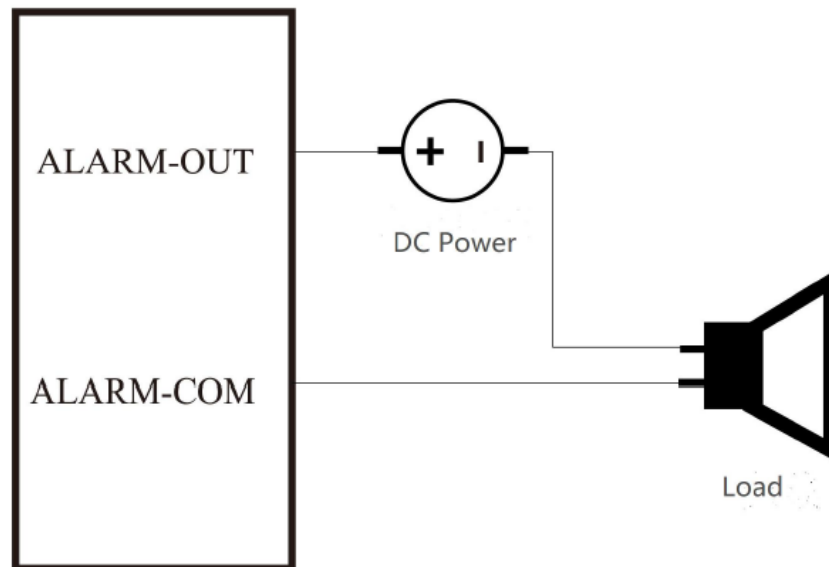


**Figure 1.3 Alarm Output Wiring Method**

### Camera Installation

#### Instructions before Installation

Before installation, please confirm that the camera in the package is in good condition and all parts are complete.

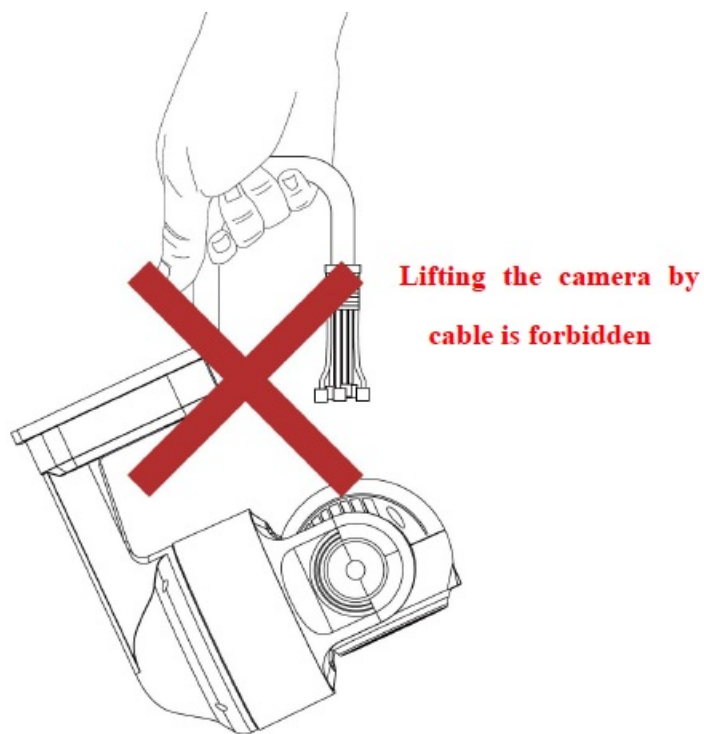

**Figure 2.1 Incorrect Handling of the Camera**

- The installation wall should have a certain thickness, and can bear at least 4 times the weight of the camera and installation accessories.
- If it is a concrete wall or ceiling, first install the expansion screws (the installation holes of the expansion screws need to be the same with the bracket), and then install the bracket.
- If it is a wooden wall, use self-tapping screws to install the bracket directly.
- When transporting the camera, do not directly pull the cable at the end of the camera, otherwise it may affect the waterproof performance of the camera or cause wiring problems, as shown in the figure below.

### Recommended Monitoring Distance

Since the thermal imaging channel of the camera adopts a fixed-focus athermalized lens, the remote motorized focusing function is unavailable.

Therefore, before installing the camera, please select the corresponding installation position and lens focal length according to the monitoring requirements to achieve the purpose of monitoring.

The reference table of lens focal length and monitoring distance is shown in the following table.

**Table 2.1 Recommended Monitoring Distance 12 $\mu$ m Pixel**

Equipped Lens	DD (Vehicles)	DD (Human)	RD (Vehicles)	RD (Human)	ID (Vehicles)	ID (Human)
3.2mm	409m	133m	102m	33m	51m	17m
7mm	894m	292m	224m	73m	112m	36m
10mm	1661m	542m	415m	135m	208m	68m


- If the weather is clear and the visibility is normal, without visible fog or haze, there is a 50% chance of reading the target at the specified distance.
- Assume that the width of the people is 0.5m, the height is 1.8m, and the critical distance is 0.75m. In case of the width of the vehicle is 4.0m, the height is 1.4m, and the critical distance is 2.3m.
- According to the Johnson criterion of infrared images, suppose:
  - The detection target needs to be imaged at least 1.5 pixels in the critical direction.
  - Recognizing the target needs to image no less than 6 pixels in the critical direction.
  - Recognizing the target requires imaging no less than 12 pixels in the critical direction.
- The actual detection distance varies with the settings of the thermal camera, environmental conditions, user experience, monitoring or displaying type.

## Installation Guide

- Either wall mounting is supported, and the camera can be installed in different ways according to different installation environment.

### Wall Mounting

#### Step 1: Drilling Holes

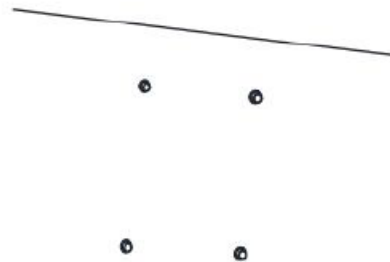


**Figure 2.2 Drill holes and insert the expansion bolt**

- Drill four  $\Phi 8$  expansion screw holes on the wall and insert the delivered M5\*50 screws into the holes.

#### Step 2: Fix the Camera



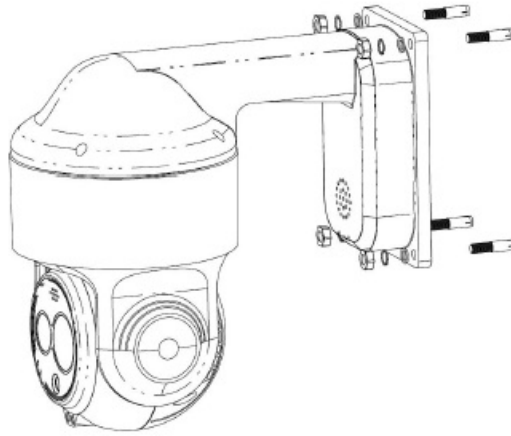


**Figure 2.3 Mounting Speed Dome**

- Put flat washers on four M5 hexagon nuts, then lock the expansion screws through the bracket, tighten the nuts, and the bracket is fixed, as shown in the following figure.

### Install Network Port Waterproof Jacket


When using the camera, install the matching network port waterproof jacket to prevent water from entering the network cable. Please install it if necessary. The installation steps are as follows:

- **Step 1:** Pass the network cable through the fastening nut and the main body of the waterproof jacket in turn.
- **Step 2:** Scissor the waterproof rubber ring and put it on the network cable between the main body of the waterproof jacket and the fastening nut.

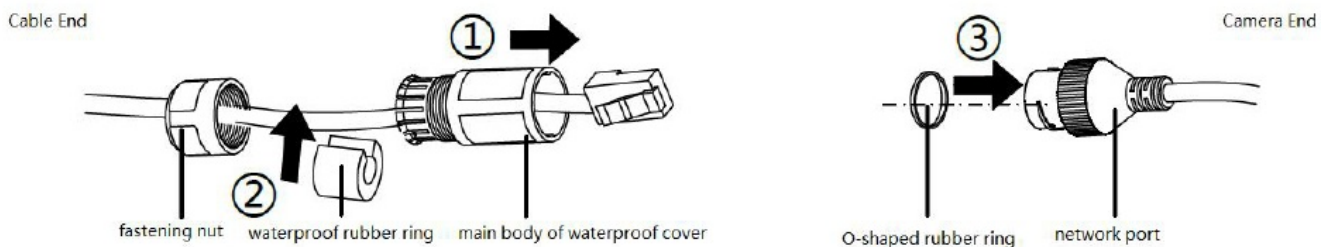

**Figure 2.4 Network Cable Installation**

- **Step 3:** Put the O-shaped rubber ring into the network port, and insert the network cable into the network port.
- **Step 4:** Align the notch of the network port with the buckle of the main body of the waterproof jacket, put the main body of the waterproof jacket into the end of the network port, and tighten it clockwise.
- **Step 5:** Insert the waterproof rubber ring into the main body of the waterproof jacket.

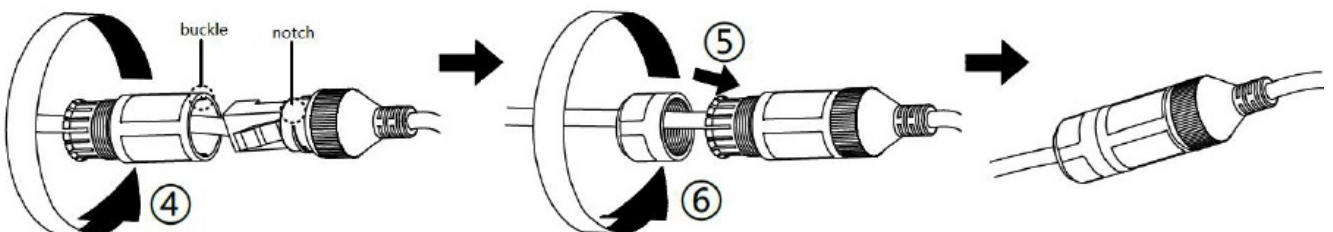

**Figure 2.5 Finishing Installation**


- **Step 6:** Turn the fastening nut clockwise and press the waterproof rubber ring tightly.

## Operation Guide

### Preparations

1. The default IP address of the device 192.168.1.123.
2. The subnet mask is 255.255.255.0, and the IP address of the camera can be modified. If you change the device address to 192.168.1.194, change your computer's IP address to the same network segment with the network video server, and the same subnet mask. Such as: 192.168.1.120
3. Test whether the device starts normally. Under WINDOWS, follow the <Start→run→cmd> operation, open the command line window, and enter Ping 192.168.1.123 in the command line window. If “Request time out” is not displayed, it means the startup is normal.
4. The speed dome supports browsers such as Chrome, Mozilla Firefox or Edge.

### Login System

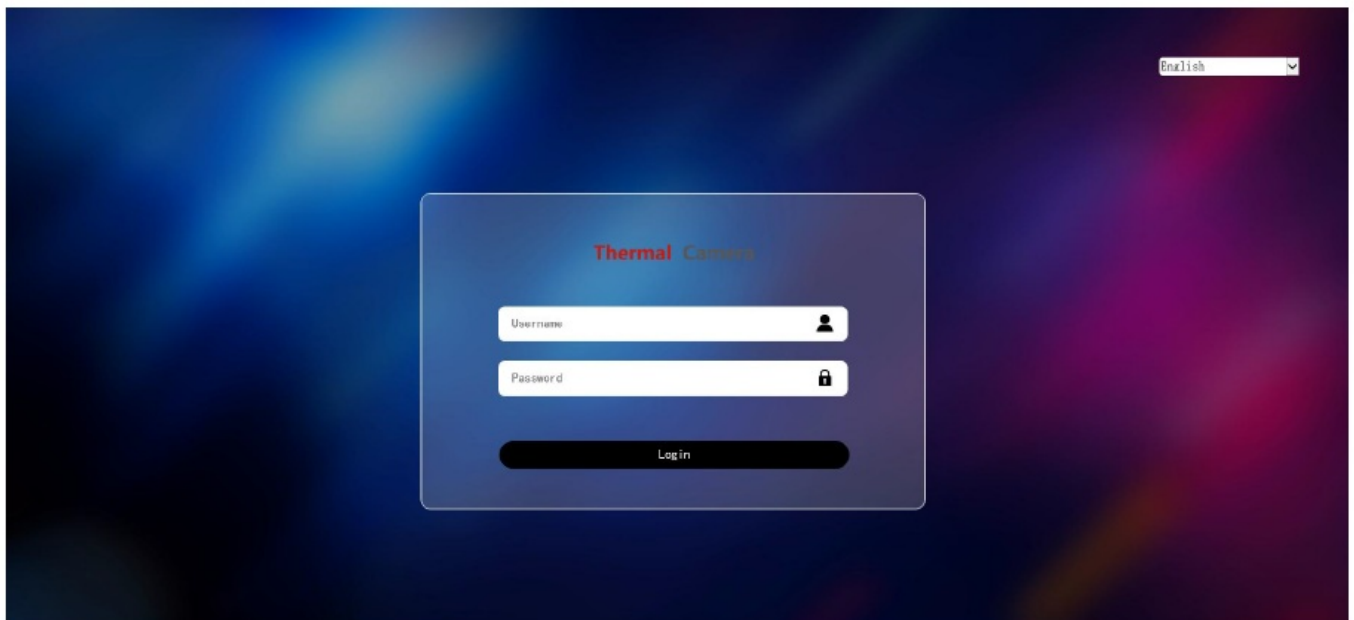

**Figure 3.1 Login Interface**

1. Enter the IP address of the camera in the address bar of the IE browser to log in, and the login page is as shown below, you can change the language between simplified Chinese and English on the interface.
2. **For the first login, the admin user/password by default:** admin/admin, the system will prompt you to change the password, you can change or cancel.
3. **User login:** admin (defaulted, administrator), operator or user (ordinary user), to login after typing in the password.
4. Click [OK] button to enter the Web preview interface. As shown below:



**Figure 3.2 Preview Interface**

### Main Interface Description

On the Web interface of the camera, you can perform operations and configurations such as preview, video playback, temperature measurement analysis, intelligent analysis, and parameter setting.

1. **Preview:** Used to preview and control the monitoring screen of the camera.
2. **Playback:** Search, replay and download videos stored in TF card or in local storage by time.
3. **Temperature measurement:** above/below alarm, support temperature measurement tools (spot, line, region), linkage alarm and link schedule;
4. **Intelligent analysis:** tripwire, area intrusion, pre-alert, linkage and fire detection;
5. **Settings:** enter the configuring interface to perform system configuration and function configuration.

## Appendix A Camera Maintenance

### Lens Maintenance

The lens surface is coated with anti-reflective coating. When contaminated with dust, grease, and fingerprints, harmful substances will be produced, therefore the degraded performance, scratches or mold will be caused. Once dirt is found, please follow the following methods.

- **Dust stained:** Use an oil-free soft brush or a blower ball to gently flick the dust off.
- **Grease stained:** Gently wipe away water or oil with a soft cloth and dry it, then rub it outward from the center of the lens using an oil-free cotton cloth or lens cleaner coated with alcohol or lens cleaner. If it is still not clean, you can change the cloth and wipe it several times.

### Network Safety Maintenance

In order to ensure the network security of the camera, it is recommended that you conduct regular network security assessment and maintenance of the network system. Corresponding professional technical service can

be offered.


## Appendix B Emissivity of Common Materials

Materials	Temperature °C	Emissivity
Water	0 100	0.95 0.98
Soil(dry)	20	0.92
Soil(wet)	20	0.95
Woods	17	0.962
Sand	20	0.9
Sandstone	19	0.909 0.935
PVC plastic	70	0.93
Asphalt	20	0.967
Paint	70	0.92 0.94
Wallpaper	20	0.85 0.90
Cloth	20	0.98
Concrete	20	0.92
Pavement surface	5	0.974
Smooth china	20	0.92
Ceramic tile	17	0.94
Gypsum	17	0.86
Bricks	35	0.94
Hard rubber	0 100	0.89
Carbon	20 400	0.95 0.97
Granite(rough)	20	0.879

Cold rolled steel	70	0.09
Oxidized steel	50	0.88
Copper	20	0.07
Oxidized copper	50	0.6 0.7

---

## Documents / Resources

	<p><a href="#">InfiRay SD2 Dual Spectrum Network Speed Dome</a> [pdf] User Guide</p> <p>SD2 Dual Spectrum Network Speed Dome, SD2, Dual Spectrum Network Speed Dome, Spectrum Network Speed Dome, Network Speed Dome, Speed Dome</p>
---	--

## References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.