

INKBIRD ITC-306T THERMOSTAT TEMPERATURE CONTROLLER



INKBIRD ITC-306T Thermostat Temperature Controller User Manual

[Home](#) » [INKBIRD](#) » INKBIRD ITC-306T Thermostat Temperature Controller User Manual 

Contents

- [1 INKBIRD ITC-306T Thermostat Temperature Controller](#)
- [2 Overview](#)
- [3 Specification](#)
- [4 Keys Instruction](#)
- [5 Key Operation Instruction](#)
- [6 Menu Instruction](#)
- [7 Error Description](#)
- [8 Technical Assistance and Warranty](#)
- [9 Contact Us](#)
- [10 FREQUENTLY ASKED QUESTIONS](#)
- [11 VIDEO – PRODUCT OVERVIEW](#)
- [12 References](#)
- [13 Related Posts](#)



INKBIRD ITC-306T Thermostat Temperature Controller



Copyright

- Copyright© 2016 Inkbird Tech. Co., Ltd. All rights reserved. No part of this document may be reproduced without prior written permission.

Disclaimer

- Inkbird has made every effort to ensure that the information contained in this document is accurate and complete; however, the contents of this document are subject to revision without notice. Please contact Inkbird to ensure you have the latest version of this document.

Overview

What is ITC-306T?

- ITC-306T is a pre-wired heating output temperature controller with time function specifically for breeding and planting. It can be set to two different temperatures with its function of dual time cycle setting during 24 hours according to the day and night, which can more suitable for the physiological needs of animals and plants. ITC-306T can be widely use in over-heat protection and automatic temperature control system of all sorts of

electrical equipment for aquarium, pets breeding, hatching, fungus fermenting, and seed germination accelerating, etc.

- This plug and play product is designed with dual LCD display, and offers the optional display of Centigrade or Fahrenheit, which makes it more humanized temperature control. With large power output 1200W(110V)/2200W(220V), it's suitable for most applications. And the temperature can be controlled more accurately with its function of temperature calibration and temperature hysteresis.

Main features

- Plug and play design, easy to use;
- Dual time cycle setting during 24hours, can be set different temperature from day and night on the basis of the physical needs of animals and plants;
- Support reading with Centigrade or Fahrenheit unit;
- Maximum output load: 1200W(110V) / 2200W(220V);
- Dual display window, be able to display measured temperature and set temperature at the same time;
- Temperature calibration;
- Over-temperature and sensor fault alarm;
- Build-in ultra-capacitor, after fully filled, it can supply timer chip working for more than 20 days without electricity.

Specification

Temperature Control Range	-50~99 °C / -58~210 ° F
Temperature Resolution	0.1 ° C / 0.1° F
Temperature Accuracy	±1°C (-50 ~ 70°C) / ±1°F (-58 ~ 160° F)
Temperature Control Mode	On/Off Control, Heating
Input Power	100 ~240VAC, 50Hz/60Hz
Temperature Control Output	Max. 10A, 100V ~240V AC
Sensor Type	NTC sensor (Including)
Sensor Length	2m / 6.56ft
Relay Contact Capacity	Heating (10A, 100-240VAC)
Input Power Cable Length	1.5m (5ft)
Output Power Cable Length	30cm (1ft)
Dimension	Main Body: 140x68x33mm (5.5×2.7×1.3 inch)
	Socket (US Version): 85x42x24mm (3.3×1.7×1.0 inch) Socket (EU Version): 135x54x40mm (5.3×2.1×1.6 inch)
	Socket (UK Version): 140x51x27mm (5.5×2.0×1.0 inch)
Ambient Temperature	-30~ 75 ° C / -22~ 167 ° F
Storage	Temperature -20~ 60 ° C / -4~ 140 ° F
	Humidity 20~85% (No Condensate)
Warranty	1 Year

Keys Instruction



1. **PV:** Process Value.
 - Under running mode, display current temperature;
 - Under setting mode, display menu code.
2. **SV:** Setting Value.
 - Under running mode, display setting temperature;
 - Under setting mode, display setting value.
3. **Work1 Indicator Lamp:** When the light is on, start heating.
4. **Work2 Indicator Lamp:** —
5. **SET key:** Press SET key for 3 seconds to enter menu for function setting. During the setting process, press SET key for 3 seconds to quit and save setting changes.
6. **INCREASE key:** Under setting mode, press INCREASE key to increase value.
7. **DECREASE key:** under running mode, press DECREASE key to inquiry HD value; under setting mode, press DECREASE key to decrease value.
8. **The Socket:** Both sockets are for heating output, and they change synchronously.


Key Operation Instruction

How to set parameters

- When the controller is working normally, press “SET” key for over 3 seconds to enter parameters set up mode. “SET” indicator lamp will on. PV window displays the first menu code “TS1”, while SV window displays according setting value. Press “SET” key to go to next menu and display according menu code, press“ ▲ ” key or “ ▼ ” key to set current parameter value.
- After setting done, press“SET” key for 3 seconds at any time to save the parameters change and return to normal temperature display mode. During setting, if there is no operation for 10 seconds, the system will quit

setting mode and return to normal temperature display mode without saving the parameters change.

Setup Flow Chart

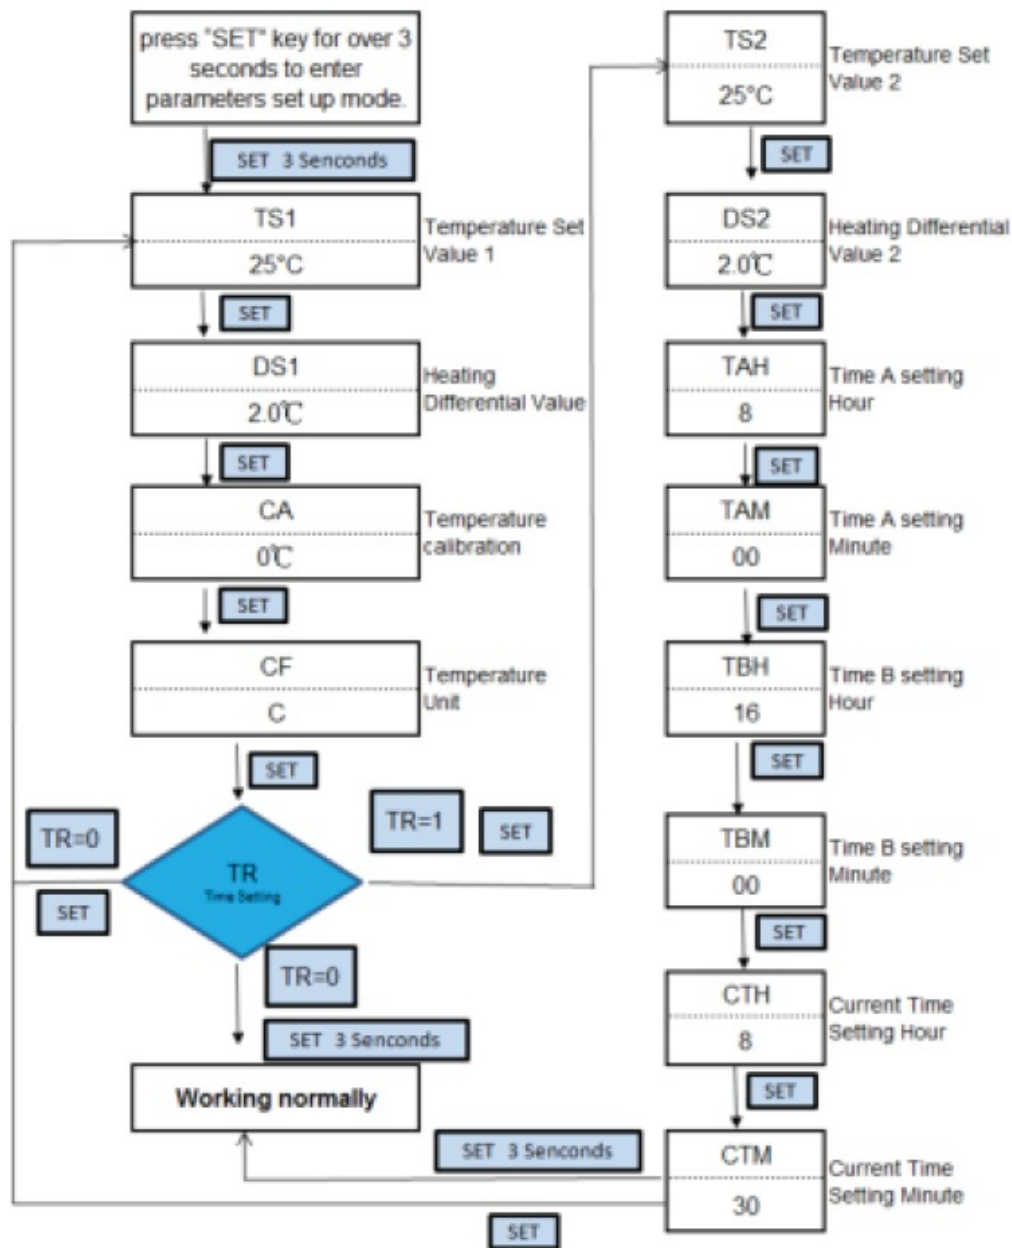

Remarks: TE error

- If TR=1 and it is power-on again after power off. The window of SV displays TE error. When enter to the setting menu, it will jump to TH code directly, then you can set present time (TH, TM) easily and quit into normal working status.

Menu Instruction

When the temperature is displayed in Centigrade

When TR=0 (Default)

Menu code	Function	Setting range	Default setting	Remarks
TS1	Temperature Set Value 1	-50 99.9°C	25°C	5.1
DS1	Heating Differential Value1	0.3 15°C	1.0°C	
CA	Temperature Calibration	-15 15°C	0°C	5.3
CF	Display in Fahrenheit or Centigrade		C	5.4
TR	Time Setting	0:Off; 1: On	0	5.2

When TR=1 (Time setting function is on)

Menu code	Function	Setting range	Default setting	Remarks
TS1	Temperature Set Value 1	-50 99.9°C	25°C	5.1
DS1	Heating Differential Value1	0.3 15°C	1.0°C	
CA	Temperature Calibration	-15 15°C	0°C	5.3
CF	Display in Fahrenheit or Centigrade		C	5.4
TR	Time Setting	0:Off; 1: On	1	5.2
TS2	Temperature Set Value 2	0 99.9°C	25°C	5.1
DS2	Heating Differential Value2	0.3 15°C	1.0°C	
TAH	Time A setting Hour	0~23 hours	8(8:00)	5.2
TAM	Time A setting Minute	0~59 minutes	00(8:00)	
TBH	Time B setting Hour	0~23 hours	18(18:00)	
TBM	Time B setting Minute	0~59 minutes	00(18:00)	
CTH	Current Hour Setting	0~23 hours	8	
CTM	Current Minute Setting	0~59 minutes	30	

When the temperature is displayed in Fahrenheit

When TR=0(Default)

Menu code	Function	Setting range	Default setting	Remarks
TS1	Temperature Set Value 1	-58 210°F	77°F	5.1
DS1	Heating Differential Value1	1 30°F	2°F	
CA	Temperature Calibration	-15°C 15°F	0°F	5.3
CF	Display in Fahrenheit or Centigrade		F	5.4
TR	Time Setting	0:Off; 1: On	0	5.2

When TR=1(Time setting function is on)

Menu code	Function	Setting range	Default setting	Remarks
TS1	Temperature Set Value 1	-58 210°F	77°F	5.1
DS1	Heating Differential Value1	1 30°F	2°F	
CA	Temperature Calibration	-15°C 15°F	0°F	5.3
CF	Display in Fahrenheit or Centigrade		F	5.4
TR	Time Setting	0:Off; 1: On	1	5.2
TS2	Temperature Set Value 1	32 210°F	68°F	5.1
DS2	Heating Differential Value1	1 30°F	2°F	
TAH	Time A setting Hour	0~23 hours	8(8:00)	5.2
TAM	Time A setting Minute	0~59 minutes	00(8:00)	
TBH	Time B setting Hour	0~23 hours	18(18:00)	
TBM	Time B setting Minute	0~59 minutes	00(18:00)	
CTH	Current Hour Setting	0~23 hours	8	
CTM	Current Minute Setting	0~59 minutes	30	

Temperature Control Range Setting (TS, DS)

- When the controller is working normally, PV window displays current measured temperature, as well as SV window displays temperature setting value. When the measured temperature $PV \leq TS$ (temperature set value)-

DS (heating differential value), system enter heating status, the WORK1 indicator lamp will on, and heating relay starts to work; when the measured temperature $PV \geq TS$ (temperature setting), the WORK1 indicator lamp will off, and heating relay will stop working. For example, set $TS=25^{\circ}\text{C}$, $DS=3^{\circ}\text{C}$, when measured temperature is lower or equal to 22°C $TS-DS$, system enters heating status; when the temperature raised to $25^{\circ}\text{C}(TS)$, stop heating.

Cycle Time Setting (TR, TAH, TAM, TBH, TBM, CTH, CTM)

- When $TR = 0$, time setting function is off, and there are not parameter TAH, TAM, TBH, TBM, CTH, CTM showing in the menu.
- When $TR=1$, time setting function is on.
- Time A~Time B~Time A is a cycle, 24 hours.
- During Time A~Time B, the controller runs as $TS1$ and $DS1$ setting; during Time B ~Time A, the controller runs as $TS2$ and $DS2$ setting;
e.g. Set as $TS1=25$, $DS1=2$, $TS2=18$, $DS2=1$; $TR=1$, $TAH=8$, $TAM=30$, $TBH=18$, $TBM=0$, $CTH=9$ $CTM=26$
- During 8:30-18:00 (Time A~Time B), the temperature controls between $23^{\circ}\text{C} \sim 25^{\circ}\text{C}(TS1- DS1 \sim TS1)$;
- During 18:00 to the next morning 8:30 (Time B~Time A), the temperature controls between $17^{\circ}\text{C} \sim 18^{\circ}\text{C}(TS2- DS2 \sim TS2)$;
- Parameter CTH and CTM are used for current time setting. The set time is 9:26.

Temperature Calibration (CA)

- When there is deviation between measured temperature and actual temperature, use temperature calibration function to align the measured temperature and actual temperature. The corrected temperature is equal to temperature before calibration plus corrected value (corrected value could be positive value, 0 or negative value).

Display in Fahrenheit or Centigrade unit (CF)

- Users can select display with Fahrenheit or Centigrade temperature value according to their own habit. Default setting is display with Centigrade temperature value. For displaying with Fahrenheit temperature value, set CF value as F.
- **Attentions:** when CF value changed, all the setting value will be recovered to factory settings.

Error Description

- **Sensor Fault Alarm:** when temperature sensor is in short circuit or open loop, the controller will initiate sensor fault mode, and cancel all the actions. The buzzer will alarm, LED displays ER. Buzzer alarm could be dismissed by pressing any key. After faults solved, the system will return to normal working mode.
- **Over-temperature Alarm:** when measured temperature exceeds the measuring range (less than $-50^{\circ}\text{C} / -58^{\circ}\text{F}$ or higher than $99^{\circ}\text{C} / 210^{\circ}\text{F}$), the controller will initiate over-temperature alarm mode, and cancel all the actions. The buzzer will alarm, LED displays HL. Buzzer alarm could be dismissed by pressing any key. When temperature returns to measuring range, the system will return to normal working status.

TE error

- When setting TR=1 and if it is power-on again after power off, the “beep – beep” alarm in 0.5Hz frequency of the buzzer. The temperature controlled by the standard of TS1 while PV window displaying the current temperature and the window of SV displaying TE error. At this time, Press any keys can stop the alarm. When enter to the setting menu, it will jump to TH code directly, then you can set present time (TH, TM) easily and quit into normal working status.

Technical Assistance and Warranty

Technical Assistance

If you have any problems installing or using this thermostat, please carefully and thoroughly review the instruction manual. If you require assistance, please write us to cs@ink-bird.com. We will reply your emails in 24 hours from Monday through Saturday. You can also visit our web site www.ink-bird.com to find the answers of the common technical questions.

Warranty

- INKBIRD TECH. C.L. warrants this thermostat for one years from the date of purchase when operated under normal condition by the original purchaser (not transferable), against defects caused by INKBIRD's workmanship or materials. This warranty is limited to the repair or replacement, at INKBIRD's discretion, of all or part of the thermostat. The original receipt is required for warranty purposes.
- INKBIRD is not responsible for injury property damage or other consequential damages or damages of third parties arising directly from an actual or alleged in mater of workmanship of the product.
- There are no representations, warranties, or conditions, express or implied, statutory or otherwise, other than herein contained in the sale of goods act or any other statue.

Contact Us

- **Business Contact:** sales@ink-bird.com
- **Technical Support:** cs@ink-bird.com
- **Business Hours:** 09:00-18:00(GMT+8) from Monday to Friday
- **URL:** www.ink-bird.com

FREQUENTLY ASKED QUESTIONS

What is the brand and model of the thermostat temperature controller?

The thermostat temperature controller is the INKBIRD ITC-306T.

What is the price of the INKBIRD ITC-306T Thermostat Temperature Controller?

The price of the INKBIRD ITC-306T Thermostat Temperature Controller is \$30.99.

What is the temperature control range of the INKBIRD ITC-306T Thermostat Temperature Controller?

The temperature control range of the INKBIRD ITC-306T Thermostat Temperature Controller is -50~99 °C (-58 ~ 210 °F).

What type of sensor does the INKBIRD ITC-306T Thermostat Temperature Controller use?

The INKBIRD ITC-306T Thermostat Temperature Controller uses an NTC sensor.

What is the ambient temperature range supported by the INKBIRD ITC-306T Thermostat Temperature Controller?

The INKBIRD ITC-306T Thermostat Temperature Controller supports an ambient temperature range of -22 ~ 167 °F.

What is the length of the included sensor for the INKBIRD ITC-306T Thermostat Temperature Controller?

The included sensor for the INKBIRD ITC-306T Thermostat Temperature Controller is 2 meters (6.56 feet) long.

What is the temperature resolution of the INKBIRD ITC-306T Thermostat Temperature Controller?

The temperature resolution of the INKBIRD ITC-306T Thermostat Temperature Controller is 0.1°F.

What is the temperature accuracy of the INKBIRD ITC-306T Thermostat Temperature Controller within the range of -58 ~ 160 °F?

The temperature accuracy of the INKBIRD ITC-306T Thermostat Temperature Controller within the range of -58 ~ 160 °F is ± 2 °F.

What are the dimensions of the US version socket for the INKBIRD ITC-306T Thermostat Temperature Controller?

The dimensions of the US version socket for the INKBIRD ITC-306T Thermostat Temperature Controller are 85x42x24mm.

What is the input power requirement for the INKBIRD ITC-306T Thermostat Temperature Controller?

The input power requirement for the INKBIRD ITC-306T Thermostat Temperature Controller is 100 ~ 240VAC, 50Hz/60Hz.

What is the maximum temperature control output supported by the INKBIRD ITC-306T Thermostat Temperature Controller?

The maximum temperature control output supported by the INKBIRD ITC-306T Thermostat Temperature Controller is Max. 10A, 100V ~240V AC.

What temperature control mode does the INKBIRD ITC-306T Thermostat Temperature Controller support?

The INKBIRD ITC-306T Thermostat Temperature Controller supports On/Off Control and Heating temperature control modes.

What are the package dimensions of the INKBIRD ITC-306T Thermostat Temperature Controller?

The package dimensions of the INKBIRD ITC-306T Thermostat Temperature Controller are 7.51 x 4.13 x 3.43 inches.

What is the weight of the INKBIRD ITC-306T Thermostat Temperature Controller?

The weight of the INKBIRD ITC-306T Thermostat Temperature Controller is 15.17 ounces.

Who is the manufacturer of the INKBIRD ITC-306T Thermostat Temperature Controller?

The manufacturer of the INKBIRD ITC-306T Thermostat Temperature Controller is Inkbird Tech.

VIDEO – PRODUCT OVERVIEW



[Download the PDF link: INKBIRD ITC-306T INKBIRD ITC-306T Thermostat Temperature Controller User Manual Thermostat-Temperature-Controller-User-Manual.mp4](#)

REFERENCES

[INKBIRD ITC-306T Thermostat Temperature Controller User Manual-wiki](#)

[INKBIRD ITC-306T Thermostat Temperature Controller User Manual -Device.Report](#)

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.