



INOR Programmable Temperature Transmitter IPAQ R460 Instructions

[Home](#) » [INOR](#) » INOR Programmable Temperature Transmitter IPAQ R460 Instructions 

INOR

USER INSTRUCTIONS Programmable Temperature Transmitter IPAQ R460



Contents

- 1 Programmable Temperature Transmitter IPAQ R460
- 2 Configuration and startup
- 3 Starting the Teach-In Function
- 4 Technical Data
- 5 Dimensions
- 6 LIMITED WARRANTY
- 7 LED indication
- 8 Documents / Resources
 - 8.1 References
- 9 Related Posts

Programmable Temperature Transmitter IPAQ R460



Read these instructions before using the product and retain for future information.

► Before Startup



When operating the signal converter, certain parts of the module can carry dangerous voltage! Ignoring the warnings can lead to serious injury and/or cause damage!

The signal converter should only be installed and put into operation by qualified staff. The staff must have studied the warnings in these operating instructions thoroughly.

The signal converter may not be put into operation if the housing is open.

In applications with high operating voltages sufficient distance and isolation as well as shock protection must be ensured.

Safe and trouble-free operation of this device can only be guaranteed if transport, storage and installation are carried out correctly and operation and maintenance are carried out with care.



Appropriate safety measures against electrostatic discharge (ESD) should be taken during range selection and assembly on the transmitter.

► Short description

The programmable transmitter is designed for operating various industrial sensors. The measured values are converted into a current or voltage signal. The configuration can be done either via DIP switch for preference measuring ranges or extensive ranges via an USB interface with the PC configuration program INOR-Set.

The 3-way isolation guarantees reliable decoupling of the sensor circuit from the processing circuit and prevents linked measurement circuits from influencing each other. The auxiliary power can either be supplied via the connection terminals or via the In-Rail-Bus connector (see Accessories).

Configuration and startup

Configuring with DIP switch

Use the DIP switches to configure the device, according to table.

Via the DIP switches you can select only a limited number of sensors. A wider range of sensors you can select via software configuration.

Configuring with software INOR-Set

Use the software INOR-Set to configure the device. Changes to the configuration and parameterization data can be performed both during operation with a connected measuring circuit and in a disconnected state. The INOR-Set software is free and can be downloaded from our website.





The device is equipped with a programming socket on the front. Use the INOR-Set USB Converter (Order no.: 70USBIM010) for connecting the device to the PC. To change the configuration and parameterization DIP switch S1- 1, 2, 3 have to be set ON!

Commissioning Function

The Commissioning Function with a stepped keystone signal on output supports a fast and simple testing of

cabling and connection of downstream devices or measuring adjustment. Press the function button located behind the front cover for longer than 3 seconds. The Commissioning Function will be indicated with a yellow LED (quick double off).

Output value:

Output	0 %		50 %		100 %		50%	
Time	5 s	3 s	3 s	3 s	5 s	3 s	3 s	3 s

The stepped keystone signal is output continuously. Exit the Commissioning Function by pressing the button again for 3 seconds or power off.

Teach-In Function for Potentiometer, Resistor and mV- Input

The Teach-In function can be used to teach in the start value and end value. There are two ways of the Teach-In function:

- Automatic set up mode (Auto Teach-In)
- Manual Teach-In of the start and end value (Manual-Teach-In)

The taught-in values remain stored under the Teach-In setting. The start value is 0 % and the end value is 100 % by default.

Starting the Teach-In Function

Use the function button located behind the front cover of the device to teach in the device (use screw driver to push).

1. Configure the device using the DIP switches on the side of the device.
2. Press the function button for longer than 3 seconds.

 The yellow LED will flash quickly

3. Auto Teach-In: Set input signal to both min and max range limits as often as desired. Start value and end value will be automatically determined and recorded.

or

Manual Teach-In: Set input signal to first range limit and press the function button for around 0.5 seconds. Set second limit and press the function button for around 0.5 seconds. This can be repeated as often as required. The value of the last two keystrokes will be stored for start value and end value.

Ending the Teach-In, Saving the Start Value and End Value

Press the function button for longer than 3 seconds. Release the button when the yellow LED lights up constant. The values are stored. The green LED indicates the successfully storage.

Ending the Teach-In without Saving the Start Value and End Value

Press the function button for longer than 6 seconds. Release the button when the yellow LED starts to flash again after lit up constant.

The values are ignored and not stored.

Or switch off the device. The values are not stored.

Teach-In Fault

If the span between the start value and the end value is too small, the red LED will flash slowly after saving the values (configuration error). In case of a fault, the Teach-In function must be performed again in its entirety.

Technical Data

Input

Sensor	Span min.	Error
Pt100, Pt200, Pt500, Pt1000	10 K	< 0.1 K + 0,05 % meas. val.
Ni100, Ni200, Ni500, Ni1000	10 K	< 0.2 K + 0,05 % meas. val.
KTY (29 types)	25 K	< 0.3 K + 0.05 % meas. val.
Resistor 0...5000Q	100 Q	< 0.1 52 + 0.02 % meas. val.
Sensor current/ connection	0.2 mA / 4-wire, 3-wire, 2-wire	
Cable resistance	< 100 S2 per wire, manual compensation for 2-wire connection programmable	
TC Sensor E, J, K, L, N, R, S, T, U / B, C, D	50 K / 100 K	< 0.3 K + 0.08 % meas. val.
Cold junction compensation	intern, extern Pt100, uncompensated, manual setting (Error of cold junction compensation internal < 1.5 K)	
±100 mV, ±1000 mV	5 mV, 50 mV	< 50 pV + 0.02 % meas. val.
Poti 100 c2 to 50 kS2	10%	< 0.05 %

Output	Current	Voltage
Output signal	0...20 mA 0...10 mA 4...20 mA 2...10 mA	0...10 V 0...5 V 2...10V 1...5 V
Load	12 V (600 .0 at 20 mA)	5 mA (2 kf.) at 10 V)
Residual ripple	< 10 mVrms	
Transfer range	0 to 102.5 % (3.8 to 20.5 mA at output 4 to 20 mA) Transfer characteristic rising / falling	
Error signal	Sensor- / wire break, error signal programmable	

General data

Transmission error	< 0.1 % full scale
Temperature coefficient ²⁾	< 100 ppm/K
Measurement rate	4 / s
Response time T ₉₉	250 ms
Test voltage	3 kV, 50 Hz, 1 min. Input against output against power supply
Working voltage ³⁾ (basic insulation)	600 V AC/DC for overvoltage category II and contamination class 2 acc. to EN 61010-1
Protection against dangerous body currents ³⁾	Protective Separation by reinforced insulation acc. to EN 61010-1 up to 300 V AC/DC for overvoltage category II and contamination class 2 between input and output and power supply.
Ambient temperature	Operation -25 °C to +70 °C (-13 to +158 °F) Transport and storage -40 °C to +85 °C (-40 to +185 °F)
Power supply	24 V DC 16.8 V ... 31.2 V, approx. 0.8 W
EMV ⁴⁾	EN 61326-1
Construction	6.2 mm (0.244") housing, protection type: IP 20 mounting on 35 mm DIN rail acc. to EN 60715
Connection (captive plus-minus clamp screws)	Solid: 0.5 mm ² – 4 mm ² / AWG 20-12 Fine-stranded: 0.5 mm ² – 2.5 mm ² / AWG 20-14 Stripped length: 8 mm / 0.3 in Screw terminal: torque 0.6 Nm / 5 lbf in
Weight	Approx. 70 g

1. Factory setting:

Input: Pt100, 0...100°C, 4-wire-sensor connection


Output: 0...20 mA, Characteristic rising, error signal 22 mA

2. Average TC in specified operating temperature range

3. As far as relevant the standards and rules mentioned above are considered by development and production of our devices. In addition relevant assembly rules are to be considered by installation of our devices in other equipment's. For applications with high working voltages, take measures to prevent accidental contact and make sure that there is sufficient distance or insulation between adjacent situated devices.


4. Minor deviations possible during interference

Dimensions

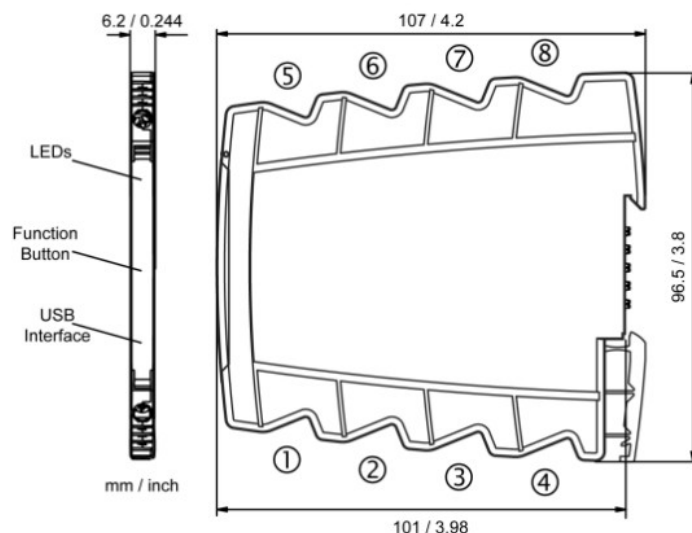

► Mounting, Electrical Connection

The transmitter is mounted on standard 35 mm DIN rail

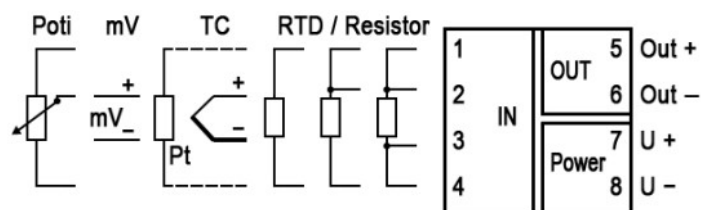

► Order Information

Temperature Transmitter	Order No.
IPAQ R460	70R4600010

LIMITED WARRANTY

INOR Process AB hereby warrants that the Product will be free from defects in materials or workmanship for a period of five (5) years from the date of delivery ("Limited Warranty"). This Limited Warranty is limited to repair or replacement at INOR's option and is effective only for the first end-user of the Product.

This Limited Warranty applies only if the Product:

1. is installed according to the instructions furnished by INOR;
2. is connected to a proper power supply;
3. is not misused or abused; and
4. there is no evidence of tampering, mishandling, neglect, accidental damage, modification or repair without the approval of INOR or damage done to the Product by anyone other than INOR.

Delivery conditions are based upon the „GENERAL CONDITIONS FOR THE SUPPLY OF PRODUCTS AND SERVICES OF THE ELECTRICAL AND ELECTRONICS INDUSTRY“

Subject to change!

Set the input and output ranges with DIP switches (● = ON) as indicated in the following table:

Input

DIP S1 ● = on

1	2	3	4	5	
					Pt100
●					Pt1000
	●				Ni100
●		●			Resistor
				●	2-wire
			●		3- wire
					4- wire

●		●	●	●	Potentiometer
---	--	---	---	---	---------------

●	●				Type J
		●			Type K
					CJC internal
			●		CJC external (Pt100)
				●	CJC off

	●	●			± 100mV
	●	●		●	mV x 10

●	●	●			PC (USB) Setting
---	---	---	--	--	------------------

Output
DIP S2

7	8	9	10	
				0 ... 20 mA
●				4 ... 20 mA
	●			0 ... 10 V
●	●			0 ... 5 V
				Characteristic
				rising
		●		falling
				Error Message
				signalize
			●	not signalize

● = ON

Factory settings: all switches in position OFF

Start Value

DIP S1

6	7	8	9	10	°C	°F	Ω	Pot	mV
●					-200	-328	0	0%	-100
	●				-175	-283	50	1%	-90
●	●				-150	-238	100	2%	-80
		●			-125	-193	150	3%	-70
●		●			-100	-148	200	4%	-60
	●	●			-75	-103	250	5%	-50
●	●	●			-50	-58	300	6%	-45
			●		-25	-13	350	7%	-40
					0	32	400	8%	-35
●			●		25	77	450	9%	-30
	●		●		50	122	500	10%	-25
●	●		●		75	167	550	11%	-20
		●	●		100	212	600	12%	-15
●		●	●		125	257	650	13%	-10
	●	●	●		150	302	700	14%	-5
●	●	●	●		175	347	750	15%	0
				●	200	392	800	20%	5

●				●	225	437	850	25%	10
	●			●	250	482	900	30%	15
●	●			●	275	527	950	35%	20
		●		●	300	572	1000	40%	25
●		●		●	350	662	1500	45%	30
	●	●		●	400	752	2000	50%	35
●	●	●		●	450	842	2500	55%	40
			●	●	500	932	3000	60%	45
●			●	●	550	1022	3500	65%	50
	●		●	●	600	1112	4000	70%	60
●	●		●	●	650	1202	4500	75%	70
		●	●	●	700	1292	-/-	80%	80
●		●	●	●	800	1472	-/-	85%	90
	●	●	●	●	900	1652	-/-	90%	-/-
●	●	●	●	●	1000	1832	Teach In		

End Value
DIP S2

1	2	3	4	5	6	°C	°F	Ω	Poti	mV
●						-150	-238	100	10%	-/-
	●					-125	-193	150	15%	-/-
●	●					-100	-148	200	20%	-/-
		●				-75	-103	250	25%	-/-
●		●				-50	-58	300	30%	-/-
	●	●				-25	-13	350	35%	-/-
●	●	●				0	32	400	40%	-/-
			●			25	77	450	45%	-/-
●			●			50	122	500	46%	-/-
	●		●			75	167	550	47%	-/-
						100	212	600	48%	100
●	●		●			125	257	650	49%	95

		●	●			150	302	700	50%	90
●		●	●			175	347	750	51%	85
	●	●	●			200	392	800	52%	80
●	●	●	●			225	437	850	53%	75
				●		250	482	900	54%	70
●				●		275	527	950	55%	65
	●			●		300	572	1000	56%	60
●	●			●		325	617	1050	57%	55
		●		●		350	662	1100	58%	50
●		●		●		375	707	1150	59%	45
	●	●		●		400	752	1200	60%	40
●	●	●		●		425	797	1250	61%	35
			●	●		450	842	1300	62%	30
●			●	●		475	887	1400	63%	25
	●		●	●		500	932	1500	64%	20
●	●		●	●		525	977	1600	65%	15
		●	●	●		550	1022	1700	66%	10
●		●	●	●		575	1067	1800	67%	5
	●	●	●	●		600	1112	1900	68%	0
●	●	●	●	●		625	1157	2000	69%	-5

DIP S2

1	2	3	4	5	6	°C	°F	Ω	Poti	mV
					●	650	1202	2100	70%	-10
●					●	675	1247	2200	71%	-15
	●				●	700	1292	2300	72%	-20
●	●				●	725	1337	2400	73%	-25
		●			●	750	1382	2500	74%	-30
●		●			●	775	1427	2600	75%	-35
	●	●			●	800	1472	2700	76%	-40
●	●	●			●	825	1517	2800	77%	-45

			●		●	850	1562	2900	78%	-50
●			●		●	875	1607	3000	79%	-55
	●		●		●	900	1652	3100	80%	-60
●	●		●		●	925	1697	3200	81%	-65
		●	●		●	950	1742	3300	82%	-70
●		●	●		●	975	1787	3400	83%	-75
	●	●	●		●	1000	1832	3500	84%	-80
●	●	●	●		●	1025	1877	3600	85%	-85
				●	●	1050	1922	3700	86%	-90
●				●	●	1075	1967	3800	87%	-/-
	●			●	●	1100	2012	3900	88%	-/-
●	●			●	●	1125	2057	4000	89%	-/-
		●		●	●	1150	2102	4100	90%	-/-
●		●		●	●	1175	2147	4200	91%	-/-
	●	●		●	●	1200	2192	4300	92%	-/-
●	●	●		●	●	1225	2237	4400	93%	-/-
			●	●	●	1250	2282	4500	94%	-/-
●			●	●	●	1275	2327	4600	95%	-/-
	●		●	●	●	1300	2372	4700	96%	-/-
●	●		●	●	●	1325	2417	4800	97%	-/-
		●	●	●	●	1350	2462	4900	98%	-/-
●		●	●	●	●	1375	2507	5000	99%	-/-
	●	●	●	●	●	1400	2552	-/-	100%	-/-
●	●	●	●	●	●	1425	2597	Teach In		

LED indication

The transmitter has a green and a red/yellow LED on front panel.

LED		Announcement
green	continuous	Power LED, normal operation
green	flashing	Over/under range on input
yellow	quick flashing	Teach-In mode active
yellow	slow double flashing	Commissioning Function active
red	flashing	Sensor break or configuration error
red	continuous	Device error, replacement is necessary

Error diagnostic function on output

(other output ranges react analogous to the table)

Characteristic	Error	Output	Under range	Over range	Sensor break / invalid setting
rising S2-9 OFF	signalize S2-10 = OFF	0 ... 20 mA 4 ... 20 mA 0 ... 5 V 0 ... 10 V	0 mA 3.8 mA 0 V 0 V	20.5 mA 20.5 mA 5.125 V 10.25 V	22 mA 22 mA 5.5 V 11 V
	not signalize S2-10 = ON	0 ... 20 mA 4 ... 20 mA 0 ... 5 V 0 ... 10 V	0 mA 4 mA 0 V 0 V	20 mA 20 mA 5 V 10 V	0 mA 4 mA 0 V 0 V
falling S2-9 ON	signalize S2-10 = OFF	20 ... 0 mA 20 ... 4 mA 5 ... 0 V 10 ... 0 V	20.5 mA 20.5 mA 5.125 V 10.25 V	0 mA 3.8 mA 0 V 0 V	22 mA 22 mA 5.5 V 11 V
	not signalize S2-10 = ON	20 ... 0 mA 20 ... 4 mA 5 ... 0 V 10 ... 0 V	20 mA 20 mA 5 V 10 V	0 mA 4 mA 0 V 0 V	0 mA 4 mA 0 V 0V

INOR Process AB, PO Box 9125, SE-200 39 Malmö, Sweden, Phone: +46 40 312 560, Fax: +46 40 312 570,
E-mail: support@inor.se

INOR Transmitter OY, Tuupakantie 3 01740 Vantaa, Finland, Phone: +358 10 421 7900, Fax: +358 10 421 7901,
E-mail: myynti@inor.fi

INOR Transmitter GmbH, Am See 24, D-47279 Duisburg, Germany, Phone: +49-203 7382 762 0, Fax: +49-203 7382 762 2,
E-mail: info@inor-gmbh.de

KROHNE Temperature Division INOR, 55 Cherry Hill Drive, Beverly, MA 01915, United States, Phone: +1 978 826 6900,
Fax: +1 978 535 1720,
E-mail: inor-info@krohne.com



[INOR Programmable Temperature Transmitter IPAQ R460](#) [pdf] Instructions
Programmable Temperature Transmitter IPAQ R460, Programmable Temperature Transmitter,
Temperature Transmitter, IPAQ R460 Transmitter, IPAQ R460, R460, R460 Transmitter, Transmi
tter, Programmable Transmitter

References

-  [GmbH.de](#)

Manuals+