

# intel 750856 Agilex FPGA Development Board User Guide


[Home](#) » [Intel](#) » intel 750856 Agilex FPGA Development Board User Guide 

## Contents

- [1 intel 750856 Agilex FPGA Development Board](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Reference Design Overview](#)
- [5 External Host Configuration](#)
- [6 Reference Design Requirements](#)
- [7 Reference Design Walkthrough](#)
- [8 Creating a Design Partition](#)
- [9 Creating Revisions](#)
- [10 Revision Names and Types](#)
- [11 Programming the Intel Agilex F-Series FPGA Development BoardHardware Testing Flow](#)
- [12 Documents / Resources](#)
  - [12.1 References](#)



**intel 750856 Agilex FPGA Development Board**

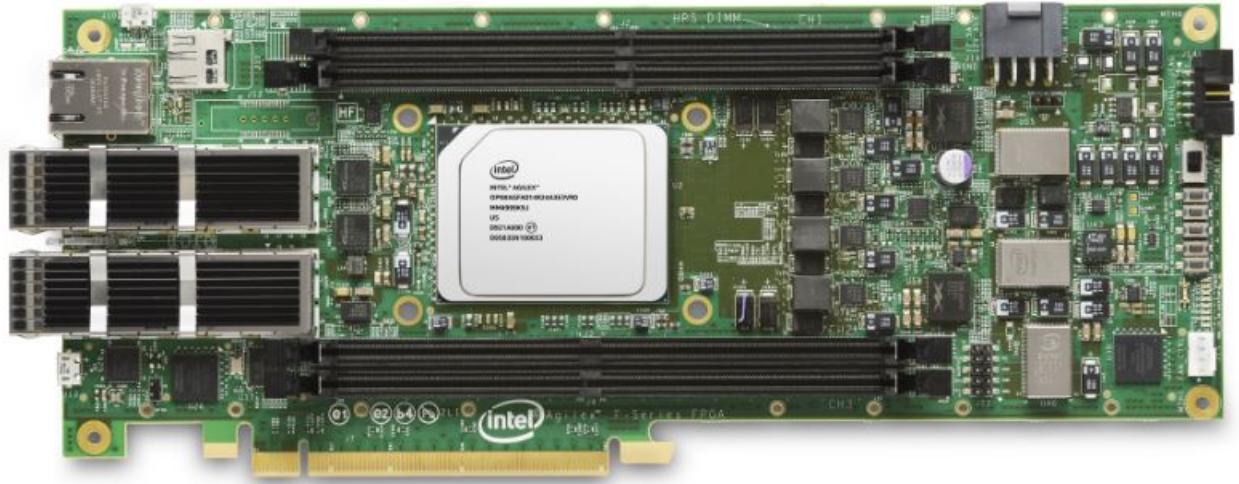

## Product Information

This reference design is for the Intel Agilex F-Series FPGA Development Board. It utilizes the Partial Reconfiguration External Configuration Controller Intel FPGA IP and has a simple PR region. The Intel Agilex Device External Host Hardware Setup consists of an external device (Helper FPGA), a DUT FPGA, and your external host design. The host design in the external device is responsible for hosting the PR process. The PR pins are used to connect both devices and can be any available user I/Os.

## Product Usage Instructions

### External Host Configuration

To perform external host configuration, follow these steps:

1. Create a host design in an external device to host the PR process.
2. Connect the PR pins from the external device to the Partial Reconfiguration External Configuration Controller Intel FPGA IP in the DUT FPGA.
3. Stream configuration data from the host design to the Intel Agilex Avalon streaming interface pins that correspond to the PR handshaking signals from the IP.

### Partial Reconfiguration via Configuration Pins Operation

The following sequence describes the operation of partial reconfiguration via configuration pins:

1. Assert the `pr_request` pin connected to the Partial Reconfiguration External Configuration Controller Intel FPGA IP.
2. The IP asserts a busy signal to indicate that the PR process is in progress (optional).
3. If the configuration system is ready for a PR operation, the `avst_ready` pin is asserted, indicating that it is ready to accept data.
4. Stream the PR configuration data over the `avst_data` pins and the `avst_valid` pin, following the Avalon streaming specification for data transfer with backpressure.
5. Streaming stops when the `avst_ready` pin is de-asserted.
6. De-assert the `avst_ready` pin to indicate that no more data is required for the PR operation.

7. The Partial Reconfiguration External Configuration Controller Intel FPGA IP de-asserts the busy signal to indicate the end of the process (optional).


## Partial Reconfiguration via Configuration Pins (External Host) Reference Design

This application note demonstrates partial reconfiguration via configuration pins (external host) on the Intel® Agilex® F-Series FPGA development board.

### Reference Design Overview

The partial reconfiguration (PR) feature allows you to reconfigure a portion of the FPGA dynamically, while the remaining FPGA design continues to function. You can create multiple personas for a particular region in your design that do not impact operation in areas outside this region. This methodology is effective in systems where multiple functions time-share the same FPGA device resources. The current version of the Intel Quartus® Prime Pro Edition software introduces a new and simplified compilation flow for partial reconfiguration. This Intel Agilex reference design uses the Partial Reconfiguration External Configuration Controller Intel FPGA IP and has a simple PR region.

### Intel Agilex Device External Host Hardware Setup

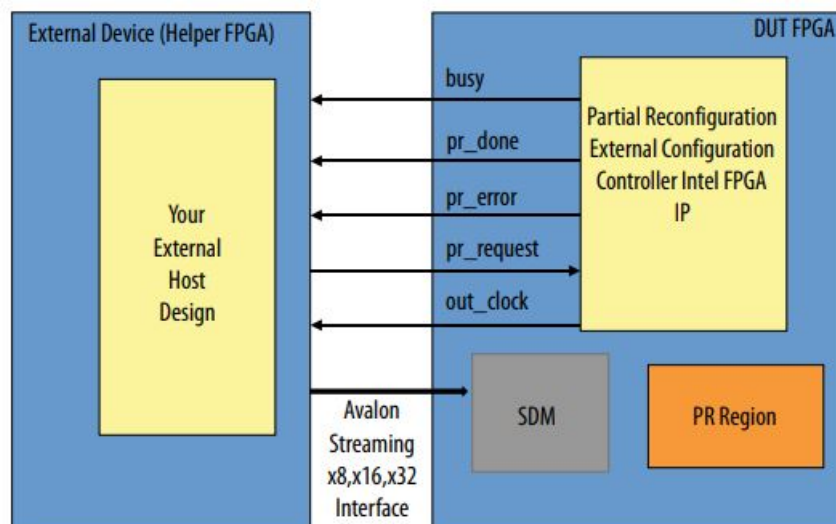

### External Host Configuration

In external host configuration, you must first create a host design in an external device to host the PR process, as Intel Agilex Device External Host Hardware Setup shows. The host design streams configuration data to the Intel Agilex Avalon streaming interface pins that correspond to the PR handshaking signals that come from the Partial Reconfiguration External Configuration Controller Intel FPGA IP. The PR pins that you use to connect both devices can be any available user I/Os.

The following sequence describes the partial reconfiguration via configuration pins operation:

1. First assert the `pr_request` pin that is connected to the Partial Reconfiguration External Configuration Controller Intel FPGA IP.
2. The IP asserts a `busy` signal to indicate that the PR process is in progress (optional).
3. If the configuration system is ready to undergo a PR operation, the `avst_ready` pin is asserted indicating that it is ready to accept data.
4. Begin to stream the PR configuration data over the `avst_data` pins and the `avst_valid` pin, while observing the Avalon streaming specification for data transfer with backpressure.

5. Streaming stops whenever the avst\_ready pin is de-asserted.
6. After streaming all configuration data, the avst\_ready pin is de-asserted to indicate that no more data is required for PR operation.
7. The Partial Reconfiguration External Configuration Controller Intel FPGA IP asserts the busy signal to indicate the end of the process (optional).
8. You can check the pr\_done and pr\_error pins to confirm whether the PR operation completed successfully. If an error occurs, such as failure in version checking and authorization checking, the PR operation terminates.


## Related Information

- [Intel Agilex F-Series FPGA Development Kit Web Page](#)
- [Intel Agilex F-Series FPGA Development Kit User Guide](#)
- [Intel Quartus Prime Pro Edition User Guide: Partial Reconfiguration](#)

## Partial Reconfiguration External Configuration Controller Intel FPGA IP

The Partial Reconfiguration External Configuration Controller is required to use configuration pins to stream PR data for PR operation. You must connect all of the top-level ports of the Partial Reconfiguration External Configuration Controller Intel FPGA IP to the pr\_request pin to allow the handshaking of the host with the secure device manager (SDM) from the core. The SDM determines which types of configuration pins to use, according to your MSEL setting.

## Partial Reconfiguration External Configuration Controller Intel FPGA IP

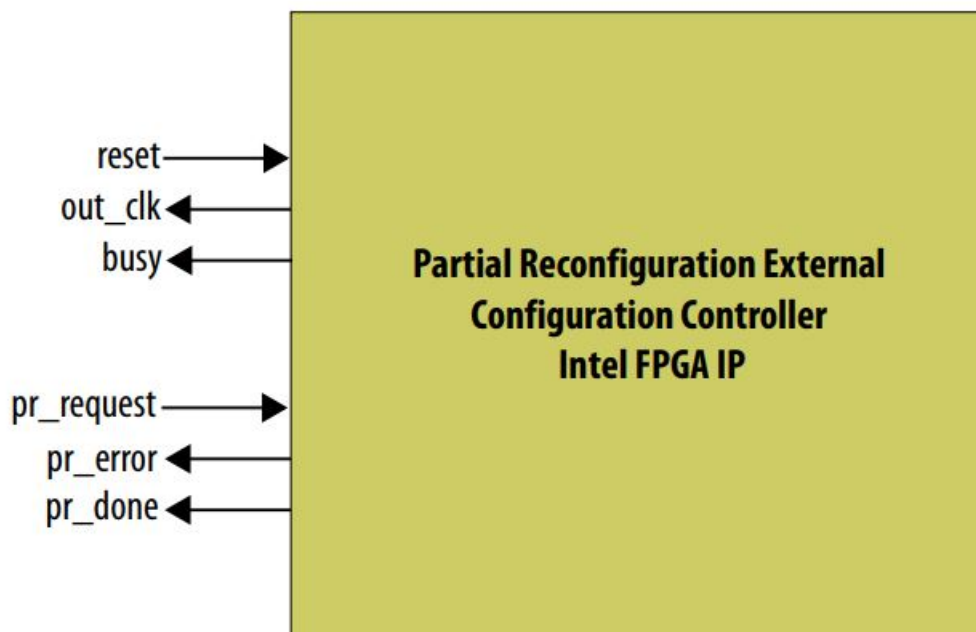

## Partial Reconfiguration External Configuration Controller Parameter Settings

Parameter	Value	Description
<b>Enable Busy Interface</b>	<b>Enable</b> or <b>Disable</b>	Allows you to Enable or Disable the Busy interface, which asserts a signal to indicate that PR processing is in progress during external configuration.  Default setting is <b>Disable</b> .

## Partial Reconfiguration External Configuration Controller Ports

Port Name	Width	Direction	Function
pr_request	1	Input	Indicates that the PR process is ready to begin. The signal is a conduit not synchronous to any clock signal.
pr_error	2	Output	Indicates a partial reconfiguration error.: <ul style="list-style-type: none"><li>2'b01—general PR error</li><li>2'b11—incompatible bitstream error</li></ul> These signals are conduits not synchronous to any clock source.
pr_done	1	Output	Indicates that the PR process is complete. The signal is a conduit not synchronous to any clock signal.
start_addr	1	Input	Specifies the start address of PR data in Active Serial Flash. You enable this signal by selecting either <b>Avalon®-ST</b> or <b>Active Serial</b> for the <b>Enable Avalon-ST Pins or Active Serial Pins</b> parameter. The signal is a conduit not synchronous to any clock signal.
reset	1	Input	Active high, synchronous reset signal.
out_clk	1	Output	Clock source that generates from an internal oscillator.
busy	1	Output	The IP asserts this signal to indicate PR data transfer in progress. You enable this signal by selecting <b>Enable</b> for the <b>Enable busy interface</b> parameter.

## Reference Design Requirements

### Use of this reference design requires the following:

- Installation of the Intel Quartus Prime Pro Edition version 22.3 with support for the Intel Agilex device family.
- Connection to the Intel Agilex F-Series FPGA development board on the bench.
- Download of the design example available in the following location: <https://github.com/intel/fpga-partial-reconfig>.

### To download the design example:

1. Click Clone or download.
2. Click Download ZIP. Unzip the fpga-partial-reconfig-master.zip file.
3. Navigate to the tutorials/agilex\_external\_pr\_configuration subfolder to access the reference design.

## Reference Design Walkthrough

The following steps describe the implementation of partial reconfiguration via configuration pins (external host) on the Intel Agilex F-Series FPGA development board:

- **Step 1:** Getting Started
- **Step 2:** Creating a Design Partition
- **Step 3:** Allocating Placement and Routing Regions
- **Step 4:** Adding the Partial Reconfiguration External Configuration Controller IP
- **Step 5:** Defining Personas
- **Step 6:** Creating Revisions
- **Step 7:** Compiling the Base Revision
- **Step 8:** Preparing PR Implementation Revisions
- **Step 9:** Programming the Board

## Step 1: Getting Started


To copy the reference design files to your working environment and compile the blinking\_led flat design:

1. Create a directory in your working environment, agilex\_pcie\_devkit\_blinking\_led\_pr.
2. Copy the downloaded tutorials/agilex\_pcie\_devkit\_blinking\_led/flat sub-folder to the directory, agilex\_pcie\_devkit\_blinking\_led\_pr.
3. In the Intel Quartus Prime Pro Edition software, click File ► Open Project and select blinking\_led.qpf.
4. To elaborate the hierarchy of the flat design, click Processing ► Start ► Start Analysis & Synthesis.  
Alternatively, at the command-line, run the following command: quartus\_syn blinking\_led -c blinking\_led

## Creating a Design Partition

You must create design partitions for each PR region that you want to partially reconfigure. The following steps create a design partition for the u\_blinking\_led instance.

### Creating Design Partitions

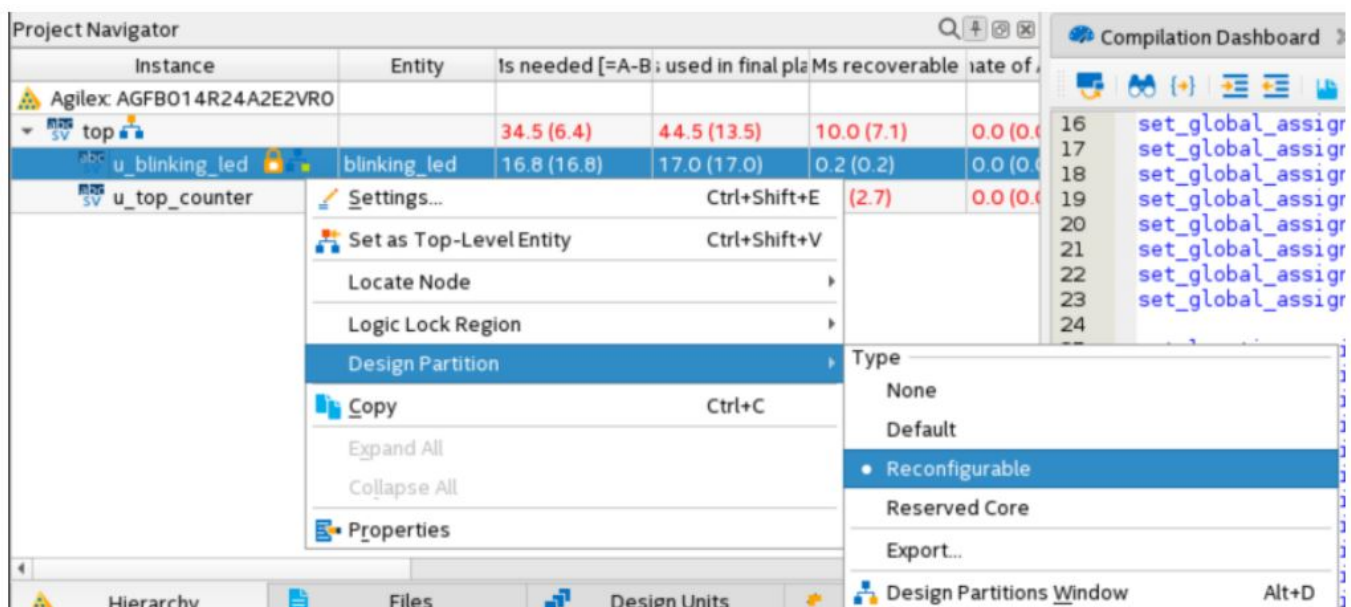


1. Right-click the u\_blinking\_led instance in the Project Navigator and click Design Partition ► Reconfigurable. A design partition icon appears next to each instance that is set as a partition.
2. Click Assignments ► Design Partitions Window. The window displays all design partitions in the project.
3. Edit the partition name in the Design Partitions Window by double-clicking the name. For this reference design, rename the partition name to pr\_partition



- **Note:** When you create a partition, the Intel Quartus Prime software automatically generates a partition name, based on the instance name and hierarchy path. This default partition name can vary with each instance.
4. To export the finalized static region from the base revision compile, double-click the entry for root\_partition in the Post Final Export File column, and type blinking\_led\_static.qdb.

### Exporting Post Final Snapshot in Design Partitions Window

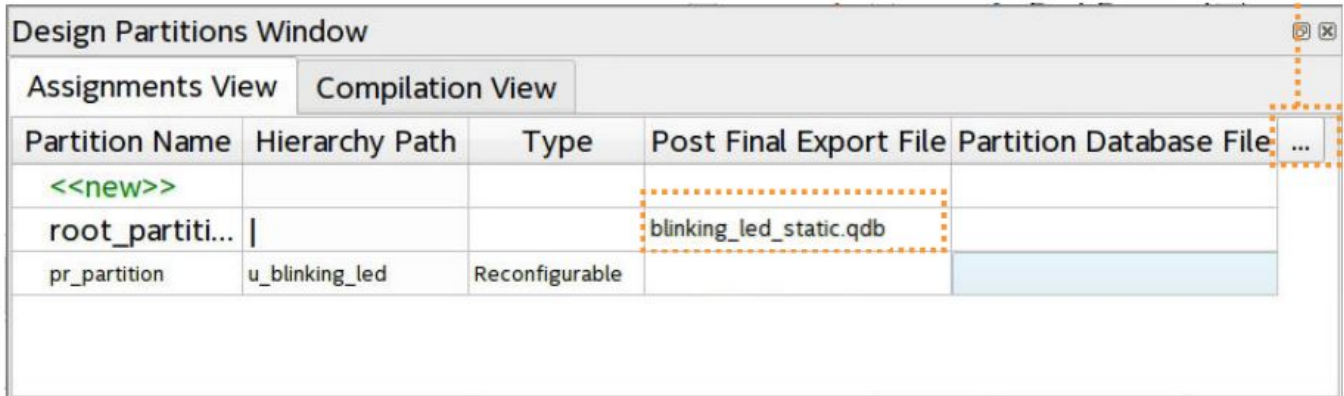

Partition Name	Hierarchy Path	Type	Post Final Export File	Partition Database File	...
<<new>>					
root_partiti...			blinking_led_static.qdb		
pr_partition	u_blinking_led	Reconfigurable			

Verify that the blinking\_led.qsf contains the following assignments, corresponding to your reconfigurable design partition:

```
set_instance_assignment -name PARTITION pr_partition -to u_blinking_led
    set_instance_assignment -name PARTIAL_RECONFIGURATION_PARTITION ON \
        -to u_blinking_led

set_instance_assignment -name EXPORT_PARTITION_SNAPSHOT_FINAL \
    blinking_led_static.qdb -to | -entity top
```

### Related Information

“Create Design Partitions” in Intel Quartus Prime Pro Edition User Guide: Partial Reconfiguration


### Allocating Placement and Routing Region for a PR Partition

For every base revision you create, the PR design flow places the corresponding persona core in your PR partition region. To locate and assign the PR region in the device floorplan for your base revision:

1. Right-click the u\_blinking\_led instance in the Project Navigator and click Logic Lock Region ► Create New Logic Lock Region. The region appears on the Logic Lock Regions Window.
2. Your placement region must enclose the blinking\_led logic. Select the placement region by locating the node in Chip Planner. Right-click the u\_blinking\_led region name in the Logic Lock Regions Window and click

Locate Node ► Locate in Chip Planner. The u\_blinking\_led region is color-coded

### Chip Planner Node Location for blinking\_led

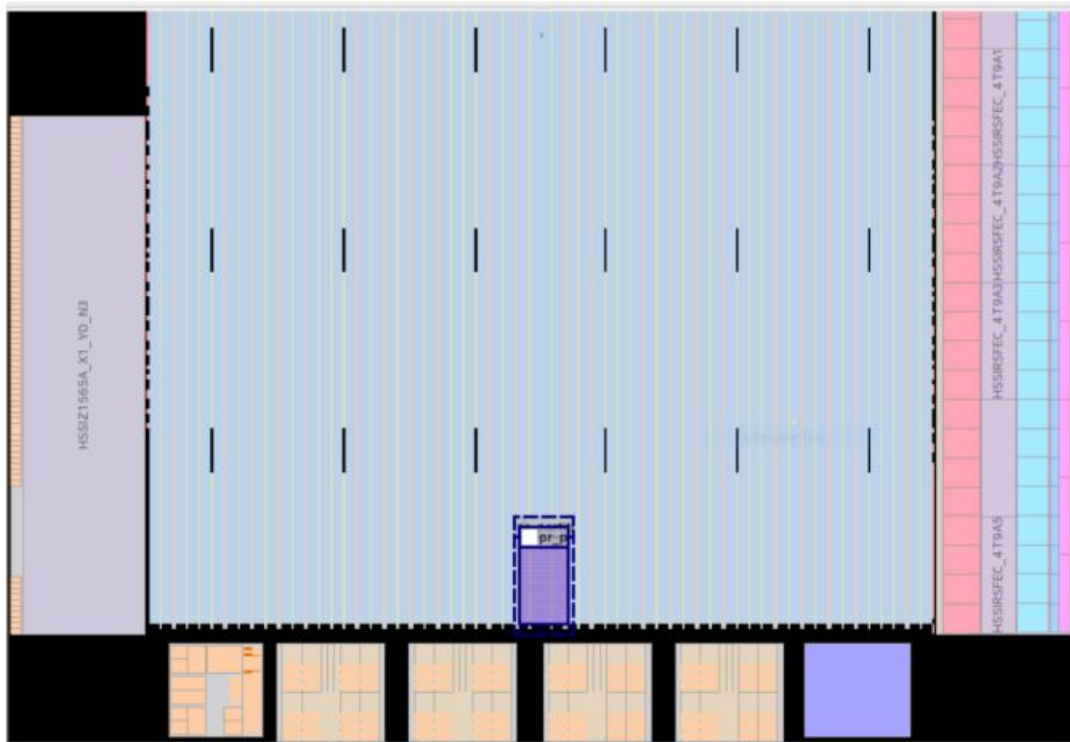

1. In the Logic Lock Regions window, specify the placement region co-ordinates in the Origin column. The origin corresponds to the lower-left corner of the region. For example, to set a placement region with (X1 Y1) co-ordinates as (163 4), specify the Origin as X163\_Y4. The Intel Quartus Prime software automatically calculates the (X2 Y2) co-ordinates (top-right) for the placement region, based on the height and width you specify.
  - **Note:** This tutorial uses the (X1 Y1) co-ordinates – (163 4), and a height and width of 20 for the placement region. Define any value for the placement region. Ensure that the region covers the blinking\_led logic.
2. Enable the Reserved and Core-Only options.
3. Double-click the Routing Region option. The Logic Lock Routing Region Settings dialog box appears.
4. Select Fixed with expansion for the Routing type. Selecting this option automatically assigns an expansion length of 2.
  - **Note:** The routing region must be larger than the placement region, to provide extra flexibility for the Fitter when the engine routes different personas.

## Logic Lock Regions Window

Region Name	Members	Width	Height	Origin	Reserved	Core-Only	Size/State	Routing Region
Logic Lock Regions								
pr_partition	u_blinking_led	20	20	X163_Y4	On	On	Fixed/Locked	Fixed with expansion 2
<<new>>								

Verify that the blinking\_led.qsf contains the following assignments, corresponding to your floorplanning:

```
set_instance_assignment -name PLACE_REGION "X163 Y4 X182 Y23" -to \
    u_blinking_led
set_instance_assignment -name RESERVE_PLACE_REGION ON -to \
    u_blinking_led

set_instance_assignment -name CORE_ONLY_PLACE_REGION ON -to \
    u_blinking_led
set_instance_assignment -name ROUTE_REGION "X161 Y2 X184 Y25" -to \
    u_blinking_led
```



## Related Information


“Floorplan the Partial Reconfiguration Design” in Intel Quartus Prime Pro Edition User Guide: Partial Reconfiguration

### Adding the Partial Reconfiguration External Configuration Controller Intel FPGA IP

The Partial Reconfiguration External Configuration Controller Intel FPGA IP interfaces with the Intel Agilex PR control block to manage the bitstream source. You must add this IP to your design to implement external configuration. Follow these steps to add the Partial Reconfiguration External Configuration Controller Intel FPGA IP to your project:

1. Type Partial Reconfiguration in the IP Catalog search field (Tools ► IP Catalog).
2. Double-click Partial Reconfiguration External Configuration Controller Intel FPGA IP.
3. In the Create IP Variant dialog box, type `external_host_pr_ip` as the File name, and then click Create. The parameter editor appears.
4. For the Enable busy interface parameter, select Disable (the default setting). When you need to use this signal, you can switch the setting to Enable.

### Enable Busy Interface Parameter in Parameter Editor

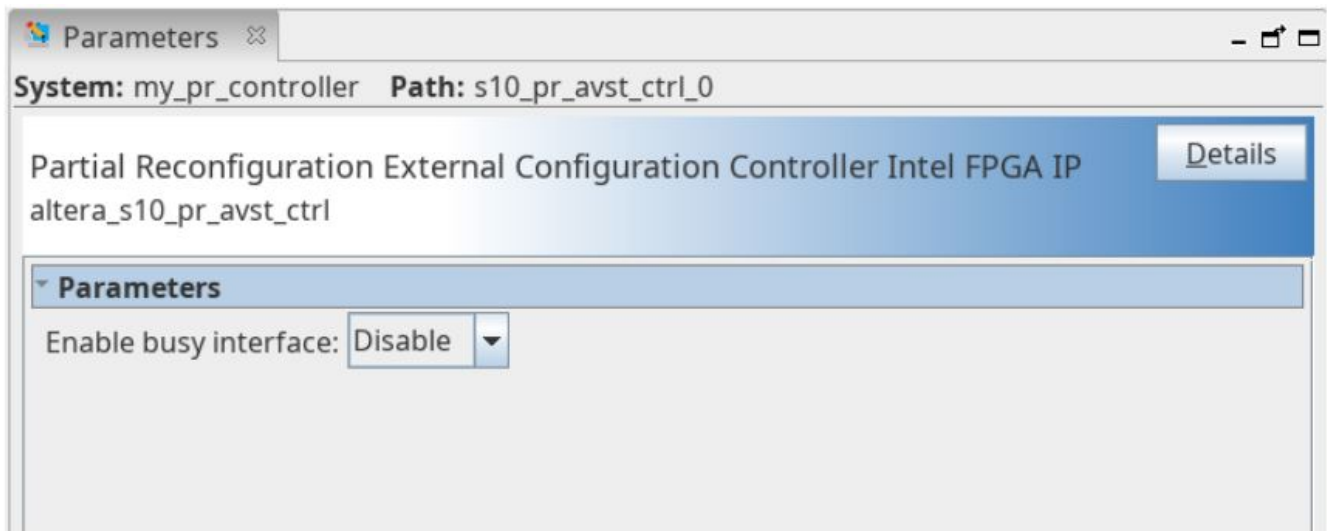

1. Click File ► Save and exit the parameter editor without generating the system. The parameter editor generates the `external_host_pr_ip.ip` IP variation file and adds the file to the `blinking_led` project. AN 991: Partial Reconfiguration via Configuration Pins (External Host) Reference Design 750856 | 2022.11.14 AN 991:
  - **Note:**
  - **a.** If you are copying the `external_host_pr_ip.ip` file from the `pr` directory, manually edit the `blinking_led.qsf` file to include the following line: `set_global_assignment -name IP_FILE pr_ip.ip`
  - **b.** Place the `IP_FILE` assignment after the `SDC_FILE` assignments (`blinking_led. dc`) in your `blinking_led.qsf` file. This ordering ensures appropriate constraining of the Partial Reconfiguration Controller IP core.
  - **Note:** To detect the clocks, the `.sdc` file for the PR IP must follow any `.sdc` that creates the clocks that the IP core uses. You facilitate this order by ensuring that the `.ip` file for the PR IP core appears after any `.ip` files or `.sdc` files that you use to define these clocks in the `.qsf` file for your Intel Quartus Prime project revision. For more information, refer to the Partial Reconfiguration IP Solutions User Guide.

## Updating the Top-Level Design

To update the top.sv file with the PR\_IP instance:

1. To add the external\_host\_pr\_ip instance to the top-level design, uncomment the following code blocks in the top.sv file:

```
//////////////////////////////////////////  
// Status signals from external PR IP  
//////////////////////////////////////////  
input wire pr_request,  
output_wire pr_done,  
output_wire [1:0] pr_error  
  
wire    clock_out;  
  
external_host_pr_ip u_pr_ip  
  .outclk      (clock_out),  
  .reset       (1'b0),  
  .pr_request  (pr_request),  
  .pr_done     (pr_done),  
  .pr_error    (pr_error)  
);
```

## Defining Personas

This reference design defines three separate personas for the single PR partition. To define and include the personas in your project:

1. Create three SystemVerilog files, blinking\_led.sv, blinking\_led\_slow.sv, and blinking\_led\_empty.sv in your working directory for the three personas.

## Reference Design Personas

File Name	Description	Code
blinking_led.sv	Default persona with same design as the flat implementation	<pre>`timescale 1 ps / 1 ps `default_nettype none  module blinking_led (   // clock   input wire clock,   input wire [31:0] counter,    // Control signals for the LEDs   output wire led_two_on,   output wire led_three_on );    localparam COUNTER_TAP = 23;    reg led_two_on_r;   reg led_three_on_r;    assign led_two_on = led_two_on_r;   assign led_three_on = led_three_on_r;    always_ff @(posedge clock)   begin     led_two_on_r &lt;= counter[COUNTER_TAP];     led_three_on_r &lt;= counter[COUNTER_TAP];   end  endmodule</pre>

blinking_led_slow.sv	LEDs blink slower	<pre> `timescale 1 ps / 1 ps `default_nettype none  module blinking_led_slow (     // clock     input wire clock,     input wire [31:0] counter,      // Control signals for the LEDs     output wire led_two_on,     output wire led_three_on );      localparam COUNTER_TAP = 27;      reg led_two_on_r;     reg led_three_on_r;      assign led_two_on = led_two_on_r;     assign led_three_on = led_three_on_r;      always_ff @(posedge clock)     begin         led_two_on_r &lt;= counter[COUNTER_TAP];         led_three_on_r &lt;= counter[COUNTER_TAP];     end  endmodule </pre>
blinking_led_empty.sv	LEDs stay ON	<pre> `timescale 1 ps / 1 ps `default_nettype none  module blinking_led_empty(     // clock     input wire clock,     input wire [31:0] counter,      // Control signals for the LEDs     output wire led_two_on,     output wire led_three_on );      // LED is active low     assign led_two_on = 1'b0;     assign led_three_on = 1'b0;  endmodule </pre>

#### Note:

- blinking\_led.sv is already available as part of the files you copy from the flat/ sub-directory. You can simply reuse this file.
- If you create the SystemVerilog files from the Intel Quartus Prime Text Editor, disable the Add file to current project option, when saving the files.

## Creating Revisions

The PR design flow uses the project revisions feature in the Intel Quartus Prime software. Your initial design is the base revision, where you define the static region boundaries and reconfigurable regions on the FPGA. From the base revision, you create multiple revisions. These revisions contain the different implementations for the PR regions. However, all PR implementation revisions use the same top-level placement and routing results from the base revision. To compile a PR design, you must create a PR implementation revision for each persona. In addition, you must assign revision types for each of the revisions. The available revision types are:

- Partial Reconfiguration – Base
- Partial Reconfiguration – Persona Implementation

The following table lists the revision name and the revision type for each of the revisions:

## Revision Names and Types

Revision Name	Revision Type
blinking_led.qsf	Partial Reconfiguration – Base
blinking_led_default.qsf	Partial Reconfiguration – Persona Implementation
blinking_led_slow.qsf	Partial Reconfiguration – Persona Implementation
blinking_led_empty.qsf	Partial Reconfiguration – Persona Implementation

## Setting the Base Revision Type

1. Click Project ► Revisions.
2. In Revision Name, select the blinking\_led revision, and then click Set Current.
3. Click Apply. The blinking\_led revision displays as the current revision.
4. To set the Revision Type for blinking\_led, click Assignments ► Settings ► General.
5. For Revision Type, select Partial Reconfiguration – Base, and then click OK.
6. Verify that the blinking\_led.qsf now contains the following assignment: `##blinking_led.qsf  
set_global_assignment -name REVISION_TYPE PR_BASE`

## Creating Implementation Revisions

1. To open the Revisions dialog box, click Project ► Revisions.
2. To create a new revision, double-click <<new revision>>.
3. In Revision name, specify blinking\_led\_default and select blinking\_led for Based on revision.
4. For the Revision type, select Partial Reconfiguration – PersonaImplementation.

## Creating Revisions

Specify a name and description for the new revision. You can base the revision on an existing revision, and specify the revision as the current revision.

Revision name:

Based on revision:

☐ This project uses a Partition Database (.qdb) file for the root partition

Root Partition Database file:  ...

Revision type:


Description:

Created on:Friday, November 06, 2020  
Based on:blinking\_led

☐ Set as current revision

1. Similarly, set the Revision type for `blinking_led_slow` and `blinking_led_empty` revisions.
2. Verify that each .qsf file now contains the following assignment: `set_global_assignment -name REVISION_TYPE PR_IMPL set_instance_assignment -name ENTITY_REBINDING \ place_holder -to u_blinking_led` where, `place_holder` is the default entity name for the newly created PR implementation revision.

## Project Revisions

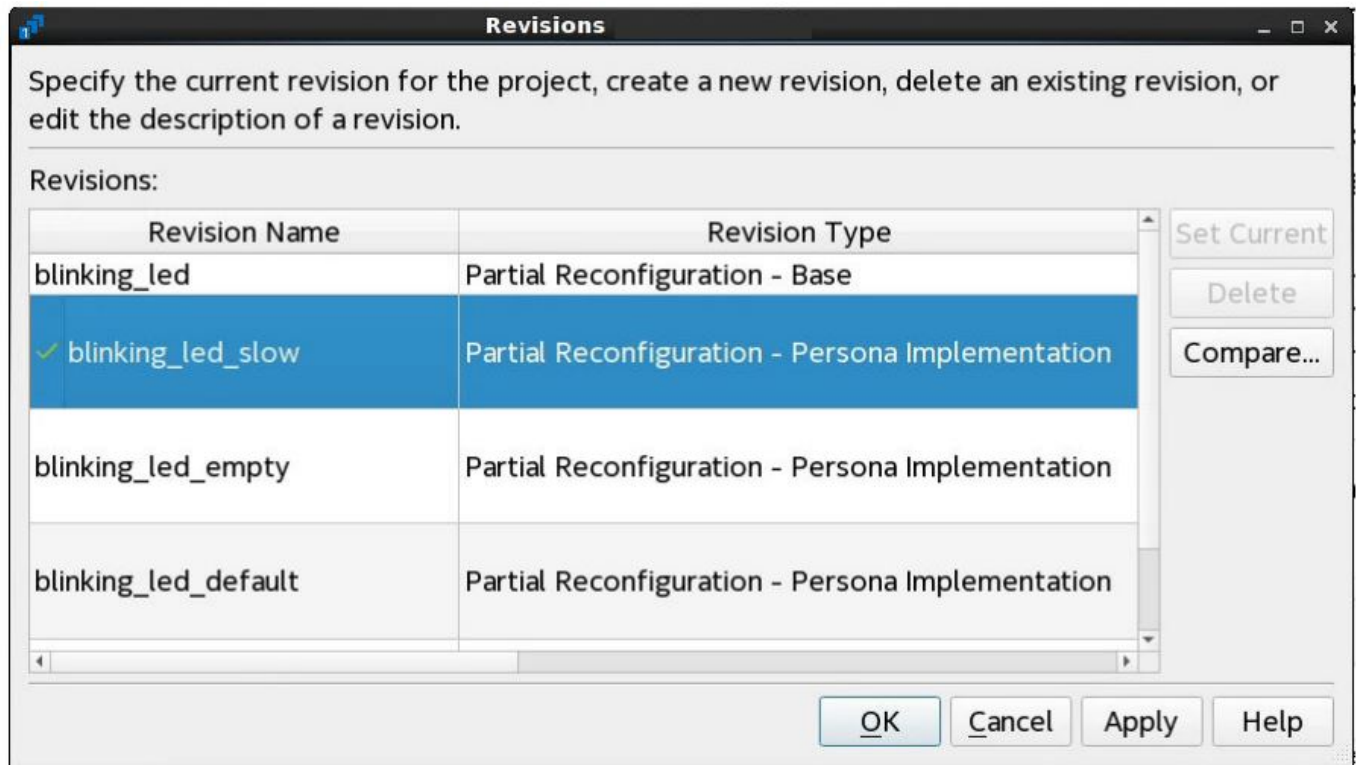

## Compiling the Base Revision

1. To compile the base revision, click Processing ► Start Compilation. Alternatively, the following command compiles the base revision: `quartus_sh -flow compile blinking_led -c blinking_led`
2. Inspect the bitstream files that generate in the `output_files` directory.

## Generated Files

Name	Type	Description
blinking_led.sof	Base programming file	Used for full-chip base configuration
blinking_led.pr_partition.rbf	PR bitstream file for base persona	Used for partial reconfiguration of base persona.
blinking_led_static.qdb	.qdb database file	Finalized database file used to import the static region.

## Related Information

- “Floorplan the Partial Reconfiguration Design” in Intel Quartus Prime Pro Edition User Guide: Partial

Reconfiguration


- “Applying Floorplan Constraints Incrementally” in Intel Quartus Prime Pro Edition User Guide: Partial Reconfiguration

## Preparing PR Implementation Revisions

You must prepare the PR implementation revisions before you can compile and generate the PR bitstream for device programming. This setup includes adding the static region .qdb file as the source file for each implementation revision. In addition, you must specify the corresponding entity of the PR region.

1. To set the current revision, click Project ► Revisions, select blinking\_led\_default as the Revision name, and then click Set Current.
2. To verify the correct source for each implementation revision, click Project ► Add/Remove Files in Project. The blinking\_led.sv file appears in the file list.

### Files Page

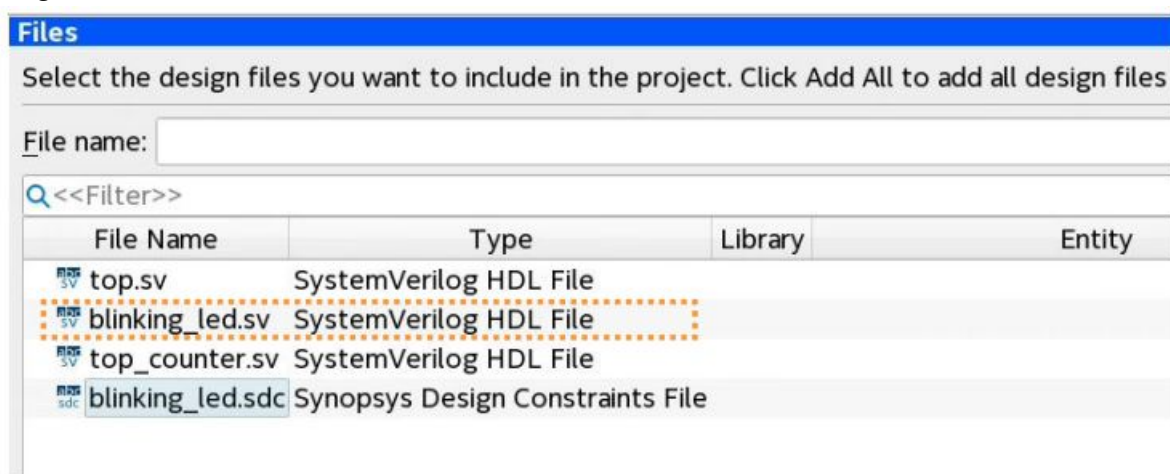

1. Repeat steps 1 through 2 to verify the other implementation revision source files:

Implementation Revision Name	Source File
blinking_led_default	blinking_led.sv
blinking_led_empty	blinking_led_empty.sv
blinking_led_slow	blinking_led_slow.sv

1. To verify the .qdb file associated with the root partition, click Assignments ► Design Partitions Window. Confirm that the Partition Database File specifies the blinking\_led\_static.qdb file, or double-click the Partition Database File cell to specify this file. Alternatively, the following command assigns this file: set\_instance\_assignment -name QDB\_FILE\_PARTITION \ blinking\_led\_static.qdb -to |
2. In the Entity Re-binding cell, specify the entity name of each PR partition that you change in the implementation revision. For the blinking\_led\_default implementation revision, the entity name is blinking\_led. In this tutorial, you overwrite the u\_blinking\_led instance from the base revision compile with the new blinking\_led entity.

**Note:** A placeholder entity rebinding assignment is added to the implementation revision automatically. However, you must change the default entity name in the assignment to an appropriate entity name for your design.



Implementation Revision Name	Entity Re-binding
blinking_led_default	blinking_led
blinking_led_slow	blinking_led_slow
blinking_led_empty	blinking_led_empty

## Entity Rebinding

Partition Name	Hierarchy Path	Type	Post Final Export File	Partition Database File	Entity Re-binding	...
<<new>>						
root_partition				blinking_led_static.qdb		
pr_partition	u_blinking_led	Reconfigurable			blinking_led	

Verify that each of the following lines now exists in the appropriate .qsf:

```
##blinking_led_default.qsf
set_instance_assignment -name ENTITY_REBINDING blinking_led \
    -to u_blinking_led

##blinking_led_slow.qsf
set_instance_assignment -name ENTITY_REBINDING blinking_led_slow \
    -to u_blinking_led

##blinking_led_empty.qsf
set_instance_assignment -name ENTITY_REBINDING blinking_led_empty \
    -to u_blinking_led
```

1. To compile the design, click Processing ► Start Compilation. Alternatively, the following command compiles this project: `quartus_sh -flow compile blinking_led -c blinking_led_default`
2. Repeat the above steps to prepare `blinking_led_slow` and `blinking_led_empty` revisions: `quartus_sh -flow compile blinking_led -c blinking_led_slow` `quartus_sh -flow compile blinking_led -c blinking_led_empty`

**Note:** You can specify any Fitter specific settings that you want to apply during the PR implementation compilation. Fitter specific settings impact only the fit of the persona, without affecting the imported static region.

## Programming the Board

This tutorial uses an Intel Agilex F-Series FPGA development board on the bench, outside of the PCIe\* slot in your host machine. Before you program the board, ensure that you have completed the following steps:


1. Connect the power supply to the Intel Agilex F-Series FPGA development board.
2. Connect the Intel FPGA Download Cable between your PC USB port and the Intel FPGA Download Cable port on the development board.

**To run the design on the Intel Agilex F-Series FPGA development board:**

1. Open the Intel Quartus Prime software and click Tools ► Programmer.
2. In the Programmer, click Hardware Setup and select USB-Blaster.
3. Click Auto Detect and select the device, AGFB014R24AR0.

4. Click OK. The Intel Quartus Prime software detects and updates the Programmer with the three FPGA devices on the board.
5. Select the AGFB014R24AR0 device, click Change File and load the `blinking_led_default.sof` file.
6. Enable Program/Configure for `blinking_led_default.sof` file.
7. Click Start and wait for the progress bar to reach 100%.
8. Observe the LEDs on the board blinking at the same frequency as the original flat design.
9. To program only the PR region, right-click the `blinking_led_default.sof` file in the Programmer and click Add PR Programming File.
10. Select the `blinking_led_slow.pr_partition.rbf` file.
11. Disable Program/Configure for `blinking_led_default.sof` file.
12. Enable Program/Configure for `blinking_led_slow.pr_partition.rbf` file and click Start. On the board, observe LED[0] and LED[1] continuing to blink. When the progress bar reaches 100%, LED[2] and LED[3] blink slower.
13. To reprogram the PR region, right-click the `.rbf` file in the Programmer and click Change PR Programming File.
14. Select the `.rbf` files for the other two personas to observe the behavior on the board. Loading the `blinking_led_default.rbf` file causes the LEDs to blink at a specific frequency, and loading the `blinking_led_empty.rbf` file causes the LEDs to stay ON.


## Programming the Intel Agilex F-Series FPGA Development Board

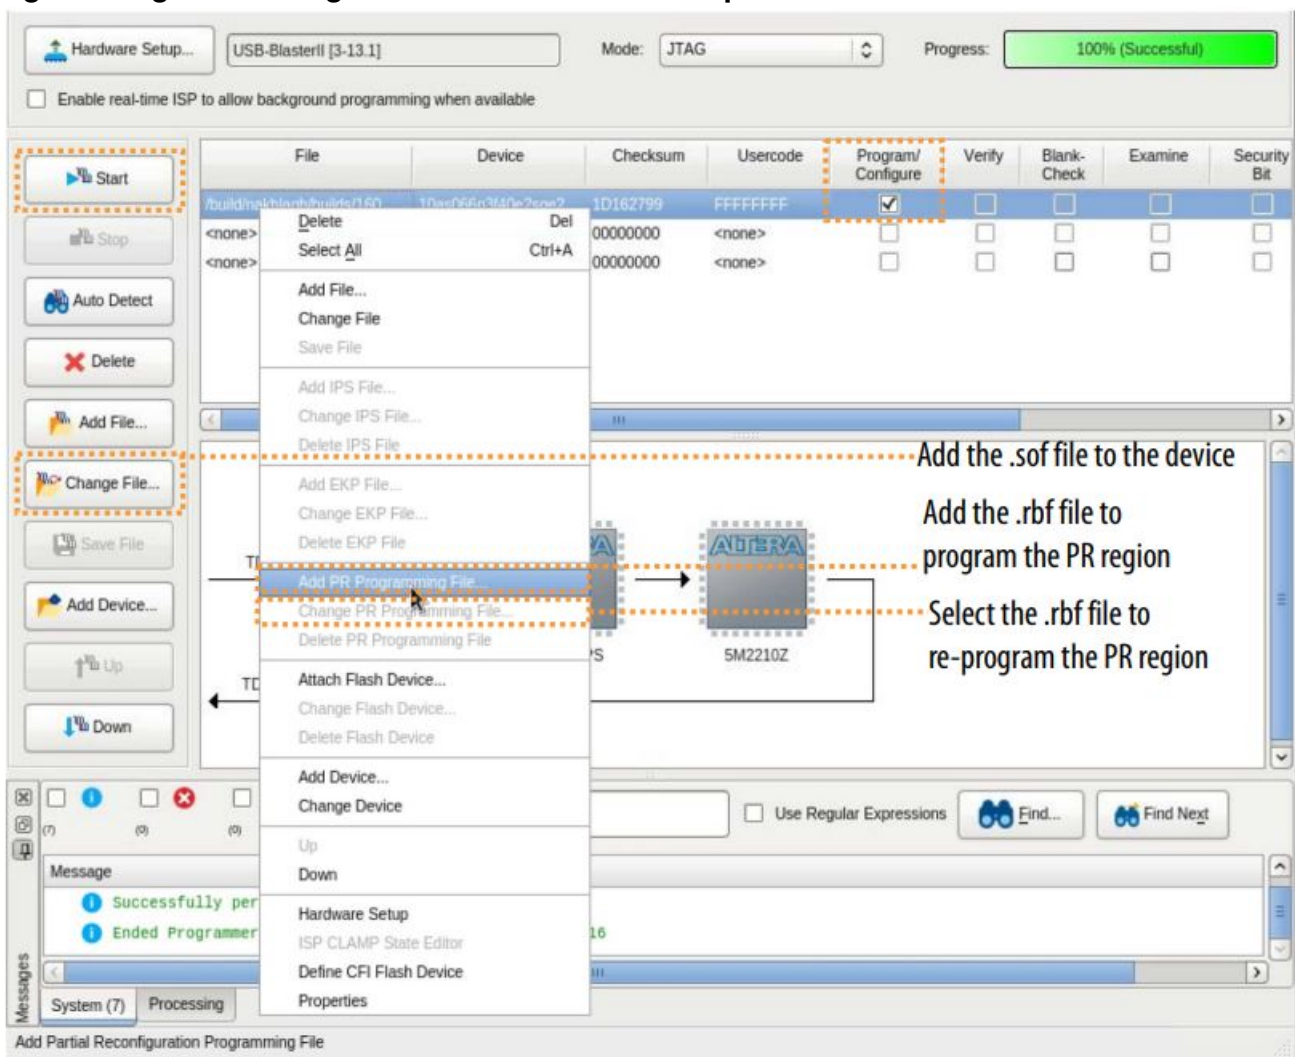

## Hardware Testing Flow

The following sequences describe the reference design hardware testing flow.

### Intel Agilex Device External Host Hardware Setup

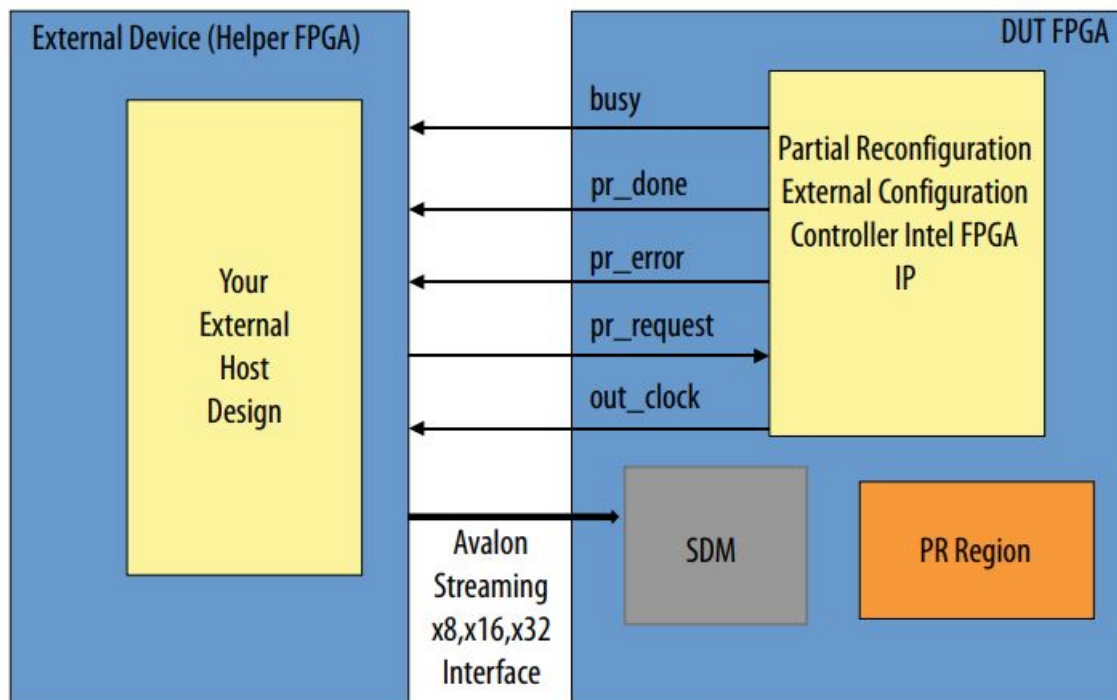

### Program the Helper FPGA (External Host)

The following sequence describes programming the helper FPGA that operates as the PR process external host:


1. Specify the Avalon streaming interface setting that corresponds with the mode that you select (x8, x16, or x32).
2. Initialize the platform by programming the helper FPGA using the Intel Quartus Prime Programmer and connected configuration cable.
3. Using the helper FPGA, read the CONF\_DONE and AVST\_READY signals. CONF\_DONE should be 0, AVST\_READY should be 1. Logic high on this pin indicates the SDM is ready to accept data from an external host. This output is part of the SDM I/O.

**Note:** The CONF\_DONE pin signals an external host that bitstream transfer is successful. Use these signals only to monitor the full chip configuration process. Refer to the Intel Agilex Configuration User Guide for more information on this pin.

Program the DUT FPGA with Full Chip SOF via External Host The following sequence describes programming the DUT FPGA with the full chip SRAM Object File (.sof) using the host Avalon streaming interface:

1. Write the full chip bitstream into the DDR4 external memory of the helper FPGA (external host).
2. Configure the DUT FPGA with the full chip .sof using the Avalon streaming interface (x8, x16, x32).
3. Read the status DUT FPGA configuration signals. CONF\_DONE should be 1, AVST\_READY should be 0.

### Timing Specifications: Partial Reconfiguration External Controller Intel FPGA IP

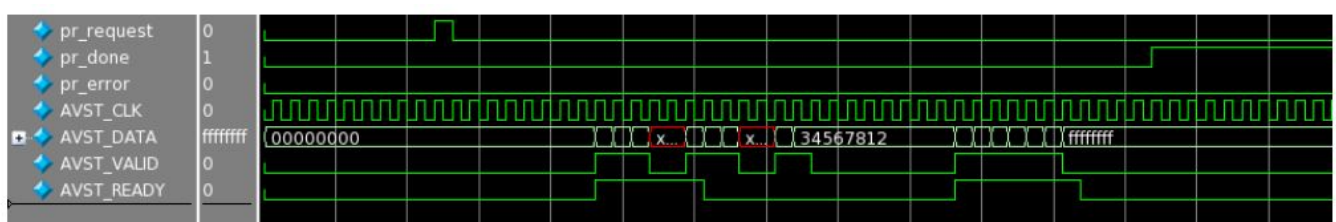

### Program the DUT FPGA with the First Persona via External Host

1. Apply the freeze on the target PR region in the DUT FPGA.
2. Using the Intel Quartus Prime System Console, assert pr\_request to start the partial reconfiguration.  
AVST\_READY should be 1.
3. Write the first PR persona bitstream into the DDR4 external memory of the helper FPGA (external host).
4. Using Avalon streaming interface (x8, x16, x32), reconfigure the DUT FPGA with the first persona bitstream.
5. To monitor the PR status, click Tools ► System Console to launch System Console. In System Console, monitor the PR status:
  - pr\_error is 2—reconfiguration in process.
  - pr\_error is 3—reconfiguration is complete.
6. Apply unfreeze on the PR region in the DUT FPGA.

**Note:** If an error occurs during PR operation, such as failure in version checking or authorization checking, the PR operation terminates.

## Related Information

- Intel Agilex Configuration User Guide
- Intel Quartus Prime Pro Edition User Guide: Debug Tools

Document Revision History for AN 991: Partial Reconfiguration via Configuration Pins (External Host) Reference Design for Intel Agilex F-Series FPGA Development Board

Document Version	Intel Quartus Prime Version	Changes
2022.11.14	22.3	<ul style="list-style-type: none"><li>• Initial release.</li></ul>

AN 991: Partial Reconfiguration via Configuration Pins (External Host) Reference Design: for Intel Agilex F-Series FPGA Development Board

## Answers to Top FAQs:

- **Q** What is PR via configuration pins?
- **A** External Host Configuration on page 3
- **Q** What do I need for this reference design?
- **A** Reference Design Requirements on page 6
- **Q** Where can I get the reference design?
- **A** Reference Design Requirements on page 6
- **Q** How do I perform PR via external configuration?
- **A** Reference Design Walkthrough on page 6
- **Q** What is a PR persona?
- **A** Defining Personas on page 11
- **Q** How do I program the board?
- **A** Program the Board on page 17
- **Q** What are the PR known issues and limitations?
- **A** Intel FPGA Support Forums: PR

- **Q** Do you have training on PR?
- **A** Intel FPGA Technical Training Catalog

Online Version Send Feedback

- **ID:** 750856
- **Version:** 2022.11.14

## Documents / Resources

	<p><a href="#">intel 750856 Agilex FPGA Development Board</a> [pdf] User Guide 750856, 750857, 750856 Agilex FPGA Development Board, Agilex FPGA Development Board, FPGA Development Board, Development Board, Board</p>
---	--

## References

- [🌐 Search - Intel Communities](#)
- [📄 GitHub - intel/fpga-partial-reconfig: Tutorials, scripts and reference designs for the Intel FPGA partial reconfiguration \(PR\) design flow](#)
- intel [1. Overview](#)
- intel [1. Answers to Top FAQs](#)
- intel [2.6.3.1. Applying Floorplan Constraints Incrementally](#)
- intel [2.6.2. Step 2: Create Design Partitions](#)
- intel [2.6.3. Step 3: Floorplan the Design](#)
- intel [1. Answers to Top FAQs](#)
- intel [Intel | Data Center Solutions, IoT, and PC Innovation](#)
- intel [Intel® FPGAs and Programmable Devices-Intel® FPGA](#)
- intel [Intel FPGA Technical Training Catalog | Intel](#)
- intel [Intel ISO 9001:2015 Registrations](#)

Manuals+.