

# Intesis Modbus Master to BACnet Server gateway Installation Guide

[Home](#) » [Intesis](#) » Intesis Modbus Master to BACnet Server gateway Installation Guide 



## Contents

- [1 INBACMBM\\*\\*\\*0000](#)
  - [1.1 Modbus Master to BACnet Server gateway](#)
- [2 SAFETY INSTRUCTIONS](#)
- [3 WARNING](#)
- [4 CONFIGURATION](#)
- [5 INSTALLATION](#)
  - [5.1 Wall Mount](#)
  - [5.2 DIN Rail Mount](#)
- [6 CONNECTIONS](#)
- [7 ELECTRICAL & MECHANICAL FEATURES](#)
- [8 Documents / Resources](#)
  - [8.1 References](#)
- [9 Related Posts](#)

## INBACMBM\*\*\*0000

### Modbus Master to BACnet Server gateway

**Order Code:** INBACMBM\*\*\*0000

\*\*\* stands for the Intesis gateway capacity and varies depending on the specific gateway acquired

**Installation Sheet rev.1.9**

HMS Industrial Networks S.L.U ©

## Owner's Record

The serial number is located at the rear of the gateway. Record this information in the space provided below. Refer to it whenever you contact upon your gateway dealer or support team regarding this product.

Serial No. \_\_\_\_\_

## SAFETY INSTRUCTIONS



**Follow carefully this safety and installation instructions. Improper work may lead to serious harmful for your health and also may damage seriously the Intesis gateway and/or any other equipment connected to it.**

The Intesis gateway must be installed by accredited electrician or similar technical personnel, following all the safety instructions given here and in accordance always with the country legislation for installation of electric equipment.

The Intesis gateway cannot be installed outdoors or exposed to direct solar radiation, water, high relative humidity or dust.

The Intesis gateway must only be installed in a restricted access location.

In case of wall mount, fix firmly the Intesis device on a not vibrating surface following the instructions next.

In case of DIN rail mount fix the Intesis device properly to the DIN rail following the instructions below.

Mounting on DIN rail inside a metallic cabinet properly connected to earth is recommended.

Disconnect always power of any wires before manipulating and connecting them to the Intesis gateway.

A power supply with an NEC Class 2 or Limited Power Source (LPS) and SELV rated is to be used.

Respect always the expected polarity of power and communication cables when connecting them to the Intesis gateway.

Supply always a correct voltage to power the Intesis gateway, see details of voltage range admitted by the device in the technical characteristics below.

**CAUTION:** Risk of Explosion if Battery is replaced by an Incorrect Type. Dispose of Used Batteries according to the instructions. Battery replacement shall be done by an authorized installer.

**CAUTION:** The device is to be connected only to networks without routing to the outside plant, all communication ports are considered for indoor only and can be connected SELV circuits only.

This device was designed for installation in an enclosure. To avoid electrostatic discharge to the unit in environments with static levels above 4 kV, precautions should be taken when the device is mounted outside an enclosure. When working in an enclosure (ex. making adjustments, setting switches etc.) typical anti-static precautions should be observed before touching the unit.

Safety instructions in other languages can be found at: <https://intesis.com/docs/manuals/v6-safety>

## CONFIGURATION

Use the **Configuration Tool** to configure the gateway.

See instructions to download and install the latest version at: <https://intesis.com/docs/software/intesis-maps-installer>

Use the Ethernet connection or the Console Port (mini USB type B connector included) for communication between the gateway and the configuration tool. See CONNECTIONS below and follow instructions of user's manual for more details.

## INSTALLATION

**Follow instructions next to properly install the gateway.**

Disconnect from mains the power supply before connecting it to the Intesis gateway.

Disconnect power of any bus or communication cable before connecting it to the Intesis device.

Mount the Intesis gateway on the wall or DIN rail following the instruction given below, respecting the safety instructions given above.

Connect a NEC Class 2 or Limited Power Source (LPS) and SELV rated power supply to the Intesis gateway, respect the polarity if DC power or Line and Neutral if AC power. Apply always a voltage within the range admitted by the Intesis device and of enough power (see technical characteristics).

Circuit-breaker must be used before the power supply. Rating 250V-6A.

Connect the communication cables to the Intesis gateway, see details on the user's manual.


Power the Intesis device and the rest of devices connected to it.

---


**NOTE:** The device cannot be installed in air-handling space.

### Wall Mount

1. Separate the fixing clips in the bottom of the box, pushing them to the outside until hear the "click" which indicates that now the clips are in position for wall mount, see in the figure below.
2. Use the holes of the to fix the box in the wall using screws. Use the template below for the wall wholes.

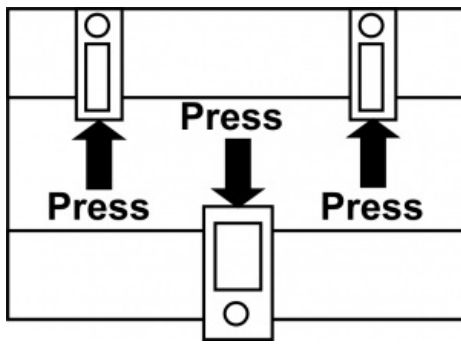


**Clips in their original position (for DIN rail mount)**

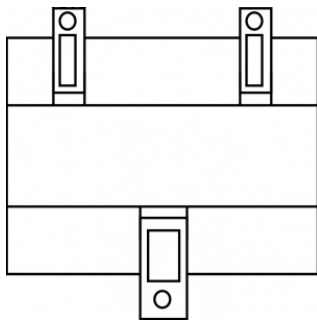



**Clips in position for wall mount**

#### **DIN Rail Mount**

With the clips of the box in their original position, insert first the box in the upper edge of the DIN rail and later insert the box in the down part of the rail, using a small screwdriver and following the steps in the figure below.

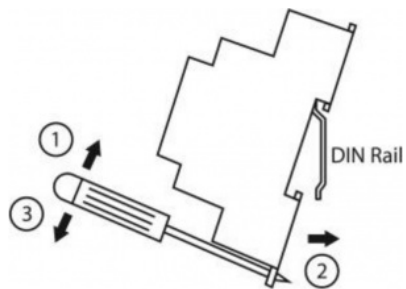

#### **CONNECTIONS**

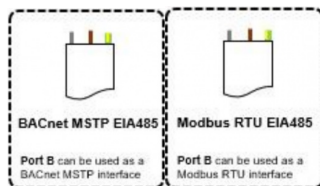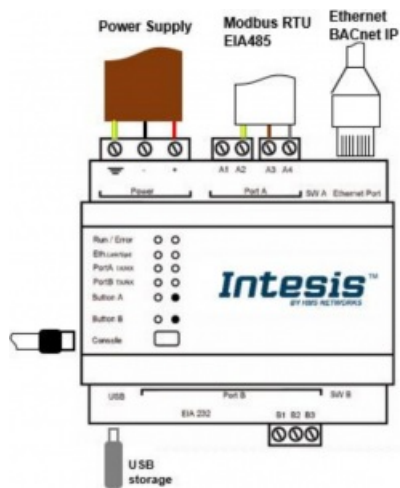

## Power Supply

Must use NEC Class 2 or Limited Power Source (LPS) and SELV rated power supply.

### If using DC power supply:

Respect polarity applied of terminals (+) and (-). Be sure the voltage applied is within the range admitted (check table below). The power supply can be connected to earth but only through the negative terminal, never through the positive terminal.

### If using AC power supply:

Make sure the voltage applied is of the value admitted (24 Vac). Do not connect any of the terminals of the AC power supply to earth, and make sure the same power supply is not supplying any other device.

## Ethernet / BACnet IP (UDP) / Modbus TCP (TCP) / Console (UDP & TCP)

Connect the cable coming from the IP network to the connector ETH of the gateway. Use an Ethernet CAT5 cable. If communicating through the LAN of the building, contact the network administrator and make sure traffic on the port used is allowed through all the LAN path (check the gateway user manual for more information). With factory settings, after powering up the gateway, DHCP will be enabled for 30 seconds. After that time, if no IP is provided by a DHCP server, the default IP 192.168.100.246 will be set.

## Port A / Modbus RTU

Connect the EIA485 bus to connectors A3 (-), A4 (+) and A1 or A2 (SNGD) of gateway's Port A. Respect the polarity.

## Port B / BACnet MSTP / Modbus RTU

Connect the EIA485 bus to connectors B1 (+), B2 (-) and B3 (SNGD) of gateway's Port B. Respect the polarity.

**Note for Port A and Port B;** Remember the characteristics of the standard EIA485 bus: maximum distance of 1200 meters, maximum 32 devices connected to the bus, and in each end of the bus it must be a termination resistor of 120  $\Omega$ . Bus biasing and termination resistor for EIA485 can be enabled for Port A and Port B by means of a dedicated DIP switch – see table below.

## Console Port

Connect a mini-type B USB cable from your computer to the gateway to allow communication between the Configuration Software and the gateway. Remember that Ethernet connection is also allowed. Check the user

manual for more information.

## USB

Connect a USB storage device (not a HDD) if required. Check the user manual for more information.


## ELECTRICAL & MECHANICAL FEATURES

Enclosure	<p>Plastic, type PC (UL 94 V-0)</p> <p>Net dimensions (dxwxh): 90x88x56 mm</p> <p>Recommended space for installation (dxwxh): 130x100x100mm</p> <p>Color: Light Grey. RAL 7035</p>
Mounting	<p>Wall.</p> <p>DIN rail EN60715 TH35.</p>
Terminal Wiring (for power supply and low-voltage signals)	<p>Per terminal: solid wires or stranded wires (twisted or with ferrule)</p> <p>1 core: 0.5mm<sup>2</sup>... 2.5mm<sup>2</sup></p> <p>2 cores: 0.5mm<sup>2</sup>... 1.5mm<sup>2</sup></p> <p>3 cores: not permitted</p> <p>If cables are more than 3.05 meters long, Class 2 cable is required.</p>
Power	<p>1 x Plug-in screw terminal block (3 poles)</p> <p>9 to 36VDC +/-10%, Max.: 140mA.</p> <p>24VAC +/-10% 50-60Hz, Max.: 127mA</p> <p>Recommended: 24VDC</p>

Ethernet	<p>1 x Ethernet 10/100 Mbps RJ45</p> <p>2 x Ethernet LED: port link and activity</p>
Port A	<p>1 x Serial EIA485 Plug-in screw terminal block (2 poles) A, B</p> <p>1 x Plug-in screw terminal block green (2 poles)</p> <p>SGND (Reference ground or shield)</p> <p>1500VDC isolation from others ports</p>
Switch A (SWA)	<p>1 x DIP-Switch for serial EIA485 configuration:</p> <p>Position 1:</p> <p><b>ON:</b> 120 <math>\Omega</math> termination active</p> <p><b>Off:</b> 120 <math>\Omega</math> termination inactive</p> <p>Position 2-3:</p> <p><b>ON:</b> Polarization active</p> <p><b>Off:</b> Polarization inactive</p>
PORT B	<p>1 x Serial EIA232 (SUB-D9 male connector)</p> <p>Reserved for future use</p> <p>1 x Serial EIA485 Plug-in screw terminal block (3 poles)</p> <p>A, B, SGND (Reference ground or shield)</p> <p>1500VDC isolation from other ports</p> <p>(except PORT B: EIA232)</p>


Switch B (SWA)	<p>1 x DIP-Switch for serial EIA485 configuration:</p> <p>Position 1:</p> <p><b>ON:</b> 120 <math>\Omega</math> termination active</p> <p><b>Off:</b> 120 <math>\Omega</math> termination inactive</p> <p>Position 2-3:</p> <p><b>ON:</b> Polarization active</p> <p><b>Off:</b> Polarization inactive</p>
Battery	<p>Size: Coin 20mm x 3.2mm</p> <p>Capacity: 3V / 225mAh</p> <p>Type: Manganese Dioxide Lithium</p>
Console Port	<p>Mini Type-B USB 2.0 compliant</p> <p>1500VDC isolation</p>
USB port	<p>Type-A USB 2.0 compliant</p> <p>Only for USB flash storage device (USB pen drive)</p> <p>Power consumption limited to 150mA (HDD connection not allowed)</p>
Push Button	<p>Button A: Check the user manual</p> <p>Button B: Check the user manual</p>

Operation Temperature	0°C to +60°C
Operational Humidity	5 to 95%, no condensation
Protection	IP20 (IEC60529)
LED Indicators	<p>10 x Onboard LED indicators</p> <p>2 x Run (Power)/Error</p> <p>2 x Ethernet Link/Speed</p> <p>2 x Port A TX/RX</p> <p>2 x Port B TX/RX</p> <p>1 x Button A indicator</p> <p>1 x Button B indicator</p>

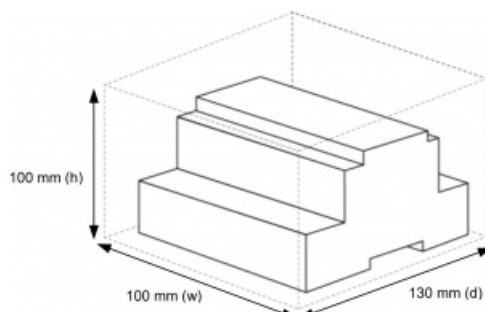





This marking on the product, accessories, packaging or literature (manual) indicates that the product contains electronic parts and they must be properly disposed of by following the instructions at <https://intesis.com/weee-regulation>

## Documents / Resources

	<a href="#">Intesis Modbus Master to BACnet Server gateway</a> [pdf] Installation Guide Modbus Master to BACnet Server gateway, INBACMBM 0000
---	--

## References

-  [Waste Electrical and Electronic Equipment | Intesis](#)
-  [intesis.com/docs/manuals/v6-safety](https://www.intesis.com/docs/manuals/v6-safety)
-  [Waste Electrical and Electronic Equipment | Intesis](#)
-  [Intesis | Gateway solutions for Building Automation](#)

[Manuals+](#).