



iO-GRID M GFDI-RM01N Digital Input Module User Manual


[Home](#) » [iO-GRID M](#) » iO-GRID M GFDI-RM01N Digital Input Module User Manual 

Contents

- 1 iO-GRID M GFDI-RM01N Digital Input Module
- 2 Product Description
 - 2.1 Digital Input Module Specification
- 3 Digital Input Module Information
- 4 Module Installation/Disassembly
 - 4.1 Installation
- 5 Removal
- 6 iO-GRID M Series Introduction
 - 6.1 Module Parameter Settings and Introduction
 - 6.2 Digital Input Module Control Register Description
- 7 Product Usage Instructions
- 8 Product Description
- 9 Digital Input Module Specification
- 10 Digital Input Module Information
- 11 Module Installation/Disassembly
- 12 iO-GRID M Series Introduction
 - 12.1 iO-GRID M Components
- 13 I/O Module Parameter Settings and Introduction
- 14 Digital Input Module Control Register Description
- 15 Modbus function code 0x03 Demonstration
- 16 Documents / Resources
- 17 Related Posts



iO-GRID M GFDI-RM01N Digital Input Module

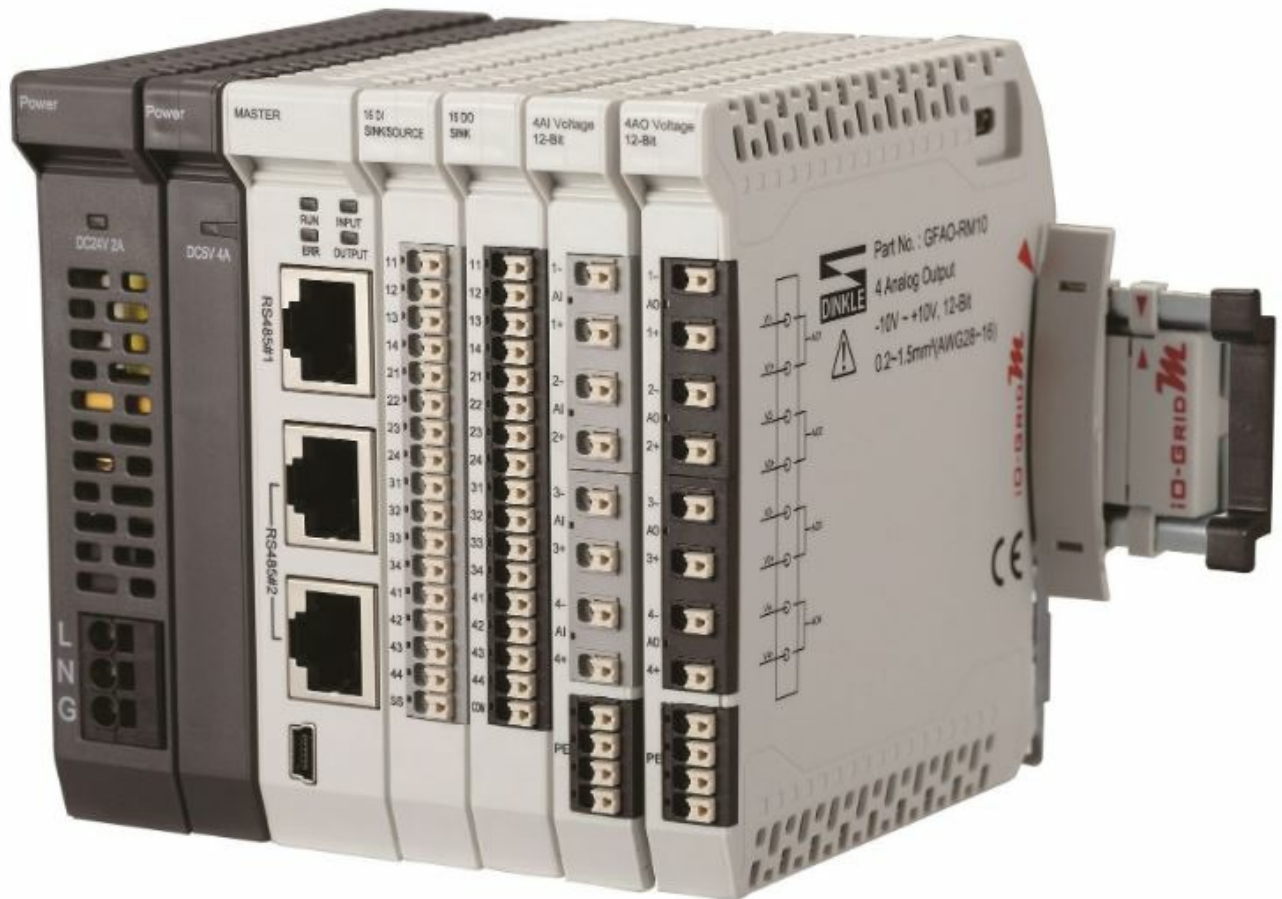

Product Description

The 2301TW V3.0.0 iO-GRID M Digital Input Module is a 16-channel digital input module that operates on a source of 24VDC with a 0138 terminal block. It is designed for indoor use only and should not be used or stored in high-temperature and high-moisture environments. The module provides protection to the equipment but if used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.

Digital Input Module Specification

GFDI-RM01N

The GFDI-RM01N is a 16-channel digital input module that operates on a source of 24VDC with a 0138 terminal block.

Digital Input Module Information

Digital Input Module Dimension

The module dimensions are not provided in the user manual.

Digital Input Module Panel Information

The module panel information is not provided in the user manual.

Digital Input Module Wiring Diagram

The wiring diagram for the digital input module is provided in the user manual.

Module Installation/Disassembly

Installation

1. Ensure that the power is off before installing the module.
2. Align the module with the mounting holes on the panel.
3. Secure the module to the panel using the appropriate screws.
4. Connect the wiring according to the wiring diagram provided in the user manual.
5. Turn on the power and check that the module is functioning correctly.

Removal

1. Turn off the power before removing the module.
2. Disconnect the wiring from the module.
3. Remove the screws securing the module to the panel.
4. Remove the module from the panel.

iO-GRID M Series Introduction

iO-GRID M Components

The components of the iO-GRID M series are not provided in the user manual.

Module Parameter Settings and Introduction

Module Settings and Connections

The settings and connections for the I/O module are provided in the user manual.

Designer Program Tutorial

The i-Designer program tutorial is provided in the user manual.

Digital Input Module Control Register Description

Digital Input Module Register Communication Method

The register communication method for the digital input module is provided in the user manual.

Input Module Register Format Information (0x1000, rewritable)

The input module register format information is provided in the user manual.

Modbus function code 0x03 Demonstration

The demonstration for Modbus function code 0x03 is provided in the user manual.

Supports Modbus function code

The support for Modbus function code is provided in the user manual.

Product Usage Instructions

1. Ensure that the module is installed correctly and the wiring is connected according to the wiring diagram provided in the user manual.
2. Turn on the power and check that the module is functioning correctly.
3. Refer to the i-Designer program tutorial provided in the user manual for parameter settings and connections.
4. Refer to the digital input module control register description provided in the user manual for register communication method, register format information, and Modbus function code demonstration.

5. Do not disassemble or open the cover under any circumstances as it may cause danger.
6. Do not use or store the module in high-temperature and high-moisture environments as it is designed for indoor use only.
7. If using the equipment in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.

Digital Input Module List

Product No.	Description	Remarks						
GFDI-RM01N	16-channel digital input module (source, 24VDC, 0138 terminal block)	<table border="1"> <tr> <th>P r o d u c t N o.</th><th>Des crip tion</th><th>R e m ar ks</th></tr> <tr> <td>G F D I - R M 0 1 N</td><td>16-c han nel digit al in put mod ule (sour ce, 24V DC, 013 8 ter min al bl ock)</td><td></td></tr> </table>	P r o d u c t N o.	Des crip tion	R e m ar ks	G F D I - R M 0 1 N	16-c han nel digit al in put mod ule (sour ce, 24V DC, 013 8 ter min al bl ock)	
P r o d u c t N o.	Des crip tion	R e m ar ks						
G F D I - R M 0 1 N	16-c han nel digit al in put mod ule (sour ce, 24V DC, 013 8 ter min al bl ock)							

Product Description

GFDI, digital input module series is specially designed for industrial applications. Its the open-type industrial equipment which is intended for installation within enclosures supplied in the field. A digital input detects if a voltage is above/below a specific threshold. If the voltage is higher than the value, the controller will detect the digital input as high/1. Or if lower than the value, the controller will detect the digital input as low/0. And its circuit design & all the components of GFDI series are compliant with the latest requirements and standards of UL, CE & RoHS. It has a complete circuit protection design to resist overload, overvoltage and short circuit etc. It is avoided to damage & failure caused from improper operations.

Caution (ATTENTION)

1. THIS DEVICE IS FOR INDOOR USE ONLY, DON'T PUT OR USE IT IN HIGH TEMPERATURE AND HIGH MOISTURE ENVIRONMENT. CET EQUIPEMENT EST DESTINE A UN USAGE INTERIEUR UNIQUEMENT NE PAS STOCKER OU UTILISER DANS UN ENVIRONNEMENT A HAUTE TEMPERATURE ET HAUTE

HUMIDITE.

2. AVOID FALLING AND BUMPING OTHERWISE THE ELECTRICAL COMPONENTS WILL BE DAMAGED.
ÉVITEZ DE TOMBER ET DE VOUS ÉCRASER, SINON LES COMPOSANTS ÉLECTRIQUES SERONT ENDOMMAGÉS
3. DON'T TRY TO DISASSEMBLE OR OPEN THE COVER UNDER ANY CIRCUMSTANCE IN ORDER TO AVOID DANGER. NE TENTEZ JAMAIS DE DEBALLER OU D'OUVRIER LE COUVERCLE POUR EVITER TOUT DANGER.
4. IF THE EQUIPMENT IS USED IN A MANNER NOT SPECIFIED BY THE MANUFACTURER, THE PROTECTION PROVIDED BY THE EQUIPMENT MAY BE IMPAIRED. SI L'APPAREIL N'EST PAS UTILISE DE LA MANIERE INDIQUEE PAR LE FABRICANT, LA PROTECTION FOURNIE PAR L'APPAREIL PEUT ETRE ALTEREE.
5. THE INSTALLATION THAT THE SAFETY OF ANY SYSTEM INCORPORATING THE EQUIPMENT IS THE RESPONSIBILITY OF THE ASSEMBLER OF THE SYSTEM. L'INSTALLATION DE TOUT SYSTÈME INTÉGRANT CET ÉQUIPEMENT EST LA RESPONSABILITÉ DU CONSTRUCTEUR DU SYSTÈME.
6. USE WITH COPPER CONDUCTORS ONLY. INPUT WIRING: MINIMUM 28 AWG, 85°C, OUTPUT WIRING: MINIMUM 28 AWG, 85°C DESTINÉ À ÊTRE UTILISÉ AVEC DES CONDUCTEURS EN CUIVRE SEULEMENT. CABLAGE D'ENTREE: MINIMUM 24 AWG, 85 ° C. CABLAGE DE SORTIE: MINIMUM 28 AWG, 85 ° C.
7. FOR USE IN A CONTROLLED ENVIRONMENT. REFER TO MANUAL FOR ENVIRONMENTAL CONDITIONS. POUR UN ENVIRONNEMENT CONTROLE. REPORTEZ-VOUS AU MANUEL DES CONDITIONS ENVIRONNEMENTALES.
8. DISCONNECT ALL SOURCES OF SUPPLY BEFORE SERVICING. COUPER TOUTES LES SOURCES D'ALIMENTATION AVANT DE FAIRE L'ENTRETIEN ET LES RÉPARATIONS.
9. PROPER VENTILATION IS REQUIRED TO REDUCE THE RISK OF HAZARDOUS OR EXPLOSIVE GAS BUILDUP DURING INDOOR CHARGING. SEE OWNERS MANUAL. UNE VENTILATION ADÉQUATE EST NÉCESSAIRE AFIN DE RÉDUIRE LES RISQUES D'ACCUMULATION DE GAZ DANGEREUX OU EXPLOSIFS DURANT LA RECHARGE À L'INTÉRIEUR. VOIR LE MANUEL D'ENTRETIEN.


Digital Input Module Specification

GFDI-RM01N


Technical Specification	
Number Of Inputs	16
Voltage Supply	5 VDC via Dinkle Bus
Current Consumption	35 mA at 5 VDC
Connection Type	24 VDC Sink Source
Breakover Voltage	15...30 VDC
Cut-Off Voltage	0...10 VDC
Fieldbus Interface	RS485 via Dinkle Bus
Communication Specification	
Communication Protocol	Modbus RTU
Format	N, 8, 1
Baud Rate Range	1200-1.5 Mbps
General Specification	
Dimension (W*D*H)	12 x 100 x 97mm
Weight	60g
Ambient Temperature (operation)	-10...+60°C
Storage Temperature	-25°C...+85°C
Permissible Humidity (non-condensing)	RH 95%
Altitude Limit	< 2000 m
Ingress Protection (IP)	IP 20
Pollution Severity	II
Safety Approval	CE
Product Certification	UL / CSA / IEC 61010-2-201&-1
Wiring Range (IEC / UL)	0.2 mm ² ~ 1.5 mm ² / AWG 28~16
Wiring Ferrules	DN00510D DN00710D

Digital Input Module Information

Digital Input Module Dimension

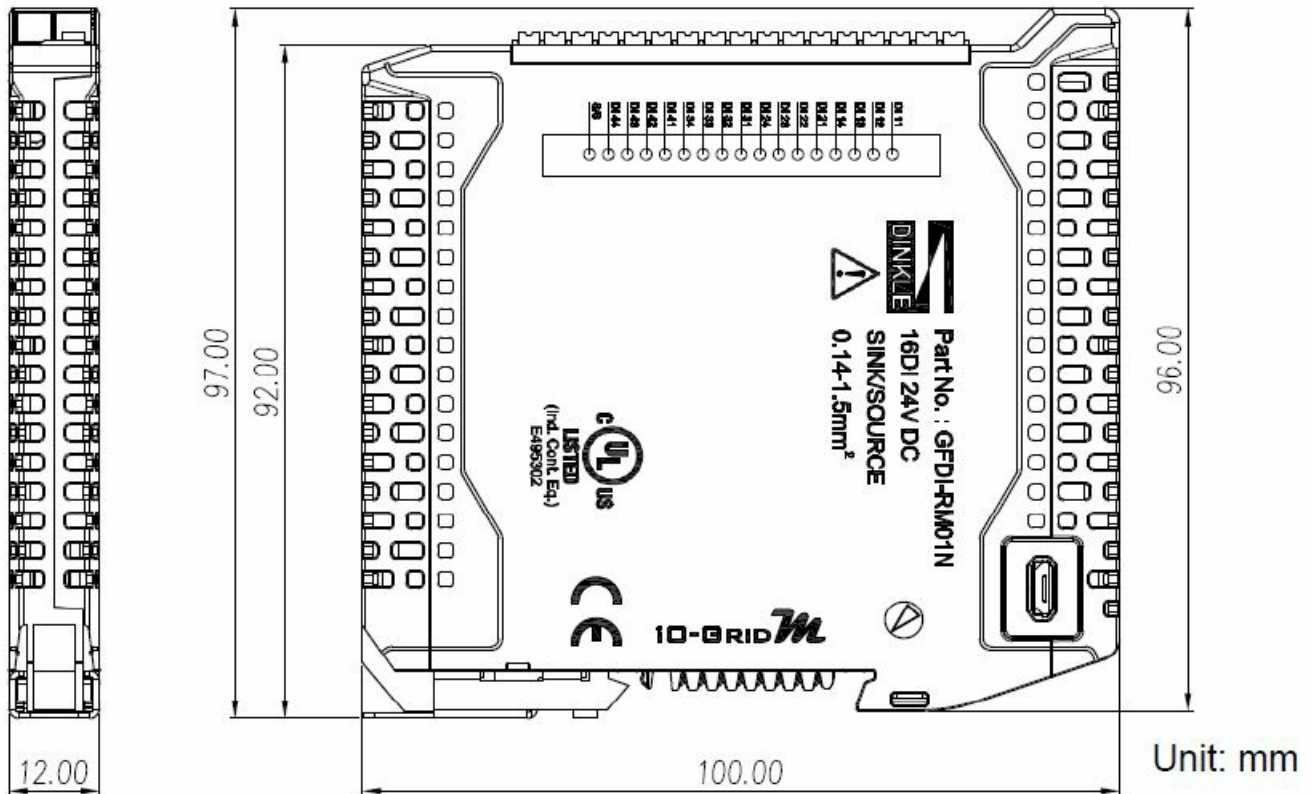


Digital Input Module Panel Information

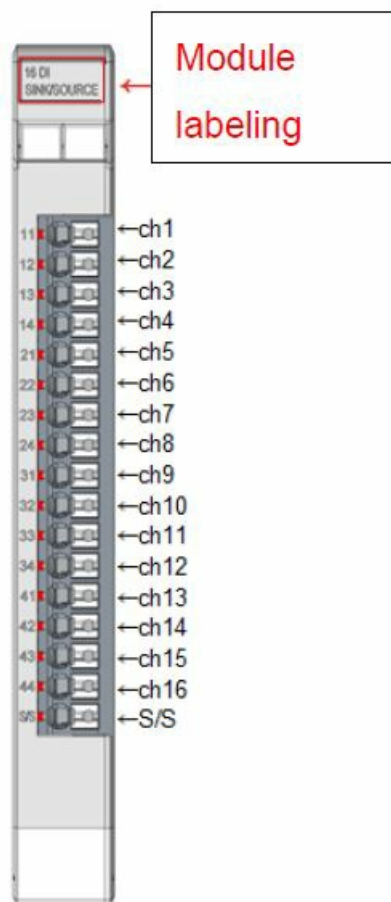

Terminal block connector definitions

Terminal block labeling	Connector definitions	Terminal block labeling	Connector definitions
11	Channel 1	31	Channel 9
12	Channel 2	32	Channel 10
13	Channel 3	33	Channel 11
14	Channel 4	34	Channel 12
21	Channel 5	41	Channel 13
22	Channel 6	42	Channel 14
23	Channel 7	43	Channel 15
24	Channel 8	44	Channel 16
		S/S	Common port


Digital Input Module Wiring Diagram

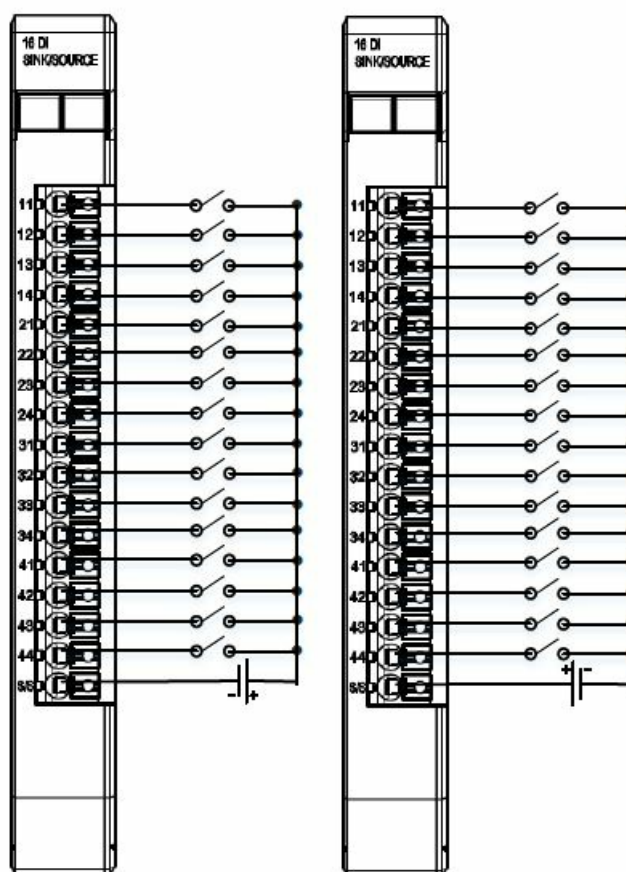

Module Installation/Disassembly

Installation


1. Align the red arrow on the side of the module to the arrow on the DIN rail.
2. Press the module down and the metal clamp will slide (thanks to its spring mechanism) and grab on the other side of the DIN rail. Continue to push down until the metal clamp “clicks”.

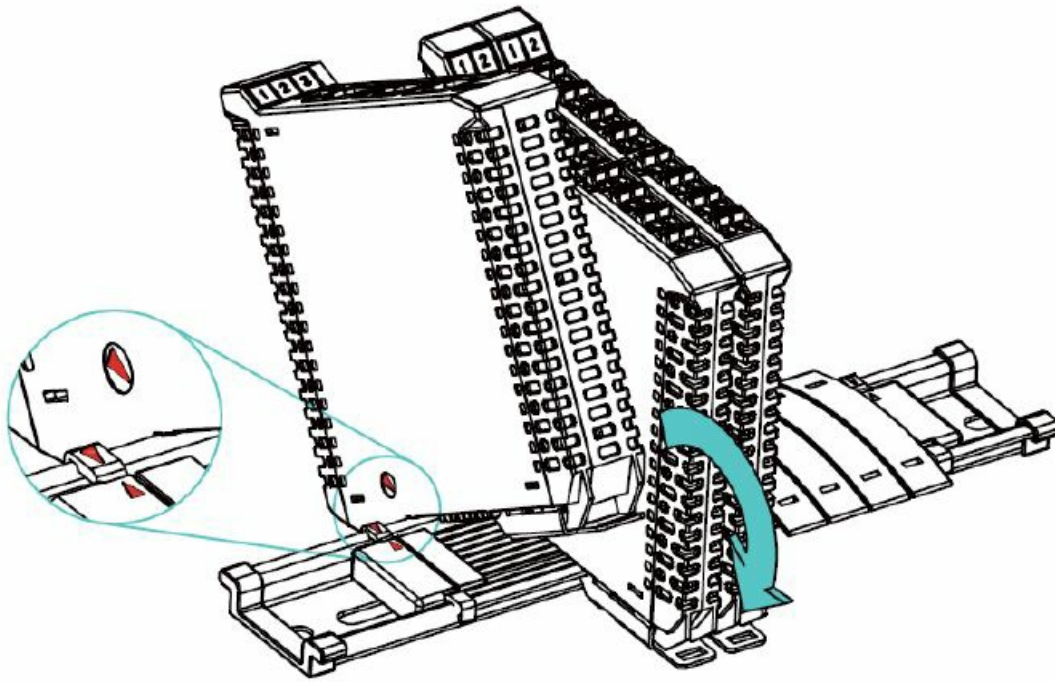

***Note:** Make sure the red arrows on the module and the rail are pointing the same direction.

Removal


1. Use a screwdriver to pull the metal hook sideways and detach the module from the DIN rail.
2. Remove all modules from the DIN rail in reverse order of installation.

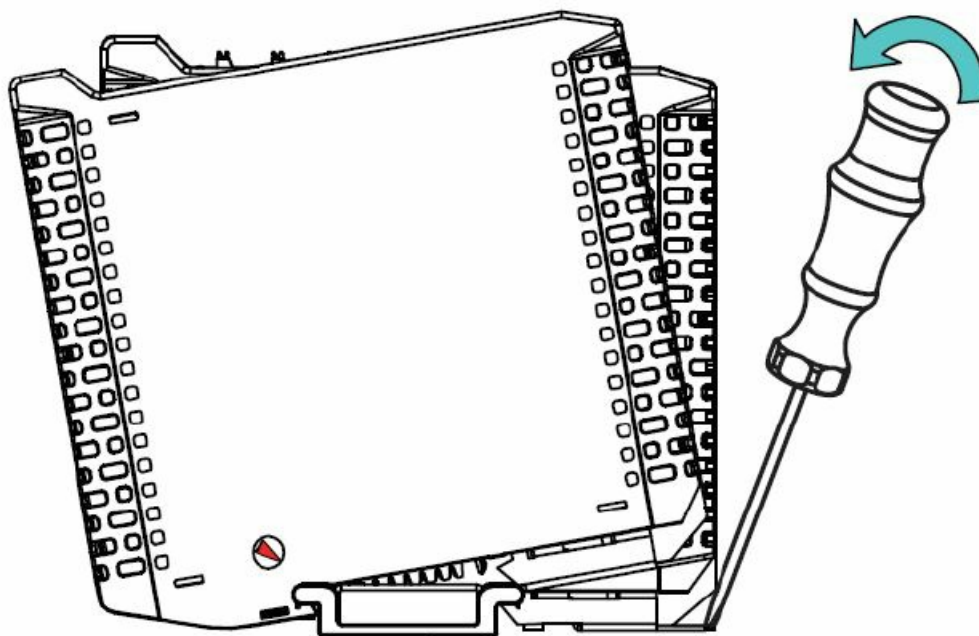

iO-GRID M series utilizes the standard Modbus communication protocol and supports Modbus RTU/ASCII and Modbus TCP. Please choose products and factory controllers to figure your system based on your communication protocol.

iO-GRID M Components

DINKLE Bus Rail 1 to 4 are defined for power supply and rail 5 to 7 are defined for communication.

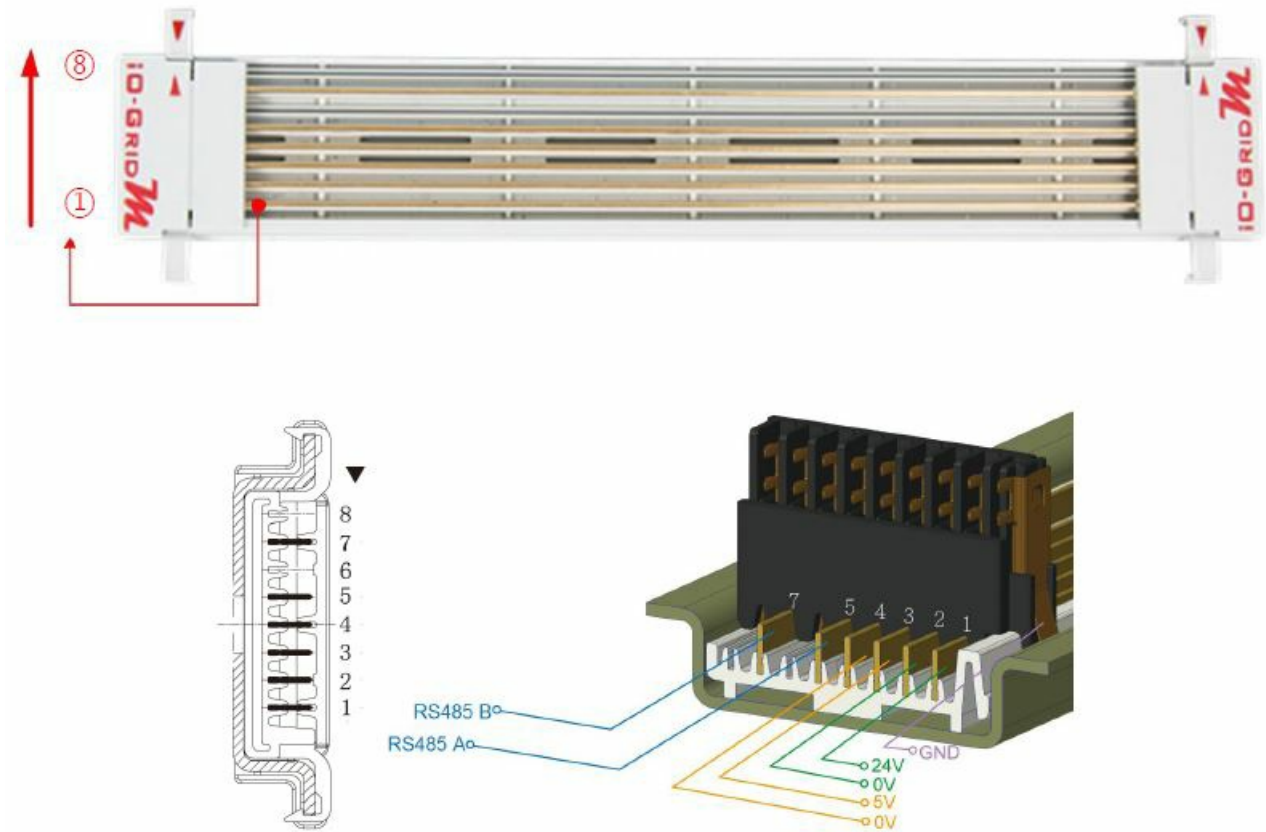

DINKLE Bus Rail Definitions

Rail	Definition	Rail	Definition
8	—	4	0V
7	RS485B	3	5V
6	—	2	0V
5	RS485A	1	24V

Gateway Module

A gateway module converts between Modbus TCP and Modbus RTU/ASCII. The module provides two sets of external Ethernet ports to connect to the controller and the Internet There are two types of gateway modules available: 4-channel gateway module: Provides 4 RS485 ports to connect to a control module
Single-channel gateway module: No external connectivity for the RS485 ports. The RS485 signals are transmitted via DINKLE Bus and I/O module.

Gateway module products information

Product No.	Description
GFGW-RM01N	Modbus TCP-to-Modbus RTU/ASCII gateway module. 4 Ports
GFGW-RM02N	Modbus TCP-to-Modbus RTU/ASCII gateway module. 1 Port

Control module

The control module manages I/O modules and sets up the configuration. Provides external RS485 ports to connect to the controller. There are two types of control modules available: 3-channel control module:

- Provides 3 external RS485 ports, suitable stations with 2 or more control modules. Among the RS485 ports, 2 of them will be connected to the controller and the control module of the next station.

Single-channel control module

Provides one single RS485 port to connect to the controller, suitable for single-module stations.

Control module products information

Product No.	Description
GFMS-RM01N	RS485 control module, Modbus RTU/ASCII 3 Ports
GFMS-RM01S	RS485 control module, Modbus RTU/ASCII 1 Port

I/O Module

Dinkle offers different types of I/O modules with different functions:

Product No.	Description
GFDI-RM01N	16-channel digital input module (source/sink)
GFDO-RM01N	16-channel digital output module (sink)
GFDO-RM02N	16-channel digital output module (Source)
GFAR-RM11	8-Channel relay module, grounded
GFAR-RM21	4-Channel relay module, grounded
GFAI-RM10	4-channel analog input module ($\pm 10\text{VDC}$)
GFAI-RM11	4-channel analog input module (0...10VDC)
GFAI-RM20	4-channel analog input module (0... 20mA)
GFAI-RM21	4-channel analog input module (4... 20mA)
GFAO-RM10	4-channel analog output module ($\pm 10\text{VDC}$)
GFAO-RM11	4-channel analog output module (0...10VDC)
GFAO-RM20	4-channel analog output module (0... 20mA)
GFAO-RM21	4-channel analog output module (4... 20mA)
GFAX-RM10	2-channel analog input module, 2-channel analog output module ($\pm 10\text{VDC}$)
GFAX-RM11	2-channel analog input module, 2-channel analog output module (0...10VDC)
GFAX-RM20	2-channel analog input module, 2-channel analog output module (0... 20mA)
GFAX-RM21	2-channel analog input module, 2-channel analog output module (4... 20mA)

I/O Module Parameter Settings and Introduction

I/O Module Settings and Connections

I/O Module System Configuration List

Name/Product No.	Description
GFDI-RM01N	16-channel digital input module (source/sink)
GFTL-RM01	USB-to-RS232 converter
Micro USB cable	Must have data transfer functionality
Computer	USB-compatible

Module Initial Setting List

Product No.	Description	Station No.	Baud rate	Format
GFMS-RM01N	RS485 control module, RTU/ASCII	1	115200	RTU(8,N,1)
GFDI-RM01N	16-channel digital input module (source/sink)	1	115200	RTU(8,N,1)
GFDO-RM01N	16-channel digital output module (sink)	1	115200	RTU(8,N,1)
GFDO-RM02N	16-channel digital output module (Source)	1	115200	RTU(8,N,1)
GFAR-RM11	8-Channel relay module, grounded	1	115200	RTU(8,N,1)
GFAR-RM21	4-Channel relay module, grounded	1	115200	RTU(8,N,1)
GFAI-RM10	4-channel analog input module ($\pm 10\text{VDC}$)	1	115200	RTU(8,N,1)
GFAI-RM11	4-channel analog input module (0...10VDC)	1	115200	RTU(8,N,1)
GFAI-RM20	4-channel analog input module (0... 20mA)	1	115200	RTU(8,N,1)
GFAI-RM21	4-channel analog input module (4... 20mA)	1	115200	RTU(8,N,1)
GFAO-RM10	4-channel analog output module ($\pm 10\text{VDC}$)	1	115200	RTU(8,N,1)
GFAO-RM11	4-channel analog output module (0...10VDC)	1	115200	RTU(8,N,1)
GFAO-RM20	4-channel analog output module (0... 20mA)	1	115200	RTU(8,N,1)
GFAO-RM21	4-channel analog output module (4... 20mA)	1	115200	RTU(8,N,1)
GFAX-RM10	2-channel analog input module, 2-channel analog output module ($\pm 10\text{VDC}$)	1	115200	RTU(8,N,1)
GFAX-RM11	2-channel analog input module, 2-channel analog output module (0...10VDC)	1	115200	RTU(8,N,1)
GFAX-RM20	2-channel analog input module, 2-channel analog output module (0... 20mA)	1	115200	RTU(8,N,1)
GFAX-RM21	2-channel analog input module, 2-channel analog output module (4... 20mA)	1	115200	RTU(8,N,1)


Setup Software Functions:

The setup software shows the I/O module station numbers, baud rates and data formats.


I/O Module Settings and Connections

Connect the Micro USB port and GFTL-RM01 (RS232 converter) to your computer and open the iO-Grid M Utility program to set up I/O module parameters

I/O module connection illustration

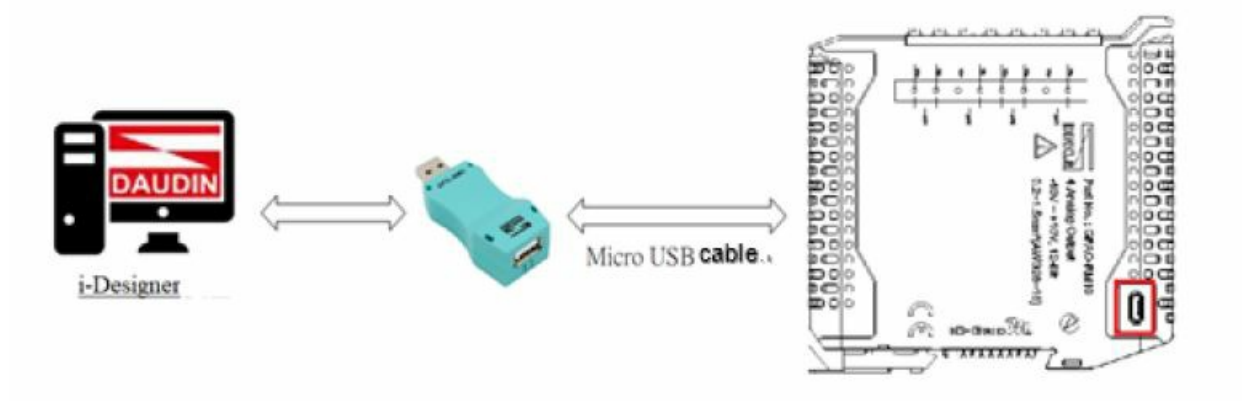


I/O module connection image

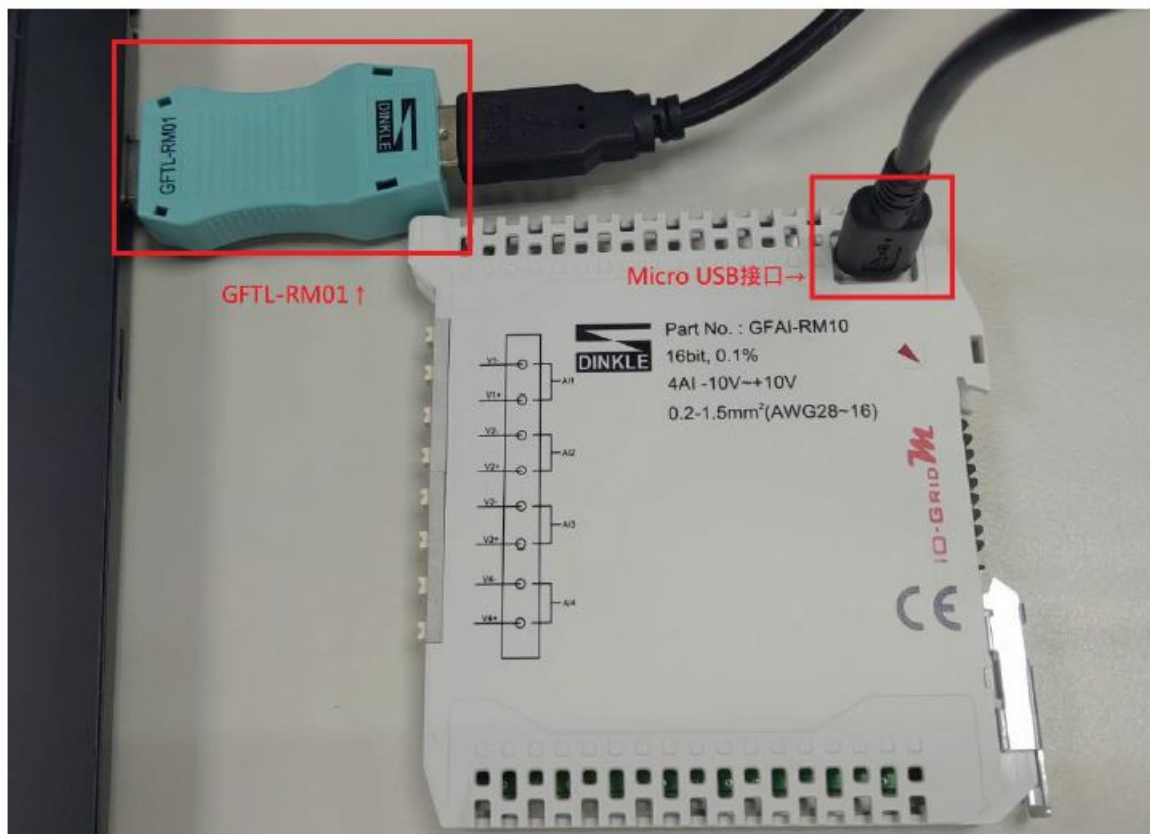

i-Designer Program Tutorial


1. Connect to the I/O module using GFTL-RM01 and a Micro USB cable

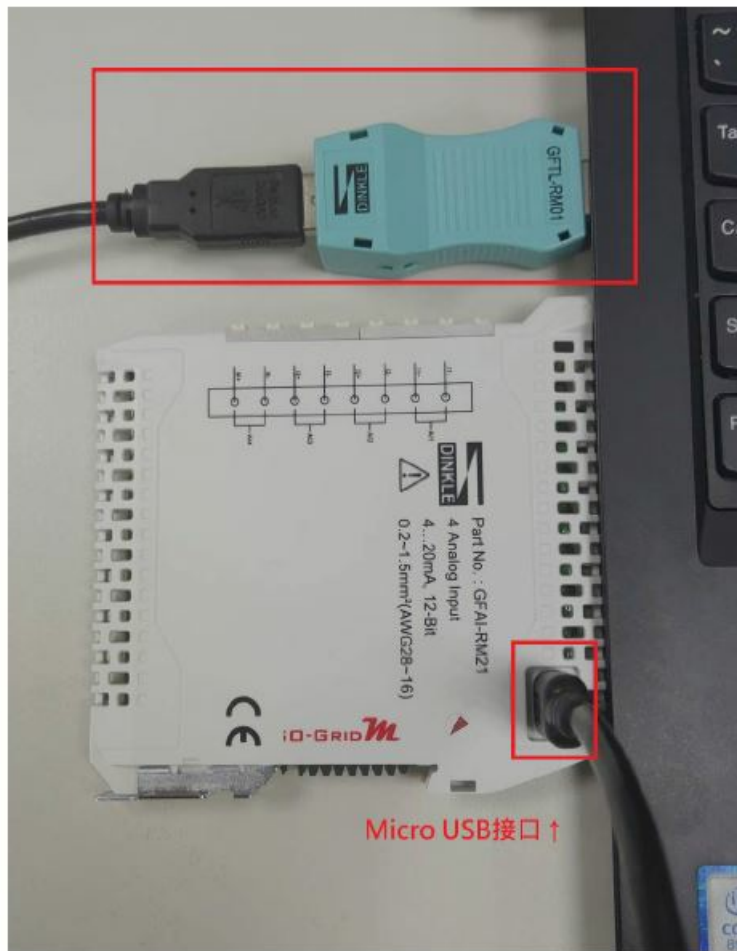


2. Click to launch the software




3. Select "M Series Module Configuration"

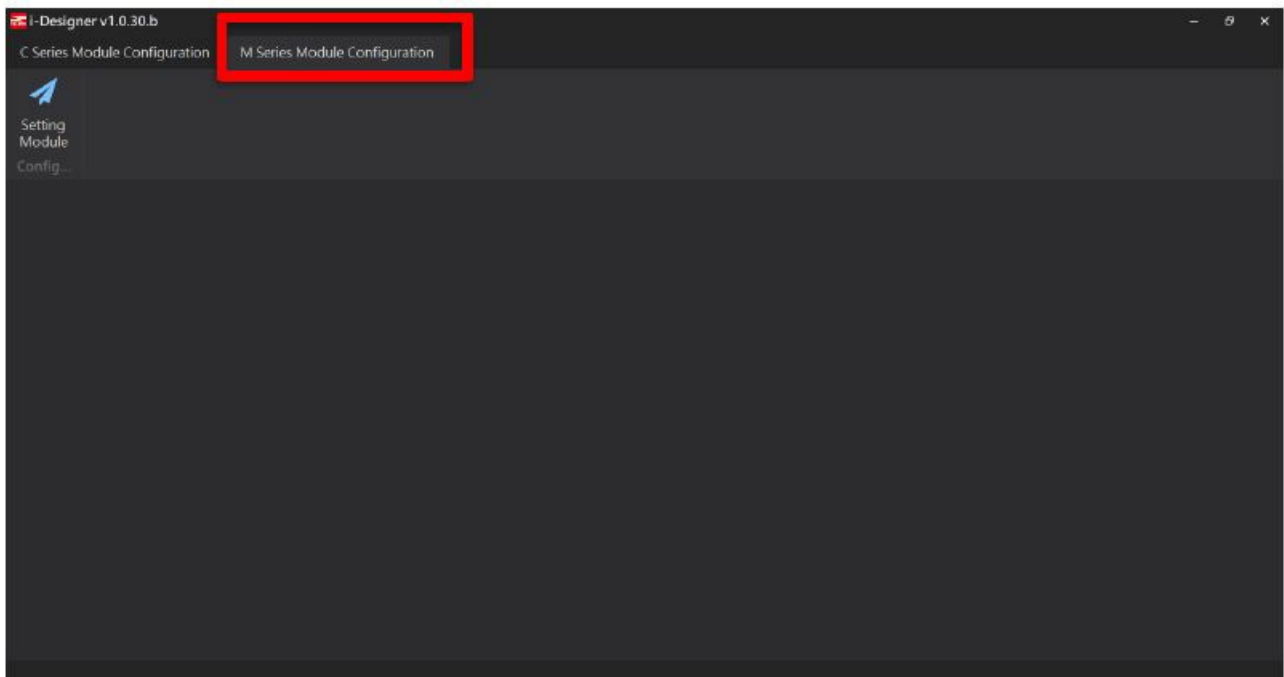


4. Click on the “Setting Module” icon

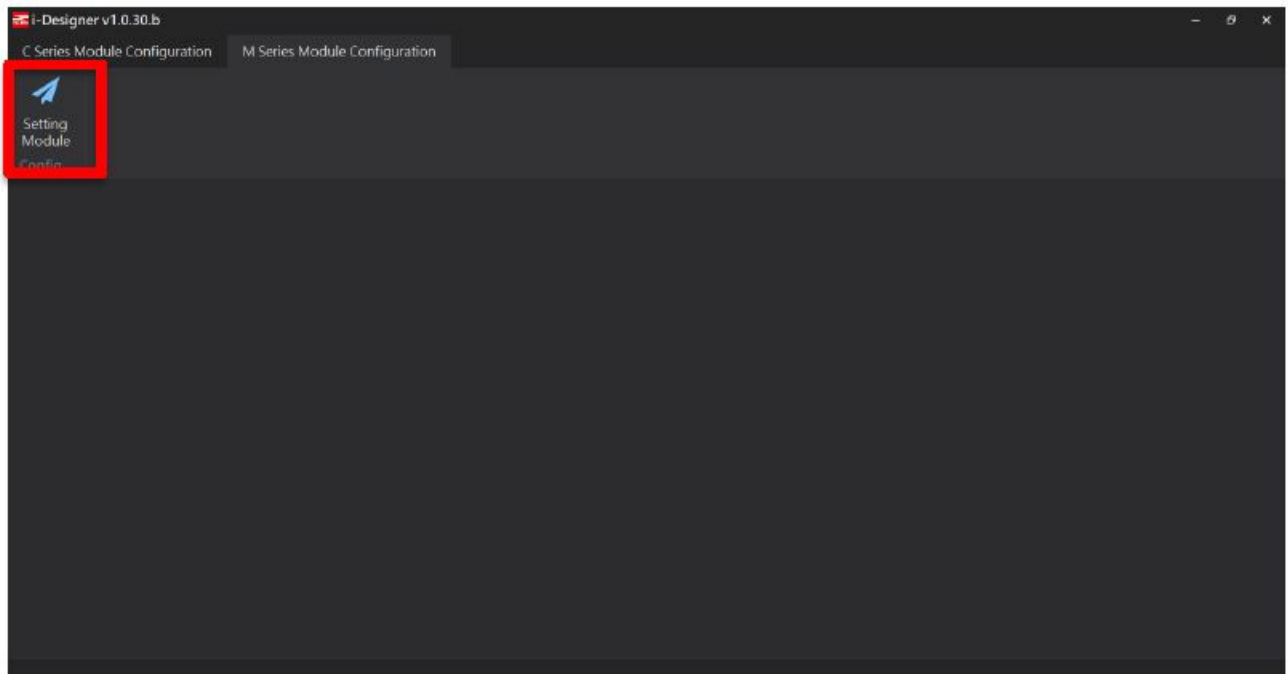


5. Enter the “Setting Module” page for M-series

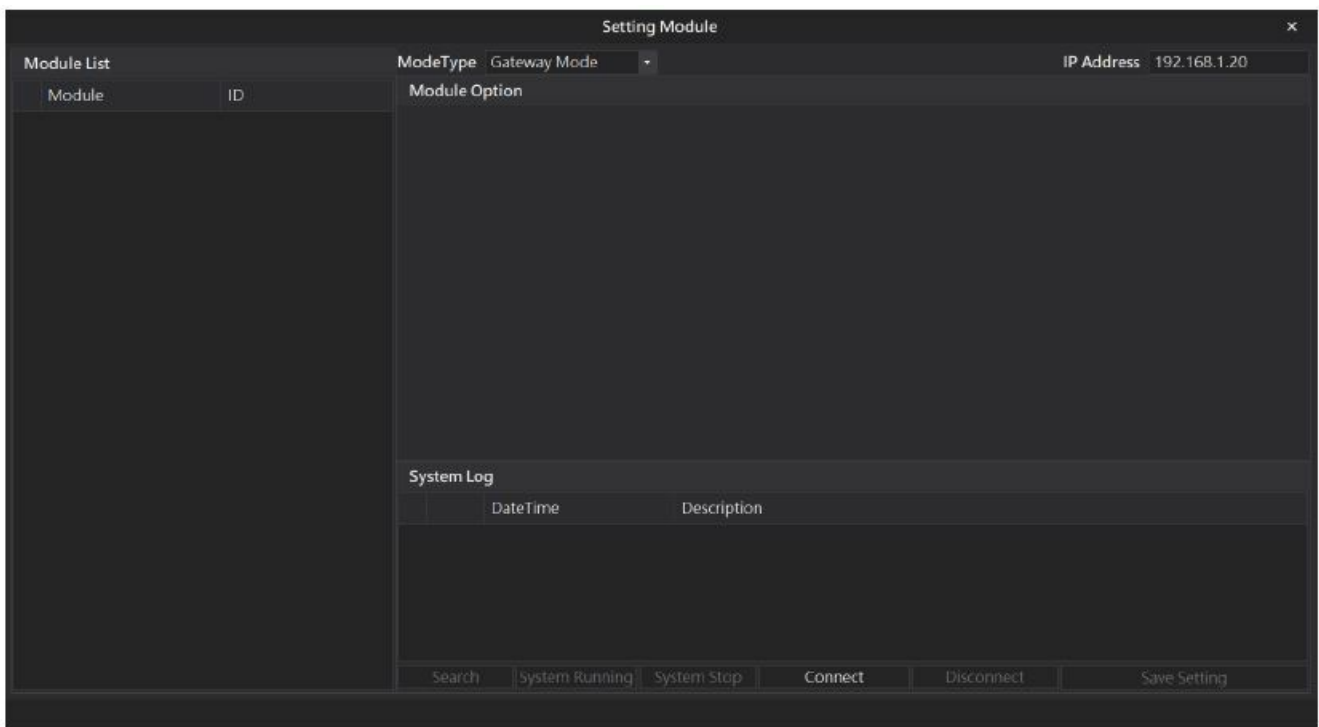


6. Select the mode type based on the connected module

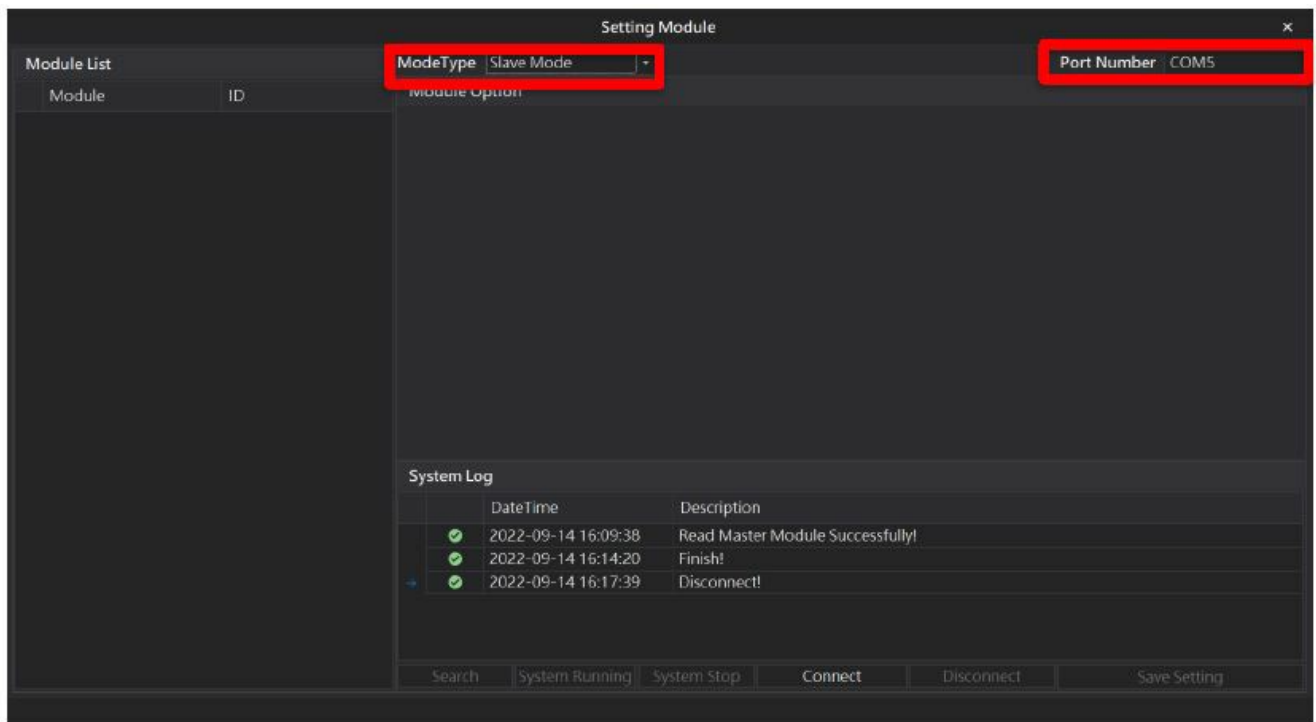

7. Click on "Connect"

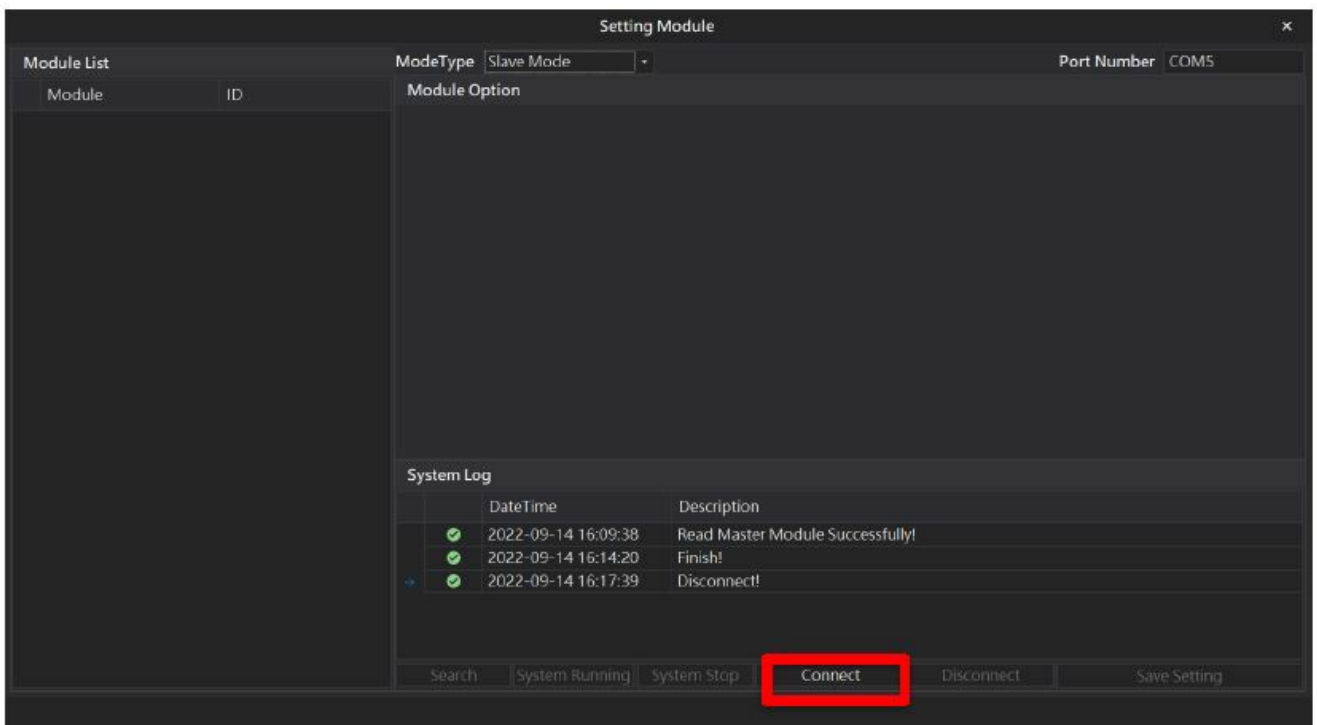


8. Set up I/O modules' station numbers and communication format (must click on "Save" after changing them)

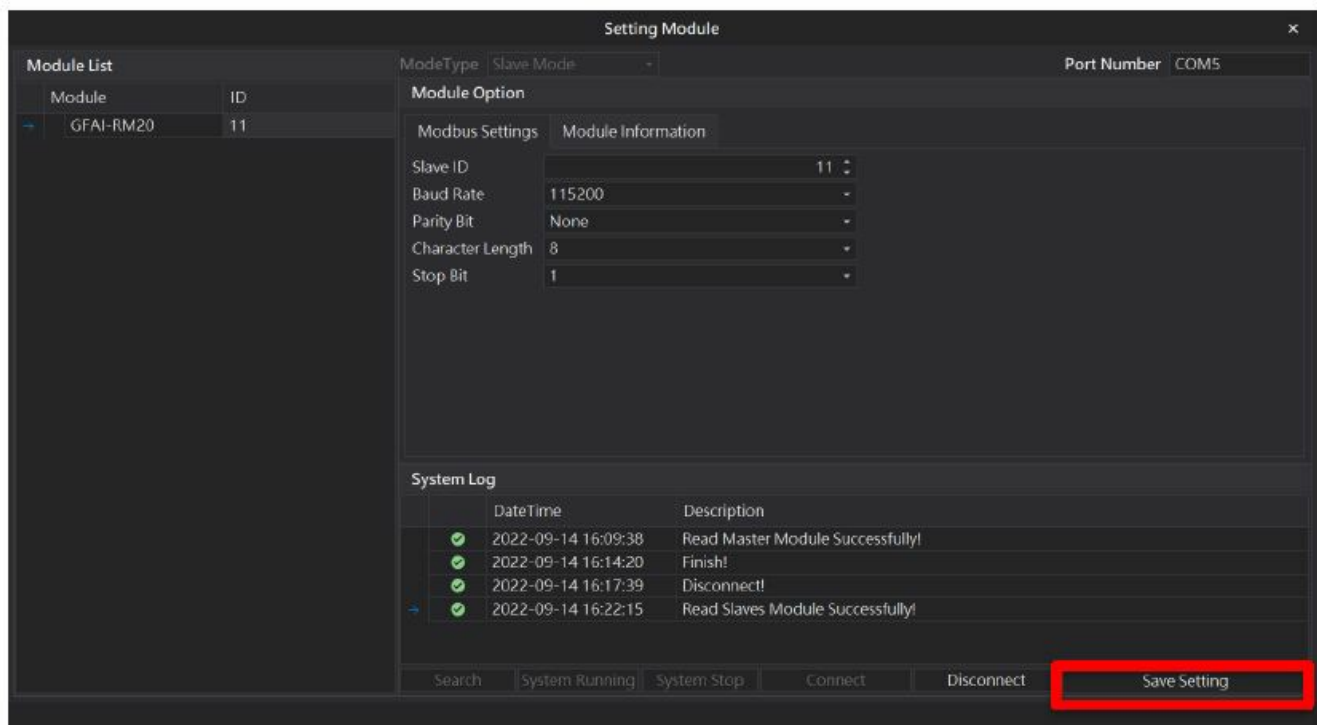

Digital Input Module Control Register Description

Digital Input Module Register Communication Method

1. Use Modbus RTU/ASCII to read single-chip digital input module registers The address for the digital input module register to be read is: 0x1000

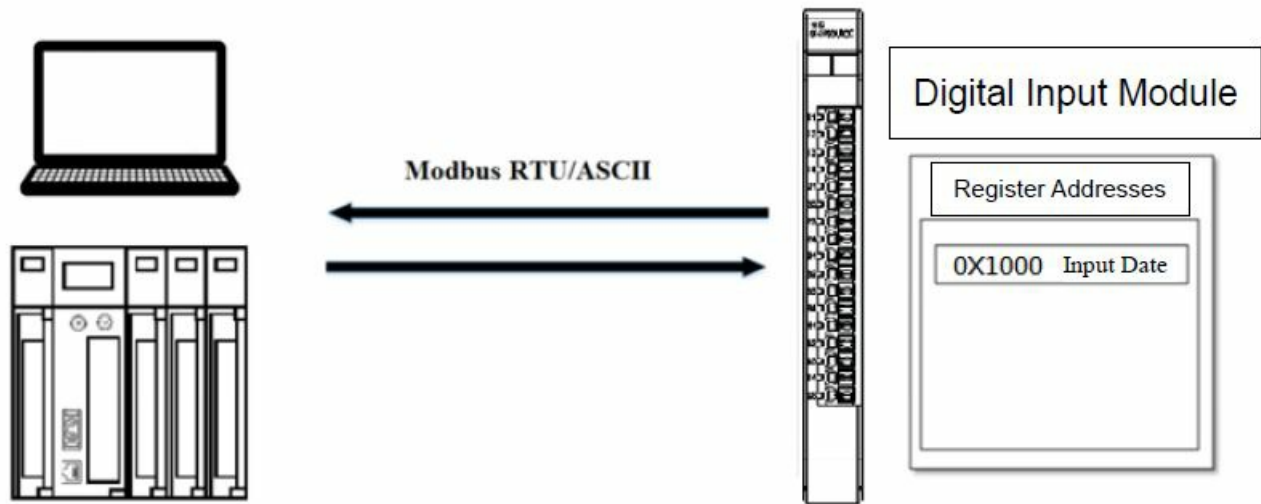

- With no control module, RS485's physical wire must be connected with an adapter to send the signal to the Dinkle Bus
- The configuration that uses Modbus RTU/ASCII to read single-chip digital input module registers is listed below:


Name/Product No.	Description
GFDI-RM01N	16-channel digital input module (source/sink)
BS-210	Adapter
BS-211	Adapter

Use Modbus RTU/ASCII with control modules to read single-chip analog input module registers

Once a digital input module is set up with a control module, it will automatically assign digital input modules' input records register at 0x1000. If there are multiple registers, they will be assigned addresses based on the module station number.

Example

Two digital input module registers will at 0x1000 and 0x1001

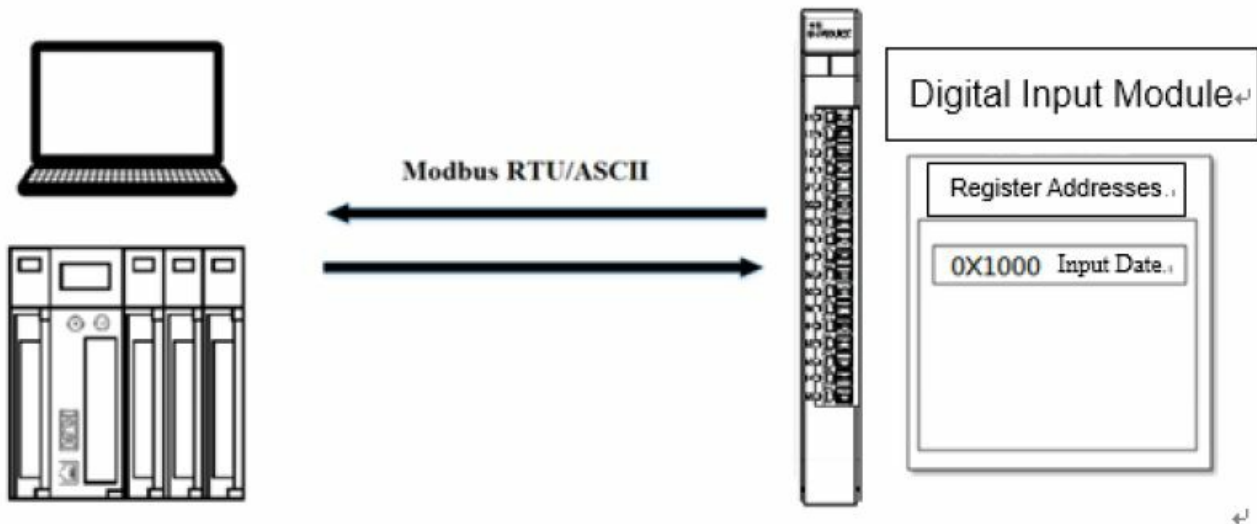

- When using control modules, RS485 can connect to control modules with 0170-0101.
- The configuration that uses Modbus RTU/ASCII to read analog input module registers is listed below:

Name/Product No.	Description
GFMS-RM01S	Master Modbus RTU, 1 Port
GFDI-RM01N	16-channel digital input module (source/sink)
0170-0101	RS485(2W)-to-RS485(RJ45 interface)

Input Module Register Format Information (0x1000, rewritable)

GFDI-RM01N Register Format: Channel open-1; channel closed – 0; reserved value – 0.

Bit15	Bit14	Bit13	Bit12	Bit11	Bit10	Bit9	Bit8
Ch44	Ch43	Ch42	Ch41	Ch34	Ch33	Ch32	Ch31
Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
Ch24	Ch23	Ch22	Ch21	Ch14	Ch13	Ch12	Ch11

Example: With all channels open: 1111 1111 1111 1111 (0xFF 0xFF); with channel 1 to 8 open: 0000 0000 1111 1111 (0x00 0xFF); with all channels closed: 0000 0000 0000 0000 (0x00 0x00).

Modbus function code 0x03 Demonstration

Use Modbus RTU/ASCII to read single-chip analog input module registers

Modbus function code	Transmission example (ID:0x01)	Respond example (ID:0x01)
0x03	01 03 10 00 00 01	01 03 02 00 00

- In this example, we are reading “0x1000” with the I/O module ID of “01”
- When not using control modules for communications, the registers will be at 0x1000

Use Modbus RTU/ASCII with control modules to read single-chip analog input module registers

Modbus function code	Transmission example (ID:0x01)	Respond example (ID:0x01)
0x03	01 03 10 00 00 01	01 03 02 00 00

- In this example, we are reading “0x1000” with the I/O module ID of “01”
- When using control modules for communications, the registers will start at 0x1

Supports Modbus function code

Modbus function code	Transmission example (ID :0x01)	Respond example (ID :0x01)
0x02	01 02 00 00 00 10	01 02 02 00 00
0x03	01 03 10 00 00 01	01 03 02 00 00
0x04	01 04 10 00 00 01	01 04 02 00 00

Documents / Resources

	iO-GRID M GFDI-RM01N Digital Input Module [pdf] User Manual GFDI-RM01N Digital Input Module, GFDI-RM01N, Digital Input Module, Input Module, Module
---	--