

JBC DDE-2C Tool Control Unit



JBC DDE-2C Tool Control Unit Instruction Manual

[Home](#) » [JBC](#) » JBC DDE-2C Tool Control Unit Instruction Manual 

Contents

- 1 JBC DDE-2C Tool Control Unit
- 2 Product Information
- 3 Packing List
- 4 Features
- 5 Connection Example
- 6 DDE Work Screen
- 7 Advanced Functionalities
- 8 System Notifications
- 9 Set Up
- 10 Operation
- 11 USB Connector
- 12 Maintenance
- 13 Safety
- 14 Specifications
- 15 Warranty
- 16 Documents / Resources
 - 16.1 References

JBC

JBC DDE-2C Tool Control Unit



Product Information

Specifications

- **Model:** DDE-9C (100V), DDE-1C (120V), DDE-2C (230V)
- **Power Cord:** Ref. 0024077 (100V), 0023717 (120V), 0024080 (230V)
- **Screen:** 2.8" Color TFT

Features

- Simultaneous operation of up to 2 tools and 1 module + 1 pedal for each tool
- Tilted display for easy reading
- USB-A connector
- Main Switch

Frequently Asked Questions

- **Q: How many tools can the DDE work with simultaneously?**
 - **A:** The DDE can work simultaneously with up to 2 tools.
- **Q: Can I connect peripheral modules to the DDE?**
 - **A:** Yes, you can connect peripheral modules such as the MSE Electric Desoldering Module to the DDE. Each tool requires a peripheral module.
- **Q: How many soldering profiles can be stored in the DDE?**
 - **A:** The DDE can store up to 25 fully configurable soldering profiles.




- **Q: Can I manage my soldering process remotely?**
 - **A:** Yes, you can manage your soldering process remotely in real-time using JBC Net. For more information, visit www.jbctools.com/webmanager.html.
- **Q: How can I export graphics of my soldering process?**
 - **A:** Insert a USB flash drive into the USB-A connector of the DDE and save your soldering process in CSV format.
- **Q: How can I update the DDE station?**
 - **A:** Download the JBC Update File from www.jbctools.com/software.html and insert the USB flash drive with the downloaded file into the DDE station.

This manual corresponds to the following reference:

- DDE-9C (100V)
- DDE-1C (120 V)
- DDE-2C (230 V)

Packing List

The following items are included:


		
2-Tool Control Unit 1 unit	Power Cord 1 unit Ref. 0024077 (100V) 0023717 (120V) 0024080 (230V)	Manual1 unit Ref. 0027023

Features

DDE work simultaneously with up to 2 tools and 1 module + 1 pedal for each tool (peripheral module for each tool needed).



Connection Example

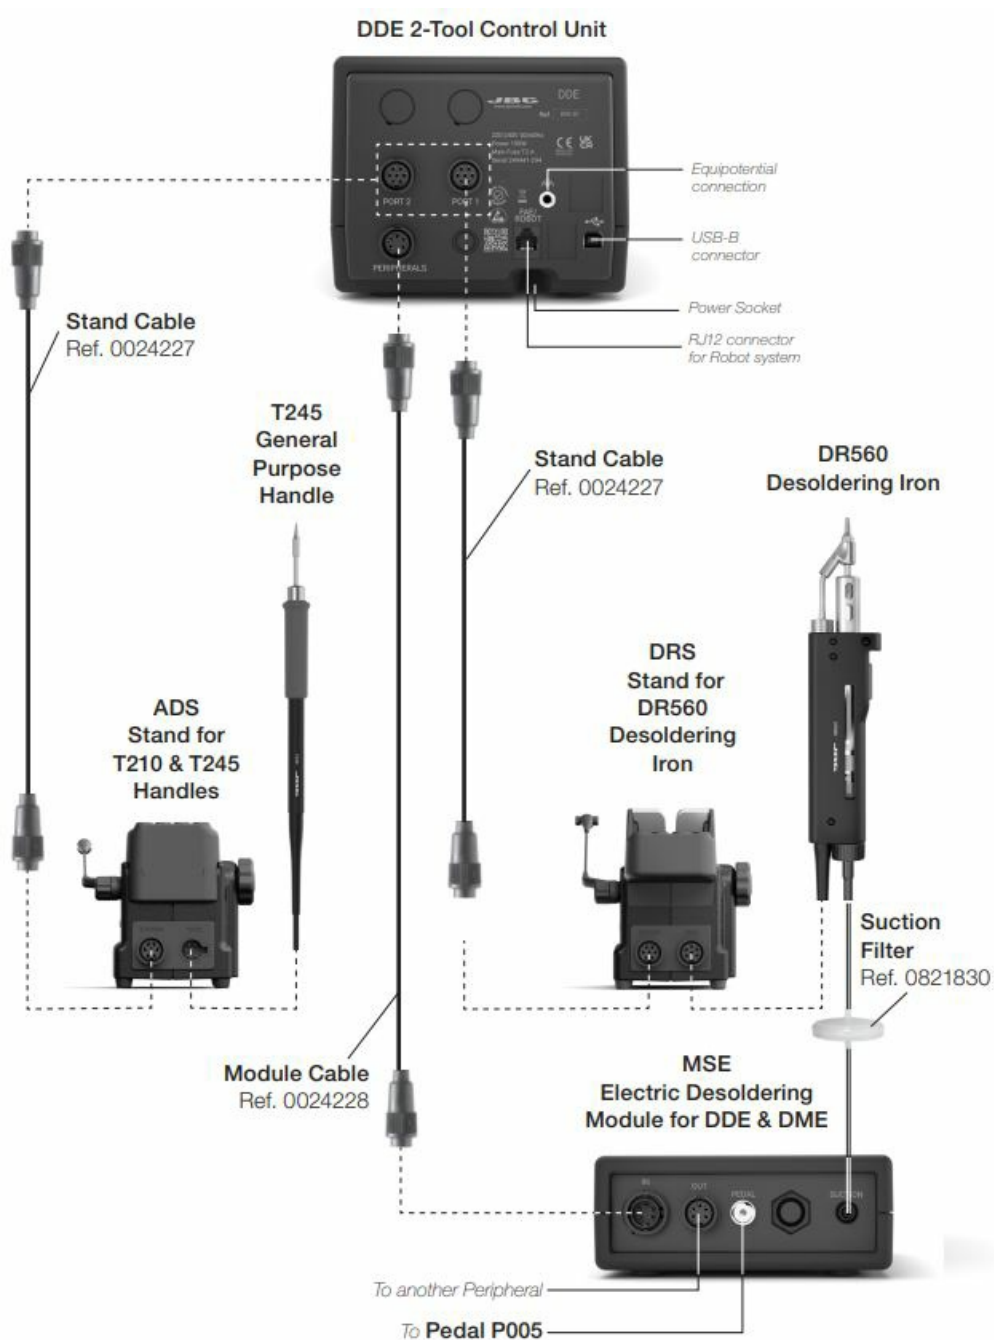

Compatibility


Select the equipment that best suit your soldering or desoldering needs.

Modular System				Peripherals		
Control Unit	Stand	Tool	Cartridge Range	MSE / MVE	MNE	P405
DDE	ADS	T210	C210			●
		T245	C245			●
		T470				●
	DNS	T210N	C210		●	●
		T245N	C245		●	●
	APS	AP250	C250			●
	AMS	AM120	C120			●
		PA120				●
	ATS	AT420	C420			●
	HTS	HT420				●
	DSS	DS360	C360	●		●
	DRS	DR560	C560	●		●

DDE Work Screen

DDE offers an intuitive user interface which provides quick access to station parameters.


Default PIN: 0105

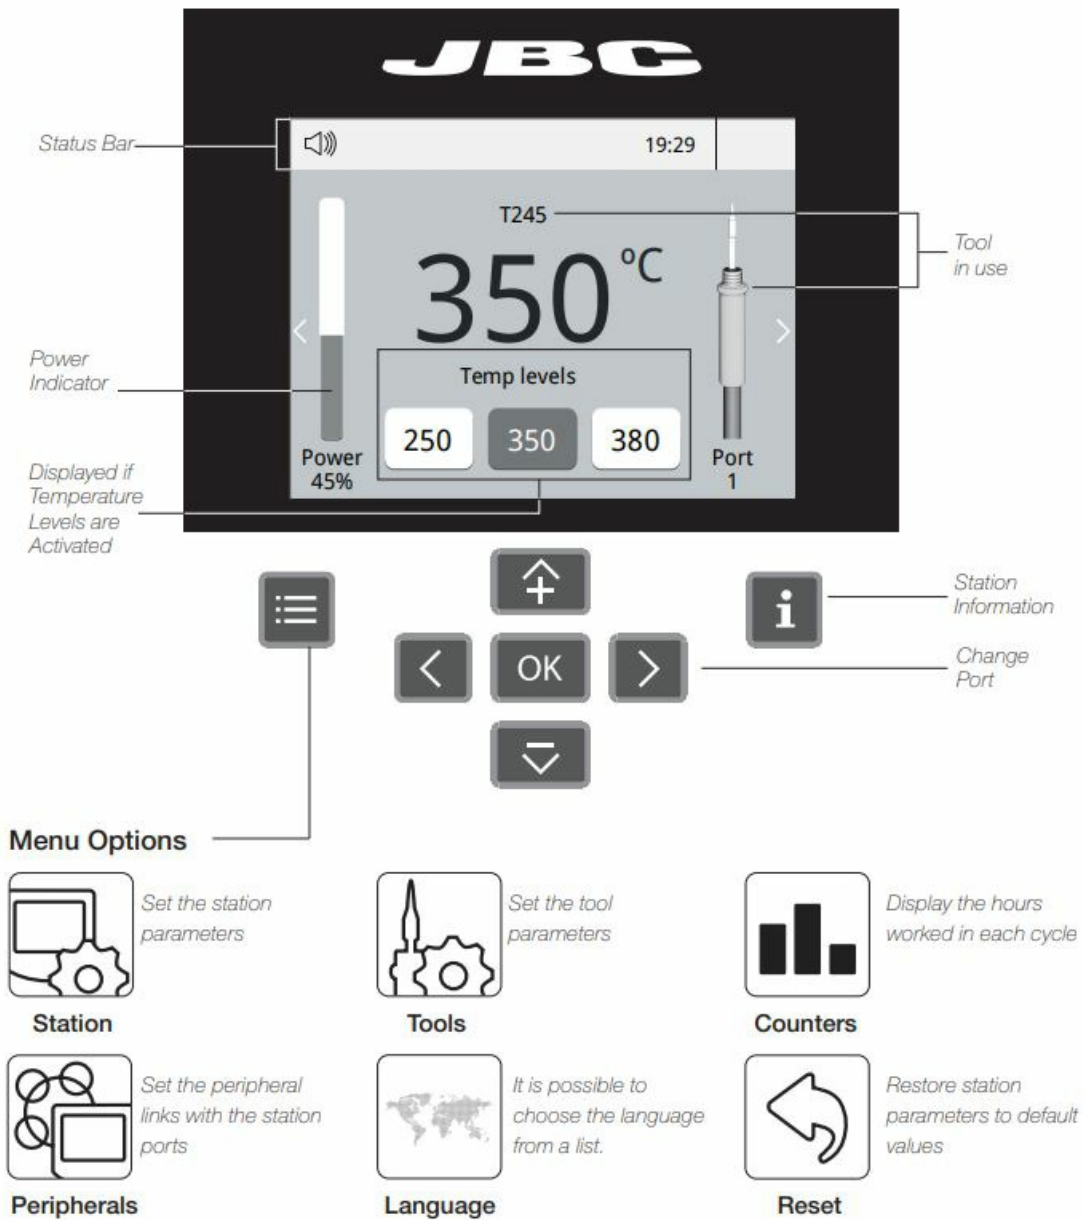

Troubleshooting

- Station troubleshooting available on the product page at www.jbctools.com

Advanced Functionalities

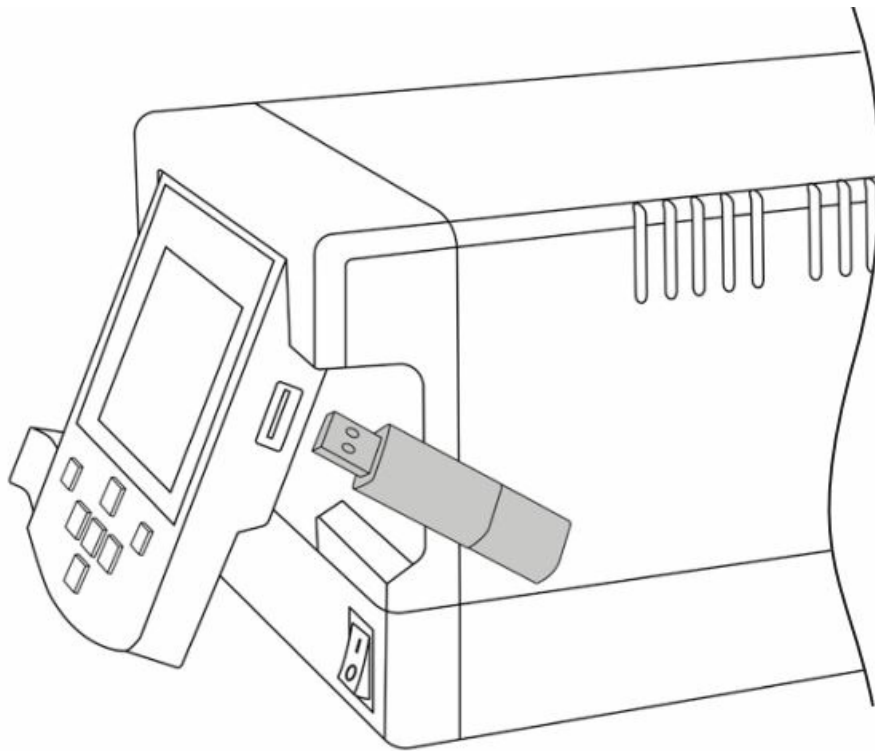

Graphics

- It provides detailed graphics of tip temperature and power delivery in real time during solder joint formation for analysis purposes. This helps you decide how to adjust your process or which tip to use to obtain the best quality soldering.



Profiles

- Designed to avoid thermal shock when soldering Ceramic Chip components like MLCC, this new and unique feature allows controlling the heating ramp up rate of the tool to gradually increase the temperature of the component through all the phases of the soldering process. Up to 25 fully configurable soldering profiles can be stored.



JBC Net

- Get greater quality and control in your production.
 - Manage your whole soldering process remotely in real time.
 - For more information see www.jbctools.com/webmanager.html.



Files

- **Export graphics**
 - Insert a USB flash drive into the USB-A connector to save your soldering process in csv format.









Update

- **Station update**
 - Download the JBC Update File from www.jbctools.com/software.html
 - Insert the USB flash drive with the file downloaded to the station.


System Notifications

The following icons will be displayed on the screen's status bar.

-  USB flash drive is connected.
-  Station is controlled by a PC.
-  Station is controlled by a robot downloaded to the station.
-  Station software update. Press INFO to start the process.
-  **Warning.** Press INFO for failure description.
-  Error. Press INFO for failure description, the type of error and how to proceed.



Set Up

Peripheral Set Up

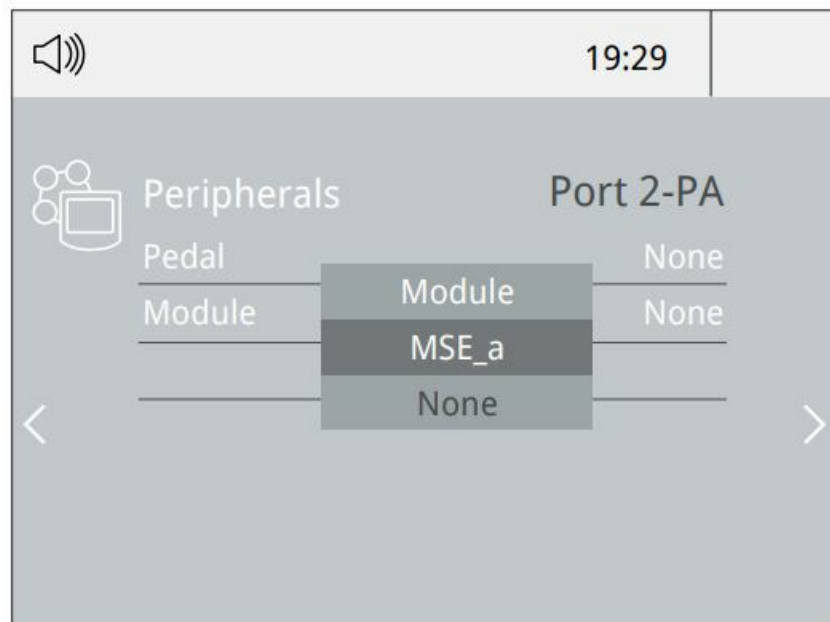

1. After connecting the module, enter the Peripherals Menu and select the port which you want to join with the module.
2. Select the module from the list of peripheral connections. Remember your first connection is denoted as “a”, the second being “b”, etc. (e.g. MS_a, MS_b,...).
3. Press Menu or Back to save changes.


Pedal Set Up

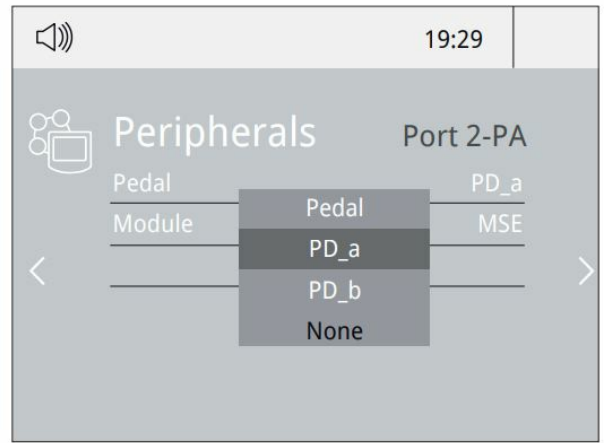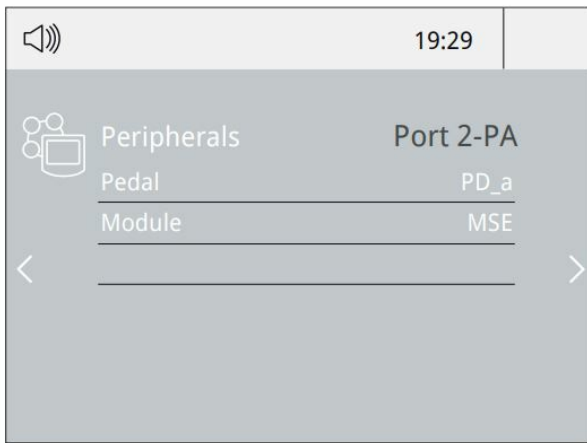

1. Enter the Peripherals Menu and select the port which you want to join to the pedal.
2. Select the pedal from the list (Note that your first connection is denoted as “a”, the second being “b”, etc. (e.g. PD_a, PD_b,...)).
3. Set the pedal function according to your work needs:

Select how the pedal acts: as **Sleep**, **Extractor** (hibernation) or as a **module** switch.

Select the activating mode of the pedal (**pressed/released**)

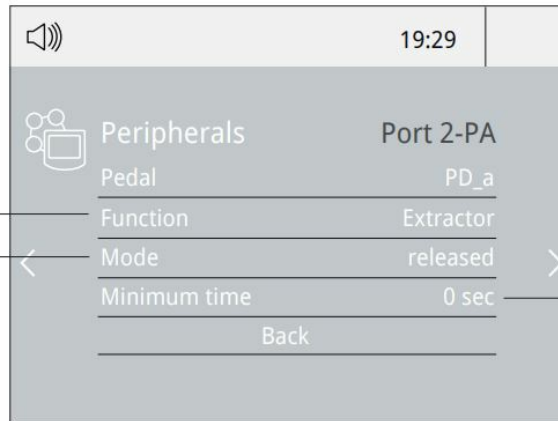

Set the duration of the activation time when pressing the pedal once*. For continuous functioning keep the pedal pressed.


***NB:** The same can be applied inversely when continually pressing the pedal and releasing to activate.

Operation

The JBC Most Efficient Soldering System


Our revolutionary technology is able to recover tip temperature extremely quickly. It means the user can work at a lower temperature and improve the soldering quality. The tip temperature is further reduced thanks to the Sleep and Hibernation modes which increase up to 5 times the life of the tip.

1. Work

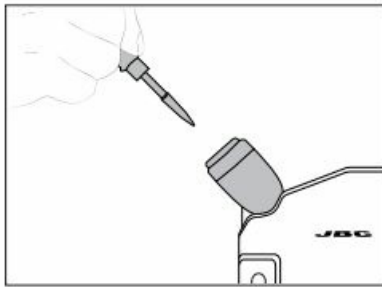


When the tool is lifted from the stand the tip will heat up to the selected temperature.

2. Sleep

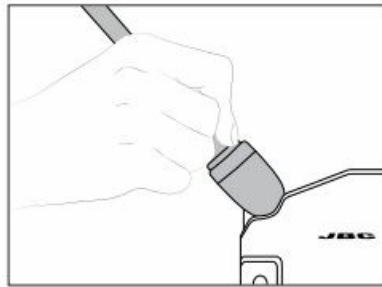


When the tool is in the stand, the temperature falls to the preset Sleep temperature.

3. Hibernation

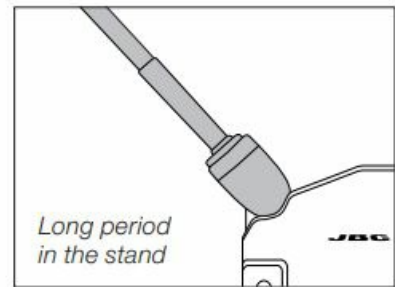


After longer periods of inactivity, the power is cut off and the tool cools down to room temperature.

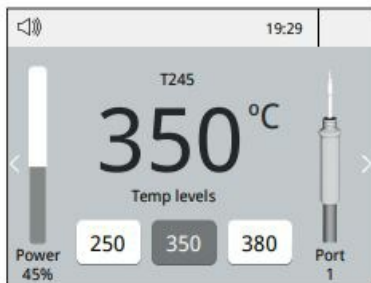

Tools Menu:

- Adjust temperature limits and cartridge.
- Set temperature levels.

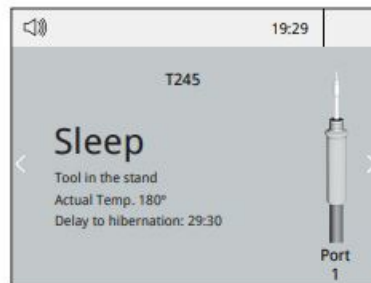

Tools Menu:

- Set Sleep temperature.
- Set Sleep delay. (from 0 to 9 min or no Sleep)



Tools Menu:

- Set Hibernation delay. (from 0 to 60 min or no hibernation)

USB Connector




- Download the latest software from our website to improve your soldering station at www.jbctools.com/software.html.

JBC Web Manager Lite

- www.jbctools.com/manager.html

Manage and monitor as many stations as your PC can handle by using JBCs Web Manager Lite.

Note: Data can be exported to another PC.

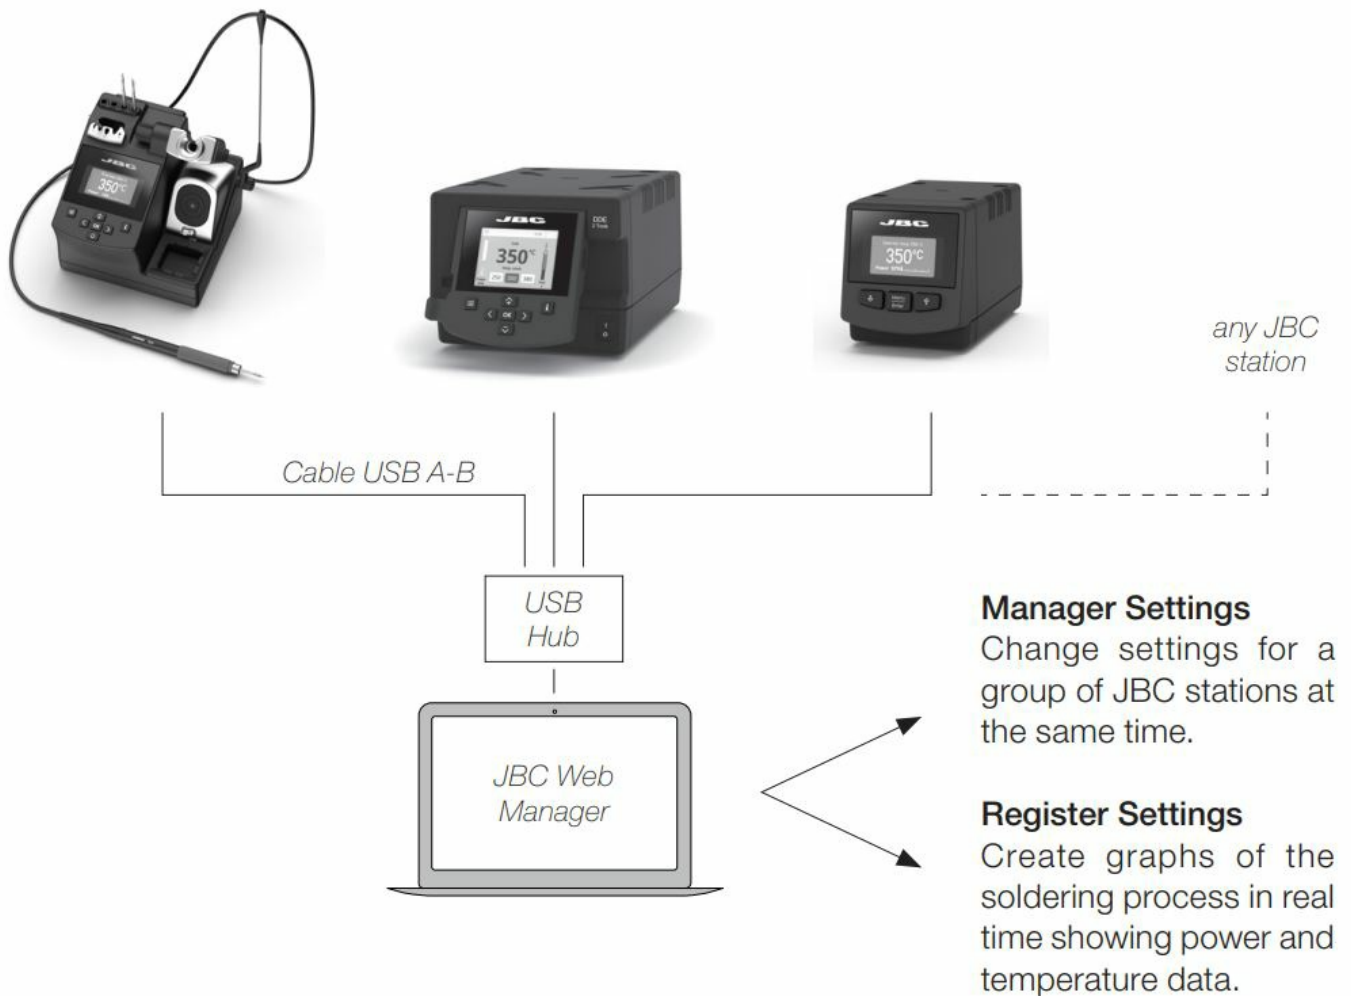



Maintenance

Before carrying out maintenance or storage, always allow the equipment to cool.



- Clean the station screen with a glass cleaner or a damp cloth.
- Use a damp cloth to clean the casing and the tool. Alcohol can only be used to clean the metal parts.
- Periodically check that the metal parts of the tool and stand are clean so that the station can detect the tool's status.
- Maintain the tip surface clean and tinned before storage in order to avoid tip oxidation. Rusty and dirty surfaces reduce heat transfer to the solder joint.
- Periodically check all cables and tubes.

Replace a blown fuse as follows:

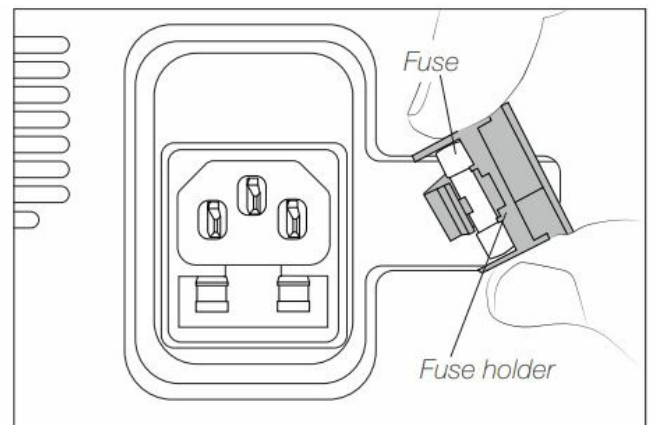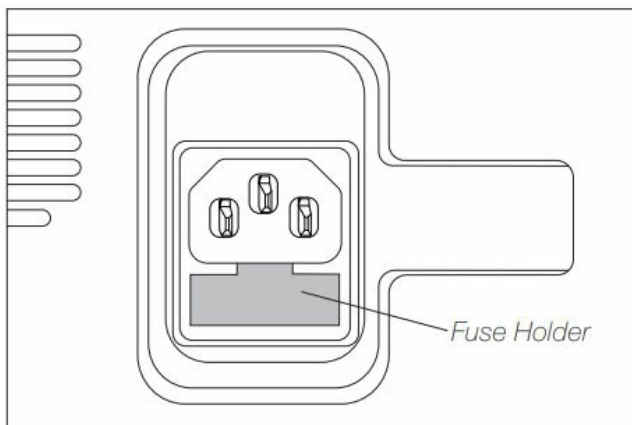

1. Pull off the fuse holder and remove the fuse. If necessary use a tool to lever it off.
2. Press the new fuse into the fuse holder and replace it in the station.

- Replace any defective or damaged pieces. Use original JBC spare parts only.
- Repairs should only be performed by a JBC authorized technical service.

Safety

WARNING: It is imperative to follow safety guidelines to prevent electric shock, injury, fire or explosion.

- Do not use the units for any purpose other than soldering or rework. Incorrect use may cause a fire.
- The power cord must be plugged into approved bases. Be sure that it is properly grounded before use. When unplugging it, hold the plug, not the wire.
- Do not work on electrically live parts.
- The tool should be placed in the stand when not in use in order to activate the sleep mode. The soldering tip or nozzle, the metal part of the tool and the stand may still be hot even when the station is turned off. Handle with care, including when adjusting the stand position.
- Do not leave the appliance unattended when it is on.
- Do not cover the ventilation grills. Heat can cause inflammable products to ignite.
- Avoid flux coming into contact with skin or eyes to prevent irritation.
- Be careful with the fumes produced when soldering.
- Keep your workplace clean and tidy. Wear appropriate protection glasses and gloves when working to avoid personal harm.
- Utmost care must be taken with liquid tin waste which can cause burns.
- This appliance can be used by children over the age of eight and also persons with reduced physical, sensory or mental capabilities or lack of experience provided that they have been given adequate supervision or instruction concerning the use of the appliance and understand the hazards involved. Children must not play with the appliance.
- Maintenance must not be carried out by children unless supervised.

Specifications

DDE

- **2-Tool Control Unit**
 - **Ref.:** DDE-9C 100V 50/60Hz. Input fuse: T5A. Output: 23.5V
 - **Ref.:** DDE-1C 120V 50/60Hz. Input fuse: T4A. Output: 23.5V
 - **Ref.:** DDE-2C 230V 50/60Hz. Input fuse: T2A. Output: 23.5V
- **Output Peak Power:** 150W per tool
- **Temperature Range:** 90 – 450 °C / 190 – 840 °F
- **Idle Temp. Stability (still air):** ±1.5°C / ±3°F / Meets and exceed IPC J-STD-001F
- **Temp Accuracy:** ±3% (using reference cartridge)
- **Temp Adjustment:** ±50°C / ±90°F Through station menu setting
- **Tip to Ground Voltage/Resistance:** Meets and exceed
 - ANSI/ESD S20.20-2014 IPC J-STD-001F
- **Ambient Operating Temp:** 10 – 50 °C / 50 – 122 °F
- **Connections:** USB-A / USB-B / Peripherals connectors
 - RJ12 connector for Robot
- **Control Unit Dimensions/Weight (L x W x H):** 148 x 232 x 120 mm / 3.82 kg
 - 5.8 x 9.1 x 4.7 in / 8.41 lb

- **Total Package:** 258 x 328 x 208 mm / 4.3 kg
 - 10.15 x 12.9 x 8.1 in / 9.5 lb

Complies with CE standards.
ESD safe.

Warranty

JBC's 2 year warranty covers this equipment against all manufacturing defects, including the replacement of defective parts and labour. Warranty does not cover product wear or misuse. In order for the warranty to be valid, equipment must be returned, postage paid, to the dealer where it was purchased.


Get 1 extra year JBC warranty by registering here: <https://www.jbctools.com/productregistration/> within 30 days of purchase.

This product should not be thrown in the garbage.








In accordance with the European directive 2012/19/EU, electronic equipment at the end of its life must be collected and returned to an authorized recycling facility

www.jbctools.com

Documents / Resources

 <p>JBC www.jbctools.com INSTRUCTION MANUAL</p> <p>DDE 2-Tool Control Unit</p>	<p>JBC DDE-2C Tool Control Unit [pdf] Instruction Manual DDE-2C Tool Control Unit, DDE-2C, Tool Control Unit, Control Unit, Unit</p>
---	---

References

-  [Manual-Hub.com - Free PDF manuals!](#)
-  [JBC Soldering Stations, Irons and Rework equipment for electronics](#)
-  [Manager DOWNLOAD](#)
-  [DOWNLOAD SOFTWARE](#)
-  [JBC Web Manager](#)
-  [Manual-Hub.com - Free PDF manuals!](#)
-  [Warranty Extension](#)
- [User Manual](#)

[Manuals+.](#) [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.