


KEITHLEY
A Tektronix Company
**KEITHLEY 3721 Dual 1×20
Multiplexer Card**



KEITHLEY 3721 Dual 1×20 Multiplexer Card Instruction Manual


[Home](#) » [KEITHLEY](#) » KEITHLEY 3721 Dual 1×20 Multiplexer Card Instruction Manual 

Contents

- [1 KEITHLEY 3721 Dual 1×20 Multiplexer Card](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Introduction](#)
- [5 Safety precautions for connections](#)
- [6 Card installation](#)
- [7 Verify card installation](#)
- [8 Pseudocards](#)
- [9 Schematics](#)
- [10 Screw-terminal accessory](#)
- [11 Wire the screw-terminal accessory](#)
- [12 Remove the screw-terminal accessory](#)
- [13 Connection information](#)
- [14 Hardware interlocks](#)
- [15 Maximum power usage with 3700A cards](#)
- [16 Power budgeting and calculation](#)
- [17 Model 3721 connection log](#)
- [18 Safety precautions](#)
- [19 Documents / Resources](#)
 - [19.1 References](#)
- [20 Related Posts](#)



KEITHLEY 3721 Dual 1×20 Multiplexer Card

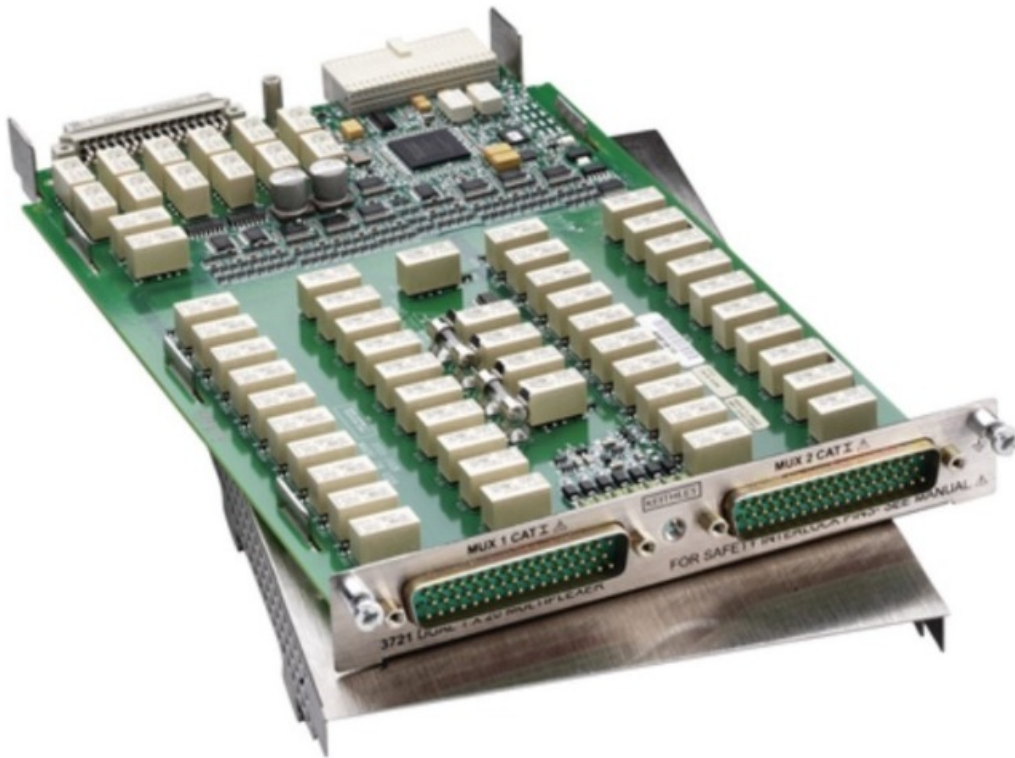

Product Information

Specifications:

- Manufacturer: Keithley Instruments
- Model: 3721
- Channels: 40 channels with two fused channels for current measurements
- Ohms Measurements: Four-wire common-side ohms measurements supported
- Signal Connections: Two 50-pin D-sub plugs
- Additional Features: Automatic cold junction compensation (CJC) for thermocouple-type measurements

Product Usage Instructions

Safety Precautions:

Before proceeding with the installation and connection, ensure to follow these safety precautions:

- Qualified service personnel should handle connection information for plug-in cards.
- Ensure the Series 3700A instrument power is turned off before making or breaking any connections.
- Do not exceed the maximum specifications of any installed plug-in card.
- Use fully insulated test leads for hands-off measurements.

Card Installation:

Follow these steps to install the plug-in card:

1. Ensure slot covers are in place on unused slots to prevent contact with high-voltage circuits.
2. Refer to the installation manual for detailed instructions on installing the plug-in card.

Signal Connections:

To make signal connections:

1. Use two 50-pin D-sub plugs for standard connections.
2. For screw-terminal connections or automatic CJC, utilize the detachable 3721-ST accessory.

Additional Information:

For more detailed information on scanning, reading, writing, and controlling channels, refer to the Series 3700A System Switch/Multimeter Reference Manual available at tek.com/keithley.

Frequently Asked Questions (FAQ)

- **Q: Can I connect devices under test (DUTs) directly to the plug-in card?**

A: No, connection information for plug-in cards is intended for qualified service personnel only. Do not attempt to connect DUTs unless you are qualified.

- **Q: What should I do if signals exceed the maximum specifications of the plug-in card?**


A: Do not connect signals that will exceed the maximum specifications of any installed plug-in card. Ensure compliance with all safety precautions.

Introduction

The Model 3721 offers two independent banks of 1×20 two-pole multiplexers that are ideal for general-purpose switching, including temperature measurements. The two banks can be automatically connected to the Series 3700A mainframe backplane and optional digital multimeter (DMM) through the analog backplane connection relays. This connection allows the mainframe to reconfigure the 3721 as a single 1×40 two-pole multiplexer or to enable card-to-card expansion for even larger configurations.

In addition to the 40 channels, two fused channels are supplied for current measurements. The 3721 includes dedicated inputs that enable 40 channels of four-wire commonside ohms measurements. For thermocouple-type measurements, automatic cold junction compensation (CJC) is supported when used with the detachable Model 3721-ST accessory. The 3721 uses two 50-pin D-sub plugs for signal connections. For screw-terminal connections or automatic CJC, use the detachable 3721-ST accessory. For more information regarding available cards and accessories, refer to the Series 3700A System Switch/Multimeter and Plug-in Cards datasheet, available at tek.com/keithley.

Figure 1: Model 3721 Dual 1×20 Multiplexer Card

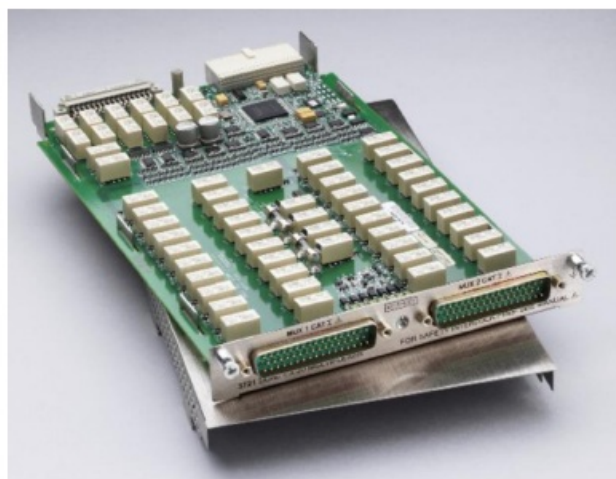

Item shipped may vary from model pictured here.

This document describes how to install the plug-in card and make connections to it. For information on scanning, and on reading, writing, and controlling channels, refer to the Series 3700A System Switch/Multimeter Reference

Safety precautions for connections

WARNING

- Shock hazard. To prevent electric shock that could result in serious injury or death, comply with these safety precautions.
- Connection information for plug-in cards is intended for qualified service personnel. Do not attempt to connect devices under test (DUTs) or external circuitry to a plug-in card unless you are qualified.
- As described in the International Electrotechnical Commission (IEC) Standard IEC 60664, the Series 3700A is Installation Category O and signal lines must not be directly connected to AC mains.
- Before making or breaking any connections to the plug-in card, make sure the Series 3700A instrument power is turned off and power is removed from all external circuitry.
- Do not connect signals that will exceed the maximum specifications of any installed plug-in card. If the rear analog backplane connector of the instrument and the plug-in card terminals are connected at the same time, the test lead insulation must be rated to the highest voltage that is connected. For example, if 300 V is connected to the analog backplane connector, the test lead insulation for the plug-in card must also be rated for 300 V.
- Dangerous arcs of an explosive nature in a high-energy circuit can cause severe personal injury or death if contacted. If the multimeter is connected to a high-energy circuit when set to a current range, low-resistance range, or any other low-impedance range, the circuit is virtually shorted. Dangerous arcing can result, even when the multimeter is set to a voltage range, if the minimum voltage spacing is reduced in the external connections.
- Use test leads that are fully insulated. Use only test leads that can be connected to the circuit (for example, alligator clips and spade lugs) for hands-off measurements. Do not use test leads that decrease voltage spacing. These diminish arc protection and create a hazardous condition.

Card installation

WARNING

Slot covers must be installed on unused slots to prevent personal contact with high-voltage circuits. Failure to recognize and observe standard safety precautions could result in personal injury or death due to electric shock.

To install a switching card into the instrument mainframe:


1. Turn the instrument off.
2. Position the instrument so that you are facing the rear panel.
3. Disconnect the power line cord and any other cables connected to the rear panel.
4. Remove the slot cover plate from the mainframe slot. Retain the plate and screws for future use.
5. With the top cover of the switching card facing up, align the card edge into the card guide of the slot, as shown in the following figure.
6. Slide in the card. For approximately the last $\frac{1}{4}$ inch, press in firmly to seat the card connector to the mainframe connector.
7. On each side of the card, there is a mounting screw. Use a flat-bladed screwdriver to tighten the two mounting

screws to secure the card to the mainframe. Do not overtighten.

8. Reconnect the power line cable and any other cables to the rear panel.

9. Turn the instrument on.

Figure 2: Module installation

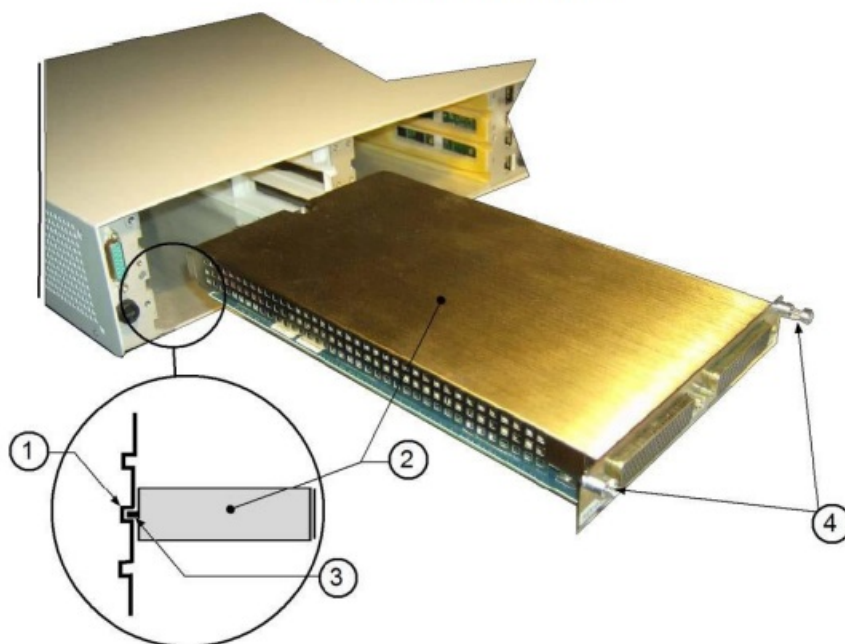

Item shipped may vary from model pictured here.

| Item | Description |
|------|--------------------------------|
| 1 | Card guide (part of mainframe) |
| 2 | Card |
| 3 | Card edge (part of card) |
| 4 | Mounting screw (part of card) |

Verify card installation

To verify that the card was properly installed:

1. If the 3700A is controlled remotely (REM is displayed), press EXIT to switch control to local.
2. On the 3700A front panel, press SLOT. The name and firmware version of the instrument is displayed.
3. Press SLOT again. The name and firmware version of the card in slot 1 is displayed.
4. If you have more than one card installed, continue to press SLOT until the slot you installed is displayed.
5. Confirm the name and firmware version.
6. Press EXIT to return to the operating display.

Pseudocards

- You can perform open, close, and scan operations and configure your system without having a switch card installed in your instrument. If you are connected to a remote interface, you can assign a pseudocard to an

empty switch card slot.

- You cannot set up a pseudocard from the front panel. However, once pseudocard configuration is complete, you can take the instrument out of remote mode and use the front panel to control the pseudocard. Press the EXIT key to take the instrument out of remote mode. The model number of a pseudocard is the same as the model number of an actual card (except for 3732 cards).
- When the instrument is turned off, the pseudocard settings are lost and the pseudocard is no longer assigned to the slot. To preserve the pseudocard setting through a power cycle, use a saved setup or a configuration script. The setup or script retains the model number of the card installed in each slot, including pseudocards.
- For additional information on pseudocards, refer to the Series 3700A System Switch/Multimeter Reference Manual at tek.com/keithley.

Set up a 3721 pseudocard

- You can install a pseudocard in any empty slot. With the 3721 pseudocard installed, the instrument operates as if a 3721 card is installed in the slot. This allows you to configure a scan and exercise its operation before the switching module is installed in the 3700A instrument.
- In the following code examples, replace slot with the slot number (1 to 6).

To set a slot to use a 3721 pseudocard, send:

```
slot[slot].pseudocard = 3721
```

To query the pseudocard, send:

```
print(slot[slot].pseudocard)
```

To set a slot to stop using a pseudocard, send:

```
slot[slot].pseudocard = slot.PSEUDO_NONE
```

NOTE

The revision level of a pseudocard is always returned as 00.00 a.

You can query the slot attributes to determine the capabilities of the installed switching modules. For example, send the following query to determine if slot 1 supports 4-wire commonside ohms channels:

```
print(slot[1].commonsideohms)
```

Refer to the Series 3700A System Switch/Multimeter Reference Manual for more information about using queries at tek.com/keithley.

Schematics

The following figures show the switching schematic for the 3721 in two-pole mode.

Figure 3: 3721 schematic multiplexer bank 1 in 2-pole mode



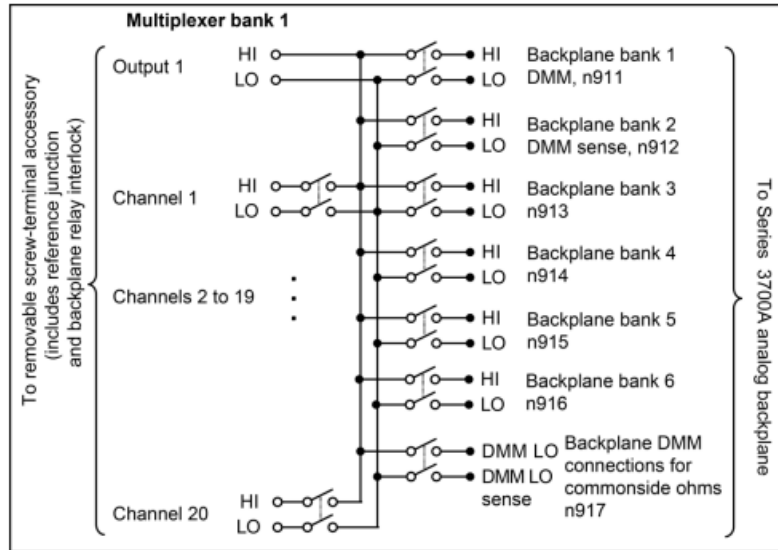


Figure 4: 3721 schematic multiplexer bank 2 in 2-pole mode

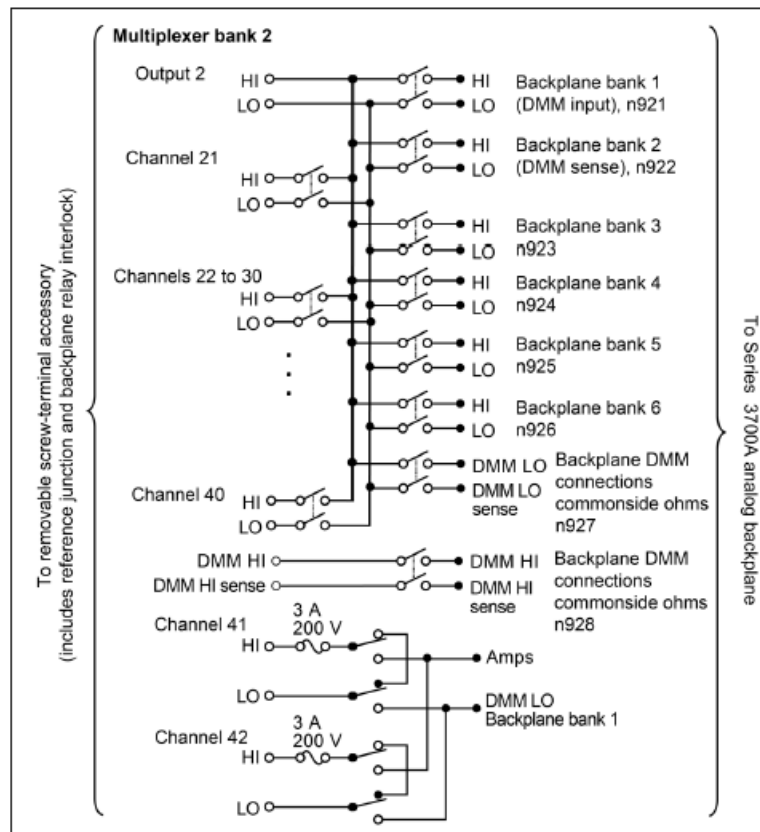

The following figure shows a switching schematic for the Model 3721 in 4-wire commonside ohms mode.

Figure 5: 3721 schematic for four-wire commonside ohms mode

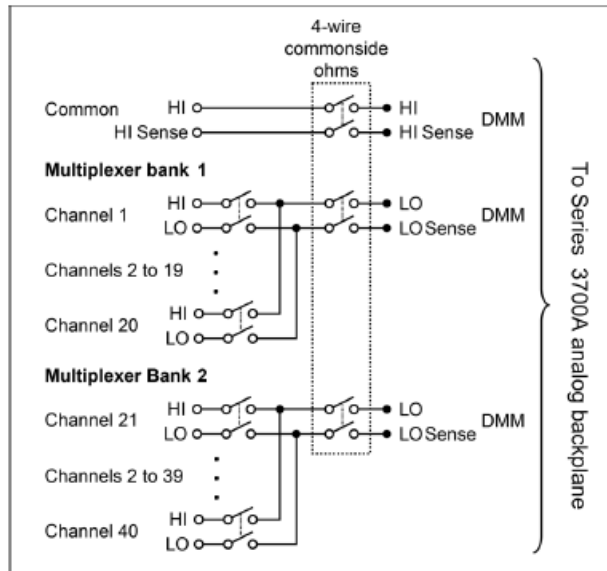

Retrieving data from additional backplane relays

The Model 3721 card has three backplane relays for commonside ohms functionality. Use slotX or allslots to query settings on this card to return information for channels 1 through 40, 911 through 917, and 921 through 928. The response message contains the three commonside ohms backplane relays, listed based on bank location. For the 3721, 917 is listed with bank 1. Channels 927 and 928 are listed with bank 2 after the backplane relays.

For example, to print the channel images on this card when it is in slot 2 after a reset, send the following:

- `reset()`
- `print(channel.getimage('slot2'))`


Output from above code:

- 2001;2002;2003;2004;2005;2006;2007;2008;2009;2010;2011;2012;2013;2014;2015;
2016;2017;2018;2019;2020;2021;2022;2023;2024;2025;2026;2027;2028;2029;2030;
- 2031;2032;2033;2034;2035;2036;2037;2038;2039;2040;2041;2042;2911;2912;2913;
2914;2915;2916;2921;2922;2923;2924;2925;2926;2917;2927;2928

Screw-terminal accessory

The 3721-ST screw-terminal accessory is shown in the following figure.

Figure 6: 3721-ST Screw-Terminal Accessory

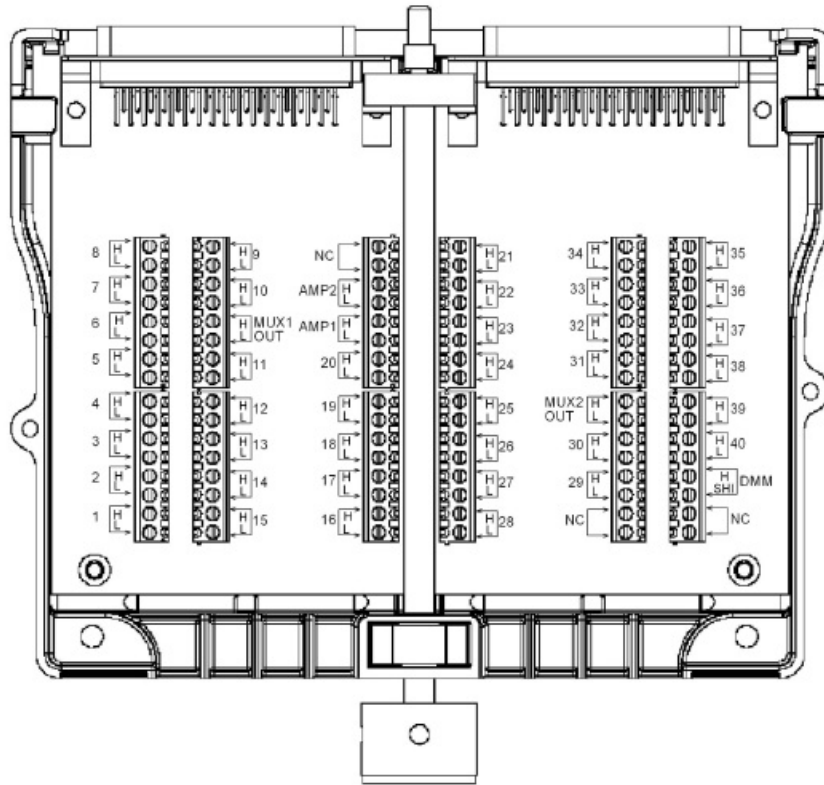

Wire the screw-terminal accessory

These instructions describe how to connect wiring to a Series 3700A screw-terminal accessory.


CAUTION

It is not necessary to remove a circuit board from its enclosure to wire the screw-terminal accessory. Avoid handling circuit board surfaces and terminal blocks. Contaminants from hands may degrade screw-terminal accessory performance.

To wire the screw-terminal accessory:

1. Loosen the slotted captive screws (1) on the top cover.
2. Slide the top cover (2) away from the retaining tab (3), as shown in the following figure.


Figure 7: Remove the top cover of the screw-terminal accessory

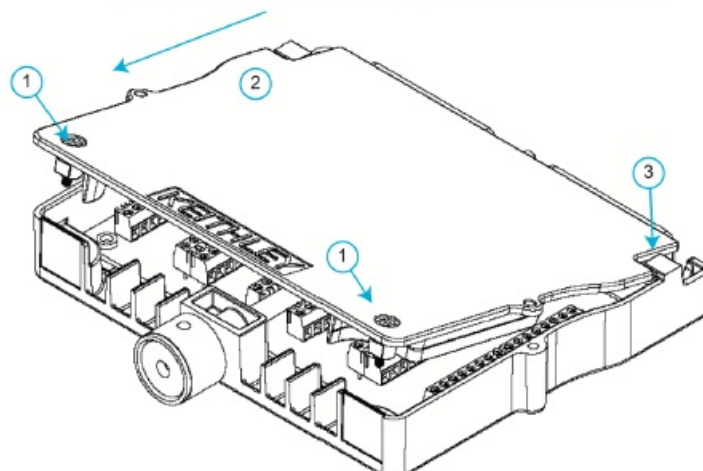

3. If your accessory includes insertable overlays, select the correct overlay and press it into place inside the screw-terminal accessory.
4. As shown in the following figure, route your wiring through the slots at the rear of the screw-terminal accessory


and connect it to the wiring terminals as described in Connection information (on page 13).

Figure 8: Routing and securing cables with ties

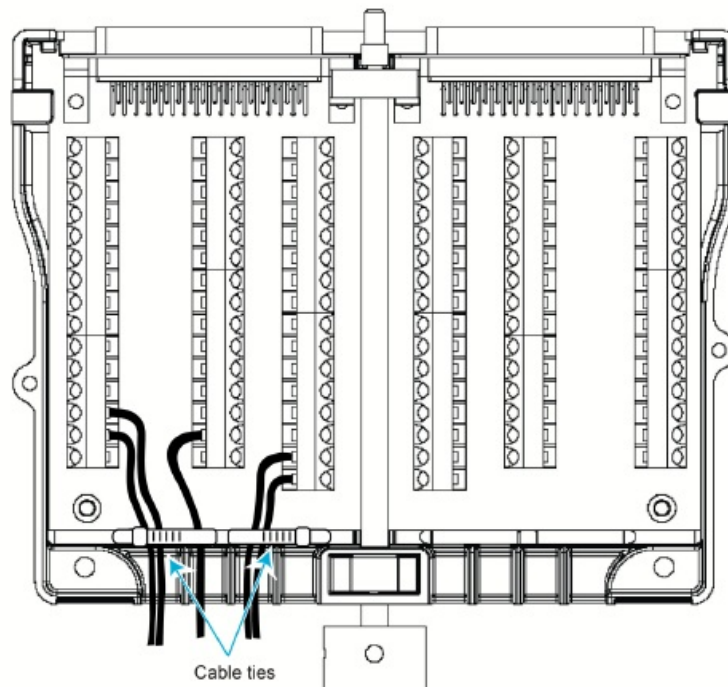

5. When all wires have been connected, use small cable ties to secure the wires and provide strain relief, as shown in the previous figure. Pass the cable tie in and out of the small holes in the base of the screw-terminal assembly and around your wiring before pulling the cable tie tight.
6. Align the top cover with the circuit board.
7. Slide the cover forward (1) and beneath the retaining tab (2), as shown in the following figure.
8. Fasten the two slotted captive screws (3).

Figure 9: Install the screw-terminal assembly top cover

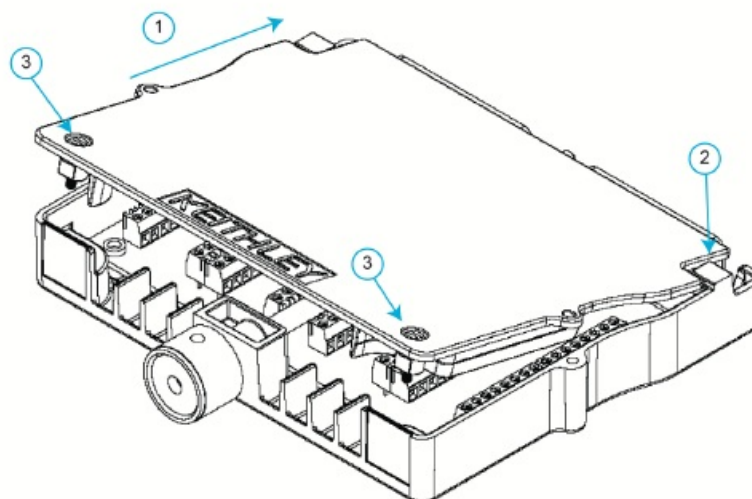

Install the screw-terminal accessory

WARNING

Before using a screw-terminal assembly with an installed plug-in card, verify that the card is properly installed in the 3700A instrument and that the mounting screws are tightly fastened. If the mounting screws are not properly connected, an electrical shock hazard may be present.


NOTE

To use more than two 3700A screw-terminal accessories in a rack-mount installation, use the terminal support bracket included in the Model 4288-10 Rear Support Mount Kit. For more information about the rack-mount kit, refer to Keithley document Model 4288-10 Rear Support Rack-Mount Kit Assembly and Mounting Instructions, available on tek.com/keithley.

To install the screw-terminal accessory on the 3700A plug-in card:


1. Remove all power from the 3700A instrument.
2. Make sure that the mounting screws (1 in the following figure) on the installed plug-in card are secure.

Figure 10: Check 3700A card mounting screws

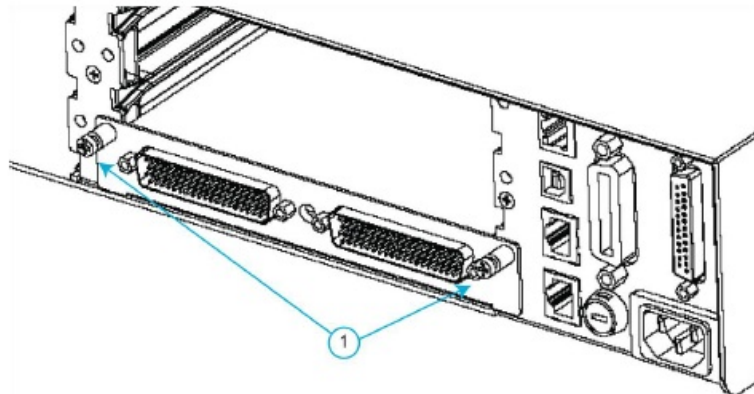

3. Align the screw-terminal assembly D-sub connectors with the connectors on the installed plug-in card, as shown in the following figure.
4. Press to seat the D-sub connectors.

Figure 11: Connect the screw-terminal accessory

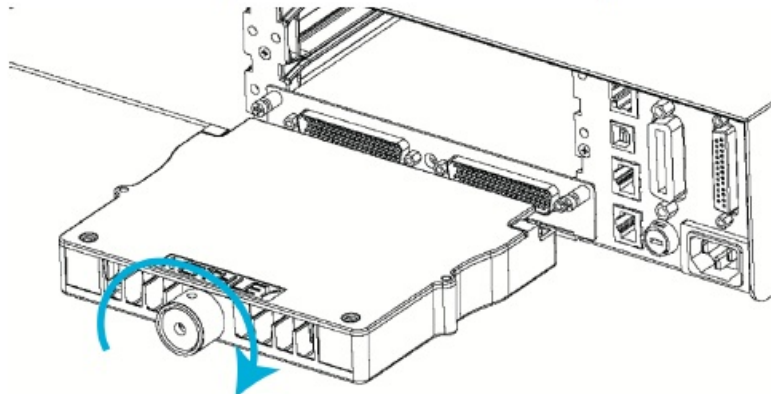

5. Turn the knob on the screw-terminal assembly clockwise by hand, as shown in the previous figure, until it is firmly engaged. You may need to use a slotted screwdriver to tighten the knob.

CAUTION

To prevent damage to the card, do not overtighten the knob.

Remove the screw-terminal accessory

To remove a screw-terminal accessory from an installed plug-in card:


1. Remove all power from the 3700A instrument.
2. Turn the knob on the screw-terminal accessory counter-clockwise until it is completely disengaged. You may need to use a slotted screwdriver to loosen the knob.
3. Pull the screw-terminal accessory away from the plug-in card D-sub connectors.

Connection information

The 3721 uses two 50-pin male D-sub connectors for signal connections. For screw-terminal connections or automatic CJC, you can use the detachable Model 3721-ST screw-terminal accessory. Refer to the following data and figure for the 3721 D-sub connection information.

Additional pin connector information:

- M1H and M1L = Output 1HI and 1LO
- M2H and M2L = Output 2HI and 2LO
- The backplane interlock is actuated by connecting +ILK to –ILK

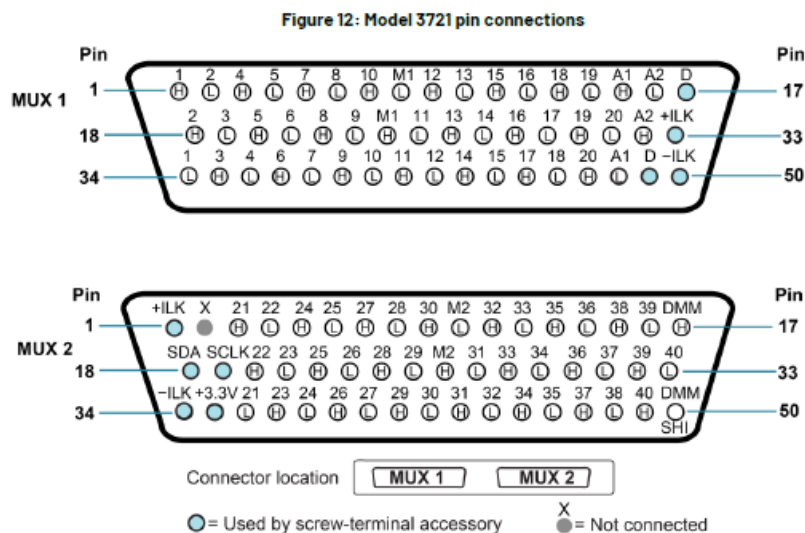

Model 3721-ST screw-terminal accessory channel list

The following table shows the relationships between the 3721-ST terminals and the 3721 channels.


| 3721-ST accessory label | 3721 channel |
|-------------------------|-----------------------------|
| MUX 1 OUT | Multiplexer # 1 Output |
| 1 through 20 | 1 through 20 |
| MUX 2 OUT | Multiplexer # 2 Output |
| 21 through 40 | 21 through 40 |
| AMP1 | Amps Channel 41 |
| AMP2 | Amps Channel 42 |
| DMM | DMM HI and SHI Channel n928 |
| NC | No connection |

Amps channel 41 is accessed as “n041”, where n is the slot number. Amps channel 42 is accessed as “n042”, where n is the slot number. The DMM channel is accessed as “n0928”, where n is the slot number.

Model 3721-MTC-3 cable

The 3721-MTC-3 cable is a 50-pin cable assembly that is 3.0 m (10 ft) long and terminated with a D-sub plug on one end and a D-sub jack on the other end.

Figure 13: Model 3721-MTC-3 cable

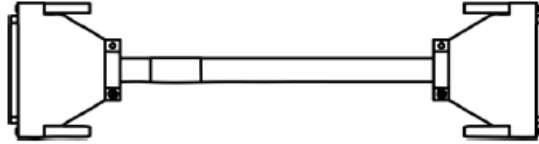

WARNING:

To prevent electrical shock, observe the following safety precautions:

- Connect both ends of the cable before applying any power to the system.
- Remove all power in the system before connecting the cable to a switching module or external circuitry.
- Connect both D-sub connector shells of this cable to a safety earth ground. A shock hazard exists when voltage levels greater than 30 VRMS, 42.4 VPEAK, or 60 V DC are present.

3721-MTC-3 characteristics

- Cable maximum signal levels: 300 V DC or 300 VRMS


Maximum current rating:

- Single conductor: 4.4 A
- Multiple conductors: 2.2 A per wire
- Conductor gauge: 22 AWG

Pin number identification

Pin numbers for the Model 3721-MTC-3 D-sub cables are shown in the following figure and table. Connect the drain wire to the shield at both ends of the 3721-MTC-3 cable.

Figure 14: Model 3721-MTC-3 connectors

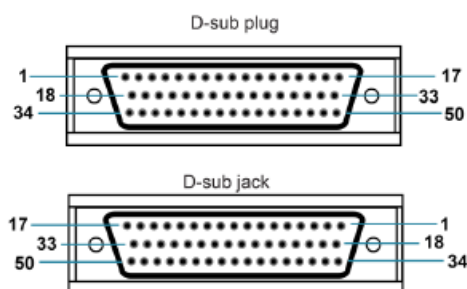


Model 3721-MTC-3 pin number identification

| CONN 1 pin | Color | CONN 2 pin | | CONN 1 pin | Color | CONN 2 pin |
|------------------|-------------------|------------------|--|---------------|--------------------|---------------|
| 1 | Black | 1 | | 26 | Orange/black/white | 26 |
| 2 | White | 2 | | 27 | Blue/black/white | 27 |
| 3 | Red | 3 | | 28 | Black/red/green | 28 |
| 4 | Green | 4 | | 29 | White/red/green | 29 |
| 5 | Orange | 5 | | 30 | Red/black/green | 30 |
| 6 | Blue | 6 | | 31 | Green/black/orange | 31 |
| 7 | White/black | 7 | | 32 | Orange/black/green | 32 |
| 8 | Red/black | 8 | | 33 | Blue/white/orange | 33 |
| 9 | Green/black | 9 | | 34 | Black/white/orange | 34 |
| 10 | Orange/black | 10 | | 35 | White/red/orange | 35 |
| 11 | Blue/black | 11 | | 36 | Orange/white/blue | 36 |
| 12 | Black/white | 12 | | 37 | White/red/blue | 37 |
| 13 | Red/white | 13 | | 38 | Black/white/green | 38 |
| 14 | Green/white | 14 | | 39 | White/black/green | 39 |
| 15 | Blue/white | 15 | | 40 | Red/white/green | 40 |
| 16 | Black/red | 16 | | 41 | Green/white/blue | 41 |
| 17 | White/red | 17 | | 42 | Orange/red/green | 42 |
| 18 | Orange/red | 18 | | 43 | Blue/red/green | 43 |
| 19 | Blue/red | 19 | | 44 | Black/white/blue | 44 |
| 20 | Red/green | 20 | | 45 | White/black/blue | 45 |
| 21 | Orange/green | 21 | | 46 | Red/white/blue | 46 |
| 22 | Black/white/red | 22 | | 47 | Green/orange/red | 47 |
| 23 | White/black/red | 23 | | 48 | Orange/red/blue | 48 |
| 24 | Red/black/white | 24 | | 49 | Blue/orange/red | 49 |
| 25 | Green/black/white | 25 | | 50 | Black/orange/red | 50 |

Hardware interlocks

This plug-in card can switch high-voltage signals. To prevent exposure to hazardous voltages, the plug-in card includes a hardware interlock. The hardware interlocks are present on the plug-in card and are designed to keep the plug-in card disconnected from the 3700A backplane. When the interlock circuit is disengaged, no measurements can be made through a plug-in card, but channel relays can continue to operate. The following figure is a simplified schematic of the interlock circuit on the plug-in card.

Figure 15: Simplified interlock circuit

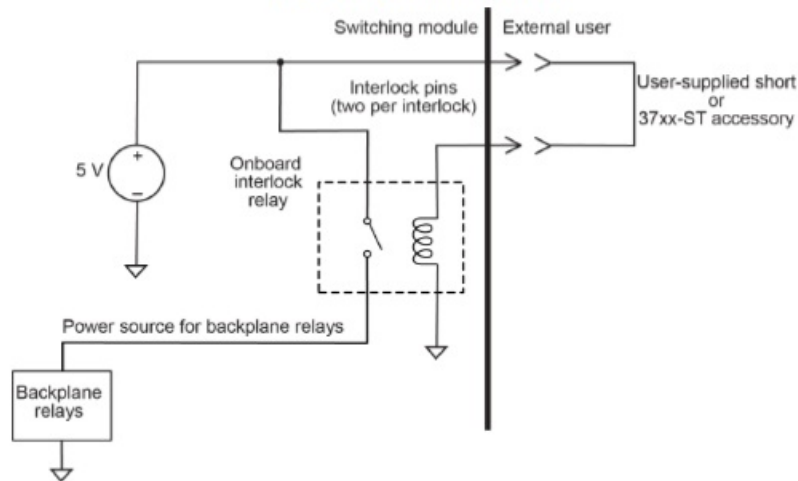

3721 interlock pin numbers

The following table shows the interlock pin numbers for the 3721 switch card.

| Interlock circuit | Interlock pins | Backplane relays affected | Other relays affected |
|---------------------------|----------------|---------------------------|---|
| Multiplexer #1, Amps, DMM | 33, 50 | n911 through n917 | n041, n042 (Amps), n928 (DMM HI / SHI) |
| Multiplexer #2 | 1, 34 | n921 through n927 | n/a |

CAUTION:

To prevent instrument damage or loss of functionality, make sure high-voltage analog signals are not wired to the interlock pins.

Engage hardware interlocks

To engage the hardware interlocks, you must provide a low-resistance path between the two applicable interlock pins, as shown in the figure in Hardware interlocks (on page 16). This path routes a 5 V power source to an onboard interlock relay, which in turn enables power to the backplane relays. If a 37xxA-ST screw-terminal accessory is used, a low-resistance path is provided to automatically engage the interlock circuit.

WARNING

The supplied 5 V power source is not designed for use with external circuits. Only use this power source to energize the interlock relay. For reliable operation, be sure to provide a low-resistance path between the interlock pins. Significant resistance can cause the interlock circuit to fail to engage.

Check interlock status

You can check the status of the interlocks using the TSP command `slot[slot].interlock.state`, where slot is 1 to 6. When the interlock status is returned as engaged, you can energize the associated backplane relays. When interlock status is disengaged, you cannot energize the associated backplane relays. Refer to the Series 3700A System Switch/Multimeter Reference Manual for more information on interlock commands. This manual is available at tek.com/keithley.

Amps channel fuse replacement procedure

WARNING

To prevent electrical shock that could cause injury or death, NEVER make or break connections to equipment while the output is on. Disconnect all external power from the equipment and the line cord before performing any maintenance. Make sure that the Model 3721 card is removed from the system before replacing the amps fuse.

CAUTION


For continued protection against fire or instrument damage, only replace fuse with the type and rating listed. If the instrument repeatedly damages fuses, locate and correct the cause of the problem before replacing the fuse.

Channels 41 and 42 of the 3721 switch card are protected by series fuses on the printed circuit board of the 3721. In the event of an overload, both channels and the DMM input are protected. The two fuses are replaceable. The fuse is rated at 250 V, 3 A fast blow 5×20 mm. It is Littelfuse part number 235003.MXP (Keithley part number FU-99-1).

To replace the amps channel fuse:

1. Remove all power to the 3700A.
2. Position the instrument so that you are facing the rear panel.
3. On each side of the card, there is a mounting screw. Use a flat-bladed screwdriver to loosen these two screws.
4. Slide the card out of the 3700A.
5. Remove the 3721 from the 3700A.
6. On the 3721, unscrew the #4-40 screw (1), shown in the following figure.
7. Slide the top cover (2) away from the D-sub connectors (3), disengaging the cover from the printed circuit board.
8. Lift the top shield cover off the printed circuit board.
- 9.


Figure 16: Model 3721 shield removal

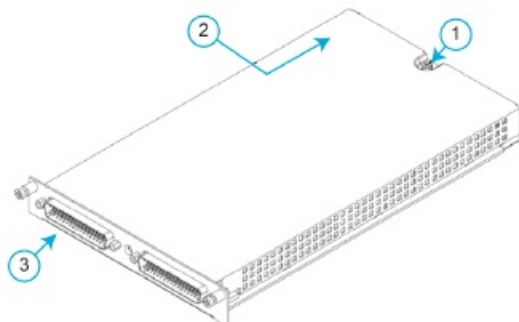

Refer to the following figure for fuse location.

10.

Figure 17: 3721 fuse locations

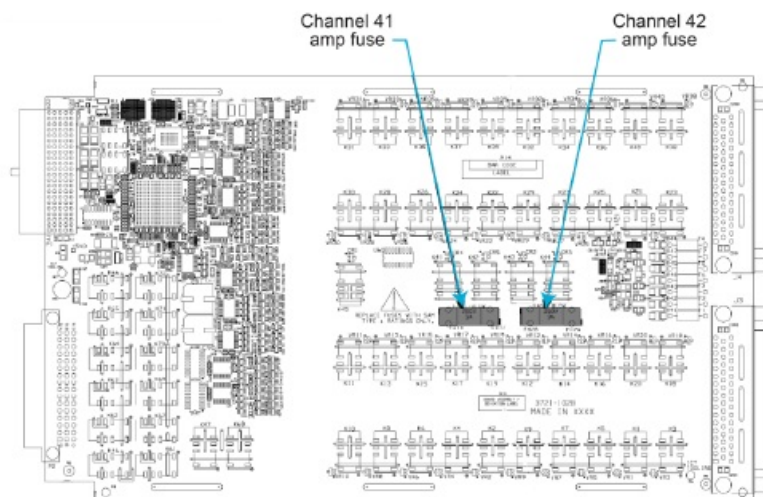

Replace the fuses as needed. Use only fuses that match the ratings listed above.

11. Slide the top cover toward the D-sub connectors, engaging the cover onto the printed circuit board.
12. Secure the cover with the number 4-40 screw (1).

13. Install the card into the 3700A. Refer to Card installation (on page 2) for information.

Maximum power usage with 3700A cards

The 3700A plug-in cards can switch many relays at once, which can take a substantial amount of system power. The maximum power available in the 3700A is limited on a per-slot and per-bank basis, as shown in the following table.

| Bank 1 | Bank 2 |
|---------------------|---------------------|
| Slot 1 | Slot 4 |
| Slot 2 | Slot 5 |
| Slot 3 | Slot 6 |
| 12,300 mW (maximum) | 12,300 mW (maximum) |

The maximum slot power limit is 10,500 mW.

If the power levels are exceeded, the system performs as many of the operations as possible until the power limits are reached. When the power limits are reached, an error message is generated and the remaining operations are not performed.

Power budgeting and calculation

Individual relay power consumption generally depends on the type of relay. Latching relays consume power briefly to open or close and are not a concern when budgeting power. Nonlatching relays continuously consume power to maintain their state, so they must be considered when budgeting for power consumption.

Each switch card also uses system power to operate. This continuous power draw is known as quiescent power. Quiescent power takes away power that is available to operate relays, so it must also be considered when budgeting for power consumption. The following table shows the power consumption of channel and backplane relays for the 3700A switch cards. The quiescent power is also shown.

| Model | Quiescent power (P_Q) (milliwatts) | Channel relay power (PCR) consumption each (milliwatts) | Backplane relay power (PBR) consumption each (milliwatts) |
|-------|--|---|---|
| 3720 | 975 | Not applicable | 100 |
| 3721 | 1350 | Not applicable | 100 |
| 3722 | 475 | Not applicable | 100 |
| 3723 | 700 | 100 (2-pole) | 100 |
| | | 50 (1-pole) | 100 |
| 3724 | 1150 | 20 | 100 |
| 3730 | 780 | Not applicable | 100 |
| 3731 | 780 | 67 | 100 |
| 3732 | 780 | 17 | 100 |
| 3740 | 1000 | Not applicable (independent) | 100 |
| | | 200 (high current) | 100 |

To determine how many relay operations can be performed, use the previous table to calculate the total power required by applying the following equation:

$$PTS = PQ + (NCC \times PCR) + (NBC \times PBR)$$

Where:

- PTS is the total slot power
- PQ is the quiescent power
- NCC is the number of closed channels
- PCR is the power per channel relay
- NBC is the number of closed backplane channels
- PBR is the power per backplane relay

To calculate the total slot power, you must calculate the power for each bank of slots:

- Bank 1 Power = Slot 1 PTS + Slot 2 PTS + Slot 3 PTS
- Bank 2 Power = Slot 4 PTS + Slot 5 PTS + Slot 6 PTS

The results are called bank powers and should be compared with the maximum limits. Example calculations are shown in the following topics.

Power budgeting example for six 3721 cards

This example is for a fully loaded 3706A-S that has 3721 switch cards in all slots.

| Slot | Card | Channel relays closed | Backplane relays closed |
|------|------|-----------------------|-------------------------|
| 1 | 3721 | 20 | 2 |
| 2 | 3721 | 20 | 2 |
| 3 | 3721 | 20 | 2 |
| 4 | 3721 | 20 | 2 |
| 5 | 3721 | 20 | 2 |
| 6 | 3721 | 20 | 2 |

This produces the following power consumption:

| | P _Q | | NCC × PCR | | NBC × PBR | | PTS |
|-------------------------|----------------|---|-----------|---|-----------|---|------|
| Slot 1 power consumed = | 1350 | + | 0 | + | 2 × 100 | = | 1550 |
| Slot 2 power consumed = | 1350 | + | 0 | + | 2 × 100 | = | 1550 |
| Slot 3 power consumed = | 1350 | + | 0 | + | 2 × 100 | = | 1550 |
| Slot 4 power consumed = | 1350 | + | 0 | + | 2 × 100 | = | 1550 |
| Slot 5 power consumed = | 1350 | + | 0 | + | 2 × 100 | = | 1550 |
| Slot 6 power consumed = | 1350 | + | 0 | + | 2 × 100 | = | 1550 |

Totals for each bank are calculated:

| | Slot 1 | | Slot 2 | | Slot 3 | | Total |
|-------------------------|--------|---|--------|---|--------|---|-------|
| Bank 1 power consumed = | 1550 | + | 1550 | + | 1550 | = | 4650 |

| | Slot 4 | | Slot 5 | | Slot 6 | | Total |
|-------------------------|--------|---|--------|---|--------|---|-------|
| Bank 2 power consumed = | 1550 | + | 1550 | + | 1550 | = | 4650 |

Since each bank did not exceed the maximum power, the power budget is within the limits.

Power budgeting example with multiple cards

This example is for a fully loaded 3706A-S with a mix of switch cards.

| Slot | Card | Channel relays closed | Backplane relays closed |
|------|------|-----------------------|-------------------------|
| 1 | 3720 | 20 | 2 |
| 2 | 3721 | 20 | 2 |
| 3 | 3722 | 15 | 4 |
| 4 | 3723 | 25 (2-pole) | 2 |
| 5 | 3730 | 10 | 4 |
| 6 | 3740 | 2 (high current) | 4 |

This produces the following power consumption:

| | P _Q | | NCC × PCR | | NBC × PBR | | PTS |
|-------------------------|----------------|---|-----------|---|-----------|---|------|
| Slot 1 power consumed = | 975 | + | 0 | + | 2 × 100 | = | 1175 |
| Slot 2 power consumed = | 1350 | + | 0 | + | 2 × 100 | = | 1550 |
| Slot 3 power consumed = | 475 | + | 0 | + | 4 × 100 | = | 875 |
| Slot 4 power consumed = | 700 | + | 25 × 100 | + | 2 × 100 | = | 3400 |
| Slot 5 power consumed = | 780 | + | 0 | + | 4 × 100 | = | 1180 |
| Slot 6 power consumed = | 1000 | + | 2 × 200 | + | 4 × 100 | = | 1800 |

Totals for each bank are calculated:

| | Slot 1 | | Slot 2 | | Slot 3 | | Total |
|-------------------------|--------|---|--------|---|--------|---|-------|
| Bank 1 power consumed = | 1175 | + | 1550 | + | 875 | = | 3600 |

| | Slot 4 | | Slot 5 | | Slot 6 | | Total |
|-------------------------|--------|---|--------|---|--------|---|-------|
| Bank 2 power consumed = | 3400 | + | 1180 | + | 1800 | = | 6380 |

Since each bank did not exceed the maximum power, the power budget is within the limits.

Model 3721 connection log

Use this table to record your 3721 connection information.

| Channel | | Color | Description |
|----------|---|-------|-------------|
| OUTPUT 1 | H | | |
| | L | | |
| CH1 | H | | |
| | L | | |

| | | | |
|------|---|--|--|
| CH2 | H | | |
| | L | | |
| CH3 | H | | |
| | L | | |
| CH4 | H | | |
| | L | | |
| CH5 | H | | |
| | L | | |
| CH6 | H | | |
| | L | | |
| CH7 | H | | |
| | L | | |
| CH8 | H | | |
| | L | | |
| CH9 | H | | |
| | L | | |
| CH10 | H | | |
| | L | | |
| CH11 | H | | |
| | L | | |
| CH12 | H | | |
| | L | | |
| CH13 | H | | |
| | L | | |
| CH14 | H | | |
| | L | | |
| CH15 | H | | |
| | L | | |
| CH16 | H | | |
| | L | | |
| CH17 | H | | |
| | L | | |
| CH18 | H | | |
| | | | |

| | | | |
|----------|---|--|--|
| | L | | |
| CH19 | H | | |
| | L | | |
| CH20 | H | | |
| | L | | |
| OUTPUT 2 | H | | |

| Channel | | Color | Description |
|---------|---|-------|-------------|
| | L | | |
| CH21 | H | | |
| | L | | |
| CH22 | H | | |
| | L | | |
| CH23 | H | | |
| | L | | |
| CH24 | H | | |
| | L | | |
| CH25 | H | | |
| | L | | |
| CH26 | H | | |
| | L | | |
| CH27 | H | | |
| | L | | |
| CH28 | H | | |
| | L | | |
| CH29 | H | | |
| | L | | |
| CH30 | H | | |
| | L | | |
| CH31 | H | | |
| | L | | |
| CH32 | H | | |
| | L | | |
| | | | |

| | | | |
|--------|---|--|--|
| CH33 | H | | |
| | L | | |
| CH34 | H | | |
| | L | | |
| CH35 | H | | |
| | L | | |
| CH36 | H | | |
| | L | | |
| CH37 | H | | |
| | L | | |
| CH38 | H | | |
| | L | | |
| CH39 | H | | |
| | L | | |
| CH40 | H | | |
| | L | | |
| AMPS41 | H | | |
| | L | | |
| AMPS42 | H | | |
| | L | | |

Safety precautions

The following safety precautions should be observed before using this product and any associated instrumentation. Although some instruments and accessories would normally be used with nonhazardous voltages, there are situations where hazardous conditions may be present.

This product is intended for use by personnel who recognize shock hazards and are familiar with the safety precautions required to avoid possible injury. Read and follow all installation, operation, and maintenance information carefully before using the product. Refer to the user documentation for complete product specifications.

If the product is used in a manner not specified, the protection provided by the product warranty may be impaired.

The types of product users are:

Responsible body is the individual or group responsible for the use and maintenance of equipment, for ensuring that the equipment is operated within its specifications and operating limits, and for ensuring that operators are adequately trained.

Operators use the product for its intended function. They must be trained in electrical safety procedures and proper use of the instrument. They must be protected from electric shock and contact with hazardous live circuits.

Maintenance personnel perform routine procedures on the product to keep it operating properly, for example, setting the line voltage or replacing consumable materials. Maintenance procedures are described in the user documentation. The procedures explicitly state if the operator may perform them. Otherwise, they should be performed only by service personnel.

Service personnel are trained to work on live circuits, perform safe installations, and repair products. Only properly trained service personnel may perform installation and service procedures. Keithley products are designed for use with electrical signals that are measurement, control, and data I/O connections, with low transient overvoltages, and must not be directly connected to mains voltage or to voltage sources with high transient overvoltages. Measurement Category II (as referenced in IEC 60664) connections require protection for high transient overvoltages often associated with local AC mains connections. Certain Keithley measuring instruments may be connected to mains. These instruments will be marked as category II or higher.

Unless explicitly allowed in the specifications, operating manual, and instrument labels, do not connect any instrument to mains.

Exercise extreme caution when a shock hazard is present. Lethal voltage may be present on cable connector jacks or test fixtures. The American National Standards Institute (ANSI) states that a shock hazard exists when voltage levels greater than 30 V RMS, 42.4 V peak, or 60 VDC are present. A good safety practice is to expect that hazardous voltage is present in any unknown circuit before measuring.


Operators of this product must be protected from electric shock at all times. The responsible body must ensure that operators are prevented access and/or insulated from every connection point. In some cases, connections must be exposed to potential human contact. Product operators in these circumstances must be trained to protect themselves from the risk of electric shock. If the circuit is capable of operating at or above 1000 V, no conductive part of the circuit may be exposed.


Do not connect switching cards directly to unlimited power circuits. They are intended to be used with impedance-limited sources. NEVER connect switching cards directly to AC mains. When connecting sources to switching cards, install protective devices to limit fault current and voltage to the card. Before operating an instrument, ensure that the line cord is connected to a properly-grounded power receptacle. Inspect the connecting cables, test leads, and jumpers for possible wear, cracks, or breaks before each use.


When installing equipment where access to the main power cord is restricted, such as rack mounting, a separate main input power disconnect device must be provided in close proximity to the equipment and within easy reach of the operator. For maximum safety, do not touch the product, test cables, or any other instruments while power is applied to the circuit under test. ALWAYS remove power from the entire test system and discharge any capacitors before connecting or disconnecting cables or jumpers, installing or removing switching cards, or making internal changes, such as installing or removing jumpers.

Do not touch any object that could provide a current path to the common side of the circuit under test or power line (earth) ground. Always make measurements with dry hands while standing on a dry, insulated surface capable of withstanding the voltage being measured. For safety, instruments and accessories must be used in accordance with the operating instructions. If the instruments or accessories are used in a manner not specified in the operating instructions, the protection provided by the equipment may be impaired.


Do not exceed the maximum signal levels of the instruments and accessories. Maximum signal levels are defined in the specifications and operating information and shown on the instrument panels, test fixture panels, and switching cards. When fuses are used in a product, replace with the same type and rating for continued protection against fire hazard. Chassis connections must only be used as shield connections for measuring circuits, NOT as protective earth (safety ground) connections. If you are using a test fixture, keep the lid closed while power is applied to the device under test. Safe operation requires the use of a lid interlock.


If a  screw is present, connect it to protective earth (safety ground) using the wire recommended in the user documentation.


The  symbol on an instrument means caution, risk of hazard. The user must refer to the operating instructions located in the user documentation in all cases where the symbol is marked on the instrument.

The  symbol on an instrument means warning, risk of electric shock. Use standard safety precautions to avoid personal contact with these voltages.

The  symbol on an instrument shows that the surface may be hot. Avoid personal contact to prevent burns.

The  symbol indicates a connection terminal to the equipment frame.

If this  symbol is on a product, it indicates that mercury is present in the display lamp. Please note that the lamp must be properly disposed of according to federal, state, and local laws.

- The WARNING heading in the user documentation explains hazards that might result in personal injury or death. Always read the associated information very carefully before performing the indicated procedure.
- The CAUTION heading in the user documentation explains hazards that could damage the instrument. Such damage may invalidate the warranty.
- The CAUTION heading with the  symbol in the user documentation explains hazards that could result in moderate or minor injury or damage the instrument. Always read the associated information very carefully before
- performing the indicated procedure. Damage to the instrument may invalidate the warranty.

Instrumentation and accessories shall not be connected to humans.


- Before performing any maintenance, disconnect the line cord and all test cables.
- To maintain protection from electric shock and fire, replacement components in mains circuits — including the power transformer, test leads, and input jacks — must be purchased from Keithley. Standard fuses with applicable national safety approvals may be used if the rating and type are the same. The detachable mains power cord provided with the instrument may only be replaced with a similarly rated power cord. Other components that are not
- safety-related may be purchased from other suppliers as long as they are equivalent to the original component (note that selected parts should be purchased only through Keithley to maintain accuracy and functionality of the product). If you are unsure about the applicability of a replacement component, call a Keithley office for information.
- Unless otherwise noted in product-specific literature, Keithley instruments are designed to operate indoors only, in the following environment: Altitude at or below 2,000 m (6,562 ft); temperature 0 °C to 50 °C (32 °F to 122 °F); and pollution degree 1 or 2.

To clean an instrument, use a cloth dampened with deionized water or mild, water-based cleaner. Clean the exterior of the instrument only. Do not apply cleaner directly to the instrument or allow liquids to enter or spill on the instrument. Products that consist of a circuit board with no case or chassis (e.g., a data acquisition board for installation into a computer) should never require cleaning if handled according to instructions. If the board



becomes contaminated and operation is affected, the board should be returned to the factory for proper cleaning/servicing.

Safety precaution revision as of June 2018.

Documents / Resources

| | |
|---|---|
|  | <p>KEITHLEY 3721 Dual 1x20 Multiplexer Card [pdf] Instruction Manual 3721 Dual 1 20 Multiplexer Card, 3721, Dual 1 20 Multiplexer Card, 1 20 Multiplexer Card, Multiplexer Card, Card</p> |
|---|---|

References

-  [Keithley Instruments & Products | Tektronix](#)
-  [Keithley Instruments & Products | Tektronix](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.