

kinan  
K-1508XX Short  
Depth Single Rail 4  
Port 15.6 FHD LCD  
KVM Switch



## Contents

- [1 kinan KVM-1508XX Short Depth Single Rail 4 Port 15.6 FHD LCD KVM Switch](#)
- [2 Overview](#)
- [3 Product Features](#)
- [4 Front view](#)
- [5 Hardware Installation](#)
- [6 Appendix](#)
- [7 FAQ](#)
- [8 Documents / Resources](#)
  - [8.1 References](#)
- [9 Related Posts](#)

# kinan

## kinan KVM-1508XX Short Depth Single Rail 4 Port 15.6 FHD LCD KVM Switch



## Overview

### Product Description

The XW1604 / XW1608 1U rack mount console is the ideal solution for ETC specialized rack, 5G rack, network specialized rack and standard server rack. Featuring an integrated 15.6" LCD display, full-99 key keyboard and touchpad, all in a 1U rack mount able housing, it supports the shortest mounting depth: 360mm. It also features a dual power supply redundancy, largely improve the work efficiency of the whole KVM and server system. It is easy and fast to install the KVM console; you just need to connect corresponding cables to the right ports of KVM and its module without software configuration. This console is designed with two anti-vibration fixing screws on the front panel to prevent the console during transportation and operating.


## Product Features

- 15.6" FHD TFT LCD monitor, high brightness, high resolution
- Constructed of heavy-duty steel in a 1U housing
- Short depth: 360mm
- Ultra slim 99 keys keyboard with small numeric keyboard
- High resolution and high flexibility with touchpad; with two function buttons and scroll wheel
- Dual power supply redundancy design

## Switch Functions

- A single USB console controls up to 4 or 8 computers
- Supports wireless keyboard and mouse from different suppliers
- Two level password security – support 1 administrator user and up to four users, and administrator user can give user the right to access and view the server.
- Users can set up different hot keys( Scroll Lock / Caps Lock / F12 / Ctrl ), auto scanning time, port display time, log out time, buzzer on/off and mouse on/off according to their different needs
- Broadcast mode – operations simultaneously performed on all selected computers
- Multiplatform support – Windows, Linux, Mac and Sun
- Supports multimedia USB keyboard(PC, Mac and Sun)
- USB or PS/2 keyboard emulation – computer boot even the console focus is else where
- Convenient computer switching via front panel pushbuttons, hotkeys, OSD menu
- Automatically shows the computer position on the front panel LED screen under daisy chaining connection without DIP set by hand
- Auto scan feature for monitoring user-selected computers
- Hot pluggable – add or remove computers without having to power down the switch
- Quickly select your computer by naming the server or inputting SN number of the server

## Front view

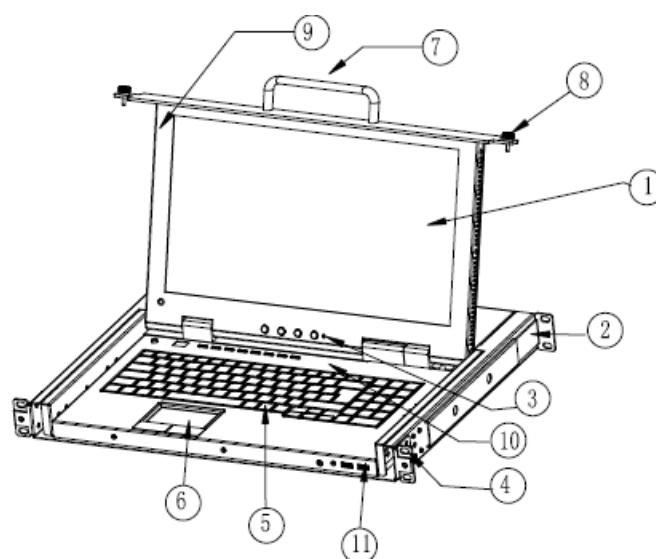


1. LCD Display
2. Rear Bracket
3. LED OSD Controls
4. Front Bracket
5. Keyboard
6. Touchpad
7. Handle
8. Fixing Screw
9. Display panel
10. Switch LED
11. USB port

## Structure and Size (15.6")


1.

Structure and Size (15.6")

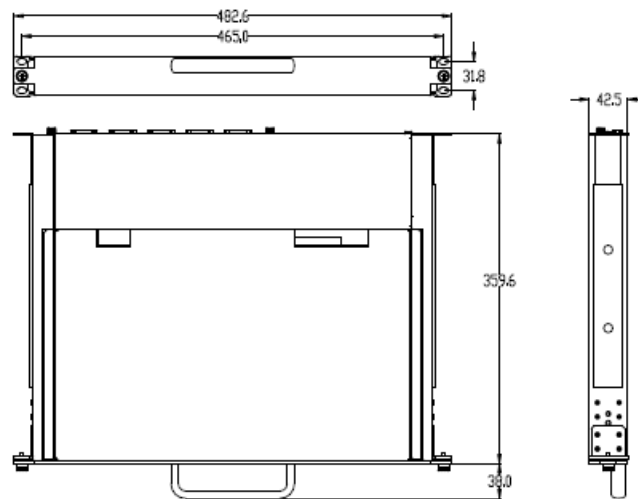

1-1.2

Back view

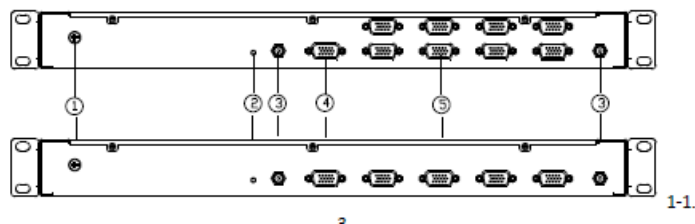

Ground connection screw


2. Power LED indicator
3. Power input(DC)
4. Console port
5. Server port

## Hardware Installation


### Rack Mounting

A standard rack mounting kit is provided to mount the LCD console in a depth of 266-470mm in a standard 19"rack. (For other depth, the rear bracket can be customized accordingly, check figure 2-1.1 and 2-1.2)

With one person hold the switch in place and the other person slides the L bracket into the switch's side mounting brackets from the front to the back, then screws the brackets to the rack. (See below installation drawing)

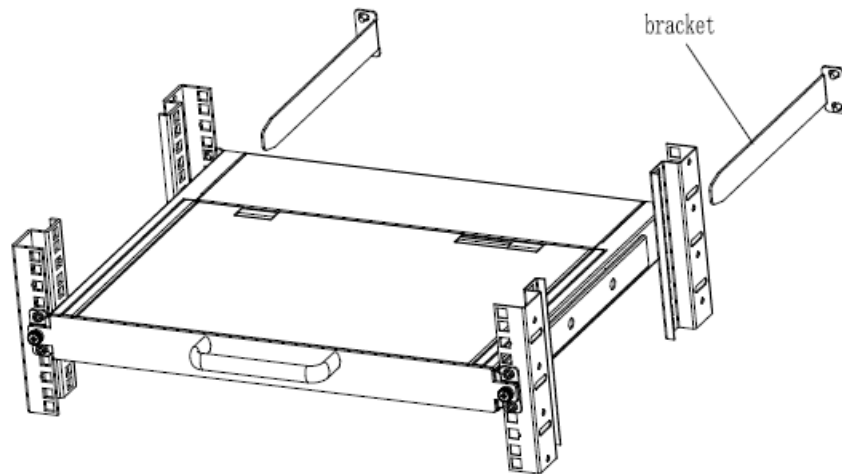


2-1.1 rack mounting (1)

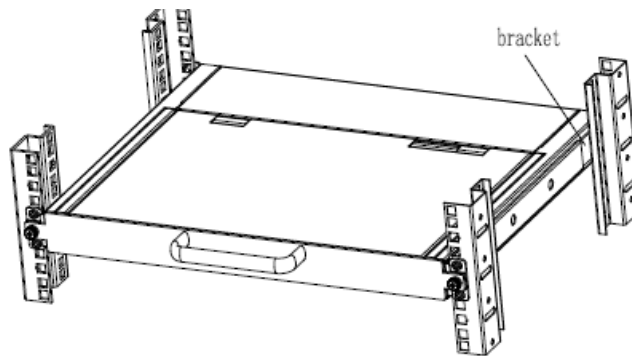


2-1.2 rack mounting (2)

For depth: 266-430mm, move back the rear brackets before installation.

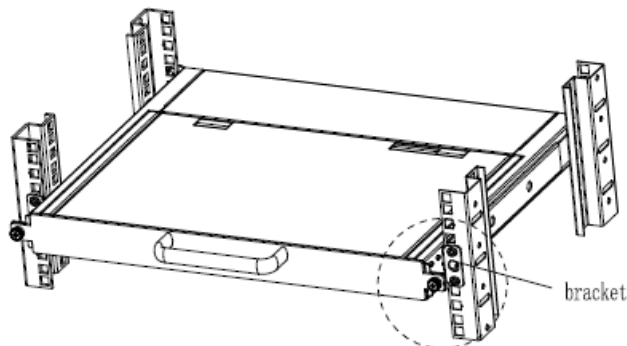

2-1.3 rack mounting (3)


For rack without rear vertical frame, need to install L stand.

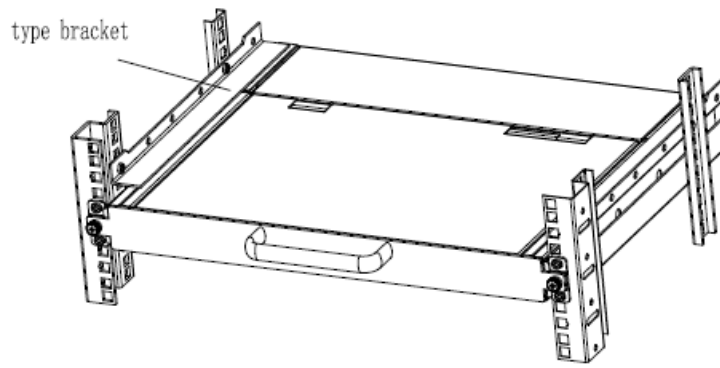

2-1.4 rack mounting (4)

## Installation instruction

1. Make sure the rack mounting KVM switch has been connected to the ground (① in the diagram )
2. Connect KVM switch with the computer according to ② in the diagram
3. Connect power cable to KVM port as shown in ③ in the diagram
4. If extra console required, connect the display port ④ in the diagram. The USB port for keyboard and mouse are in the front of the LCD console.

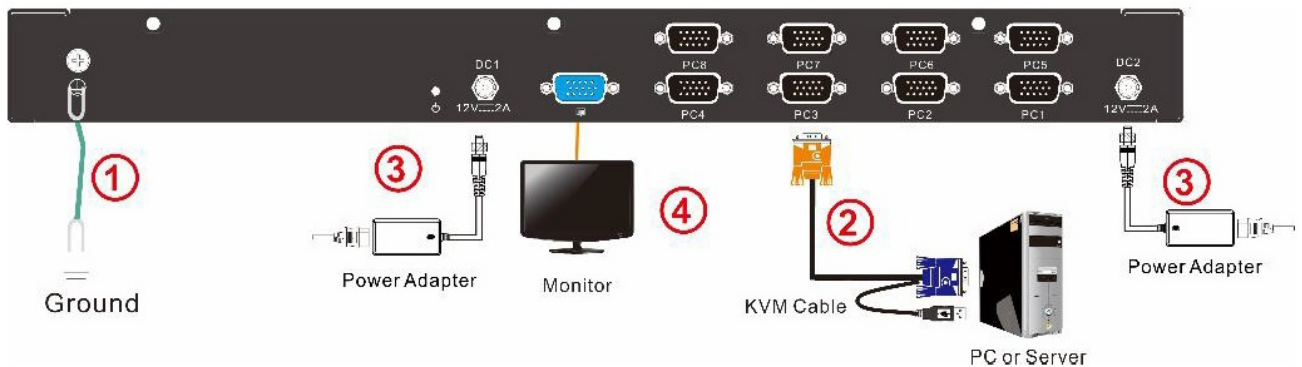




No.	Cable	Model	Connector
①	KVM Cable – PS/2		PC or Server port: Keyboard: 6 pin MIN-DIN male Mouse: 6 pin MIN-DIN male Display: 15 pin HDB male
		CH-1800P (1.8m) CH-3000P (3m) CH-5000P(5m)	KVM port: 15 pin HDB male
	KVM Cable – USB		PC or Server port: USB port: USB A TYPE(female) Display port: 15 pin HDB male
		CH-1802U (1.8m) CH-3001U (3m) CH-5001U (5m)	KVM port: 15 pin HDB male

Table 1.1 connecting cables

To ensure signal integrity and simplify cable layout, we strongly recommend you using high quality cables with different length as shown in above table.


## Opening the console

- Pull it out, and the rails will be locked automatically.
- Release the front panel screw

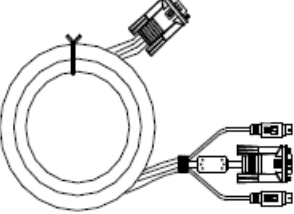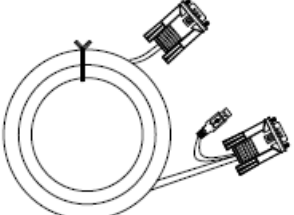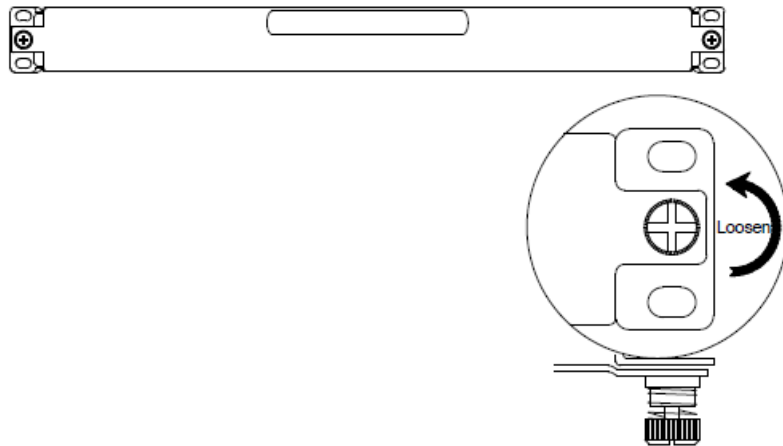

### 2-2.1 unlocking

- Rotate the LCD module all the way back to expose the LCD screen, the LCD module can be rotated up to 125°. (Recommend to 120°.)

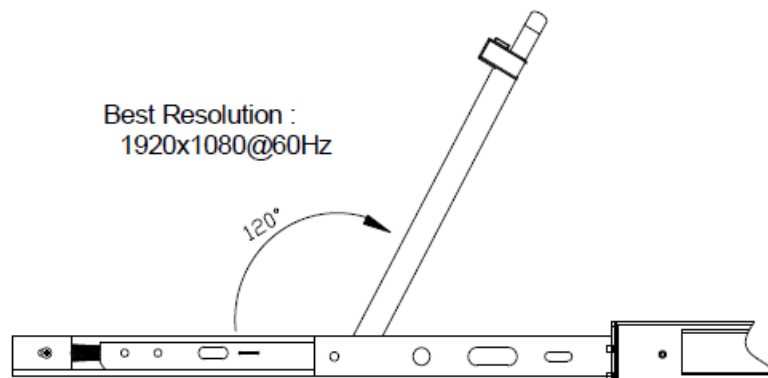

- The KVM makes two “beep” sounds and the LED flashes four times after power on. The LED shows 01 and a screen similar to the below pops up for you to enter the user name and password.




- LCD panel is powered on when the power LED is green.
- Power on computer or server after power on KVM and you will see green light at each port.
- The factory default password is blank, it will be OK after double click “Enter”.
- NOTE: The username and password are no more than 16 characters, Press and hold the Shift key to type lowercase letters.
- Please contact the manufacturer for support if the KVM is locked.

## Closing the console

- Close the LCD display panel and the power automatically shut down.


- Push the release catch in the direction of the arrow, push the LCD panel all the way in until it automatically lock up.

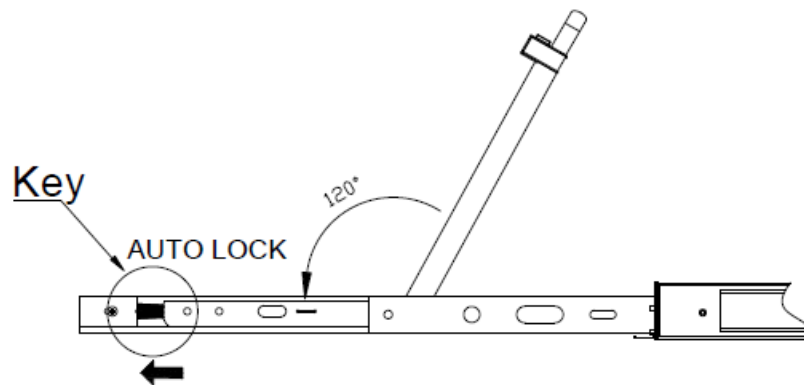

## LED Instructions




3-1.1 front view

No.	Components	Function
1	1-8	1) Switching freely from port 1 to port 8 2) Press <b>【1】</b> and <b>【2】</b> at the same time resets the KVM.
2	Port Selection Buttons& LEDs	Indicator LEDs are built into the switches, the online LED light is on the left and the selected LED light is on the right. 1) An online LED light(green) indicates that the KVM has connected to its corresponding computer and power on. 2) A selected LED light(orange) indicates that the computer attached to its corresponding port is up and running.
3	Station ID	Display the current port
4	 Power Button	Power automatically off, when display closed

## LCD OSD Configuration



The LCD OSD allows you to set up and configure the LCD display.

Buttons	Functions
MENU SELECT	Press this button invokes the menu function and brings up the main menu.
EXIT/AUTO	Press this button exits the current menu and
	return to the previous menu or press this button exits the LCD OSD. Press AUTO for automatic configuration.
SL-/SL+	Press this button moves your menu to make corresponding adjustment.
 LED state	Green :running Red :power off or access nonstandard VESA signal Green Flash: energy saving mode or no signal


**Table 1.3 LED OSD configuration instruction**

Press AUTO if the screen migrates after power on or under other circumstances, then the screen auto configure to its best display state.(It might can't be adjusted to its best state if part of the display mode is not standard VESA mode, if so return back to OSD menu to RESET, then it will back to normal.

We suggest our customers to set up the display mode at 1920×1080, refresh rate at 60Hz.

### OSD Operation

Double click the right buttons of the mouse or double click hotkey Scroll Lock to invoke below OSD main menu. You can customize the OSD hotkeys, find more details in OSD function instructions.

Headings	Explanation
SN	Port number
	It shows the computer port is under monitoring.

ADMINISTRATOR					8 Ports
F1:ADM F2: Scan F3: Set F4: Tool					
SN	\$	QV	LK	Name	↑
⇒ 01-01				SYSTEM	
01-02				SYSTEM	
01-03				SYSTEM	
01-04				SYSTEM	
01-05				SYSTEM	
01-06				SYSTEM	
01-07				SYSTEM	
01-08				SYSTEM	↓
GoTo SN -----					BANKSUM: 01
F6: Edit F7: QV F8: Lout					
Page UP/DN: Select Banks					




\$	The computers are power on and are online
QV	"#" : quick view the port "BC" : Broadcast port
LK	" @ " shows that the port is only available for viewing
Name	Port name, the maximum is 12 bytes

**To access the OSD menu through keyboard:**

1. In the submenus that appear, moving the highlight bar to your selected port and then press Enter.
2. Press any key from 1-8 to enter any port of current station

**To access the OSD menu through keyboard:**

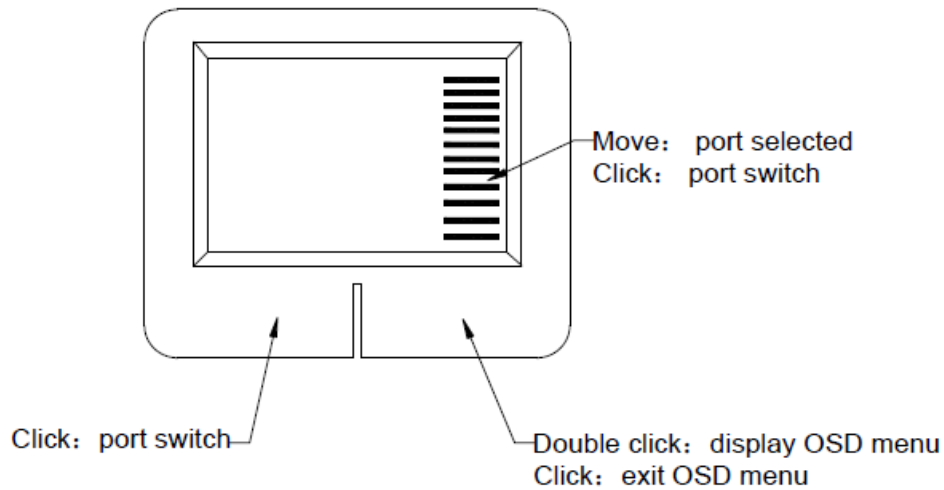

\*Note: Operate via keyboard after invoke the OSD menu via the touchpad.

**OSD Functions**

Menus	Keys	Submenu/explanation
-------	------	---------------------


ADM	F1	Set User login: account and password Set accessible: Set access permissions BRC Mode: monitor multiple computers at the same time Load Default: reset the menu to the original factory default settings
Scan	F2	All : Lists all the ports on the installation Power On: lists only powered on ports that have attached computers. Quick View: Lists only the ports that have been selected as Quick View ports
Set	F3	Auto Scan: set scanning time period Port ID: set how long a port displays on the monitor OSD Hotkey: set OSD hotkeys Lout Time off: to set the time out value
Tool	F4	Reset KM: press Enter resets keyboard and touchpad Beeper 【On】 : press Enter switch Bee sounds Mouse Hot 【On】 : press Enter to shut down touchpad operating on OSD. Restore Values: press Enter restore the current user default value. About KVM: press Enter shows the KVM version
Edit	F6	Edits port names
QV	F7	Start or close Quick View
Lout	F8	Log out/blank the console screen
Exit	Esc	Press this key exits OSD menu
	Scroll Lock	Press this key exits OSD menu
	Num Lock	Press this key exits OSD menu

## F1: ADM

### Menu overview


### Operating instructions

1. Press F1 or ← → enters the F1 submenus.
2. Press ↑ ↓ moves the highlight bar to select the submenu.

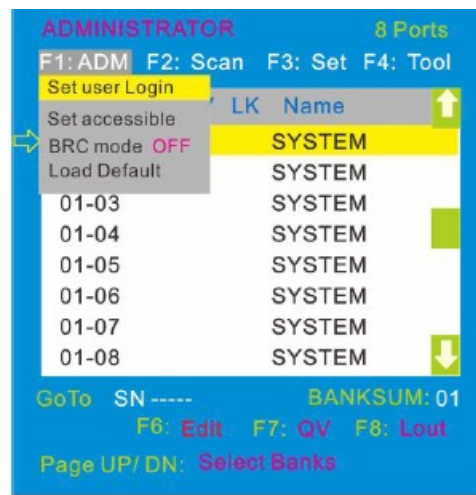


## Menu explanation

1. Set User Login—Press [Enter] and select Set User Login, a screen as below diagram 4-1.1 appears:  
One administrator and four users account can be set (The username and password are no more than 16 characters, Press and hold the Shift key to type lowercase letters. )

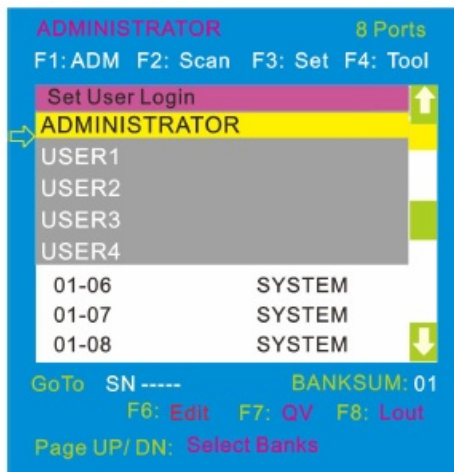

4-1.1

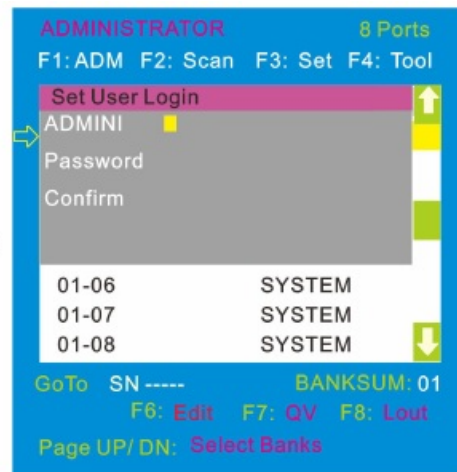

4-1.2

Note: You can set up an account and password according to diagram 4-1.2, then a “User setup ok” pops up showing you have done your set, and “Password Not Match” pops up, you need to type in your password again as you did in your first type.

2. Set accessible—press [Enter] and select Set Access Permission, then below menu appears: (diagram 4-1.3):

ADMINISTRATOR		8 Ports			
F1:ADM F2: Scan F3: Set F4: Tool					
SN	User1	User2	User3	User4	
01-01	[ F ]	[ F ]	[ F ]	[ F ]	
01-02	[ F ]	[ F ]	[ F ]	[ F ]	
01-03	[ F ]	[ F ]	[ F ]	[ F ]	
01-04	[ F ]	[ F ]	[ F ]	[ F ]	
01-05	[ F ]	[ F ]	[ F ]	[ F ]	
01-06	[ F ]	[ F ]	[ F ]	[ F ]	
01-07	[ F ]	[ F ]	[ F ]	[ F ]	
01-08	[ F ]	[ F ]	[ F ]	[ F ]	
F: FULL V: VIEW Space: NULL					

4-1.3

Menu	Explanation
FULL	Full access function to the station and can do any operation to the ports
VIEW	View only function, you can only view the port but you can't operate it if set this function.
NULL	If you set this function, the port will be not displayed on the user's OSD menu

Note The administrator always has full access to all the ports.

ADMINISTRATOR		8 Ports			
F1:ADM F2: Scan F3: Set F4: Tool					
SN	User1	User2	User3	User4	
01-01	[ V ]	[ F ]	[ F ]	[ F ]	
01-02	[ ]	[ F ]	[ F ]	[ F ]	
01-03	[ ]	[ F ]	[ F ]	[ F ]	
01-04	[ F ]	[ F ]	[ F ]	[ F ]	
01-05	[ V ]	[ F ]	[ F ]	[ F ]	
01-06	[ F ]	[ F ]	[ F ]	[ F ]	
01-07	[ V ]	[ F ]	[ F ]	[ F ]	
01-08	[ ]	[ F ]	[ F ]	[ F ]	
F: FULL V: VIEW Space: NULL					

4-1.4

USER1		8 Ports			
F2: Scan F3: Set F4: Tool					
SN	\$	QV	LK	Name	
01-01		@		SYSTEM	
01-04				SYSTEM	
01-05		@		SYSTEM	
01-06				SYSTEM	
01-07		@		SYSTEM	
GoTo SN ----- BANKSUM: 01					
F6: Edit F7: QV F8: Lout					
Page UP/ DN: Select Banks					

4-1.5


Eg.

1. If you want to set access permission of [User1], press Space to choose the permission options you need to set.
2. [User1] log in OSD menu, as shown in diagram 4-1.5.
3. BRC Mode – Press Enter to enter the BRC mode. Enter the main menu, press F7 to add or remove a port that need broadcast function. When BRC mode is effect, a speaker symbol appears in QV column. (See below diagrams).

While BRC mode is in effect, we can operate multiple computer ports simultaneously, but the mouse is not function normally.



4-1.6

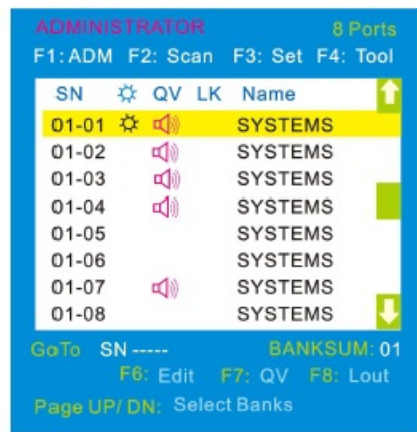

4-1.7

#### 1. Open BRC mode

F1 ->BRC Mode OFF->press Enter -> BRC Mode ON (see diagram 4-1.6)

#### 2. Open the port that need broadcast function


Press ↑ ↓ key—>select the port that need broadcast function press F7 a speaker symbol appears in the QV column which shows the port has entered broadcast mode.

#### 3. Close the broadcasting port

Press ↑ ↓ key—>select the port press F7 exit BRC mode and the speaker symbol disappears

#### 4. Exit BRC mode

Invoke OSD main menu F1 ->BRC Mode ON ->press Enter -> BRC Mode OFF, the KVM exits BRC mode(diagram 4-1.8)

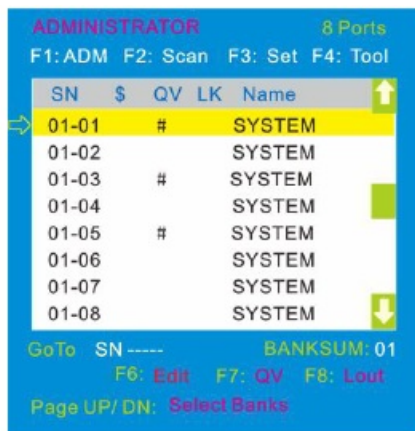


4-1.8

Press F1->BRC Mode OFF ->press [Enter] enter the main menu, all symbols turn into speaker symbol (diagram 4-1.8 )

#### 5. Load Default— press Enter and select Load Default, all the set values are restore to original factory default settings.

### Menu overview

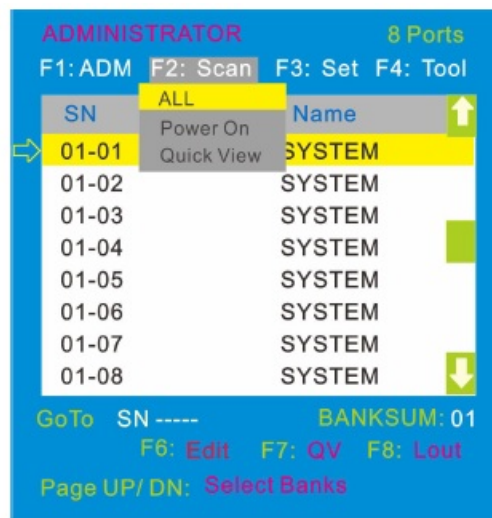


## Operating instructions

1. Press F2 or ← → enters the F2 submenus.
2. Press ↑ ↓ moves the highlight bar to select the submenu.
3. Press Enter selects and exits Scanmenu.
4. Press Esc cancels the operation and exits Scan menu.

## Menu explanation

Submenu	Explanation
All	Use this function to scan all ports according to the set scanning interval.
Power On	Use this function to scan all ports with "\$" according to the set scanning interval.
Quick View	Use this function to scan all ports with "#" quick view symbols according to the set scanning interval.

## Menu overview

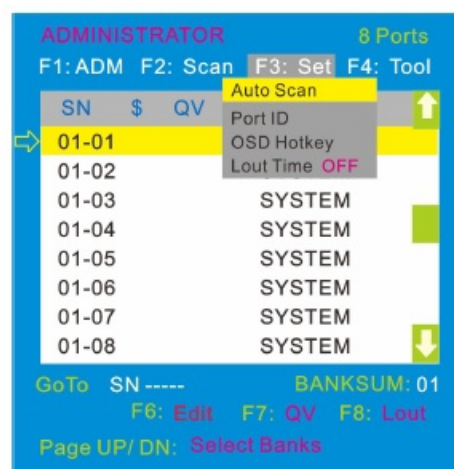


## Operating instructions

1. Press F3 or ← → enters the F3 submenus.
2. Press ↑ ↓ moves the highlight bar to select the submenu.



3. Press Enter selects and exits Set menu.
4. Press Esc cancels the operation and exits Set menu.


### Menu explanation

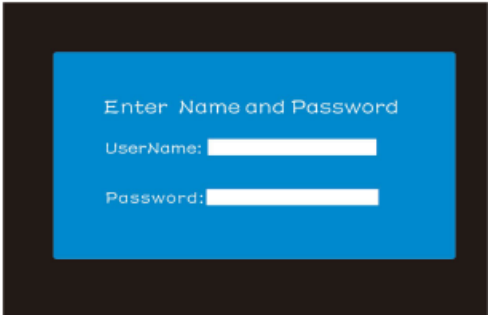Submenu	Default value
Auto Scan	5S ( effective range 5-99 )
Port ID	0S: not display the port ID 1-98S: display the seconds, maximum 98s 99S: permanent display
OSD Hotkey	<b>【 Scroll Lock 】 + 【 Scroll Lock 】</b> <b>【 CapsLock 】 + 【 CapsLock 】</b> <b>【 F12 】 + 【 F12 】</b> <b>【 Ctrl 】 + 【 Ctrl 】 + 【 KVM Hotkey 】</b>
Lout Time off	0: close the screen saver setting 01-99M: set the screen saver timeout Note:It is automatically log out if the current operator is no longer operate for a while, then the KVM will be locked and you need to enter user name and password to operate again: 

### OSD Hotkey Operation

#### Operating instruction

1. Press F3 and move the highlight bar with ↓ to select “OSD Hotkey” submenu .  
Press Enter and below screen appears:
2. KVM default hotkey: Scroll Lock

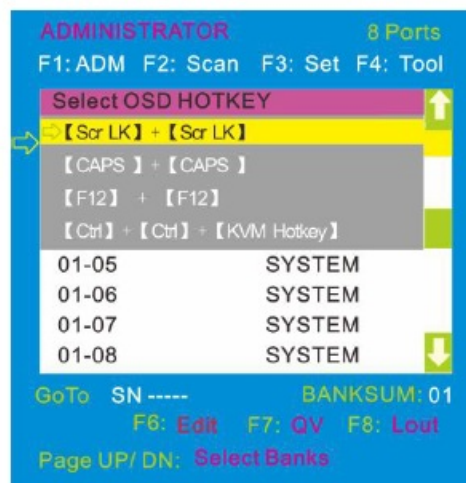


3. Select the“ Ctrl Ctrl + KVM Hotkey ” and press Enter , and then the Ctrl hotkey is available in this hotkey mode, the mouse hotkey can’t enter the OSD menu Invoke hotkey: double click L\_Ctrl + the corresponding function key

Function	Operating	Function description
Switching port	+ 1~8	Skip ports from 1~8, Eg.: Double click 【L_Ctrl】 plus 2 to skip to the second port of the current station.
	+ ↑/↓	Skip to previous/next port
Auto scanning	+ S	1. Auto Scan automatically scan ports that attached PC or server. Users can set the scan duration in OSD menu and press any key to exit scanning mode. 2. Move the mouse to extend scan interval.
Invoke OSD main menu	+ “space key”	This allows you to invoke OSD main menu (see OSD menu operation)


## F4: Tool

### Menu overview

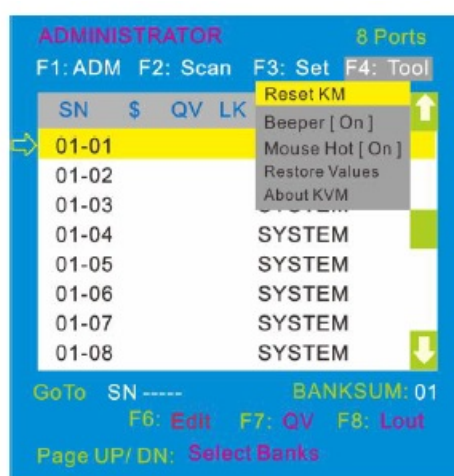

### Operating instructions

1. Press F4 or ← → enters the F4 submenus.
2. Press ↑ ↓ moves the highlight bar to select the submenu.
3. Press Enter selects and exits Tool menu.
4. Press Esc cancels the operation and exits Tool menu.

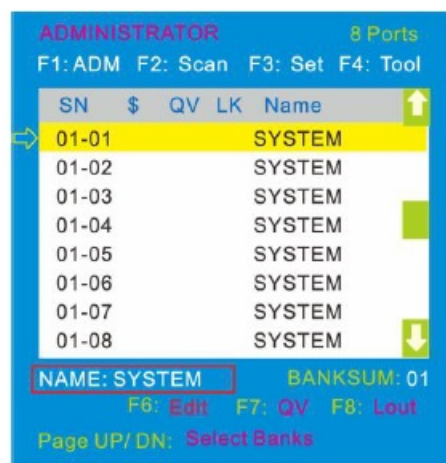

### Menu explanation



Submenu	Instruction
Reset KM	Initialize the keyboard and mouse that connected to KVM when they are break down.
Beeper On	The beeper can be turned on or off with this function.
Mouse Hot On	To open and close the mouse with this function. We can't operate the OSD when it is Off .
Restore Values	Restore to original factory default values.
About KVM	It shows the KVM version information.

## F6: Edit port names


- Select the port with ↑ ↓ key;
- Press F6 and key in the new name or modify the old one, then press Enter to save the name and exit editing.
- Press Esc to cancel and exit the editing.

### Note:

The NAME characters include:

All alpha characters A-Z

Press and hold the Shift key to type lowercase letters All numeric characters 0-9 Default value: SYSTEM

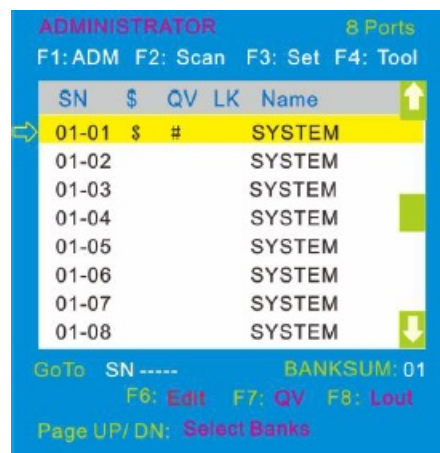

## F7: Set quick view port(QV)

- Select ports with ↑ ↓ keys
- Press F7 to include current port as Quick View, then an arrowhead appears in the QV column to indicate so.

### Note

Press F7 to cancel the QV symbol is the current port has already have a QV arrowhead symbol in its QV column; if you want to cancel all the QV function, press Restore Values under F4: Tool. (The port name restores to default setting at the same time.)

## F8:LOUT

Press F8 exits the OSD main menu and fully exits current port, then the log in window appears:



Users must log in all over again to regain access to the OSD.

### Setting OSD default values

Settings	Default values
OSD hotkey	Scroll Lock Scroll Lock
Original user name	Enter
Original password	Enter
Port display duration	0 seconds
Port display mode	Port No.+port name
Port name	SYSTEM
Scan duration	5 seconds
Scan mode	All
Auto log out	Esc

### Operating system

#### Support operating system

Operating system		Version
Windows		2000 or higher
Linux	RedHat	6.0 or higher
	SuSE	8.2 or higher
	Mandriva(Mandrake)	9.0 or higher
UNIX	AIX	4.3 or higher
	FreeBSD	3.51 or higher
	Sun	Solais8 or higher
Nove11	Netware	5.0 or higher
Mac		8.6 or higher
DOS		6.2 or higher

### Appendix

#### Specifications

Model		XW1604	XW1608
Computer connections	Direct	4	8
	Max	4	8
Port emulation	Keyboard, mouse	USB	
LCD monitor	LCD model	FHD TFT	
	View area	15.6 “	
	Optimum resolution	1920×1080@60Hz	
	Display color	16.2M	
	Brightness	250cd/m² T y p	
	Contrast ratio	800 : 1 T y p	
	Pixel pitch(mm)	0.17925(H) × 0.17925(V)	
Mouse	X/Y resolution	>1000 points /inch,( 40 points/mm )	
	Scroll wheel	Supports scroll wheel function	
Keyboard		99 keys (82 keys main keyboard +17 independent small numeric keyboard)	
Port selection		Pushbuttons, hotkeys, OSD menu	
Input power		DC12V /2A	
Mounting distance		266-470mm ( L=235mm) Mounting bracket can be customized for other mounting distance	
Power consumption		9W	10W
Operating temperature		0—50 °C	
Store temperature		-20—60 °C	
Humidity		0—80% RH, non-condensing	
Net weight		8.8kg	9kg

Product dimension (W × D × H)	448mm×360 mm×42.5mm
Package dimension (W × D × H)	600mm×538mm×160mm

## FAQ

The KVM console do not work when I connect and use the console for the first time

**Solutions** Please re-connect the KVM console according to below steps: Disconnect all the signal and power cables connected to KVM. Then power on KVM and you hear the boot indicating sound from the beeper, a screen automatically pop up for you to enter the user name and password. Type in the correct user name and password, the original password is clicking Enter twice, then the OSD main menu pop up on the screen. Check the KVM console and make sure it can normally switch ports. Connect one server (PC) to one of the KVM ports with signal cable and check port switching function, check the keyboard and mouse, if they are not working, try to re-start the server (PC). After successfully finishing all above steps, gradually add server (PC) to this console until meet your need.

There is no pop up window to type in user name and password or the pop up window is not normally displayed

**Solutions** Check the AC/DC output. Make sure you have heard the indicating sound and the keyboard LED is on after starting up the computer. Check the LED power and make sure the LED signal cable has connected to the KVM console.

I can't log in the KVM system after starting computer

**Solutions** Make sure the KVM keyboard is working, the user name and password is correct. The default value is blank, you can log in after press Enter. If you still can't log in the system, try to connect an external USB or PS/2 keyboard. The original default value is blank, you can log in after double clicking Enter

I can't switch from one port to another after logging in the KVM system

**Solutions** Invoke the OSD main menu and check the user name on the top left, make sure the user has got the access permission from the administrator. Please contact the distributor or the KVM manufacturer

Bad display quality of PC screen

**Solutions** Check the signal cables, make sure they are connected. Reset the monitor's display settings.


When I switch to one port, the keyboard and mouse do not work

**Solutions** Make sure you have exited the OSD menu. Invoke the OSD main menu and check the user name on the top left, make sure the user has got the access permission from the administrator. Pull out the USB port of the server PC then plug in. If you connected the PC with PS2 port, try to re-start the server PC

I can't invoke the OSD main menu

Solutions: Check the keyboard to make sure it is working. Double click Scroll\_Lock Double click F12  
Double click Caps Lock Double click Ctrl +Space

Documents / Resources

	<p><a href="#">kinan KVM-1508XX Short Depth Single Rail 4 Port 15.6 FHD LCD KVM Switch [pdf]</a> User M anual</p> <p>KVM-1508XX, KVM-1516XX, KVM-1708XX, KVM-1716XX, KVM-1508XX Short Depth Single Rail 4 Port 15.6 FHD LCD KVM Switch, KVM-1508XX, Short Depth Single Rail 4 Port 15.6 FHD LCD KVM Switch, Single Rail 4 Port 15.6 FHD LCD KVM Switch, 4 Port 15.6 FHD LCD KVM Switch, 15.6 FHD LCD KVM Switch, LCD KVM Switch, KVM Switch</p>
---	---

References

- [User Manual](#)

class="rp4wp-related-posts">

Related Posts



- [StarTech P4DD46A2-KVM-SWITCH KVM Dual Monitor KVM Switch Instructions](#)

P4DD46A2-KVM-SWITCH KVM Dual Monitor KVM Switch Instructions  
Product IDs P2DD46A2-KVM-SWITCH P4DD46A2-KVM-SWITCH  
Product Information For the latest software, manuals,...



- [ATEN CL5708 8 16 Port PS 2-USB VGA Single Rail LCD KVM Switch User Guide](#)

CL5708 / CL5716 8/16-Port PS/2-USB VGA Single Rail LCD KVM  
Switch Quick Start Guide Hardware Overview Applicable Models...

i>

- [ATEN CS52DP 2 Port USB C Display Port Hybrid Cable KVM Switch User Guide](#)

ATEN CS52DP 2 Port USB C Display Port Hybrid Cable KVM Switch  
Package Contents 1 CS52DP 2-Port USB-C...





- class="rp4wp-related-post-image">

## [EZCOO EZ-SW21H14-KVMU2 HDMI KVM Switch 2 Port 4K 30Hz KVM Switch User Manual](#)

EZCOO EZ-SW21H14-KVMU2 HDMI KVM Switch 2 Port 4K 30Hz KVM Switch OVERVIEW 2-Port HDMI1.4 KVM Switch The 2-...

[Manuals+](#), [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.