

**LANCOM 1800VA-5G High Availability Networking**



# LANCOM 1800VA-5G High Availability Networking Installation Guide

[Home](#) » [LANCOM](#) » LANCOM 1800VA-5G High Availability Networking Installation Guide 

## Contents

- 1 LANCOM 1800VA-5G High Availability Networking
- 2 Product Information
- 3 Product Usage Instructions
- 4 Interface Overview
- 5 Initial Start-Up
- 6 General safety instructions
- 7 Safety instructions and intended use
- 8 Regulatory Notice
- 9 Declarations of Conformity
- 10 Technical Data
- 11 Service & Support
- 12 Documents / Resources
  - 12.1 References

**LANCOM**  
SYSTEMS

**LANCOM 1800VA-5G High Availability Networking**



## Product Information

### Specifications:

- **Hardware:** Robust plastic housing with dimensions 293 x 44 x 190 mm (W x H x D)
- **Power Supply:** 12 V DC external power adapter
- **Package Contents:** 1 DSL cable (4.25m), 1 Ethernet cable (3m), 4 5G/4G antennas, External power adapter

## Product Usage Instructions

### Initial Start-Up:

Setting up the required connections for device configuration:

1. Connect the power supply to a power socket using the enclosed or another suitable IEC cable or the enclosed external power supply unit.
2. If available and required, connect the G.FAST/VDL/ADSL interfaces to a TAE socket of your provider using suitable cables (only for devices with integrated DSL modems).
3. Use suitable cables or modules to connect other required device interfaces to other components and, in the case of devices with mobile radio and/or Wi-Fi interfaces, connect any antennas supplied.

### Configuration Methods:

Depending on the device equipment, choose one of the following configuration methods:

- **Configuration via the local network (recommended):** Connect one of the ETH or LAN interfaces of the device via an Ethernet cable either to a network switch or directly to the network device intended for configuration (e.g. notebook). The CONFIG or COM interface is not suitable for configuration via the network!
- **Configuration via the serial interface of a connected computer (if available):** You need a serial configuration cable whose network connector is connected to the CONFIG or COM interface of the device. This socket is exclusively intended for connection to a serial interface!

## FAQ

- **Where can I find detailed documentation and firmware for my device?**

Detailed documentation for your device can be found in the download portal of the LANCOM website:

[www.lancom-systems.com/downloads](http://www.lancom-systems.com/downloads).

- **How can I access service and support for my LANCOM device?**

If you have any further questions, please submit your request via our Service & Support portal: [www.lancom-systems.com/service-support](http://www.lancom-systems.com/service-support).

- **Where can I find information on the lifecycle of my LANCOM device?**


Information on the lifecycle, including End of Sale/End of Life and security updates, can be found at:

[www.lancom-systems.com/lifecycle](http://www.lancom-systems.com/lifecycle).

## Interface Overview

### Interface overview of the LANCOM 1800VA-5G

#### Rear panel

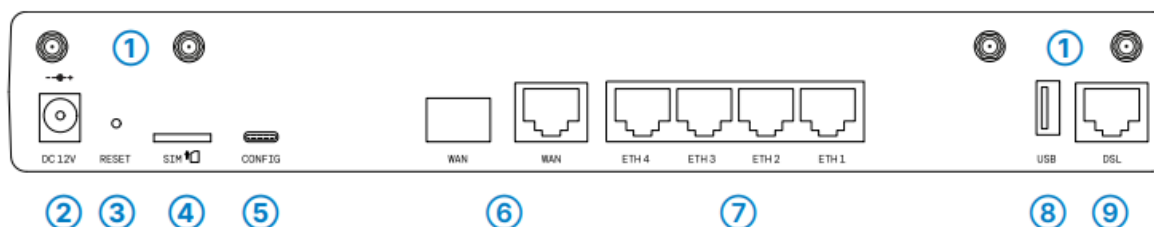

1. 5G antenna connectors
2. Power supply connection socket
3. Reset button
4. Micro SIM card slot
5. Serial USB-C configuration interface
6. WAN interfaces (SFP/TP combo port)
7. Ethernet interfaces
8. USB interface
9. VDSL/ADSL interface

## Initial Start-Up

### Setting up the required connections for device configuration

- Connect the power supply to a power socket using the enclosed or another suitable IEC cable or the enclosed external power supply unit. Observe the safety instructions on the right.
- Only for devices with integrated DSL modem: If available and required, connect the G.FAST / VDSL / ADSL interfaces to a TAE socket of your provider using suitable cables.
- Use suitable cables or modules to connect other required device interfaces to other components and, in the case of devices with mobile radio and/or Wi-Fi interfaces, connect any antennas supplied.
- Depending on the device equipment, choose one of the following configuration methods a), b), or c)
  - **Configuration via the local network (recommended)**

Connect one of the ETH or LAN interfaces of the device via an Ethernet cable either to a network switch or directly to the network device intended for configuration (e.g. notebook).

The CONFIG or COM interface is not suitable for configuration via the network!

- **Configuration via the serial interface of a connected computer (if available)**

You need a serial configuration cable whose network connector is connected to the CONFIG or COM interface of the device. This socket is exclusively intended for connection to a serial interface!

- **Configuration via the USB interface of a connected computer**

You need a commercially available USB-C connection cable, which is connected to the CONFIG interface of the device.

## **Options for initial start-up of the unconfigured device**

### **Option 1: via a web browser (WEBconfig, not for serially connected devices)**

Configuration via a web browser is an easy and fast variant since no additional software is required on the computer used for configuration.

#### **Note:**

If a certificate warning appears in your browser when trying to connect to your device, there is a button or link on the displayed browser page to connect to the device anyway (depending on the browser, usually under Advanced). In the following, select the description a) or b) that applies to your setup for configuring the device.

### **Configuration in a network without an active DHCP server**

- For configuration via TCP/IP, the IP address of the device in the local network (LAN) is required. After power-on, an unconfigured LANCOM device first checks whether a DHCP server is active in the LAN.
- The device can be accessed from any computer with the Auto DHCP function enabled using a web browser under the IP address 172.23.56.254.
- The given IP address can be modified at any time.

### **Configuration in a network with an active DHCP server**

- In this procedure, the DNS server used in your network must be able to resolve the hostname reported by the device via DHCP. When using a LANCOM device as a DHCP and DNS server, this is the default case.
- At <https://lancom-XXYYZZ> you can access your device.
- Replace XXYYZZ with the last six digits of the MAC address of your device, which you can find on the enclosed document LANCOM Management Cloud or the nameplate of the device. If necessary, append the domain name of your local network (e. g.intern).
- When the computer is connected to an unconfigured LANCOM device, WEBconfig automatically starts the setup wizard Basic settings.
- After the setup wizard has been run through, the initial commissioning of the device is complete.
- If necessary, make further configurations using the setup wizards available for selection.

### **Option 2: via the Windows software LANconfig ( [www.lancom-systems.com/downloads](http://www.lancom-systems.com/downloads) )**

- Please wait until the booting process of the device is completed before starting LANconfig.
- Unconfigured LANCOM devices are automatically found by LANconfig in the local network (LAN) and the setup

wizard Basic settings is then started.

- After the setup wizard has finished, the initial start-up of the device is complete.
- If necessary, make further configurations using the setup wizards available for selection.

### **Option 3: via the LANCOM Management Cloud (LMC)**

The LMC is not required for the operation of LANCOM devices, but it facilitates their commissioning and permanent management through centralized, automated management. Special requirements are necessary to configure the device via the LMC. Information on this topic can be found at [www.lancom-systems.com/lmc-access](http://www.lancom-systems.com/lmc-access).

## **General safety instructions**

- Under no circumstances should the device housing be opened and the device repaired without authorization. Any device with a case that has been opened is excluded from the warranty.
- If antennas are available, they may only be installed or replaced when the device is switched off. Mounting or demounting antennas while the device is powered on may cause the destruction of the radio module.
- Mounting, installation, and commissioning of the device may only be carried out by qualified personnel.

## **Safety instructions and intended use**

In order to avoid harming yourself, third parties or your equipment when installing your LANCOM device, please observe the following safety instructions. Operate the device only as described in the corresponding documentation. Pay particular attention to all warnings and safety instructions. Use only those third-party devices and components that are recommended or approved by LANCOM Systems.

Before commissioning the device, be sure to study the corresponding Hardware Quick Reference which can be downloaded from the LANCOM website [www.lancom-systems.com/downloads](http://www.lancom-systems.com/downloads). Any warranty and liability claims against LANCOM Systems are excluded in the event of any use other than the intended use described below!

### **Environment**

LANCOM devices should only be operated when the following environmental requirements are met:

- Ensure that you comply with the temperature and humidity ranges specified in the Quick Reference Guide for the LANCOM device.
- Do not expose the device to direct sunlight.
- Ensure that there is adequate air circulation and do not obstruct the ventilation slots.
- Do not cover devices or stack them on top of one another
- The device must be mounted so that it is freely accessible (for example, it should be accessible without the use of technical aids such as elevating platforms); a permanent installation (e. g. under plaster) is not permitted.
- Only outdoor equipment intended for this purpose is to be operated outdoors.

### **Power supply**

Before start-up, the following points must be observed, as improper use can lead to personal injury and damage to property, as well as voiding the warranty:

- The main plug of the device must be freely accessible.
- Operate the device only with a professionally installed power supply at a nearby and at all times freely

accessible socket.

- Only use the enclosed power supply/IEC cable or the one listed in the hardware quick reference.
- A high touch current is possible for devices with metal housing and grounding screw! Before connecting the power supply, connect the grounding screw to a suitable ground potential.
- Some devices support power supply via an Ethernet cable (Power over Ethernet – PoE). Please refer to the corresponding notes in the hardware quick reference of the device.
- Never operate damaged components.
- Only switch on the device when the housing is closed.
- The device must not be installed during thunderstorms and should be disconnected from the power supply during thunderstorms.
- In case of emergency (e. g. damage, ingress of liquids or objects, for example through the ventilation slots), disconnect the power supply immediately.

## **Applications**

- The devices may only be used under the relevant national regulations and consideration of the legal situation applicable there.
- The devices must not be used for the actuation, control, and data transmission of machinery that, in case of malfunction or failure, may present a danger to life and limb, nor for the operation of critical infrastructures.
- The devices with their respective software are not designed, intended or certified for use in the operation of weapons, weapons systems, nuclear facilities, mass transportation, autonomous vehicles, aircraft, life support computers or equipment (including resuscitators and surgical implants), pollution control, hazardous materials management, or other hazardous applications where failure of the device or software could lead to a situation in which personal injury or death could result. The customer is aware that the use of the devices or software in such applications is entirely at the customer's risk.

## **Regulatory Notice**

### **Regulatory compliance for devices with radio or Wi-Fi interfaces**

This LANCOM device is subject to governmental regulation. The user is responsible for ensuring that this device operates under local regulatory guidelines, specifically for compliance with potential channel restrictions.

### **Channel restrictions in Wi-Fi operation for devices with Wi-Fi interfaces**

When operating this radio equipment in EU countries the frequency range 5,150 – 5,350 MHz (Wi-Fi channels 36 – 64) as well as the frequency range 5,945 – 6,425 MHz (Wi-Fi channels 1 – 93) is limited to indoor use.

### **Maximum transmission power for devices with radio interfaces**

This LANCOM device may contain one or more radio interfaces using various technologies. The maximum output power per technology and used frequency band for use in EU countries is described in the following tables:

Technology	Frequency range (MHz)	Max. output power (dBm EIRP)	Technology	Frequency range (MHz)	Max. output power (dBm EIRP)
Wi-Fi	2,400 – 2,483.5	20	LTE (Band 34)	2,010 – 2,025	24
	5,150 – 5,350	20	LTE (Band 38)	2,570 – 2,620	24.8
	5,470 – 5,725	30	LTE (Band 40)	2,300 – 2,400	24.8
	5,945 – 6,425	23	LTE (Band 42)	3,400 – 3,600	24.8
SRD / BLE / SRD / ESL (ePaper)	2,400 – 2,483.5	10	5G NR (Band 1)	1,920 – 1,980	24
SRD / SubGHz-ESL	869.2 – 869.25	14 / 25 mW	5G NR (Band 3)	1,710 – 1,785	24
LTE (Band 1)	1,920 – 1,980	23	5G NR (Band 28)	703 – 748	24
LTE (Band 3)	1,710 – 1,785		5G NR (Band 41)	2,496 – 2,690	24
LTE (Band 7)	2,500 – 2,570		5G NR (Band 77)	3,300 – 4,200	24.5
LTE (Band 8)	880 – 915		5G NR (Band 78)	3,300 – 3,800	24.5
LTE (Band 20)	832 – 862		UMTS (Band 2)	1,850 – 1,910	23
			UMTS (Band 4)	1,710 – 1,755	
			UMTS (Band 5)	824 – 849	

## Declarations of Conformity

You will find all the Declarations of Conformity concerning our product portfolio at [www.lancom-systems.com/doc](http://www.lancom-systems.com/doc). These documents contain all the tested standards and required guidelines in the area of EMC – SAFETY – RF, as well as proof of the guidelines concerning RoHS & REACH.

### Simplified Declaration of Conformity

Hereby, LANCOM Systems GmbH | Adenauerstrasse 20/B2 | D-52146 Wuerselen, declares that this device complies with Directives 2014/30/EU, 2014/35/EU, 2014/53/EU, 2011/65/EU, and Regulation (EC) No. 1907/2006. The full text of the EU Declaration of Conformity is available at the following Internet address: [www.lancom-systems.com/doc](http://www.lancom-systems.com/doc).

LANCOM, LANCOM Systems, LCOS, LANcommunity and Hyper Integration are registered trademarks. All other names or descriptions used may be trademarks or registered trademarks of their owners. This document contains statements relating to future products and their attributes. LANCOM Systems reserves the right to change these without notice. No liability for technical errors and/or omissions.

## Technical Data

### Hardware

- Power supply 12 V DC, external power adapter
- For an overview of the power supplies compatible with your device, see [www.lancom-systems.com/kb/power-supplies](http://www.lancom-systems.com/kb/power-supplies).

### Housing

- Robust plastic housing, connectors on the back, prepared for wall mounting; dimensions 293 x 44 x 190 mm (W x H x D)

### Package contents

- Cable 1 DSL cable for an IP-based line, 4.25 m; 1 Ethernet cable, 3m
- Antennas 4 5G / 4G antennas for 5G / LTE
- Power adapter External power adapter

## Documentation/Firmware

- Basically, current versions of the LCOS firmware, drivers, tools and documentation for all LANCOM and AirLancer products are available for download free of charge from our website.
- Detailed documentation for your device can be found in the download portal of the LANCOM website: [www.lancom-systems.com/downloads](http://www.lancom-systems.com/downloads).
- You will also find explanations of all the functions of your LANCOM device in the LCOS Reference Manual: [www.lancom-systems.de/docs/LCOS/Refmanual/EN/](http://www.lancom-systems.de/docs/LCOS/Refmanual/EN/).

## Service & Support


- The LANCOM Knowledge Base — with over 2,500 articles — is available to you at any time via the LANCOM website: [www.lancom-systems.com/knowledgebase](http://www.lancom-systems.com/knowledgebase).
- If you have any further questions, please submit your request via our Service & Support portal: [www.lancom-systems.com/service-support](http://www.lancom-systems.com/service-support).
- Information on the lifecycle, in particular on the End of Sale / End of Life and on the supply of LANCOM devices with security updates can be found at: [www.lancom-systems.com/lifecycle](http://www.lancom-systems.com/lifecycle).

## All information on your device



---

## Documents / Resources

	<a href="#">LANCOM 1800VA-5G High Availability Networking</a> [pdf] Installation Guide 1800VA-5G High Availability Networking, 1800VA-5G, High Availability Networking, Availability Networking, Networking
---	--

## References

- [L DoC - LANCOM Systems GmbH](#)
- [L Downloads - LANCOM Systems GmbH](#)
- [L Log in - LANCOM Systems GmbH](#)
- [L Lifecycle Management: LANCOM Systems GmbH](#)
- [L \[www.lancom-systems.com/lmc-access\]\(http://www.lancom-systems.com/lmc-access\)](http://www.lancom-systems.com/lmc-access)



- [\*\*L Service & Support: LANCOM Systems GmbH\*\*](#)
- [\*\*User Manual\*\*](#)

**Manuals+, Privacy Policy**

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.