

LANCOM 750-5G Network Extension Interface



LANCOM 750-5G Network Extension Interface Installation Guide

[Home](#) » [LANCOM](#) » LANCOM 750-5G Network Extension Interface Installation Guide 

Contents

- [1 LANCOM 750-5G Network Extension Interface](#)
- [2 Product Usage Instructions](#)
- [3 Initial start-up](#)
- [4 General safety instructions](#)
- [5 Safety instructions and intended use](#)
- [6 Regulatory Notice](#)
- [7 Declarations of Conformity](#)
- [8 Documentation / Firmware](#)
- [9 Service & Support](#)
- [10 Technical data \(excerpt\)](#)
- [11 Documents / Resources](#)
 - [11.1 References](#)
- [12 Related Posts](#)

LANCOM

LANCOM 750-5G Network Extension Interface



LANCOM 750-5G

Specifications:

- Hardware Power supply: 12 V DC, external power adapter
- Housing: Robust plastic housing, dimensions 205 x 42 x 205 mm (W x H x D)
- Package contents: 1 Ethernet cable (3m), 4 5G antennas, External power adapter

Product Usage Instructions

Initial Start-Up:

Setting up the required connections for device configuration:

1. Connect the power supply to a power socket using the enclosed external power supply unit.
2. If applicable, connect DSL interfaces to a TAE socket using suitable cables.
3. Connect other required device interfaces to components and antennas for mobile radio and/or Wi-Fi interfaces.
4. Choose one of the following configuration methods:
 - **a) Configuration via the local network:**
 - Connect an ETH or LAN interface of the device via an Ethernet cable to a network switch or directly to a network device for configuration.
 - Do not use the CONFIG or COM interface for network configuration.
 - **b) Configuration via the serial interface of a connected computer:**
 - Use a serial configuration cable connected to the CONFIG or COM interface of the device.
 - **c) Configuration via the USB interface of a connected computer:**
 - Use a USB-C connection cable connected to the CONFIG interface of the device.

FAQ:

- **Where can I find detailed documentation for my LANCOM device?**

Detailed documentation for your LANCOM device can be found in the download portal of the LANCOM website at: www.lancom-systems.com/downloads


- **How can I access the LANCOM Knowledge Base?**

The LANCOM Knowledge Base with over 2,500 articles is available on the LANCOM website at: www.lancom-systems.com/knowledgebase

Quick Installation Guide LANCOM 750-5G

Interface overview of the LANCOM 750-5G

Rear panel

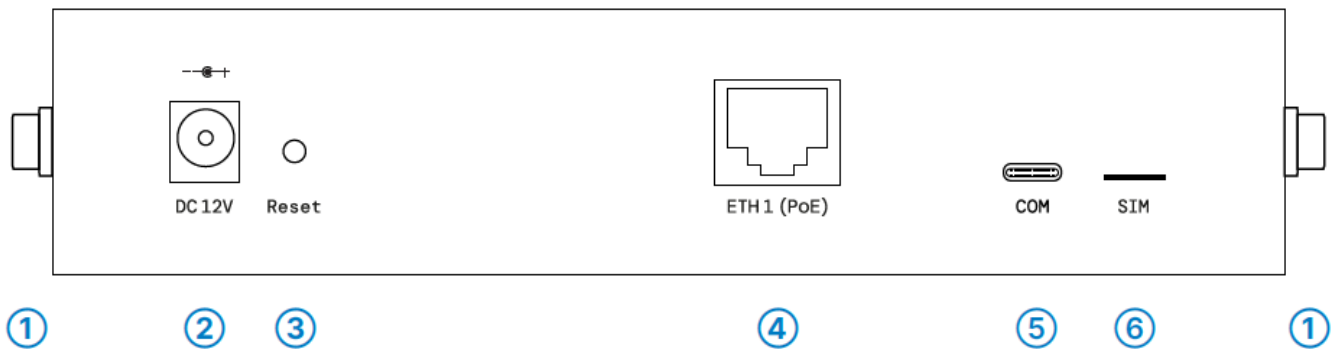

1. 5G antenna connectors
2. Power supply connector
3. Reset button
4. Ethernet interface
5. Serial USB-C configuration interface
6. Micro SIM card slot

Initial start-up

Setting up the required connections for device configuration

- Connect the power supply to a power socket using the enclosed or another suitable IEC cable or the enclosed external power supply unit. Observe the safety instructions on the right.
- Only for devices with integrated DSL modem: If available and required, connect the G.FAST / VDSL / ADSL interfaces to a TAE socket of your provider using suitable cables.
- Use suitable cables or modules to connect other required device interfaces to other components and, in the case of devices with mobile radio and/or Wi-Fi interfaces, connect any antennas supplied.
- Depending on the device equipment, choose one of the following configuration methods a), b), or c)

1. Configuration via the local network (recommended)

Connect one of the ETH or LAN interfaces of the device via an Ethernet cable either to a network switch or directly to the network device intended for configuration (e.g. notebook).

The CONFIG or COM interface is not suitable for configuration via the network!

2. Configuration via the serial interface of a connected computer (if available)

You need a serial configuration cable whose network connector is connected to the CONFIG or COM interface of the device. This socket is exclusively intended for connection to a serial interface!

3. Configuration via the USB interface of a connected computer

You need a commercially available USB-C connection cable, which is connected to the CONFIG interface of the device.

Options for initial start-up of the unconfigured device

Option 1: via web browser (WEBconfig, not for serially connected devices)

Configuration via web browser is an easy and fast variant, since no additional software is required on the computer used for configuration.

Note: If a certificate warning appears in your browser when trying to connect to your device, there is a button or link on the displayed browser page to connect to the device anyway (depending on the browser, usually under Advanced).

In the following, select the description a) or b) that applies to your setup for configuring the device.

1. Configuration in a network without active DHCP server

For configuration via TCP/IP, the IP address of the device in the local network (LAN) is required. After power-on, an unconfigured LANCOM device first checks whether a DHCP server is active in the LAN.

The device can be accessed from any computer with the Auto DHCP function enabled using a web browser under the IP address 172.23.56.254.

The given IP address can be modified at any time.

2. Configuration in a network with active DHCP server

In this procedure, the DNS server used in your network must be able to resolve the host name reported by the device via DHCP. When using a LANCOM device as a DHCP and DNS server, this is the default case.

At <https://lancom-XXYYZZ> you can access your device. Replace XXYYZZ with the last six digits of the MAC address of your device, which you can find on the enclosed document LANCOM Management Cloud or on the name-plate of the device. If necessary, append the domain name of your local network (e. g. .intern).

- When the computer is connected to an unconfigured LANCOM device, WEBconfig automatically starts the setup wizard Basic settings.
- After the setup wizard has been run through, the initial commissioning of the device is complete.
- If necessary, make further configurations using the setup wizards available for selection.

Option 2: via the Windows software LANconfig (www.lancom-systems.com/downloads)

- Please wait until the booting process of the device is completed before starting LANconfig.
- Unconfigured LANCOM devices are automatically found by LANconfig in the local network (LAN) and the setup wizard Basic settings is then started.
- After the setup wizard has finished, the initial start-up of the device is complete.
- If necessary, make further configurations using the setup wizards available for selection.

Option 3: via the LANCOM Management Cloud (LMC)

The LMC is not required for the operation of LANCOM devices, but it facilitates their commissioning and permanent management through centralized, automated management. Special requirements are necessary to configure the device via the LMC. Information on this topic can be found at www.lancom-systems.com/lmc-access.

General safety instructions

- Under no circumstances should the device housing be opened and the device repaired without authorization. Any device with a case that has been opened is excluded from the warranty.
- If antennas are available, they may only be installed or replaced when the device is switched off. Mounting or demounting antennas while the device is powered on may cause the destruction of the radio module.
- Mounting, installation, and commissioning of the device may only be carried out by qualified personnel.

Safety instructions and intended use

- In order to avoid harming yourself, third parties or your equipment when installing your LANCOM device, please observe the following safety instructions. Operate the device only as described in the corresponding documentation. Pay particular attention to all warnings and safety instructions. Use only those third-party devices and components that are recommended or approved by LANCOM Systems.
- Before commissioning the device, be sure to study the corresponding Hardware Quick Reference which can be downloaded from the LANCOM website www.lancom-systems.com/downloads.
- Any warranty and liability claims against LANCOM Systems are excluded in the event of any use other than the intended use described below!

Environment

LANCOM devices should only be operated when the following environmental requirements are met:

- Ensure that you comply with the temperature and humidity ranges specified in the Quick Reference Guide for the LANCOM device.
- Do not expose the device to direct sunlight.
- Ensure that there is adequate air circulation and do not obstruct the ventilation slots.
- Do not cover devices or stack them on top of one another
- The device must be mounted so that it is freely accessible (for example, it should be accessible without the use of technical aids such as elevating platforms); a permanent installation (e. g. under plaster) is not permitted.
- Only outdoor equipment intended for this purpose is to be operated outdoors.

Power supply

Before start-up, the following points must be observed, as improper use can lead to personal injury and damage to property, as well as voiding the warranty:

- The mains plug of the device must be freely accessible.
- Operate the device only with a professionally installed power supply at a nearby and at all times freely accessible socket.
- Only use the enclosed power supply / IEC cable or the one listed in the hardware quick reference.
- A high touch current is possible for devices with metal housing and grounding screw! Before connecting the power supply, connect the grounding screw to a suitable ground potential.
- Some devices support power supply via an Ethernet cable (Power over Ethernet – PoE). Please refer to the corresponding notes in the hardware quick reference of the device.
- Never operate damaged components.
- Only switch on the device when the housing is closed.

- The device must not be installed during thunderstorms and should be disconnected from the power supply during thunderstorms.
- In case of emergency (e. g. damage, ingress of liquids or objects, for example through the ventilation slots), disconnect the power supply immediately.

Applications

- The devices may only be used in accordance with the relevant national regulations and under consideration of the legal situation applicable there.
- The devices must not be used for the actuation, control, and data transmission of machinery that, in case of malfunction or failure, may present a danger to life and limb, nor for the operation of critical infrastructures.
- The devices with their respective software are not designed, intended or certified for use in: the operation of weapons, weapons systems, nuclear facilities, mass transportation, autonomous vehicles, aircraft, life support computers or equipment (including resuscitators and surgical implants), pollution control, hazardous materials management, or other hazardous applications where failure of the device or software could lead to a situation in which personal injury or death could result. The customer is aware that the use of the devices or software in such applications is entirely at the customer's risk.

Regulatory Notice

• Regulatory compliance for devices with radio or Wi-Fi interfaces

This LANCOM device is subject to governmental regulation. The user is responsible for ensuring that this device operates in accordance with local regulatory guidelines, specifically for compliance with potential channel restrictions.

• Channel restrictions in Wi-Fi operation for devices with Wi-Fi interfaces

When operating this radio equipment in EU countries the frequency range 5,150 – 5,350 MHz (Wi-Fi channels 36 – 64) as well as the frequency range 5,945 – 6,425 MHz (Wi-Fi channels 1 – 93) is limited to indoor use.

• Maximum transmission power for devices with radio interfaces

This LANCOM device may contain one or more radio interfaces using various technologies. The maximum output power per technology and used frequency band for use in EU countries is described in the following tables:

Technology	Frequency range (MHz)	Max. output power (dBm EIRP)	Technology	Frequency range (MHz)	Max. output power (dBm EIRP)
Wi-Fi	2,400 – 2,483.5	20	LTE (Band 34)	2,010 – 2,025	24
	5,150 – 5,350	20	LTE (Band 38)	2,570 – 2,620	24.8
	5,470 – 5,725	30	LTE (Band 40)	2,300 – 2,400	24.8
	5,945 – 6,425	23	LTE (Band 42)	3,400 – 3,600	24.8
SRD / BLE / SRD / ESL (ePaper)	2,400 – 2,483.5	10	5G NR (Band 1)	1,920 – 1,980	24
SRD / SubGHz-ESL	869.2 – 869.25	14 / 25 mW	5G NR (Band 3)	1,710 – 1,785	24
			5G NR (Band 28)	703 – 748	24
LTE (Band 1)	1,920 – 1,980	23	5G NR (Band 41)	2,496 – 2,690	24
LTE (Band 3)	1,710 – 1,785		5G NR (Band 77)	3,300 – 4,200	24.5
LTE (Band 7)	2,500 – 2,570		5G NR (Band 78)	3,300 – 3,800	24.5
LTE (Band 8)	880 – 915		UMTS (Band 2)	1,850 – 1,910	23
LTE (Band 20)	832 – 862		UMTS (Band 4)	1,710 – 1,755	
			UMTS (Band 5)	824 – 849	

Declarations of Conformity

You will find all the Declarations of Conformity concerning our product portfolio under www.lancom-systems.com/doc. These documents contain all the tested standards and required guidelines in the area of EMC – SAFETY – RF, as well as the proof of the guidelines concerning RoHS & REACH.

Simplified Declaration of Conformity



Hereby, LANCOM Systems GmbH | Adenauerstrasse 20/B2 | D-52146 Wuerselen, declares that this device is in compliance with Directives 2014/30/EU, 2014/35/EU, 2014/53/EU, 2011/65/EU, and Regulation (EC) No. 1907/2006. The full text of the EU Declaration of Conformity is available at the following Internet address: www.lancom-systems.com/doc

LANCOM, LANCOM Systems, LCOS, LAN community and Hyper Integration are registered trademarks. All other names or descriptions used may be trademarks or registered trademarks of their owners. This document contains statements relating to future products and their attributes. LANCOM Systems reserves the right to change these without notice. No liability for technical errors and / or omissions. 112282/1023

Documentation / Firmware

- Basically, current versions of the LCOS firmware, drivers, tools and documentation for all LANCOM and AirLancer products are available for download free of charge from our website.
- Detailed documentation for your device can be found in the download portal of the LANCOM website: www.lancom-systems.com/downloads
- You will also find explanations of all the functions of your LANCOM device in the LCOS Reference Manual: www.lancom-systems.de/docs/LCOS/Refmanual/EN/

Service & Support

- The LANCOM Knowledge Base — with over 2,500 articles — is available to you at any time via the LANCOM website: www.lancom-systems.com/knowledgebase
- If you have any further questions, please submit your request via our Service & Support portal: www.lancom-systems.com/service-support
- Information on the lifecycle, in particular on End of Sale / End of Life and on the supply of LANCOM devices with security updates can be found at: www.lancom-systems.com/lifecycle

All information on your device



Technical data (excerpt)

Hardware

- **Power supply**

12 V DC, external power adapter

For an overview of the power supplies compatible with your device, see www.lancom-systems.com/kb/power-supplies.

- **Housing**

Robust plastic housing, connections on the back, prepared for wall and ceiling mounting; dimensions 205 x 42 x 205 mm (W x H x D)

Package contents

- Cables 1 Ethernet cable, 3m
- Antennas 4 5G antennas
- Power adapter External power adapter

Documents / Resources

	LANCOM 750-5G Network Extension Interface [pdf] Installation Guide 750-5G, 750-5G Network Extension Interface, Network Extension Interface, Extension Interface , Interface
---	---

References

- [L DoC - LANCOM Systems GmbH](#)
- [L Confluence Mobile - LANCOM Wissensdatenbank](#)
- [L Confluence Mobile - LANCOM Wissensdatenbank](#)
- [L LCOS 10.80 Reference Manual](#)
- [User Manual](#)

Manuals+ Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.