



LDARC Et Max Instruction Manual

[Home](#) » [LDARC](#) » LDARC Et Max Instruction Manual 

Contents

- 1 [LDARC Et Max Instruction Manual](#)
- 2 [ET MAX Configuration](#)
- 3 [Pack List](#)
- 4 [Frequency Table](#)
- 5 [KK Tower](#)
- 6 [Receiver Bind](#)
- 7 [RX2A PRO Bind\(S.BUS\),transmitter\(FLYSKY FS-i6\)](#)
- 8 [FM800 bind \(default S.BUS, nonsupport PPM\), example \(FUTABA T8FG\)](#)
- 9 [Note:](#)
- 10 [DSM bind, example \(T-SIX\)](#)
 - 10.1 [Note 1:](#)
 - 10.2 [Note 2:](#)
- 11 [Product and Factory Code](#)
 - 11.1 [Name](#)
 - 11.2 [Factory Code](#)
- 12 [Factory setting](#)
- 13 [The factory has already load the firmware, default angle mode, please set directly](#)
- 14 [After Sale Service](#)
- 15 [PNP/RTF Test report ID :](#)
- 16 [Read More About This Manual & Download PDF:](#)
- 17 [Documents / Resources](#)
 - 17.1 [References](#)
- 18 [Related Posts](#)


LDARC Et Max Instruction Manual




ET MAX Configuration

Wheelbase	185mm
KK Tower	F4+OSD 4in1 20A BLheliS OFF/25/100/200mW 48CH
Camera	(1200TVL 1/3'COMS NTSC)
Motor	MB2204-2250KV
Prop	4*4.5*3
Weight	283g(not include battery and receiver)

Pack List

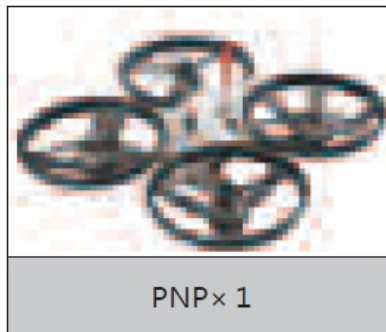

PNP× 1

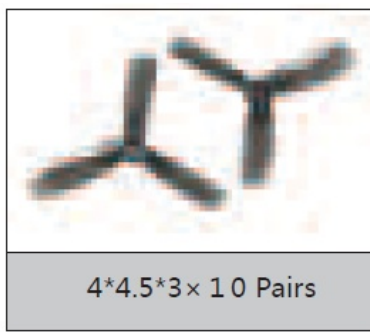


4*4.5*3× 10 Pairs




Magic tape*1



Paper sticker*1

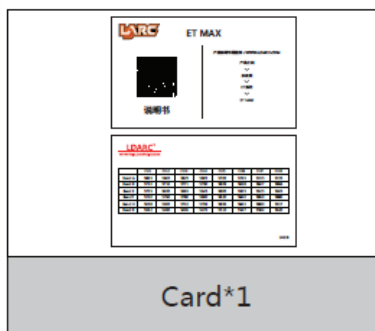

Card*1






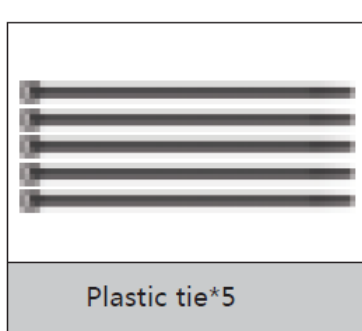


Plastic tie*5

Frequency Table

	CH1	CH2	CH3	CH4	CH5	CH6	CH7	CH8
Band A	5865	5845	5825	5805	5785	5765	5745	5725
Band B	5733	5752	5771	5790	5809	5828	5847	5866
Band E	5705	5685	5665	5645	5625	5605	5585	5565
Band F	5740	5760	5780	5800	5820	5840	5860	5880
Band H	5658	5695	5732	5769	5806	5843	5880	5917
Band R	5362	5400	5438	5473	5508	5547	5584	5620

KK Tower

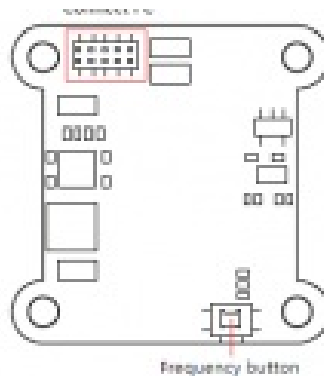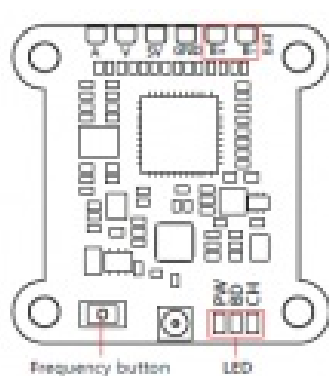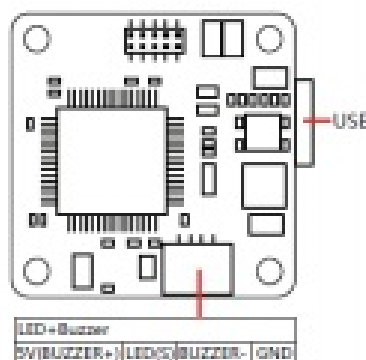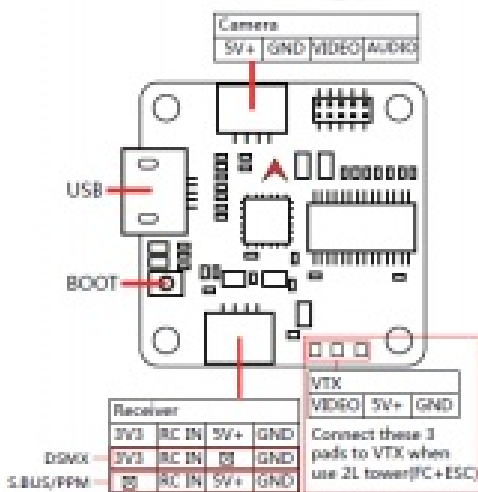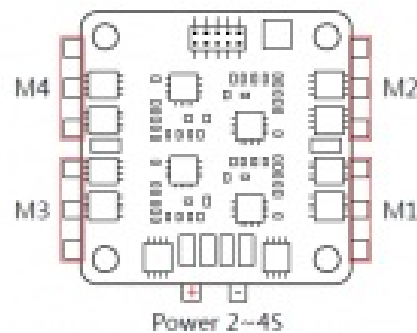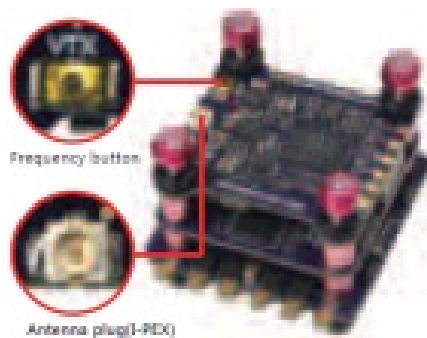

Blue LED is channel (CH) indicator, flash 1~8 times mean CH-1~8. Green LED is band(BD) indicator, flash 1~6 times mean


BAND-A~ F, Red is output power(PW)indicator, flash 1~3 times mean 25mW/100mW/200mW output power. In normal working state, quickly double-click button, R/G/B sync flash mean VTX turned off, and also quickly double-click can turn on the VTX. In normal working state, press and hold the key for 3s, only blue led flashes, now click the key change channel(CH). press and hold the key for 3s, only blue green flashes, now click the key change

band(BD) .press and hold the key for 3s,only red led flashes, now click the key change output power(PW).

Receiver Bind

AC900(S-FHSS+D16 non-EU) bind, transmitter(FRSKY X9D/Futaba T18SZ) RX2A PRO

Bind(S.BUS),transmitter(FLYSKY FS-i6) -3- Bind: Check receiver mode before bind ,the first blink after power on indicate the setting, is S-FHSS, is D16(non-EU) FUTABA S-FHSS BIND: Turn on the TX then power on AC900 while pressing the key, green LED fast blink meaning already in bind mode, user can release the key. Bind procedure is completed and the receiver is working normally when green LED is solid FRSKY D16(NO Telemetry) BIND :Power on AC900 while pressing the key, green LED fast blink meaning already in bind mode, user can release the key, then set your TX into D16 bind mode. red LED solid meaning bind finished, exit TX from bind mode, receiver's green LED solid meaning working normally

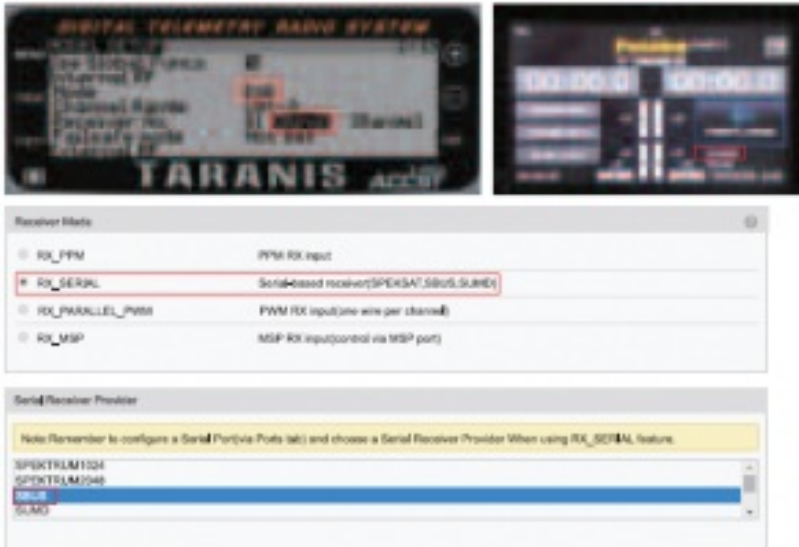

RX2A PRO Bind(S.BUS),transmitter(FLYSKY FS-i6)

BIND:Power on the receiver while pressing the key,green LED fast blink meaning already in bind mode,user can release the key, then set your TX into bind mode.Green LED turn off and red LED solid mean bind finished,exit TX from bind mode,receiver's green LED solid mean working normally.



FM800 bind (default S.BUS, nonsupport PPM), example (FUTABA T8FG)

1. Open remote control, hold receiver bind button to power
2. Green light constant lighting means bind success

Note:

\$.BUS and CPPM mode switch

Close remote control, press bind button 6\$ when red light flash, loosen until enter \$.BUS and CPPM mode switch

1. Green light quick nashing, press bind button and disconnect power, power-on again, enter \$.BUS mode
2. Green light slow flash, press bind button and disconnect power, power-on again, enter PPM mode



DSM bind, example (T-SIX)

1. Remote control in off state, bind button to power
2. Loosen until indicator light fast blink, enter to bind mode
3. Open remote control bind mode, Indicator light constant lighting means bind success

Note 1:

OSM2 uses SPEKTRUM1024 or SPEKTRUM2048 protocol, according to the remote control model to choose corresponding serial port protocol (example T-SIX, set protocol as SPEKTRUM1024)

Note 2:

OSMX remote control bind to DSM2 and OSMX receiver, but DSM2 remote control only bind to DSM2 receiver. DSM2: Old SPEKTRUM and JR remote control protocol, widely used with good compatibility. DSMX: Newest SPEKTRUM remote control protocol, DSMX backwards compatible DSM2



Product and Factory Code


Name	Factory Code
ET MAX PNP	PNP.ET MAX
ET MAX KIT	KIT.ET MAX
ET MAX Canopy	PART.ET MAX CANOPY
C1200 Camera	CAM.C1200
MB2204-2250KV(CW)	MB2204-2250KV(CW)
MB2204-2250KV(CCW)	MOTOR.MB2204-2250KV(CCW)
KK Tower(3 Layer) 20A	FLYTOWER.KK TOWER(3 LAYER) 20A
4in1 ESC 20A(KK Tower part)	ESC.KK TOWER 20A
F4+OSD(KK Tower part)	FC.KK TOWER(F4+OSD)

VTX(KK Tower part)	VTX.KK TOWER
Wire(KK Tower part)	PART.KK TOWER WIRE
3 Layer Tower Screw(KK Tower part)	PART.KK TOWER SCREW(3 LAYER)
4*4.5*3 Prop(clear black)	PROP.4*4.5*3
4 Inch propeller bumper	PART.4 INCH PROPELLER BUMPER
Carbon plate(ET MAX part)	PART.BOTTOM PLATE.ET MAX
LED+Buzzer(ET V2/3S part)	PART.LED+BUZZER(ET V2/3S PART)


Factory setting

The factory has already load the firmware, default angle mode, please set directly



1. Open Beta flight
2. Click“ Calibrate Accelerometer”

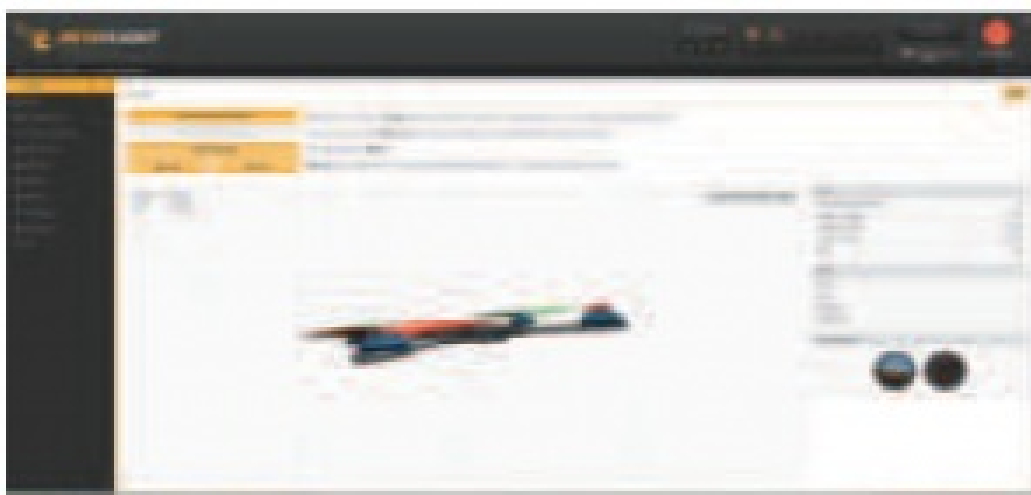


3. Prot,open UART6 switchable and saved


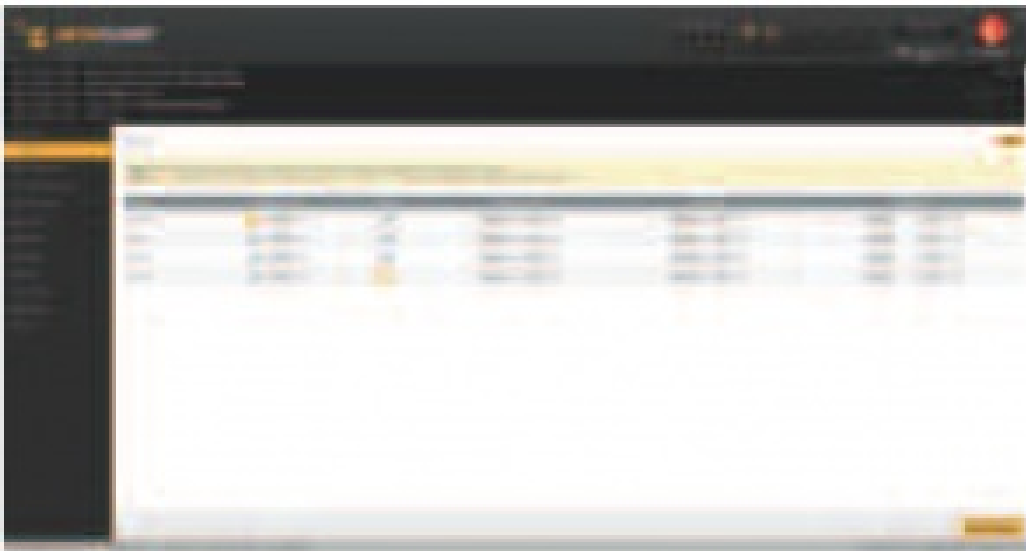



4. Select ESC protocol“DSHOT600” set up the receiver protocol, open LED_STRIP,OSD,DYNAMIC_FILTER

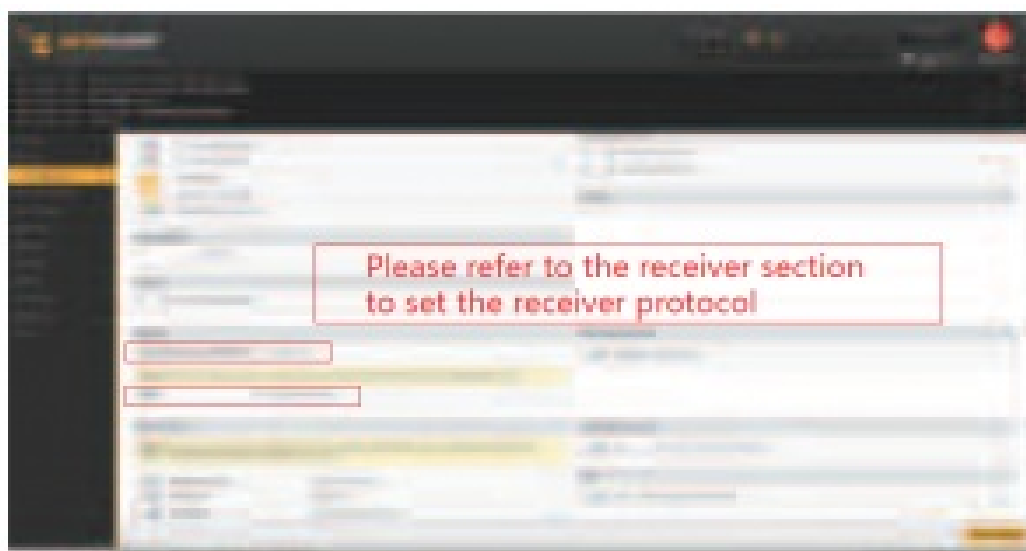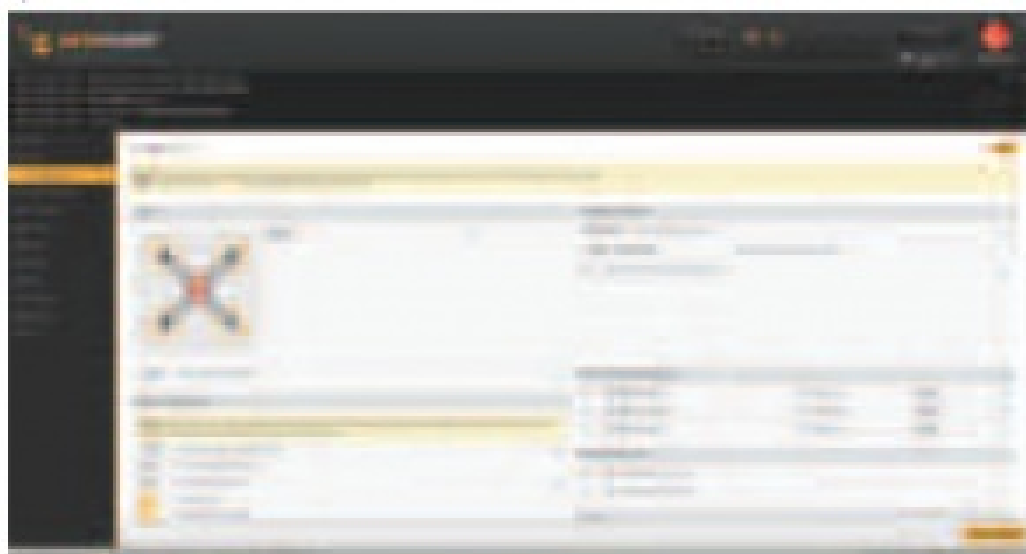

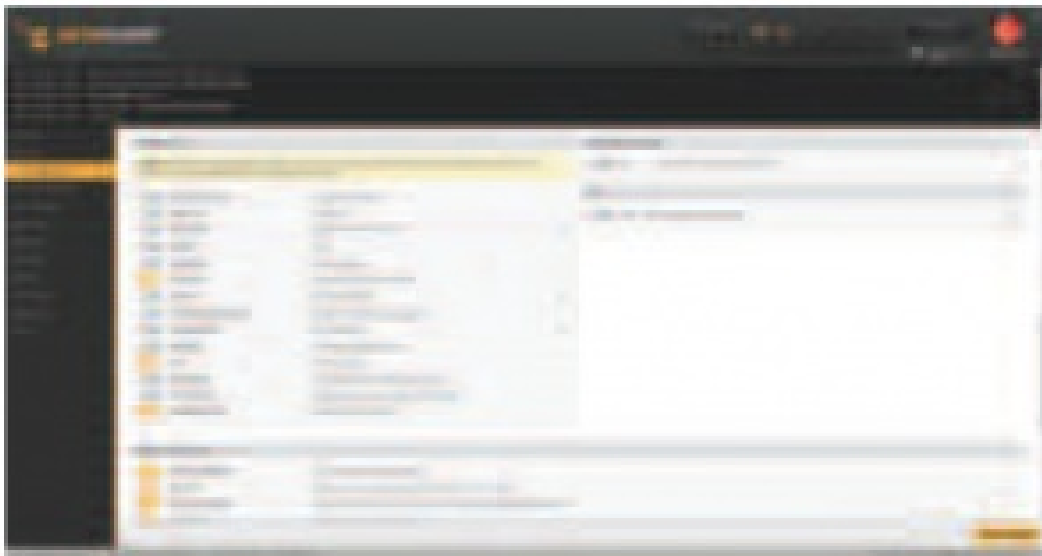


5. 5.PID setting

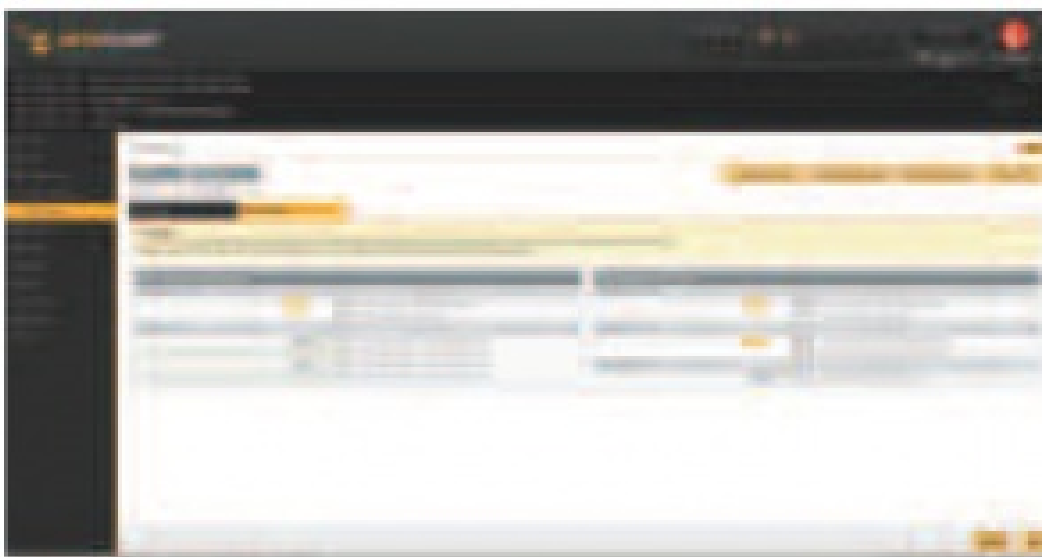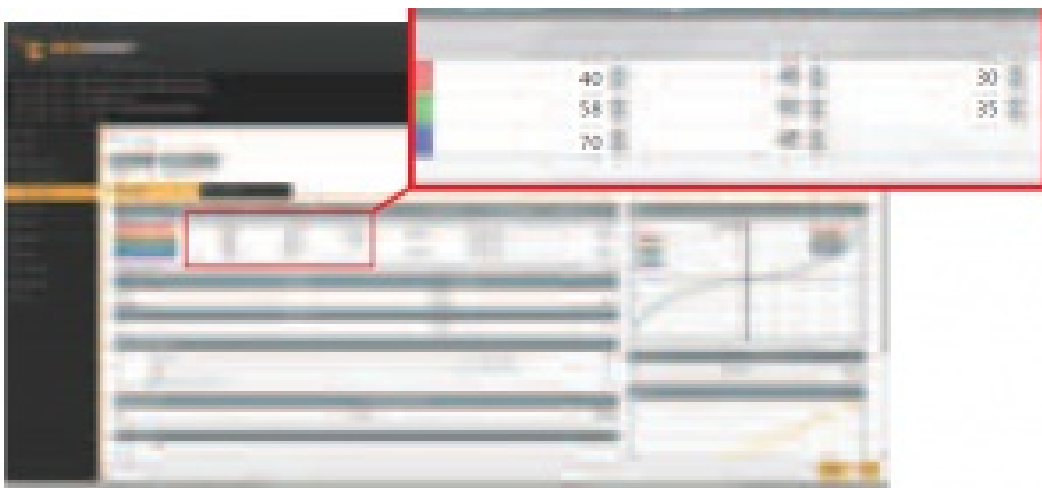

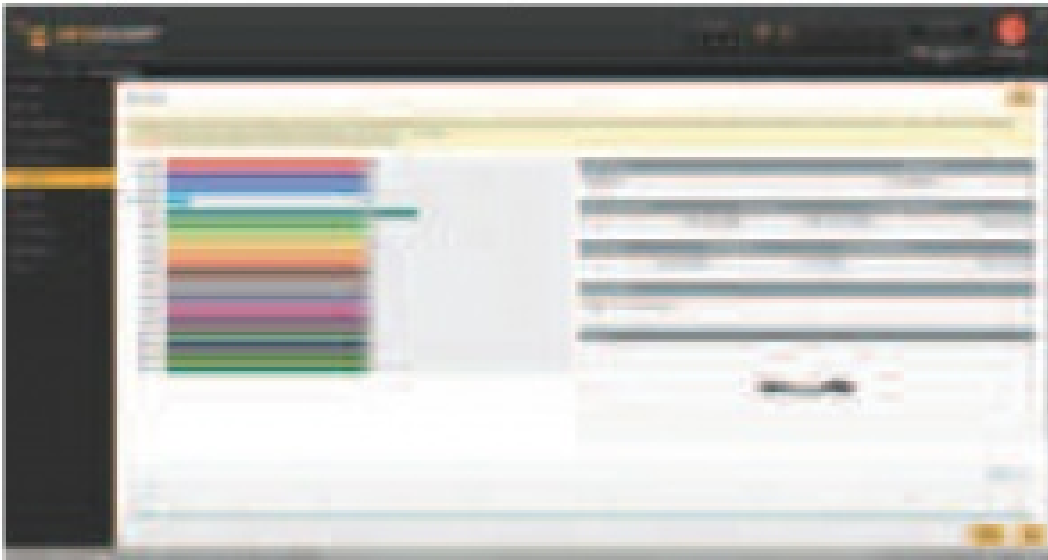


6.

7. Default angle mode, setting of receiver is 5th channel ARM(AUX1) 8.LED

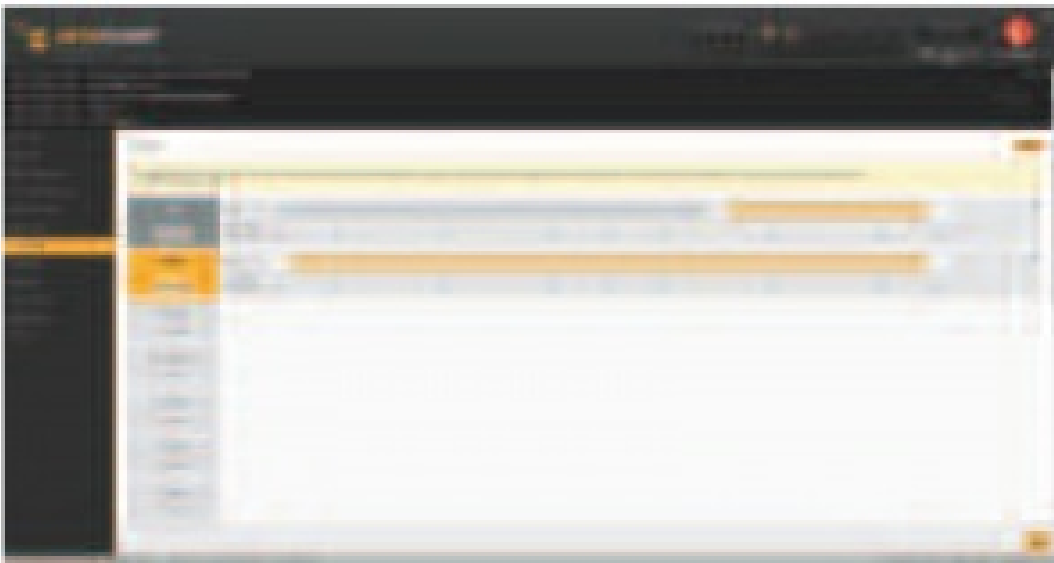

8. LED setting, then saved

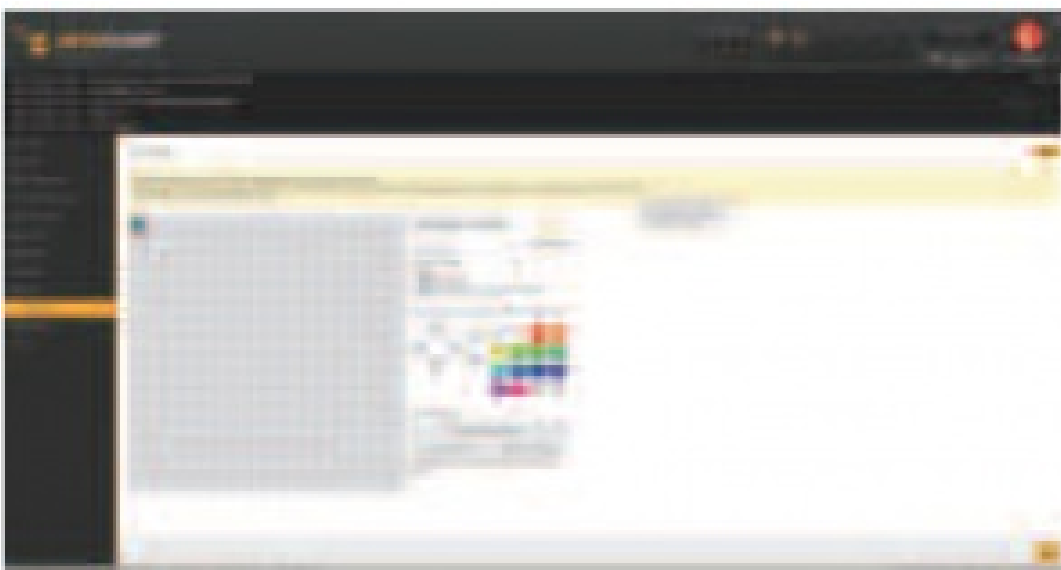

When the drone is not flying properly, try to load FC firmware, then restore factory settings

1. Open  then click  select firmware

OMNIBUSF4SD

3.2.1- OMNIBUSF4SD -18-10-2017 03:31(stable)

☒ No reboot sequence


☒ Flash on connect

☒ Full chip erase

☒ Manual baud rate 256000

☐ Show unstable releases

2. Click **Load Firmware[Online]** then click to download FW to FC **Flash Firmware** click  after FW updating finish into setting menu
Flip Over After Crash Setting

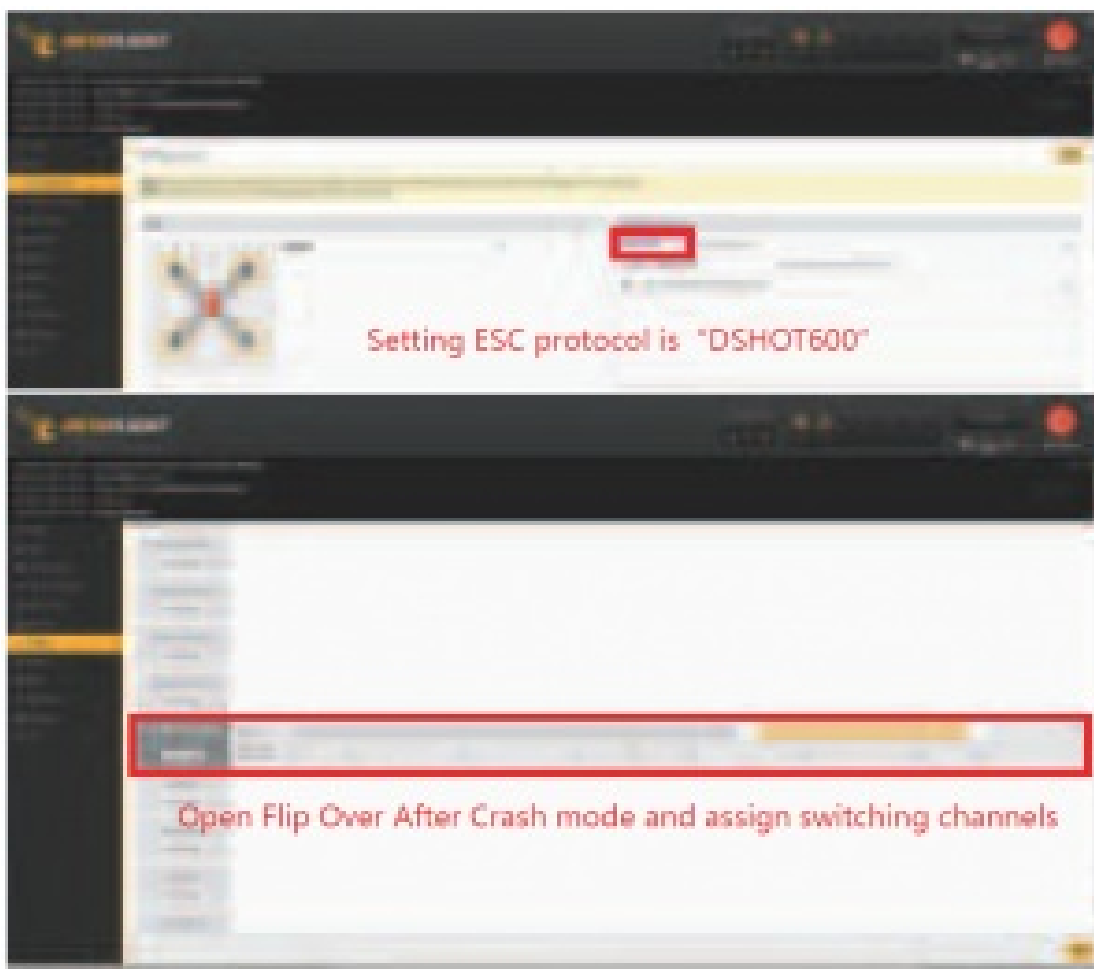

After Sale Service

1. Provide free reparation service when find the product defect after purchase.
2. Provide pay-needed reparation service when product damage because improper operation.
3. China customers please contact with the after-sales service, overseas client please contact the dealer.

PNP/RTF Test report ID :

Flight test

Package check

- Flying in good condition
 - Camera OK
 - VTX OK
 - Insulating sleeves have been installed manual
 - Complete accessories ,total packages
- PNP
 - Frame
 - All parts of the installation

Read More About This Manual & Download PDF:

Documents / Resources

	LDARC Et Max [pdf] Instruction Manual Et Max
--	---

References

- [vtx.in Domain Name Is Available to Buy - Domain Name Marketplace](#)