



LIGHT SKY 330W Follow Spot Light System User Manual

[Home](#) » [LIGHT SKY](#) » LIGHT SKY 330W Follow Spot Light System User Manual 

LIGHT SKY[®]

USER MANUAL

FOLLOW SPOT

□ 330W □ 450W □ 470W



www.lightsky.com.cn
www.lightsky-china.com

FLY DRAGON LIGHTING EQUIPMENT CO., LTD

Note: As the company pursues a policy to improve its products all the time, the data contains in this manual are subject to change without notice. The Our Company reserves the right to change the relevant specifications in product improvement. The publisher of this manual shall not be responsible for the accuracy of the information herein contained or the consequence resulting from such information.

Contents

- 1 Safety information
- 2 Technical information
- 3 Functional introduction
- 4 Physical modules
- 5 Assembling
- 6 Lamp-on operation
- 7 Tripod packing
- 8 Fixture dimension
- 9 Lamp replacement
- 10 Colored paper installation
- 11 Circuit connecting diagram
- 12 Cleaning and serving
- 13 Troubleshooting
- 14 Documents / Resources
 - 14.1 References
- 15 Related Posts

Safety information

■ Notice



To guarantee proper and consistent operation, it is important to follow the guidelines in this manual. Our company will not accept responsibility for damages resulting from the misuse of this fixture due to the disregard of the information printed in this manual.

■ Mounting surfaces



It is permissible to mount the fitting on normally flammable surfaces.



Please do not install the fixture onto combustible surface. Ensure a minimum clearance of 0.2m around the cooling fans and ventilation.

■ Maximum ambient temperature

t_a 38°C

The fixture is intended for indoor application.



Do not operate the fixture if the ambient temperature (T_a) exceeds 38.

■ Temperature of the external surface

The maximum temperature that can be reached on the external surface of the fitting, in a thermally steady state, is 60.

■ Protection against electrical shock



Connection must be made to a power supply system fitted with efficient earthing(Class appliance according to standard EN60598-1).



It is, moreover, recommended to protect the supply lines of the projectors from indirect contact and/or shorting to earth by using appropriately sized residual current devices.

■ Connection to mains supply


The double insulation between the LV power supply and the control conductor on the fixture.

Connection to the electricity mains must be carried out by a qualified electrical installer.

Check that the mains frequency and voltage correspond to those for which the projector is designed as given on the electrical data label.

This label also gives the input power to which you need to refer to evaluate the maximum number of fittings to connect to the electricity line, in order to avoid overloading. Don't use the power cable when the insulation is damaged. It must be the manufacturer or distributor or the professional person to change the damaged power cable in order to avoid any dangerous.

■ Protection against explosion

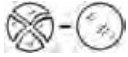

The protection screen, lens or ultraviolet screen on the lamp can be damaged to the degree of failure if visible damage, such as a crack or deep mark, should be replaced.

■ Protection optical radiation



Never look directly into the light source. You risk injury to your retina, which may induce blindness.

■ Maintenance



Never open this fixture while in use.

Please disconnect the power supply when begin to maintenance take down the light.

Please disconnect the power supply when begin to maintenance take down the light. Please let the parts cool down 10 minute at least then begin to install.

The light source in this fixture shall be replaced by the manufacturer or its service agent or similar qualification.. Do not revise the fixture or install any parts not from our company. Please be aware that damages caused by modifications to the device are not subject to warranty.

■ The products referred to in this manual conform to the European Community Directives to which they are subject::



Low Voltage 2014/35/EU

Electromagnetic Compatibility 2014/30/EU

Technical information


Rated consumption	□ 400W, PF0.987; □ 485 W,PF0.988 □ 521W,PF0.989
Lamp	□ 330W, □ 450W, □ 470W
Average life	1500H(330W,450W); 1200E1(470W)
Current	6A
Fixture dimension	866 X 400 X 404MM
N.W.	22.5KG
Carton size	978 X 512 X 475MM
G.W.	26KG
Fly case size (single)	1225 X 625 X 545MM
G.W.	73KG
Tripod weight	9.18KG
Travel	Pan:360°, Tilt:90°
Color temperature	440W (2500K, 3200K, 8000K), 330W (7500K)
Beam angle	4°-12°(330W, 440W); 5°-10°(470W)

330W

Distance, spot diameter and illumination diagram

With zoom (4° -12°)

Lamp Total Output: 12000 lumens

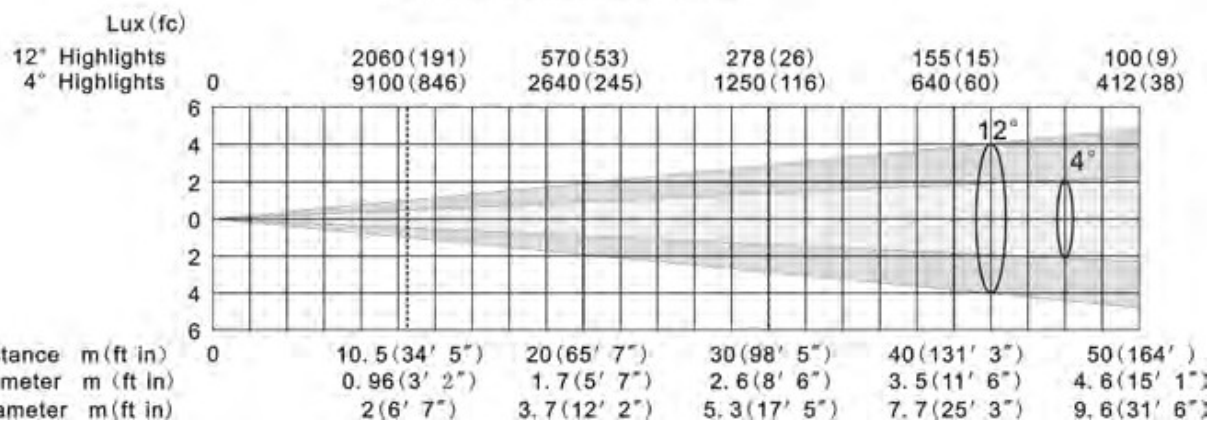


450W

Distance, spot diameter and illumination diagram

with zoom (4° -12°)

Lamp Total Output:24000 lumens

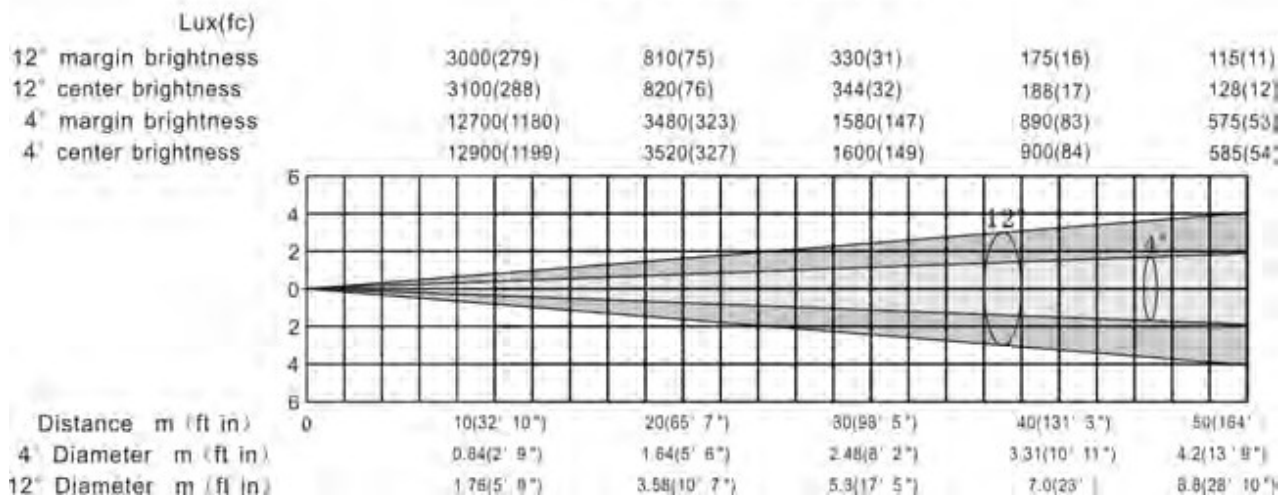


470W


Distance, spot diameter and illumination diagram

With zoom (5° -10°)

Lamp Total Output:23000 lumens

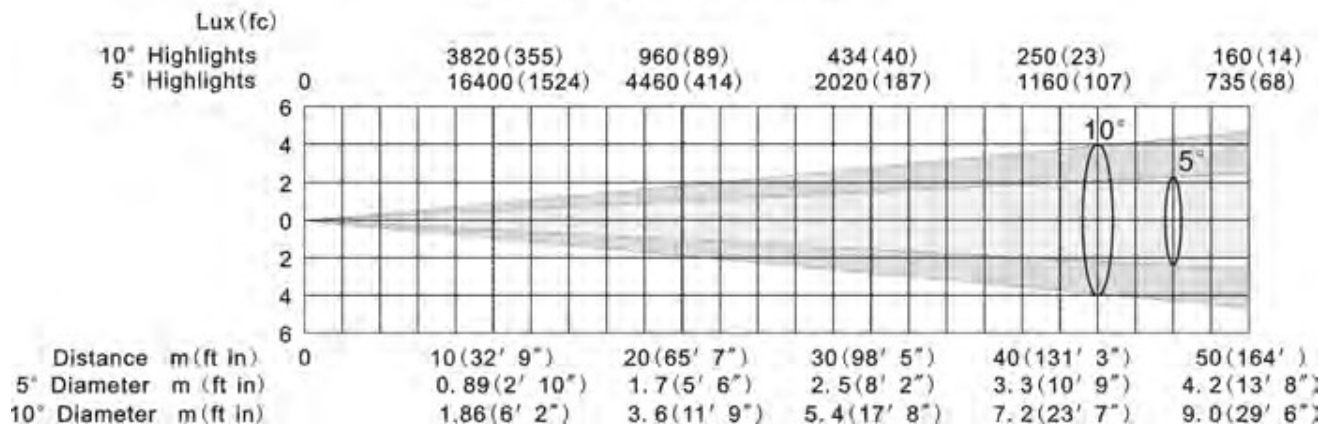

Illumination and intensity distribution curve comparison chart

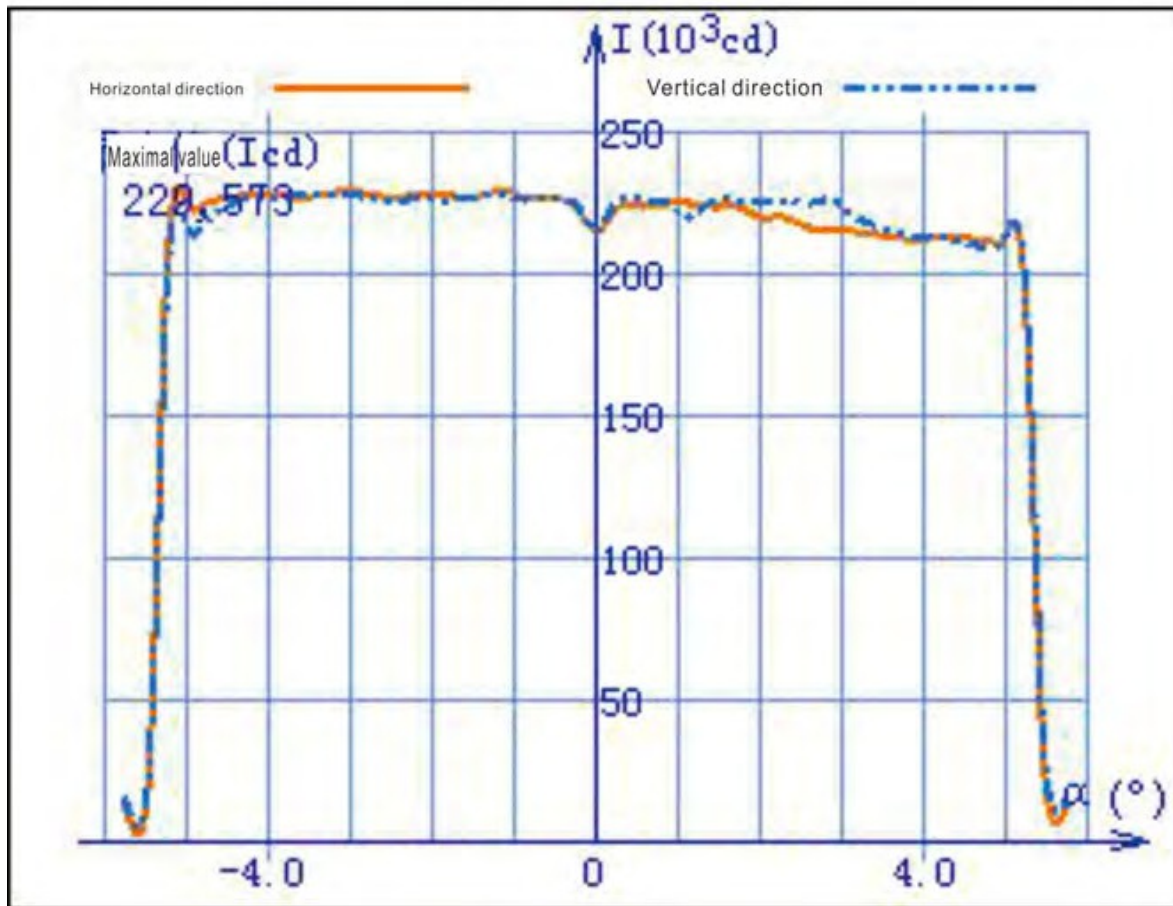

Functional introduction

1. Dimmer

Manually linear dimmer, smooth and even dimming through the whole dimming range 0-100%

2. Frost

Frost filter, impart frosted effect to light beam.

3. Iris

Manually mechanical iris, used to regulate spot diameter.

4. Beam shaper

Beam shaper system, cut light beam vertically on both sides.

5. Focus

Focusing optics can be used to sharpen the casting beam.

6. Zoom

Zooming range: 4° to 12° (330W/450W); 5° to 10° (470W)

7. Gobo

Manually replace gobos.

8. Color temperature

Standard Color temperature 3200K, manually adjustment.

9. Color changer

Color changer, designated with 5 color paper clips which are intended for changing colors of the casting beam by interchanging preset color papers.

Physical modules

1. Main body



2. Tripod



Assembling

1. Tripod assembling

- 1.1. Take out the Stand from packing carton and put it away (as picture 1), unscrew the sliders (number 1,number 2).
- 1.2. Outward pull the stand feet or downward press the slider (as picture 2)
- 1.3. Twist the screw(number 5), then adjust the lifting handle to the suitable height and tighten the screw (number 5).



Fig.1



Fig.2

2. Light assembling

2.1. Take out the Backing plate and Slider(as picture 3), then assemble and fix the U-type stand plate (as picture 4).

2.2.Take out the light from packing carton, to aim and install the assembling site of the light to the mounting holes (number 3, number 4) of U-type stand plate and fix the screws(as picture 5).

After assembling as picture 6, to adjust the lifting handle to the suitable height.



Fig.3



Fig.4




Fig.5



Fig.6

Lamp-on operation

1. First connect the follow spot to the mains via power cable, turn on power switch, push down lamp switch key to ignite the lamp.
2. Turn on levers subsequently, and a casting beam comes out of the fixture.

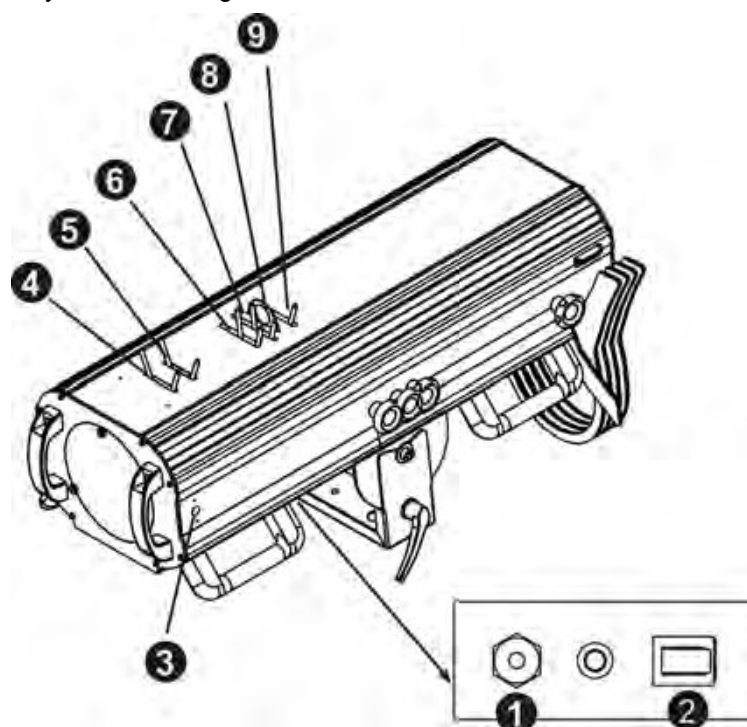


- | | |
|--|--|
| <ol style="list-style-type: none">1. Power2. Power switch3. Lamp switch please re-turn on the lamp at least 2 minutes later after the lamp turns off .4. Dimmer | <ol style="list-style-type: none">5. Color temperature6. Beam shaper7. Iris8. Gobo9. Frost |
|--|--|

Tripod packing




Keep the handle down when put the Stand into the fly case as the above picture

Fixture dimension

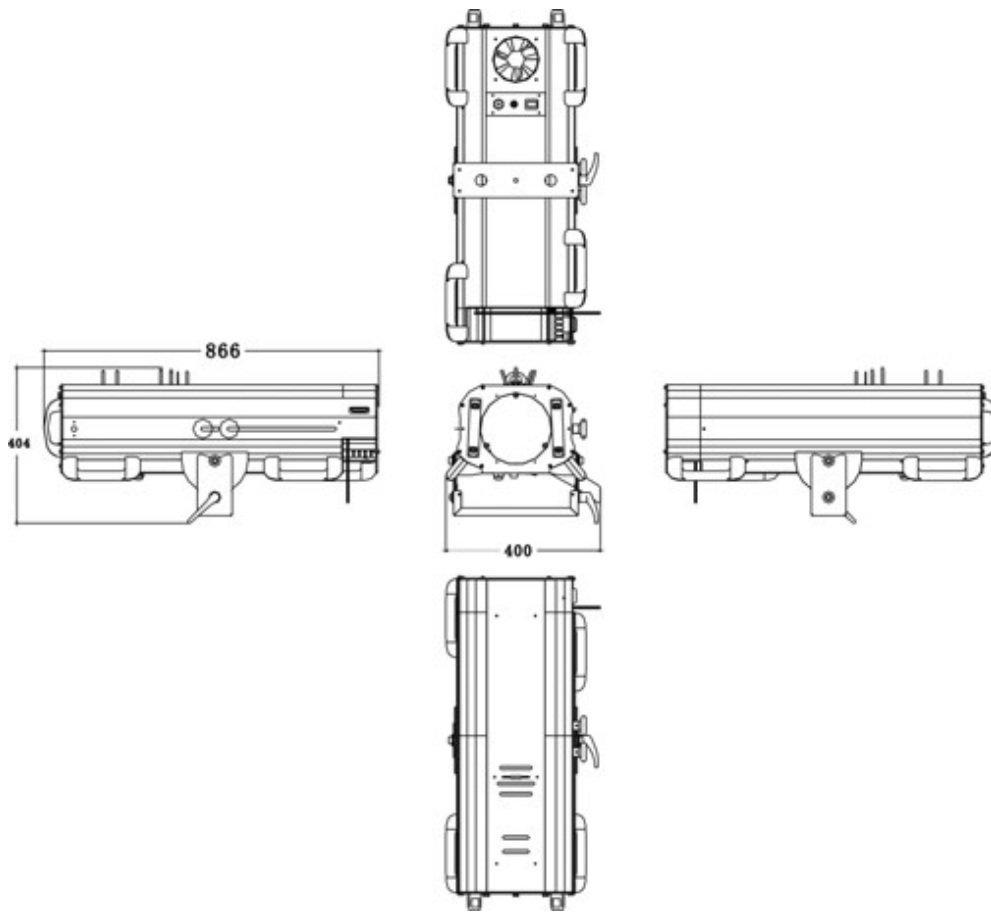

Lamp replacement

1. When the lamp totally cooling down, loose the crew, open the rear cover.
2. Pull out the lamp cable.
3. Press the lamp softly, lamp can be got out.
4. Install the lamp and connect the cable.
5. Close and lock the rear cover.
6. The replacement is complete.

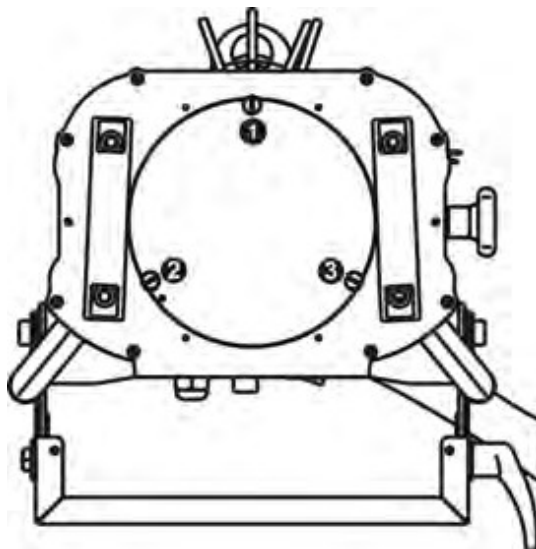

Before operation, read the manufacturer avoid to the contretemps. Otherwise, the manufacturer have not any respond if installation don't following the above-mention lead to the projector fall and bring into the result.

CAUTION:

1. Only install the lamp with the device switched off!
2. Unplug from mains before!
3. The lamp has to be replaced when it is damaged or deformed due to the heat.

Colored paper installation

1. Undo the 3 screws on the colored paper fixed plate as picture 1.



Picture 1

2. Neatly put the colored paper into the middle of the fixed plate as picture 2, then pull up the colored paper as the direction of arrow as picture 3.



Picture 2



Picture 3

3. Tighten the 3 screws, and use the scissors to trim the colored paper as picture 4.



Picture 4

Remark: the size of colored paper is 215X215mm

Circuit connecting diagram

handle by the professional person. Disconnect the power supply before maintenance the light

☉ Lamp off

1. Please check if install the suitable lamp
2. Please check the connection of the power supply or switch is ok
3. The lamp is in over heat protection status due to high interior temperature. check whether the fan and the air duct are blocked
4. Ballast damaged

☉ The light works intermission

1. Please check if the fan works normally or mote clogging
2. Please check if the lamp is to the usage life.

Tel: 0086-20-61828288

Fax: 0086-20-61828188 **Pc:** 510800

Web: www.lightsky.com.cn

E-mail:

flydragon@lightsky.com.cn

asia@lightsky.com.cn

india@lightsky.com.cn

europa@lightsky.com.cn

latinamerica@lightsky.com.cn

middle-east@lightsky.com.cn

american@lightsky.com.cn


Address: No. 43, Yunfeng Road, Xiuquan Street, Huadu District, Guangzhou, China

www.lightsky.com.cn


www.lightsky-china.com

FLY DRAGON LIGHTING EQUIPMENT CO.,LTD

Documents / Resources

 <p>LIGHT SKY USER MANUAL FOLLOW SPOT □ 330W □ 450W □ 470W</p> <p>www.lightsky.com.cn www.lightsky-china.com FLY DRAGON LIGHTING EQUIPMENT CO., LTD</p>	<p>LIGHT SKY 330W Follow Spot Light System [pdf] User Manual 330W Follow Spot Light System, 450W Follow Spot Light System, 470W Follow Spot Light System</p>
--	--

References

-  [_____](#)