




Microwave Oven

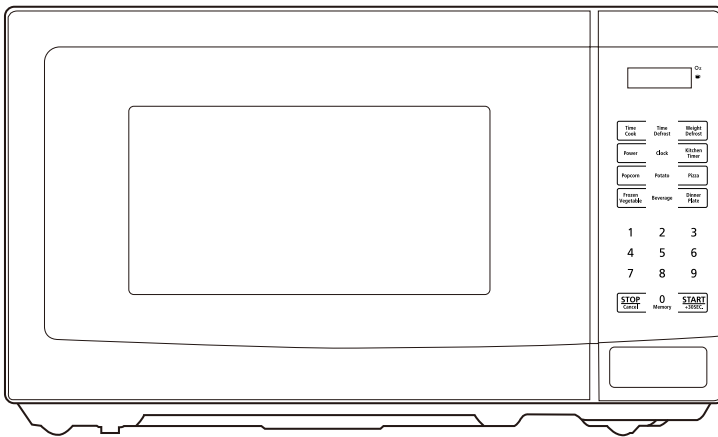

Customer Assistance:
1-866-321-9509

EM720C2WT-PM

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

- (a) Do not attempt to operate this oven with the door open since open-door operation can result in harmful exposure to microwave energy. It is important not to defeat or tamper with the safety interlocks.
- (b) Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- (c) **Do not operate the oven if it is damaged. It is particularly important that the oven door close properly and that there is no damage to the:**
 - (1) DOOR (bent)**
 - (2) HINGES AND LATCHES (broken or loosened)**
 - (3) DOOR SEALS AND SEALING SURFACES**
- (d) **The oven should not be adjusted or repaired by anyone except properly qualified service personnel.**

Specifications

Model:	EM720C2WT-PM
Rated Voltage:	120V~60Hz
Rated Input Power(Microwave):	1050W
Rated Output Power(Microwave):	700W
Oven Capacity:	0.7 Cu.ft
Turntable Diameter:	10 inch
External Dimensions:	17.32X13 X 10.15 inch (439.5X330X257.6mm)
Net Weight:	Approx.24.1 Lbs (10.92 kg)

IMPORTANT SAFETY INSTRUCTIONS

WARNING To reduce the risk of burns, electric shock, fire, injury to persons or exposure to excessive microwave oven energy when using your appliance, follow basic safety precautions, including the following:

1. Read all instructions before using the appliance.
2. Read and follow the specific: **"PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY"** found on page 2.
3. As with most cooking appliances, close supervision is necessary to reduce the risk of a fire in the oven cavity.
4. To reduce the risk of fire in the oven cavity:
 - i) Do not overcook food. Carefully attend the appliance when paper, plastic, or other combustible materials are placed inside the oven to facilitate cooking.
 - ii) Remove wire twist-ties and metal handles from paper or plastic containers/bags before placing them in the oven.
 - iii) If materials inside the oven ignite, keep the oven door closed. Turn the oven off, and unplug the appliance. Disconnect the power cord, shut off power at the fuse or circuit breaker panel.
 - iv) Do not use the oven cavity for storage purposes. Do not leave paper products, cooking utensils, or food in the cavity when not in use.
5. This oven must be grounded. Connect only to properly grounded outlet. See **"GROUNDING INSTRUCTIONS"** found on page 4.
6. Install or locate this oven only in accordance with the installation instructions provided.
7. Some products such as whole eggs and sealed containers-for example, closed glass jars-are able to explode and should not be heated in the oven.
8. Use this appliance only for its intended uses as described in this manual. Do not use corrosive chemicals or vapors in this appliance. This oven is specifically designed to heat or cook or dry food. It is not designed for industrial or laboratory use.
9. As with any appliance, close supervision is necessary when used by children.
10. Do not operate this oven if it has a damaged cord or plug, if it is not working properly or if it has been damaged or dropped.
11. This microwave should be serviced only by qualified service personnel.
12. Do not cover or block any openings on the oven.
13. Do not store or use this appliance outdoors.
14. Do not use this oven near water, for example, near a kitchen sink, in a wet basement, near a swimming pool, or similar locations.
15. Do not immerse cord or plug in water.
16. Keep cord away from heated surfaces.
17. Do not let cord hang over edge of table or counter.
18. When cleaning surfaces of door and oven that comes together on closing the door, use only mild, nonabrasive soaps or detergents applied with a sponge or soft cloth.

19. Liquids, such as water, coffee, or tea are able to be overheated beyond the boiling point without appearing to be boiling. Visible bubbling or boiling when the container is removed from the microwave oven is not always present. THIS COULD RESULT IN VERY HOT LIQUIDS SUDDENLY BOILING OVER WHEN THE CONTAINER IS DISTURBED OR A SPOON OR OTHER UTENSIL IS INSERTED INTO THE LIQUID.
- i) Do not overheat the liquid.
 - ii) Stir the liquid both before and halfway through heating it.
 - iii) Do not use straight-sided containers with narrow necks.
 - iv) After heating, allow the container to stand in the microwave oven for a short time before removing the container.
 - v) Use extreme care when inserting a spoon or other utensil into the container.

SAVE THESE INSTRUCTIONS

GROUNDING INSTRUCTIONS

DANGER

Electric Shock Hazard

Touching some of the internal components can cause serious personal injury or death. Do not disassemble this appliance.

WARNING

Electric Shock Hazard

Improper use of the grounding can result in electric shock. Do not plug into an outlet until appliance is properly installed and grounded.

Three-pronged (grounding) plug



This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

Consult a qualified electrician or serviceman if the grounding instructions are not completely understood or if doubt exists as to whether the appliance is properly grounded. If it is necessary to use an extension cord, use only a 3-wire extension cord that has a 3-pronged grounding plug, and a 3-slot receptacle that will accept the plug on the appliance. The marked rating of the extension cord shall be equal to or greater than the electrical rating of the appliance.

1. A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
2. Longer cord sets or extension cords are available and may be used if care is exercised in their use.
3. If a long cord sets or extension cord is used:
 - i) The marked electrical rating of the cord set or extension marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
 - ii) The extension cord must be a grounding-type 3-wire cord.
 - iii) The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

Radio Interference

1. Operation of the microwave oven may cause interference to your radio, TV or similar equipment.
2. When there is interference, it may be reduced or eliminated by taking the following measures:
 - i) Clean door and sealing surface of the oven.
 - ii) Reorient the receiving antenna of radio or television.
 - iii) Relocate the microwave oven with respect to the receiver.
 - iv) Move the microwave oven away from the receiver.
 - v) Plug the microwave oven into a different outlet so that microwave oven and receiver are on different branch circuits.

UTENSILS

CAUTION

Personal Injury Hazard

Tightly-closed containers could explode. Closed containers should be opened and plastic pouches should be pierced before cooking.

See the instructions on "Materials you can use in microwave oven or to be avoided in microwave oven."

There may be certain non-metallic utensils that are not safe to use for microwaving. If in doubt, you can test the utensil in question by following the procedure below.

Utensil Test:

1. Fill a microwave-safe container with 1 cup of cold water (250ml) along with the utensil in question.
2. Cook on maximum power for 1 minute.
3. Carefully feel the utensil. If the empty utensil is warm, do not use it for microwave cooking.
4. **Do not exceed 1 minute cooking time.**

Materials you can use in microwave oven

Utensils	Remarks
Aluminum foil	Shielding only. Small smooth pieces can be used to cover thin parts of meat or poultry to prevent overcooking. Arcing can occur if foil is too close to oven walls. The foil should be at least 1 inch (2.5cm) away from oven walls.
Browning dish	Follow manufacturer's instructions. The bottom of browning dish must be at least 3/16 inch (5mm) above the turntable. Incorrect usage may cause the turntable to break.
Dinnerware	Microwave-safe only. Follow manufacturer's instructions. Do not use cracked or chipped dishes.
Glass jars	Always remove lid. Use only to heat food until just warm. Most glass jars are not heat resistant and may break.
Glassware	Heat-resistant oven glassware only. Make sure there is no metallic trim. Do not use cracked or chipped dishes.
Oven cooking bags	Follow manufacturer's instructions. Do not close with metal tie. Make slits to allow steam to escape.
Paper plates and cups	Use for short-term cooking/warming only. Do not leave oven unattended while cooking.
Paper towels	Use to cover food for reheating and absorbing fat. Use with supervision for a short-term cooking only.
Parchment paper	Use as a cover to prevent splattering or a wrap for steaming.
Plastic	Microwave-safe only. Follow the manufacturer's instructions. Should be labeled "Microwave Safe". Some plastic containers soften, as the food inside gets hot. "Boiling bags" and tightly closed plastic bags should be slit, pierced or vented as directed by package.
Plastic wrap	Microwave-safe only. Use to cover food during cooking to retain moisture. Do not allow plastic wrap to touch food.
Thermometers	Microwave-safe only (meat and candy thermometers).
Wax paper	Use as a cover to prevent splattering and retain moisture.

Materials to be avoided in microwave oven

Utensils	Remarks
Aluminum tray	May cause arcing. Transfer food into microwave-safe dish.
Food carton with metal handle	May cause arcing. Transfer food into microwave-safe dish.
Metal or metal-trimmed utensils	Metal shields the food from microwave energy. Metal trim may cause arcing.
Metal twist ties	May cause arcing and could cause a fire in the oven.
Paper bags	May cause a fire in the oven.
Plastic foam	Plastic foam may melt or contaminate the liquid inside when exposed to high temperature.
Wood	Wood will dry out when used in the microwave oven and may split or crack.


SETTING UP YOUR OVEN

Names of Oven Parts and Accessories


Remove the oven and all materials from the carton and oven cavity.

Your oven comes with the following accessories:

Glass tray	1
Turntable ring assembly	1
Instruction Manual	1

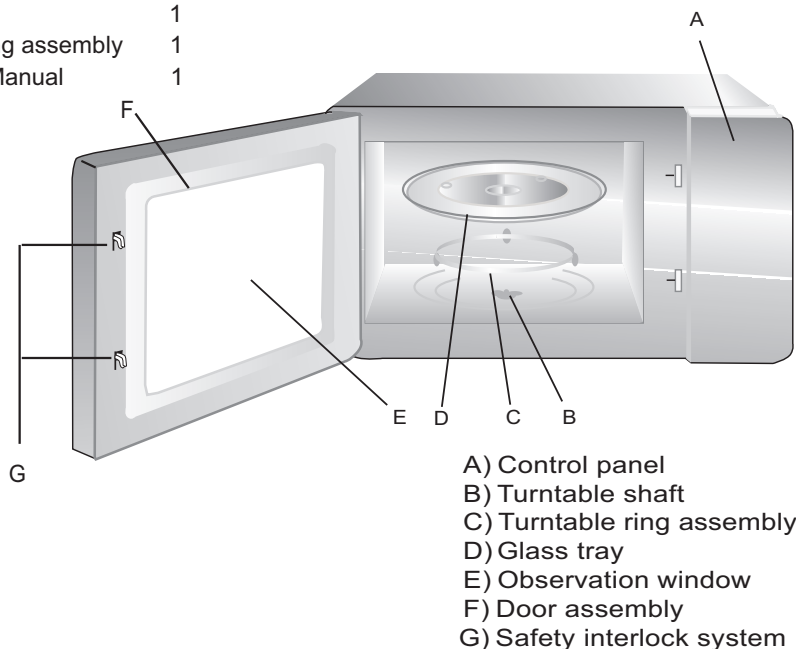

Turntable Installation

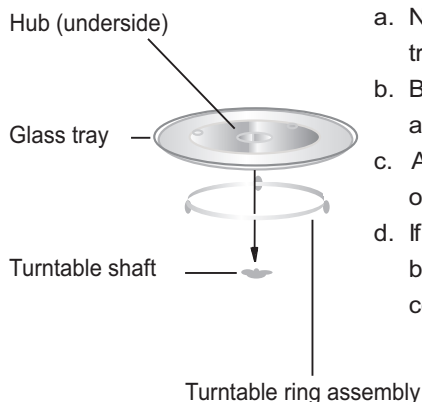

- Never place the glass tray upside down. The glass tray should never be restricted.
- Both glass tray and turntable ring assembly must always be used during cooking.
- All food and containers of food are always placed on the glass tray for cooking.
- If glass tray or turntable ring assembly cracks or breaks, contact your nearest authorized service center.

Countertop Installation


Remove all packing material and accessories. Examine the oven for any damage such as dents or broken door. Do not install if oven is damaged.

Cabinet: Remove any protective film found on the microwave oven cabinet surface.

Do not remove the light brown Mica cover that is attached to the oven cavity to protect the magnetron.

Installation

1. Select a level surface that provides enough open space for the intake and/or outlet openings.

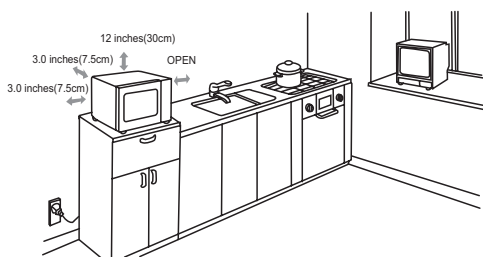

A minimum clearance of 3.0 inches (7.5cm) is required between the oven and any adjacent walls. One side must be open.

- (1) Leave a minimum clearance of 12 inches (30cm) above the oven.
- (2) Do not remove the legs from the bottom of the oven.

- (3) Blocking the intake and/or outlet openings can damage the oven.

- (4) Place the oven as far away from radio's and TV's as possible.


Operation of microwave oven may cause interference to your radio or TV reception.

2. Plug your oven into a standard household outlet. Be sure the voltage and the frequency are the same as the voltage and the frequency on the rating label.

WARNING: Do not install oven over a range cooktop or other heat-producing appliances. If installed near or over a heat source, the oven could be damaged and the warranty would be void.

OPERATION

Control Panel and Features

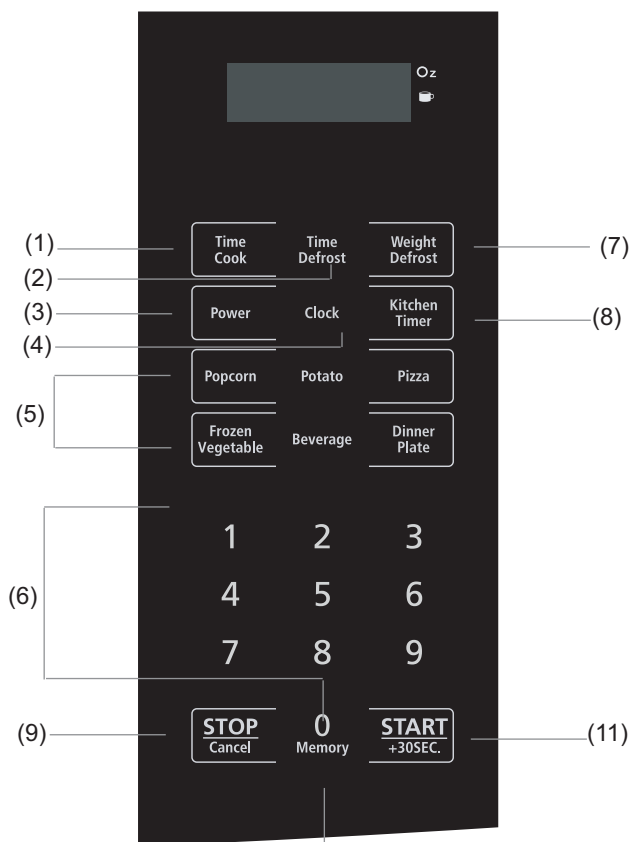

- (1) Time Cook**
- (2) Time Defrost**
- (3) Power**
- (4) Clock**
- (5) Auto Menus: Popcorn, Potato, Pizza, Frozen Vegetable, Beverage, Dinner Plate**
- (6) Number Buttons: 0-9(Express cook: 1-6)**
- (7) Weight Defrost**
- (8) Kitchen Timer**
- (9) Stop/Cancel:** clears all previous setting pressed before cooking starts. During cooking: press once to stop oven; twice to stop and clear all entries.
- (10) Memory Function**
- (11) Start/+30Sec.**

OPERATION

1. POWER LEVEL

10 power levels are available.

Level	10	9	8	7	6	5	4	3	2	1
Power	100%	90%	80%	70%	60%	50%	40%	30%	20%	10%
Display	PL10	PL9	PL8	PL7	PL6	PL5	PL4	PL3	PL2	PL1

2. CLOCK SETTING

(1) Press **"CLOCK"**, "00:00" will display.



(2) Press the number keys and enter the current time. For example, the time is 12:10, please press "1,2,1,0" in turn.



(3) Press **"CLOCK"** to finish clock setting. ":" will flash and the clock will be lighted.

(4) If the numbers input are not within the range of 1:00--12:59, the setting will be invalid until valid numbers are input.

Note: 1) In the process of clock setting, if the **"STOP/Cancel"** button is pressed or if there is no operation within 1 minute, the oven will go back to the former setting automatically.

2) If the clock needs to be reset, please repeat step 1 to step 3.

3. KITCHEN TIMER



(1) Press **"KITCHEN TIMER"**, LED will display 00:00, the first hour figure flashes.

(2) Press the number keys and enter the timer time. (The maximum time is 99 minutes and 99 seconds.)



(3) Press **"START/+30SEC."** to confirm setting.

(4) When the timer time has elapsed, the buzzer will ring 5 times.

If the clock is set (12-hour system), LED will display the current time.

Note: 1) The kitchen timer is different from the 12-hour clock setting. Kitchen Timer is only a timer.

2) During kitchen timer, a program can not be set.

4. MICROWAVE COOK



(1) Press **"TIME COOK"** once, LED will display "00:00".


(2) Press number keys to input the cooking time; the maximum cooking time is 99 minutes and 99 seconds.

(3) Press **"POWER"** once, LED will display "PL10". The default power is 100% power. Now you can press number keys to adjust the power level.

(4) Press **"START/+30SEC."** to start cooking.

Example: to cook the food with 50% microwave power for 15 minutes.

- a. Press **"TIME COOK"** once. "00:00" displays.
- b. Press "1", "5", "0", "0" in order.
- c. Press **"POWER"** once, then press "5" to select 50% microwave power.
- d. Press **"START/+30SEC."** to start cooking.



Note: 1) In the process of setting, if the **"STOP/CANCEL"** button is pressed, or if there is no operation within 1 minute, the oven will go back to the former setting automatically.

- 2) During microwave cooking, **"POWER"** can be pressed to change the power level required.

After pressing **"POWER"**, the current power lights for 3 seconds, now you can press number button to change the power. The oven will work with the selected power for the rest time.

5. SPEED COOKING

- (1) In waiting state, instant cooking at 100% power level can be started by select a cooking time from 1 to 6 minutes by pressing number pads 1 to 6. Press **"START/+30SEC."** to increase the cooking time; the maximum cooking time is 99 minutes and 99 seconds.

- (2) In waiting state, instant cooking at 100% power level with 30 seconds' cooking time can be started by pressing **"START/+30SEC"**. Each press on the same button will increase cooking time by 30 seconds. The maximum cooking time is 99 minutes and 99 seconds.

Note: during microwave cooking and time defrost, time can be added by pressing **"START/30SEC."** button.

6. WEIGHT DEFROST FUNCTION

- (1) Press **"WEIGHT DEFROST"**, LED will display "dEF1".
- (2) Press numerical buttons to input weight to be defrosted.
Input the weight ranges between 4-100 oz.
- (3) If the weight input is not within 4-100, the input will be invalid. A "beep" will sound and the unit will not work until valid numbers are input .
- (4) Press **"START/+30SEC."** to start defrosting and the cooking time remaining will be displayed.



7. TIME DEFROST FUNCTION

- (1) Press **"TIME DEFROST"**, LED will display "dEF2".
- (2) Press number pads to input defrosting time. The effective time range is 00:01-99:99
- (3) The default microwave power is power level 3. If you want to change the power level, press **"POWER"** once, and the LED will display "PL 3", then press the number pad of the power level you want.
- (4) Press **"START/+30SEC."** to start defrosting. The remaining cooking time will be displayed.



8. POPCORN

- a) Press **"POPCORN"** repeatedly until the number you wish appears in the display, "1.75", "3.0", "3.5" oz will display in order.


For example, press **"POPCORN"** once, "1.75" appears.




- b) Press **"START/+30 SEC."** to cook, buzzer sounds once. Buzzer will sound five times when cooking is finished and then turn back to waiting state.

Important Information About Microwave Popcorn Feature:

1. When selecting 3.0 or 3.5 ounces of popcorn, it is suggested that you fold down a triangle on each corner of the bag before cooking. Refer to the picture at right.

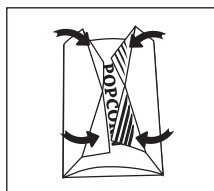

2. If/When the popcorn bag expands and no longer rotates properly, please press **"STOP/CANCEL"** button once and open the oven door and adjust the bag position to ensure even cooking.

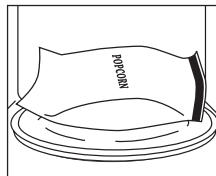

9. POTATO

- a) Press **"POTATO"** repeatedly until the number you wish appears in the display, "1", "2", "3" will display in order.

"1" SET: 1 potato (approximate 8.0 oz)

"2" SETS: 2 potatoes (approximate 16.0 oz)

"3" SETS: 3 potatoes (approximate 24.0 oz)

For example, press **"POTATO"** once, "1" appears.



- b) Press **"START/+30 SEC."** to cook, buzzer sounds once. When cooking is finished, buzzer sounds five times and then turns back to waiting state.

10. FROZEN VEGETABLE

- a) Press **"FROZEN VEGETABLE"** repeatedly until the number you wish appears in the display, "4.0", "8.0", "16.0" oz will display in order.

For example, press **"FROZEN VEGETABLE"** once, "4.0" appears.



- b) Press **"START/+30 SEC."** to cook, buzzer sounds once. When cooking is finished, buzzer sounds five times and then turns back to waiting state.

11. BEVERAGE


- a) Press **"BEVERAGE"** repeatedly until the number you wish appears in the display, "1", "2", "3" cup will display in order. One cup is about 4.0 oz. For example, press **"BEVERAGE"** once, "1" appears.



- b) Press **"START/+30 SEC."** to cook, buzzer sounds once. When cooking is finished, buzzer sounds five times and then turns back to waiting state.

12. DINNER PLATE


- a) Press **"DINNER PLATE"** repeatedly until the number you wish appears in the display, "9.0", "12.0", "18.0" oz will display in order. For example, press **"DINNER PLATE"** once, "9.0" appears.



- b) Press **"START/+30 SEC."** to cook, buzzer sounds once. When cooking is finished, buzzer sounds five times and then turns back to waiting state.

13. PIZZA

- a) Press **"PIZZA"** repeatedly until the number you wish appears in the display, "4.0", "8.0", "14.0" oz will display in order. For example, press **"PIZZA"** once, "4.0" appears.



- b) Press **"START/+30 SEC."** to cook, buzzer sounds once. When cooking is finished, buzzer sounds five times and then turns back to waiting state.

14. MEMORY FUNCTION

- (1) Press **"0/MEMORY"** to choose memory 1-3 procedure. The LED will display 1, 2, 3.
- (2) If the procedure has been set, press **"START/ +30 SEC."** to use it. If not, continue to set the procedure. Only one or two stages can be set.
- (3) After finishing the setting, press **"START/ +30 SEC."** once to save the procedure and return back to the waiting state. If you press **"START/ +30 SEC."** again, it will start cooking.

Example: to set the following procedure as the second memory, it is memory 2.

To cook the food with 80% microwave power for 3 minutes and 20 seconds, the steps are as follows:

- a. In waiting states, press **"0/MEMORY"** twice, stop pressing until the screen displays "2".
- b. Press **"TIME COOK"** once, then press "3", "2", "0" in order.
- c. Press **"POWER"** once, "PL10" will display, then press "8" and "PL8" displays.
- d. Press **"START/ +30 SEC."** to save the setting. Buzzer sounds once, the procedure will be saved as memory 2, then turns back to waiting state. If you press **"START/+30SEC."** again, it will start cooking.
- e. If the electricity is not cut off, the procedure will be saved all the time. If it is, the procedure will need to be reset.
- f. If you want to run the saved procedure, in waiting state, press **"0/MEMORY"** twice, screen displays "2", then press **"START/+30SEC."** to run.

15. MULTI-STAGE COOKING

At most 2 stages can be set for cooking. In multi-stage cooking, if one stage is defrosting, then defrosting shall be placed as the first stage automatically.

Note: Auto cooking cannot work in the multi-stage cooking.


Example: if you want to cook with 80% microwave power for 5 minutes + 60% microwave power for 10 minutes. The cooking steps are as follows:

- (1) Press **"TIME COOK"** once, then press "5", "0", "0" to set the cooking time;
- (2) Press **"POWER"** once, then press "8" to select 80% microwave power.
- (3) Press **"TIME COOK"** once, then press "1", "0", "0", "0" to set the cooking time;
- (4) Press **"POWER"** once, then press "6" to select 60% microwave power.
- (5) Press **"START/ +30 SEC."** to start cooking.

16. INQUIRING FUNCTION

- (1) In cooking state, press **"CLOCK"**, the LED will display clock for three seconds.
- (2) In the microwave cooking state, press **"POWER"** to inquire microwave power level, and the current microwave power will be displayed. After three seconds, the oven will turn back to the previous state. In multi-stage state, the inquiring way can be done the same way as above.

17. LOCK FUNCTION

Lock: In waiting state, press **"STOP/CANCEL"** for 3 seconds, there will be a long "beep" denoting the entering into the lock state; meanwhile, LED will display "".

Unlock: In locked state, press **"STOP/CANCEL"** for 3 seconds, there will be a long "beep" denoting that lock is unlocked.

18. ENERGY SAVING MODE

- (1) In standby mode, press the "STOP/Cancel" once (less than 3 seconds to avoid starting the child lock function to) enter the Energy Saving mode.
- (2) In child-locked mode, press the "STOP/Cancel" once (less than 3 seconds) and release to enter the Energy Saving Mode.

Note: The Energy Saving mode works only if the door is closed.

19. COOKING END REMINDER FUNCTION

When the cooking is over, the buzzer will sound 5 "beeps" to alert user the cooking is finished.

20. OTHER SPECIFICATIONS

- (1) In standby state, if the set clock displays current time, the icon ":" would flash; otherwise, it shows "0:00".
- (2) In setting function state, LED displays corresponding setting.
- (3) In working or pause state, LED displays surplus cooking time.

Maintenance

Troubleshooting

If you experience issues with the microwave oven, use the chart below for possible solutions. If the issue still persists, contact the customer service centre at the toll-free number provided for further assistance.

TROUBLE	POSSIBLE CAUSE	POSSIBLE REMEDY
Oven will not start	a. Electrical cord for oven is not plugged in. b. Door is open. c. Wrong operation is set.	a. Plug into the outlet. b. Close the door and try again. c. Check instructions.
Arcing or sparking	a. Materials to be avoided in microwave oven were used. b. The oven is operated when empty. c. Spilled food remains in the cavity.	a. Use microwave-safe cookware only. b. Do not operate with oven empty. c. Clean cavity with wet towel.
Unevenly cooked foods	a. Materials to be avoided in microwave oven were used. b. Food is not defrosted completely. c. Cooking time, power level is not suitable. d. Food is not turned or stirred.	a. Use microwave-safe cookware only. b. Completely defrost food. c. Use correct cooking time, power level. d. Turn or stir food.
Overcooked foods	Cooking time, power level is not suitable.	Use correct cooking time, power level.
Undercooked foods	a. Materials to be avoided in microwave oven were used. b. Food is not defrosted completely. c. Oven ventilation ports are restricted. d. Cooking time, power level is not suitable.	a. Use microwave-safe cookware only. b. Completely defrost food. c. Check to see that oven ventilation ports are not restricted. d. Use correct cooking time, power level.
Improper defrosting	a. Materials to be avoided in microwave oven were used. b. Cooking time, power level is not suitable. c. Food is not turned or stirred.	a. Use microwave-safe cookware only. b. Use correct cooking time, power level. c. Turn or stir food.

ONE YEAR LIMITED WARRANTY

This product carries a warranty that it will be free from defects in material and workmanship for a period of one year from the date of purchase. This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep your original sales receipt.

IMPORTANT: This warranty does not cover damages resulting from accident, misuse or abuse, lack of reasonable care, the affixing of any attachments not provided with the product, loss of parts, or subjecting the appliance to any but the specified voltage. Read directions carefully.

If service is required during the warranty period, properly pack your unit. We recommend using the original carton and packing materials. Return the product to your nearest Wal-Mart store with the sales receipt. A replacement or refund may be offered at the discretion of Wal-Mart. If additional assistance is needed, please contact customer assistance at: 1-866-321-9509.

Wal-Mart expressly disclaims all responsibility for consequential damages or incidental losses caused by use of the appliance. Some states do not allow this exclusion or limitation of incidental or consequential losses so the foregoing disclaimer may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which may vary from state to state.

SAVE THIS FOR YOUR RECORDS

Mainstays® logo is a registered trademark of Wal-Mart Stores, Inc. Bentonville, AR 72716.

Made in China