


VISTA-20P/PS Series

VISTA-15P Series

Programming Guide

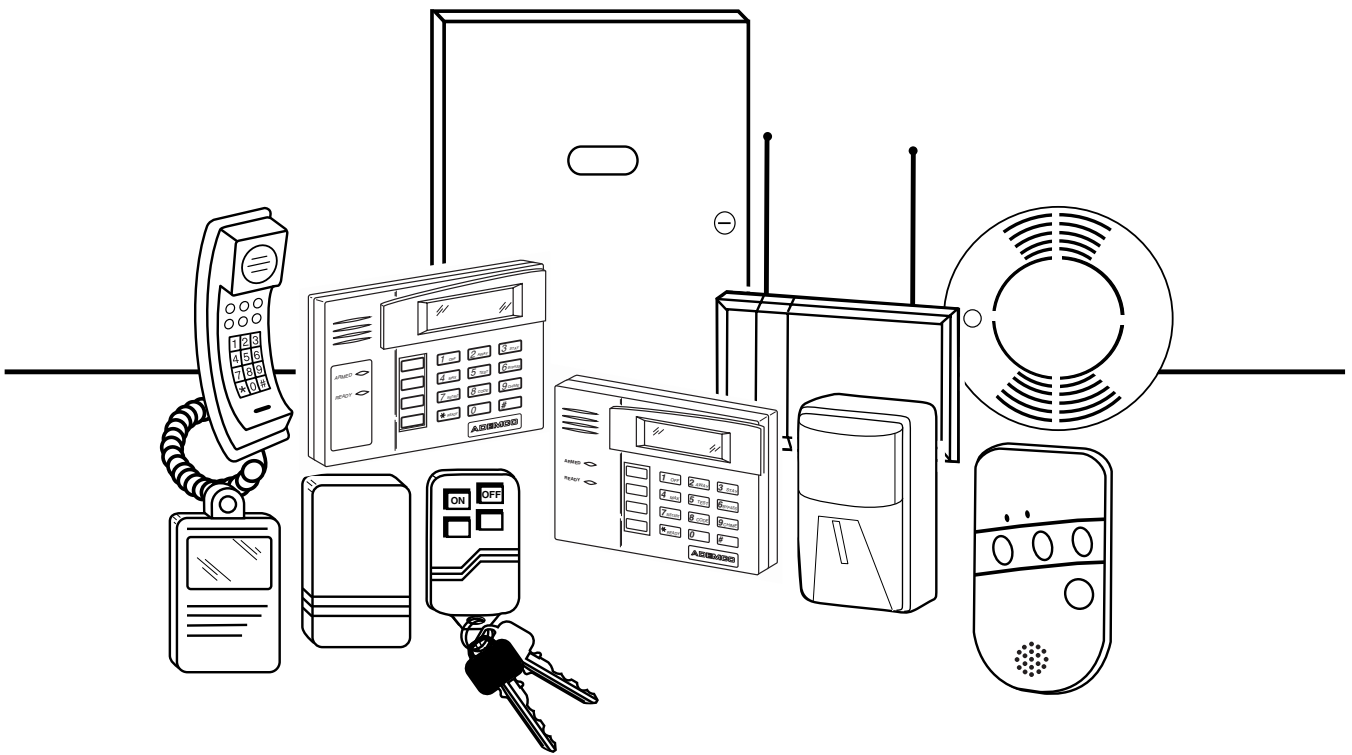

ADEMCO

K5305-1PRV1 4/02

TO ENTER PROGRAMMING MODE:

Local programming requires the use of an alpha keypad connected to the keypad terminals on the control.

A. POWER UP, then depress **[*]** and **[#]** both at once, within 50 seconds of powering up (if ***98** was used to exit program mode, this method must be used to reenter program mode).

OR

B. Initially, key: **Installer Code (4 + 1 + 1 + 2)** plus **8 + 0 + 0**.

DATA FIELD PROGRAMMING PROCEDURES

Task	Procedure
Go to a Data Field	Press [*] + [Field Number] , followed by the required entry.
Entering Data	When the desired field number appears, simply make the required entry. When the last entry for a field is entered, the keypad beeps three times and automatically displays the next data field in sequence. If the number of digits that you need to enter in a data field is less than the maximum digits available (for example, the phone number fields *41, *42), enter the desired data, then press [*] to end the entry. The next data field number is displayed.
Review a Data Field	Press [#] + [Field Number] . Data will be displayed for that field number. No changes will be accepted in this mode.
Deleting an Entry	Press [*] + [Field Number] + [*] . (Applies only to fields *40–*46, *94, and pager programming fields)

INTERACTIVE MODE PROGRAMMING (*56, *57, *58, *79, *80, *81, *82, *187)

Press **[*]** + **[Interactive Mode No.]** (for example, ***56**). The alpha display keypad will display the first of a series of prompts requesting entries.

Interactive Mode	Used to Program
*56 Zone Programming	Zone characteristics, report codes, alpha descriptors, and serial numbers for 5800 RF transmitters.
*57 Function Key Programming	Unlabeled keypad keys (known as ABCD keys) for special functions
*58 Zone Programming (Expert mode)	Same options as *56 mode, but with fewer prompts. Intended for those familiar with this type of programming, otherwise *56 mode is recommended.
*79 Output Device Mapping	Assign module addresses and map individual relays/powerline carrier devices
*80 Output Programming	4229 or 4204 Relay modules, Powerline Carrier devices, or on-board triggers
*81 Zone List Programming	Zone Lists for relay/powerline carrier activation, chime zones, pager zones, etc.
*82 Alpha Programming	Zone alpha descriptors

INITIALIZE DOWNLOAD and RESET DEFAULTS

***96** Initializes download ID and subscriber account number.

***97** Sets all data fields to original factory default values.

TO EXIT PROGRAMMING MODE:

***98** Exits programming mode and *prevents* re-entry by: **Installer Code + 8 + 0 + 0**. If ***98** is used to exit programming mode, system must be powered down, and method A above used to enter the programming mode.
See field *88 for other *98 Program mode lockout options.

***99** Exits programming mode and *allows* re-entry by: **Installer Code + 8 + 0 + 0** or method 1 above.

Special Messages

OC = OPEN CIRCUIT (no communication between Keypad and Control).

EE or **ENTRY ERROR** = ERROR (invalid field number entered; re-enter valid field number).

After powering up, **AC**, **dl** (disabled) or **Busy Standby** and **NOT READY** will be displayed after approximately 4 seconds. This will revert to a **"Ready"** message in approximately 1 minute, which allows PIRS, etc. to stabilize. You can bypass this delay by pressing **[#]** + **[0]**.

If **E4** or **E8** appears, more zones than the expansion units can handle have been programmed. Correct the programming and then completely de-power and re-power the control to clear this indication and remove the disable indication.

PROGRAMMING FORM

Programmable values apply to all controls, except field *189, which applies to the VISTA-20PS only.
 Entry of a number other than one specified will give unpredictable results. Values shown in brackets are factory defaults.
 Entries shown in dashed boxes indicate partition entries for VISTA-20P only (not applicable for VISTA-15P).

Field	Function	Data Entries	Programmable Values
SYSTEM SETUP (*20–*29)			
* 20	INSTALLER CODE	<input style="width: 60px;" type="text"/> [4112]	4 digits, 0–9
*21	QUICK ARM ENABLE	<input type="checkbox"/> [0,0] Part. 1 Part.2	0 = no; 1 = yes
*22	RF JAM OPTION	<input type="checkbox"/> [0]	0 = no RF Jam detection; 1 = send RF Jam report <u>UL: must be 1 if wireless devices are used</u>
*23	QUICK (FORCED) BYPASS	<input type="checkbox"/> [0,0] Part. 1 Part. 2	0 = no quick bypass <u>UL: must be "0"</u> 1 = allow quick bypass (code + [6] + [#])
* 24	RF HOUSE ID CODE	<input style="width: 60px;" type="text"/> [0000] Part. 1 Part. 2 Common	00 = disable all wireless keypad usage 01–31 = using 5827, 5827BD or 5804BD keypad [00,00,00]
*26	CHIME BY ZONE	<input type="checkbox"/> [0]	0 = no; 1 = yes (select zones to chime on zone list 3, using *81 Menu mode)
*27	POWERLINE CARRIER DEVICE (X–10) HOUSE CODE	<input type="checkbox"/> [0]	0 = A; 1 = B, 2 = C, 3 = D, 4 = E, 5 = F, 6 = G, 7 = H, 8 = I, 9 = J, #10 = K, #11 = L, #12 = M, #13 = N, #14 = O, #15 = P <u>UL: not for fire or UL installations</u>
28	ACCESS CODE FOR PHONE MODULE	<input style="width: 40px;" type="text"/> [00] (Partition 1 only)	00 = disable; 1st digit: enter 1–9; 2nd digit: enter # + 11 for "", or # + 12 for "#". <u>UL: must be "00" for UL Commercial Burg. installations</u>
* 29	LONG RANGE RADIO OUTPUT	<input type="checkbox"/> [0]	0 = disable; 1 = enable
ZONE SOUNDS AND TIMING (*31 – *39)			
*31	SINGLE ALARM SOUNDING per ZONE	<input type="checkbox"/> [0]	0 = no <u>UL: must be "0"</u> ; 1 = yes
*32	FIRE ALARMSOUNDER TIMEOUT	<input type="checkbox"/> [0]	0 = sounder stops at timeout; 1 = no sounder timeout <u>UL: must be "1" for fire install.</u>
*33	ALARM SOUNDER (BELL) TIMEOUT	<input type="checkbox"/> [1]	0 = none; 1 = 4 min; 2 = 8 min; 3 = 12 min; 4 = 16 min; <u>UL: For residential fire alarm installation, must be set for a minimum of 4 min (option 1); for UL Commercial Burglary installations, must be minimum 16 min (option 4)</u>
*34	EXIT DELAY	<input style="width: 40px;" type="text"/> [60,60] Part. 1 Part. 2	00 - 96 = 0 - 96 secs; 97 = 120 secs SIA Installations: minimum exit delay is 45 seconds <u>UL: see inst. instr. for requirements.</u> Common zones use same delay as partition 1.
*35	ENTRY DELAY #1 (zone type 01)	<input style="width: 40px;" type="text"/> [30,30] Part. 1 Part. 2 <div style="border: 1px solid black; padding: 2px; width: fit-content; margin-top: 5px;">Common zones use same delay as partition 1.</div>	00 - 96 = 0 - 96 seconds 97 = 120 seconds 98 = 180 seconds 99 = 240 seconds SIA Installations: minimum entry delay is 30 seconds <u>For UL Residential Burglary Alarm installations, must be set for a maximum of 30 seconds; entry delay plus dial delay should not exceed 1 min. For UL Commercial Burglar Alarm, total entry delay may not exceed 45 seconds.</u>
*36	ENTRY DELAY #2 (zone type 02)	<input style="width: 40px;" type="text"/> [30,30] Part. 1 Part. 2	See *35 Entry Delay 1 above for entries.
*37	AUDIBLE EXIT WARNING	<input type="checkbox"/> [1]	0 = no; 1 = yes SIA Installations: must be enabled (enter 1)
*38	CONFIRMATION OF ARMING DING	<input type="checkbox"/> [0,0] Part. 1 Part. 2	0 = no; 1 = yes (wired keypads and RF) 2 = yes, RF only <u>UL: must be "1" for UL Commercial Burglar Alarm inst.</u>
*39	POWER UP IN PREVIOUS STATE	<input type="checkbox"/> [1]	0 = no; 1 = yes <u>UL: must be "1"</u>

DIALER PROGRAMMING (*40 – *42)

Do not fill unused spaces. Enter 0–9; #+11 for '*'; #+12 for '#'; #+13 for a 2-second pause. If fewer than the maximum digits entered, exit the field by pressing [*]. The next data field number is displayed.

- * 40 PABX ACCESS CODE Enter up to 6 digits. To clear entries, press *40*. If call waiting used, enter "*" (#+11) 70" plus "# + 13" (pause).
- * 41 PRIMARY PHONE No.
- * 42 SECOND PHONE No.

Enter up to 20 digits. To clear entries, press *41* or *42* respectively.

NOTE: Entry of a number other than one specified will give unpredictable results.

For fields *43- *46: Enter 0-9; #+11 for B; #+12 for C; #+13 for D; #+14 for E; #+15 for F. Enter [*] as the fourth digit if a 3-digit account number (for 3+1 dialer reporting format) is used. Enter 0 as the first digit of a 4-digit account number for Nos. 0000-0999. Exit field by pressing * if only 3 digits are used. E.g., For Acct.

B234, enter:

- * 43 PARTITION 1 PRIMARY ACCT. No. Enter 4 or 10 digits, depending on selection in *48 Report Format. See box above. To clear entries, press *43*. [FFFF]
- * 44 PART. 1 SECONDARY ACCT. No. Enter 4 or 10 digits, depending on selection in *48 Report Format. See box above. To clear entries, press *44*. [FFFF]
- * 45 PARTITION 2 PRIMARY ACCT. No. Enter 4 or 10 digits, depending on selection in *48 Report Format. See box above. To clear entries, press *45*. [FFFF]
- * 46 PARTITION 2 SECONDARY ACCT. No. Enter 4 or 10 digits, depending on selection in *48 Report Format. See box above. To clear entries, press *46*. [FFFF]
- *47 PHONE SYSTEM SELECT [1] If Cent. Sta. /S NOT on a WATS line:
0=Pulse Dial; 1=Tone Dial;
if Cent. Sta. /S on a WATS line:
2 = Pulse Dial ; 3 = Tone Dial
- *48 REPORT FORMAT primary [77] secondary
0 = 3+1, 4+1 ADEMCO L/S STANDARD
1 = 3+1, 4+1 RADIONICS STANDARD
2 = 4+2 ADEMCO L/S STANDARD
3 = 4+2 RADIONICS STANDARD
5 = 10-digit ADEMCO CONTACT ID® REPORTING
6 = 4+2 ADEMCO EXPRESS
7 = 4-digit ADEMCO CONTACT ID® REPORTING
8 = 3+1, 4+1 ADEMCO L/S EXPANDED
9 = 3+1, 4+1 RADIONICS EXPANDED
- *49 SPLIT/DUAL REPORTING [0] 0 = Standard/backup reporting only (all to primary)

Primary Phone No.	2nd Phone No.
1 = Alarms, Restore, Cancel	Others
2 = All except Open/Close, Test	Open/Close, Test
3 = Alarms, Restore, Cancel	All
4 = All except Open/Close, Test	All
5 = All	All
- *50 BURGLARY DIALER DELAY [2] 0 = no delay [UL: must be "0"]
1 = 15 seconds
2 = 30 seconds
3 = 45 seconds
SIA Installations: delay must be minimum of 30 seconds
- *53 SESCOA/RADIONICS SELECT [0] 0 = Radionics (0-9, B-F)
1 = SESCOA (0-9 only reporting)
Select "0" for all other formats.
- *54 DYNAMIC SIGNALING DELAY [0] Select delay from 0 to 225 secs, in 15-sec increments.
0 = no delay (both signals sent), 1 = 15 secs,
2 = 30 secs, etc.
[UL: Grade AA must be "0;" Grade A must be "15" max]
- *55 DYNAMIC SIGNALING PRIORITY [0] 0 = Primary Dialer first; 1 = Long Range Radio first.
[For UL Commercial Burglary installations that use a DACT and LRR, this field must be "0".]
- *56, *57, *58 MENU MODES These are Menu Mode commands, not data fields, for Zone Programming, Function Key Programming, and Expert Mode Zone Programming respectively. See page 2 and their respective sections in the Installation and Setup Guide for procedures.

TO PROGRAM SYSTEM STATUS, & RESTORE REPORT CODES (*59 – *76, & *89):

For 3+1 or 4+1 Standard Format: Enter a code in the first box: 1-9, #+10 for 0, #+11 for B, #+12 for C, #+13 for D, #+14 for E, #+15 for F.

A 0 (not #+10) in the first box will disable a report. A 0 (not #+10) in the second box will result in automatic advance to the next field.

For Expanded or 4+2 Format: Enter codes in both boxes (1st and 2nd digits) for 1-9, 0, or B-F, as described above.

A 0 (not #+10) in the second box will eliminate the expanded message for that report. A 0 (not #+10) in both boxes will disable the report.

For Ademco Contact ID® Reporting: Enter any digit (other than 0) in the first box, to enable zone to report (entries in the second boxes are ignored).

A 0 (not #+10) in the first box disables the report. [UL: see installation instructions for requirements]

SYSTEM STATUS REPORT CODES (*59-* 68)

- *59 EXIT ERROR REPORT CODE [0] See box above.
- *60 TROUBLE REPORT CODE [00] See box above.
- *61 BYPASS REPORT CODE [00] See box above.
- *62 AC LOSS REPORT CODE [00] See box above.
- *63 LOW BAT REPORT CODE [00] See box above.
- *64 TEST REPORT CODE [00] See box above. Use Scheduling mode to set periodic test reports,

Each mode sets schedule 32 (VISTA-20P) or schedule 08 (VISTA-15P) to the stated repeat option; first test report sent 12 hours after command.

or use the following key commands:
installer code +[#] + [0] + 0 = test report sent every 24 hours
installer code +[#] + [0] + 1 = test report sent once per week
installer code +[#] + [0] + 2 = test report sent every 28 days

*65	OPEN REPORT CODE	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> [0,0,0]	See box above.
		Part. 1 Part. 2 Common	
*66	ARM AWAY/STAY RPT CODE	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> [0,0,0,0,0]	See box above.
		Away Stay Part. 1 Away Stay Part. 2 Away Stay Common	
*67	RF XMTR LOW BAT REPORT CODE	<input type="checkbox"/> [00]	See box on previous page.
			UL: must be enabled if wireless devices are used
*68	CANCEL REPORT CODE	<input type="checkbox"/> [00]	See box on previous page.
RESTORE REPORT CODES (*70 – *76)			
*70	ALARM RESTORE RPT CODE	<input type="checkbox"/> [0]	See box on previous page.
*71	TROUBLE RESTORE RPT CODE	<input type="checkbox"/> [00]	See box on previous page.
*72	BYPASS RESTORE RPT CODE	<input type="checkbox"/> [00]	See box on previous page.
*73	AC RESTORE RPT CODE	<input type="checkbox"/> [00]	See box on previous page.
*74	LOW BAT RESTORE RPT CODE	<input type="checkbox"/> [00]	See box on previous page.
*75	RF XMTR LO BAT RST RPT CODE	<input type="checkbox"/> [00]	See box on previous page.
			UL: must be enabled if wireless devices are used
*76	TEST RESTORE RPT CODE	<input type="checkbox"/> [00]	See box on previous page.
OUTPUT AND SYSTEM SETUP (*77 – *93)			
*77	DAYLIGHT SAVINGS TIME START\END MONTH	<input type="checkbox"/> [4][10]	0 = Disabled 1-12 = January-September (1 = Jan, 2 = Feb, etc) #+10 = October; #+11 = November; #+12 = December
*78	DAYLIGHT SAVINGS TIME START\END WEEKEND	<input type="checkbox"/> [1][5]	0 = disabled, 1 = first, 2 = second, 3 = third 4 = fourth, 5 = last, 6 = next to last, 7 = third to last
*79, *80, *81, *82	MENU MODES		These are Menu Mode commands, not data fields, for Output Device Mapping, Output Programming, Zone List Programming, and Alpha Programming respectively. See page 2 and their respective sections in the Installation and Setup Guide for procedures.
*84	AUTO STAY ARM	<input type="checkbox"/> [3]	0 = no, 1 = partition 1 only 2 = partition 2 only, 3 = both partitions
*85	CROSS ZONE TIMER	<input type="checkbox"/> [0]	0 = 15 seconds 6 = 2-1/2 min #+12 = 8 min 1 = 30 seconds 7 = 3 min #+13 = 10 min 2 = 45 seconds 8 = 4 min #+14 = 12 min 3 = 60 seconds 9 = 5 min #+15 = 15 min 4 = 90 seconds #+10 = 6 min 5 = 2 minutes #+11 = 7 min
	This option not for use in UL installations.	(assign cross zones on zone list 4, using *81 Menu mode)	
*86	CANCEL VERIFY	<input type="checkbox"/> [1]	0 = no, 1 = yes
*87	MISC. FAULT DELAY TIME (used with Configurable Zone Types "digit 6")	<input type="checkbox"/> [0]	0 = 15 seconds 6 = 2-1/2 min #+12 = 8 min 1 = 30 seconds 7 = 3 min #+13 = 10 min 2 = 45 seconds 8 = 4 min #+14 = 12 min 3 = 60 seconds 9 = 5 min #+15 = 15 min 4 = 90 seconds #+10 = 6 min 5 = 2 minutes #+11 = 7 min
			UL: may only be used on non-burglar alarm/ non-fire alarm zones when used in fire and/or UL burglar alarm installation
*88	PROGRAM MODE LOCKOUT OPTIONS	<input type="checkbox"/> [0]	0 = standard *98 installer code lockout (reentry only by [*] + [#] within 50 seconds after power up) 1 = lockout [*] + [#] reentry after *98 exit (reenter via installer code only) 2 = not used 3 = lockout all local programming after *98 exit (reentry via downloader only)
*89	EVENT LOG FULL REPORT CODE	<input type="checkbox"/> [00]	See box on previous page for report code entries.
*90	EVENT LOG ENABLES	<input type="checkbox"/> [3]	0 = None; 1 = Alarm/Alarm Restore 2 = Trouble/Trouble Restore; 4 = Bypass/Bypass Restore; 8 = Open/Close. <i>Example:</i> To select "Alarm/Alarm Restore", and "Open/Close", enter 9 (1 + 8); To select all, enter #15.
		NOTE: System messages are logged when any non-zero selection is made.	
*91	OPTION SELECTION	<input type="checkbox"/> [8]	0 = None 4 = AAV UL: do not use AAV 8 = Exit Delay Restart/Reset UL: must be disabled SIA Installations: Exit Delay should be enabled. Multiple choice example: for AAV (4) + Exit Delay restart (8) enter # + 12.

***92 PHONE LINE MONITOR ENABLE**

[0,0]
1 2

Entry 1: 0 = disabled, 1-15 = 1 min - 15 min
(#+10 = 10 min; #+11 = 11 min; #+12 = 12 min;
#+13 = 13 min; #+14 = 14 min; #+15 = 15 min)

UL: see Inst. Instructions for requirements

NOTE: Output Device must either be programmed to be STOPPED in field *80 or STOPPED by Code + # + 8 + output number.

Entry 2:

0 = Keypad display when line is faulted
1 = Keypad display plus keypad trouble sound
2 = Same as "1", plus programmed output device STARTS. If either partition is armed, external sounder activates also.

***93 No. OF REPORTS IN ARMED PERIOD PER ZONE (Swinger Suppression)**

[1]

0 = Unlimited Reports; 1 = 1 report; 2 = 2 reports
UL: must be "0"

DOWNLOAD INFORMATION (*94, *95)

***94 DOWNLOAD PHONE No.**

Enter up to 20 digits, 0-9; #+11 for '*'; #+12 for '#'; #+13 for a 2-second pause. Do not fill unused spaces. If fewer than 20 digits, exit field by pressing *. To clear entries from field, press *94*.
UL: downloading may be performed only if a technician is at the site.

***95 RING COUNT FOR DOWNLOADING**

[15]

0 = Disable Station Initiated Download;
1-14 = number of rings (1-9, # +10 =10, # +11 =11,
+12 =12, # +13 =13, # +14 =14);
15 = answering machine defeat (# +15 =15).

NOTE: Do not enter "0" if using 4285/4286 Phone Module.

***96, *97 INITIALIZE/RESET DEFAULTS**

These are commands, not data fields. See page 2.

***98, *99 EXIT COMMANDS**

These are commands, not data fields. See page 2.

PAGER OPTIONS (*160- *172)

***160 PAGER 1 PHONE No.**

Enter up to 20 digits. 0-9; #+11 = '*'; #+12 = '#'; #+13 = 2-second pause.

***161 PAGER 1 CHARACTERS**

Enter the optional prefix characters, up to 16 digits.
0-9; #+11 = '*'; #+12 = '#'; #+13 = 2-second pause.

***162 PAGER 1 REPORTING OPTIONS**

Part. 1 Part. 2 common
[0,0,0]

For each partition, select from the following options:
0 = no reports sent
1 = Open/closes all users
4 = All alarms and troubles
5 = All alarms / troubles, and open/closes for all users
12 = Alarms / troubles for zones entered in zone list 9
13 = Alarms / troubles for zones entered in zone list 9, and open/closes for all users

***163 PAGER 2 PHONE No.**

Enter up to 20 digits. 0-9; #+11 = '*'; #+12 = '#'; #+13 = 2-second pause.

***164 PAGER 2 CHARACTERS**

Enter the optional prefix characters, up to 16 digits.
0-9; #+11 = '*'; #+12 = '#'; #+13 = 2-second pause.

***165 PAGER 2 REPORTING OPTIONS**

[0,0,0]
Part. 1 Part. 2 common

See field *162 for reporting options. Select for each partition (use zone list 10 if using options 12 or 13).

***166 PAGER 3 PHONE No.**

Enter up to 20 digits. 0-9; #+11 = '*'; #+12 = '#'; #+13 = 2-second pause.

***167 PAGER 3 CHARACTERS**

Enter the optional prefix characters, up to 16 digits.
0-9; #+11 = '*'; #+12 = '#'; #+13 = 2-second pause.

***168 PAGER 3 REPORTING OPTIONS**

[0,0,0]
Part. 1 Part. 2 common

See field *162 for reporting options. Select for each partition (use zone list 11 if using options 12 or 13).

***169 PAGER 4 PHONE No.**

Enter up to 20 digits. 0-9; #+11 = '*'; #+12 = '#'; #+13 = 2-second pause.

***170 PAGER 4 CHARACTERS**

Enter the optional prefix characters, up to 16 digits.
0-9; #+11 = '*'; #+12 = '#'; #+13 = 2-second pause.

***171 PAGER 4 REPORTING OPTIONS**

[0,0,0]
Part. 1 Part. 2 common

See field *162 for reporting options. Select for each partition (use zone list 12 if using options 12 or 13).

***172 PAGER DELAY OPTION FOR ALARMS**

[3]

0 = none, 1 = 1 minute, 2 = 2 minutes, 3 = 3 minutes
This delay is for ALL pagers in the system.
NOTE: The delay does not reset for new alarms occurring while an existing pager delay is in progress.

MISCELLANEOUS SYSTEM FIELDS (*174-*181)

***174** CLEAN ME REPORTING OPTIONS (for ESL smoke detectors) [0]

0 = disable; 1 = Clean Me signal reports;
Note: If Clean Me is enabled, you must enter "3" in field *56 programming for zone 1 response time.

***177** DEVICE DURATION 1, 2 (used in *80 Menu mode-Device Actions 5/6) 1 2 [0] [0]

0 = 15 seconds 6 = 2-1/2 min #+11 = 7 min
 1 = 30 seconds 7 = 3 min #+12 = 8 min
 2 = 45 seconds 8 = 4 min #+13 = 10 min
 3 = 60 seconds 9 = 5 min #+14 = 12 min
 4 = 90 seconds #+10 = 6 min #+15 = 15 min
 5 = 2 minutes

***181** 50/60 HERTZ AC OPERATION [0]

0 = 60 Hz; 1 = 50 Hz

CONFIGURABLE ZONE TYPE OPTIONS (*182-*185)

***182** CONFIGURABLE ZONE TYPE 90 1 2 3 4 5 6 7 8 9 10

Enter the appropriate value for each entry, 1-10, based on the charts provided on the next page. Each entry is the sum of the values of its selected options (0-9, #+10=10, #+11=11, #+12=12, #+13=13, #+14=14, #+15=15).

UL: Do not configure zones as a fire alarm or UL burglar alarm zone.

***183** ZONE TYPE 90 REPORT CODES
IMPORTANT: Use existing Contact ID® codes, if appropriate, or define unique codes in CID code range 750-789. See important note in installation instructions.

90 ALARM ID: XXX
 TROUBLE ID: XXX

Enter the desired 3-digit Contact ID® report codes for alarms and troubles occurring on zones assigned to this zone type. Enter the codes sequentially (all 6 digits). When entering digits, [#] moves cursor back, [*] moves forward. Press [*] when done to continue.

***184** CONFIGURABLE ZONE TYPE 91 1 2 3 4 5 6 7 8 9 10

Enter the appropriate value for each entry, 1-10, based on the charts provided on the next page. Each entry is the sum of the values of its selected options (0-9, #+10=10, #+11=11, #+12=12, #+13=13, #+14=14, #+15=15).

UL: Do not configure zones as a fire alarm or UL burglar alarm zone.

***185** ZONE TYPE 91 REPORT CODES
IMPORTANT: Use existing Contact ID® codes, if appropriate, or define unique codes in CID code range 750-789. See important note in installation instructions.

91 ALARM ID: XXX
 TROUBLE ID: XXX

Enter the desired 3-digit Contact ID® report codes for alarms and troubles occurring on zones assigned to this zone type. Enter the codes sequentially (all 6 digits). When entering digits, [#] moves cursor back, [*] moves forward. Press [*] when done to continue.

SYMPHONY (AUI) ENABLE

***189** Symphony (AUI) ENABLE (VISTA-20PS Only) AUI 1 AUI 2 [0] [0]

Enter each AUI's home partition.
 0 = disabled
 1 = partition 1; 2 = partition 2; 3 = partition 3 (common)
NOTE: A minimum of one standard keypad must also be installed when AUI is used.

KEYPAD OPTIONS *190-*196 (NOTE: Options for keypad address 16 are set by the factory and cannot be changed.)

NOTE: Each keypad must be assigned a unique address. Keypads programmed with the same address will give unpredictable results.

***190** KEYPAD 2 DEVICE ADDRESS 17 Partition/Enable† [0] [0] Sound

†VISTA-20P: enter partition
 VISTA-15P: 1 = enable
 0 = disable

Partition: 0 = keypad disabled; 1-3 = part. no. (3 = com)
 Sound: 0 = no suppression
 1 = suppress arm/disarm and E/E beeps
 2 = Suppress chime beeps only
 3 = suppress arm/disarm, E/E, and chime beeps

***191** KEYPAD 3 DEVICE ADDRESS 18 Part./Enable† [0] [0] Sound

See field *190 for entries.

***192** KEYPAD 4 DEVICE ADDRESS 19 [0] [0]

See field *190 for entries.

***193** KEYPAD 5 DEVICE ADDRESS 20 [0] [0]

See field *190 for entries.

***194** KEYPAD 6 DEVICE ADDRESS 21 [0] [0]

See field *190 for entries.

***195** KEYPAD 7 DEVICE ADDRESS 22 [0] [0]

See field *190 for entries.

***196** KEYPAD 8 DEVICE ADDRESS 23 [0] [0]

See field *190 for entries.

***197** EXIT TIME DISPLAY INTERVAL [0]

0 = no display; 1-5 = seconds between display refresh

***198** DISPLAY PARTITION NUMBER (for Alpha Display Keypads) [0]

0 = no; 1 = yes (partition no. appears on Alpha Display)

***199** ECP FAIL DISPLAY [0]

0 = 3-digit display ("1" + device address)
 1 = 2-digit fixed-display as "91"

Configurable Zone Types Worksheets

Configurable zone types 90 and 91 can be programmed via downloader software or from a keypad using data fields *182-*185. Configurable zone types 92 and 93 (VISTA-20P only) can only be programmed using the downloader software.

Programming Configurable Zone Type options involves making 10 entries in data field *182 for zone type 90 and field *184 for zone type 91, where each entry represents the sum of the values of the various options shown in the tables below. Use fields *183 and *185 to program Contact ID report codes for these zone types.

ENTRY 1 (See note 5 for RF zones)		ENTRY 2 (See note 5 for RF zones)		
Response when system disarmed and zone is:				
Intact EOL <i>RF zone normal</i>	Open <i>RF zone N/A</i>	Shorted <i>RF zn off-normal</i>	Auto Restore	Vent Zone
0 = normal 1 = alarm 2 = trouble 3 = fault	0 = normal 4 = alarm 8 = trouble 12 = fault	0 = normal 1 = alarm 2 = trouble 3 = fault	0 = no 4 = yes	0 = no 8 = yes
Entry 1 = EOL + Open		Entry 2 = Short + auto restore + vent zone		

ENTRY 3 (See note 5 for RF zones)		ENTRY 4 (See note 5 for RF zones)		
Response when armed STAY and zone is:				
Intact EOL <i>RF zone normal</i>	Open <i>RF zone N/A</i>	Shorted <i>RF zn off-normal</i>	Byp. when disarmed	Byp. when armed
0 = normal 1 = alarm 2 = trouble 3 = fault	0 = normal 4 = alarm 8 = trouble 12 = fault	0 = normal 1 = alarm 2 = trouble 3 = fault	0 = no 4 = yes	0 = no 8 = yes
Entry 3 = EOL + Open		Entry 4 = Short + byp. disarmed + byp. armed		


ENTRY 5 (See note 5 for RF zones)		ENTRY 6 (See note 5 for RF zones)		
Response when armed AWAY and zone is:				
Intact EOL <i>RF zone normal</i>	Open <i>RF zone N/A</i>	Shorted <i>RF zn off-normal</i>	Dial Delay (see field *50)	Fault Delay (see field *87)
0 = normal 1 = alarm 2 = trouble 3 = fault	0 = normal 4 = alarm 8 = trouble 12 = fault	0 = normal 1 = alarm 2 = trouble 3 = fault	0 = no 4 = use delay	0 = no 8 = use delay see note 1
Entry 5 = EOL + Open		Entry 6 = Short + dial delay + fault delay		

ENTRY 7		ENTRY 8		
Display Faults	Power Reset/Verification	Use Entry Delay 1/2	Use Exit Delay	Respond as Interior Type
0 = show alarms when armed & disarmed 1 = don't show alarms when armed (show alarms, trbles, faults when disarmed) 3 = never show any alarms, trbles, faults	0 = no 4 = power reset after fault (by code + OFF) 12 = verification (see zone type 16)	0 = no 1 = delay 1 2 = delay 2	0 = no 4 = use exit delay	0 = no 8 = yes see note 2
Entry 7 = fault display + power reset/verification		Entry 8 = entry delay 1/entry delay 2 + exit delay + interior zone type		

ENTRY 9		ENTRY 10		
Alarm Sounds	Use Bell Timeout	Respond as Fire Zone	Trouble Sounds	Chime when Chime Mode On
0 = none 1 = steady keypad 2 = steady bell and keypad 3 = pulsing bell and keypad	0 = no 4 = yes see fields *32, *33	0 = no 8 = yes see zone type 09; see note 4	0 = none 1 = periodic beep 2 = trouble beeps	0 = no 4 = yes
Entry 9 = alarm sounds + bell timeout + fire zone		Entry 10 = trouble sounds + chime		

Entries for Fields *182 and *184		
Entry	Zone Type 90 (field *182)	Zone Type 91 (field *184)
1		
2		
3		
4		
5		
6		
7		
8		
9		
10		

To calculate the value for each entry:
Simply add the values of the selected options in each of the entry's columns (one option per column). For example, to program Entry 2 for "alarm response to short," "auto restore on," but not a "vent zone," enter 5 ("1" for alarm short + "4" for auto restore yes + "0" for vent zone no).

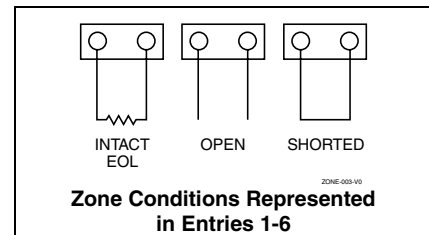

NOTES:

- Do not use the "fault delay" option with a configurable zone type if it is set for an entry or exit delay, otherwise unpredictable results may occur.
- To create an interior type zone, select "respond as interior zone type" (entry 8, interior type = yes), and set zone response to "fault" in entries 3-4 to ensure fault displays; do not set as "normal," "alarm," or "trouble."
- Do not set fire zones to respond as a "fault" (entries 1-6), otherwise faults will not display unless the [*] key is pressed.
- 4219/4229 modules must use EOLRs or unpredictable results may occur.
- RF Zones: The "open" option in entries 1, 3, and 5 is not applicable for RF zones. Use the "intact EOL" option for normal RF zone conditions and "shorted" for off-normal RF zone conditions.
- Zone-Doubling/Double-Balanced: A short on either zone of a zone-doubled pair or on a double-balanced zone causes a tamper condition.

***56 ZONE PROGRAMMING WORKSHEET (VISTA-15P supports up to 32 zones: 1-6, 9-34) [default shown in brackets]**

Zone	Zn Type	Part.	Report	Hardwire Type	Resp. Time	Location	
1	[09]	[1]		[EOL]	[1]		
2	[01]	[1]		[EOL]	[1]		
3	[03]	[1]		[EOL]	[1]		
4	[03]	[1]		[EOL]	[1]		
5	[03]	[1]		[EOL]	[1]		
6	[03]	[1]		[EOL]	[1]		
7	[03]	[1]		[EOL]	[1]		
8	[03]	[1]		[EOL]	[1]		
Zone	Zn Type	Part.	Report	Input Type	Loop	Serial No.	Location
9							
10							
11							
12							
13							
14							
15							
16							
17							
18							
19							
20							
21							
22							
23							
24							
25							
26							
27							
28							
29							
30							
31							
32							
33							
34							
35							
36							
37							
38							
39							
40							
41							
42							
43							
44							
45							
46							
47							
48							
49		[1]		[BR]			
50		[1]		[BR]			
51		[1]		[BR]			
52		[1]		[BR]			
53		[1]		[BR]			
54		[1]		[BR]			
55		[1]		[BR]			
56		[1]		[BR]			
57		[1]		[BR]			
58		[1]		[BR]			
59		[1]		[BR]			
60		[1]		[BR]			
61		[1]		[BR]			
62		[1]		[BR]			
63		[1]		[BR]			
64		[1]		[BR]			
95	[00]			N/A	N/A	N/A	keypad [1] / [*]
96	[00]			N/A	N/A	N/A	keypad [3] / [#]
99	[06]			N/A	N/A	N/A	keypad [*] / [#]

NOTES:

Zone Type: see chart on page 12;

Report Code: enabled if any digit entered as 1st digit;

Hardwire Type (zns 1-8):
 0 = EOL
 1 = NC
 2 = NO

Input Type:
 2 = AW (zones 9-48)
 3 = RF (zones 9-48)
 4 = UR (zones 9-48)
 5 = BR (zones 49-64)

NOTE: Zones 9-16 not available if zone doubling enabled.

Response Time:
 0 = 10msec
 1 = 350msec
 2 = 700msec
 3 = 1.2 sec

Reserved Zones

91 = addressable device report enable/disable default zone type = [05].

92 = Duress report enable/disable

***57 FUNCTION KEY PROGRAMMING**

Option	Function	A	B	C	D	Comments
01	Paging					
02	Time Display					
03	Arm AWAY					
04	Arm STAY					
05	Arm NIGHT-STAY					
06	Step Arming					
07	Device Activation					Device:
08	Comm. Test					
09	Macro Key 1					
10	Macro Key 2					
11	Macro Key 3					
12	Macro Key 4					
00	Emergency Keys:	zone 95	zone 99	zone 96	paging	
	Personal Emergency				n/a	
	Silent Alarm				n/a	
	Audible Alarm				n/a	
	Fire				n/a	

Emergency Keys: A = paired keys [1] / [*] (zone 95); B = paired keys [*] / [#] (zone 99); C = paired keys [3] / [#] (zone 96)

OUTPUT RELAYS/POWERLINE CARRIER DEVICES WORKSHEET FOR *79, *80 and *81.
 Applicable only if Relays and/or Powerline Carrier Devices are to be used.

***79 RELAY/POWERLINE CARRIER DEVICE MAPPING (Must program before using *80)**

Output No.	OUTPUT TYPE			
	Relay Module Addr.	Relay Pos (1-4)	X10 Unit No.	Description
01				
02				
03				
04				
05				
06				
07				
08				

Output No.	OUTPUT TYPE (09-16 apply to VISTA-20P only)			
	Relay Module Addr.	Relay Pos (1-4)	X10 Unit No.	Description
09				
10				
11				
12				
13				
14				
15				
16				
17	On-Board Trigger 1			norm output =
18	On-Board Trigger 2			norm output =

***81 ZONE LISTS FOR OUTPUT DEVICES**

Fill in the required data on the worksheet below and follow the procedure in the installation manual as you enter the data during the displays and prompts that appear in sequence.

NOTE: Record desired zone numbers below, noting that a list may include *any* or *all* of system's zone numbers.

List No.	Used For...	Contains These Zones...
01	General Purpose (GP)	
02	General Purpose	
03	Chime-by-Zone or GP	
04	Cross Zones	
05	Night-Stay Zones or GP	
06	General Purpose	
07	General Purpose	
08	General Purpose	
09	Zones activating pager 1	
10	Zones activating pager 2	
11	Zones activating pager 3	
12	Zones activating pager 4	

***80 OUTPUT DEFINITIONS**

Fill in the required data on the worksheet below and follow the programming procedure in the installation manual as you enter the data during the displays and prompts that appear in sequence.

- Notes:** 1. For Relays, 4229 and 4204 devices are programmed in *79, *80, and *81 modes.
 2. For Powerline Carrier devices (plcd), field *27 must be programmed with a House Code.
 3. Tamperers of expansion units cannot be used to operate devices.

Output Function Number (V20P=1-48) (V15P=1-24)	Activation Type and Detail				Partition Number (P) (if using ZT trig) 0 = any 1 = partition 1 2 = partition 2 3 = common	Event (for zone list/activated by)		Action 0 = off 1 = close 2 secs 2 = stay closed 3 = pulse 4 = toggle 5 = duration 1†† 6 = duration 2††	Output Number V20P=1-18 V15P=1-8, 17, 18	Device Type R = relay T = trigger X = X10
	Activated by 0=delete 1=zn list 2=zn type 3=zn no.	Zone List (ZL) 1-8 = list	Zone Type (ZT) (see table below)	Zone No. (ZN) 00=none 01-64		By Zone List	By Zone No.			
1										
2										
3										
4										
5										
6										
7										
8										
9										
10										
11										
12										
13										
14										
15										
16										
17										
18										
19										
20										
21										
22										
23										
24										
25										
26										
27										
28										
29										
30										
31										
32										
33										
34										
35										
36										
37										
38										
39										
40										
41										
42										
43										
44										
45										
46										
47										
48										

ZONE TYPE/SYSTEM OPERATION – Choices for Zone Types are:

- | | | | |
|------------------------|------------------------------|--------------------------|-----------------------|
| 00 = Not Used | 05 = Trouble Day/Alarm Night | 10 = Interior w/Delay | 24 = Silent Burglary |
| 01 = Entry/Exit#1 | 06 = 24 Hr Silent | 12 = Monitor Zone | 77 = Keypad |
| 02 = Entry/Exit#2 | 07 = 24 Hr Audible | 14 = Carbon Monoxide | 81 = AAV Monitor Zone |
| 03 = Perimeter | 08 = 24 Hr Aux | 16 = Fire w/Verification | 90-91 = Configurable |
| 04 = Interior Follower | 09 = Fire | 23 = No Alarm Response | |

Choices for System Operation are:

- | | | |
|-----------------------------|----------------------------|--------------------------|
| 20 = Arming–Stay | 38 = Chime | 52 = Kissoff |
| 21 = Arming–Away | 39 = Any Fire Alarm | 54 = Fire Zone Reset |
| 22 = Disarming (Code + OFF) | 40 = Bypassing | 58 = Duress |
| 31 = End of Exit Time | 41 = **AC Power Failure | 60 = AAV Trigger |
| 32 = Start of Entry Time | 42 = **System Battery Low | 66 = Function key† |
| 33 = Any Burglary Alarm | 43 = Communication Failure | 67 = Bell Failure |
| 36 = **At Bell Timeout** | | 68 = TELCO Line Fault |
| | | 78 = Keypad red LED††† |
| | | 79 = Keypad green LED††† |

Note: In normal operation mode:

Code + # + 7 + NN Key Entry **starts** Device
 Code + # + 8 + NN Key Entry **stops** Device

- ** Use 0 (any) for Partition No. (P) entry.
 *** Or at Disarming, whichever occurs earlier.
 † Use *57 Menu mode to assign the function key.
 †† Duration is set in program field *177.
 ††† Device action not used for these choices.

Zone Type Definitions

Type 00 Zone Not Used	Use this zone type if the zone is not used.
Type 01 Entry/Exit Burglary #1	<ul style="list-style-type: none"> Assign to zones that are used for primary entry and exit. Provides entry delay if the control is armed in the Away or Stay modes. No entry delay is provided when the panel is armed in the Instant mode. Entry delay #1 is programmable for each partition. Exit delay begins whenever the control is armed, regardless of the arming mode selected, and is independently programmable.
Type 02 Entry/Exit Burglary #2	<ul style="list-style-type: none"> Assign to zones that are used for entry and exit and require more time than the primary entry/exit point. Provides a secondary entry delay, in same manner as entry delay #1. Entry delay #2 is programmable for each partition. Exit delay is same as described for Type 01.
Type 03 Perimeter Burglary	<ul style="list-style-type: none"> Assign to all sensors or contacts on exterior doors and windows. Provides an instant alarm if the zone is faulted when the panel is armed in the Away, Stay, Instant, or Maximum modes.
Type 04 Interior Follower	<ul style="list-style-type: none"> Assign to a zone covering an area such as a foyer, lobby, or hallway through which one must pass upon entry (to and from the keypad). Provides a delayed alarm (using the programmed entry/exit time) if the entry/exit zone is faulted first. Otherwise this zone type gives an instant alarm. Active when the panel is armed in the Away mode. Bypassed automatically when the panel is armed in the Stay or Instant modes.
Type 05 Trouble by Day/ Alarm by Night	<ul style="list-style-type: none"> Assign to a zone that contains a foil-protected door or window (such as in a store), or to a zone covering a sensitive area such as a stock room, drug supply room, etc. Can also be used on a sensor or contact in an area where immediate notification of an entry is desired. Provides an instant alarm if faulted when armed in the Away, Stay, Instant or Maximum (night) modes. During the disarmed state (day), the system will provide a latched trouble sounding from the keypad (and a central station report, if desired).
Type 06 24-hour Silent Alarm	<ul style="list-style-type: none"> Usually assigned to a zone containing an emergency button. Sends a report to the central station but provides no keypad display or sounding.
Type 07 24-hour Audible Alarm	<ul style="list-style-type: none"> Assign to a zone that has an emergency button. Sends a report to the central station, and provides an alarm sound at the keypad, and an audible external alarm.
Type 08 24-hour Auxiliary Alarm	<ul style="list-style-type: none"> Assign to a zone containing an emergency button, or to a zone containing monitoring devices such as water or temperature sensors. Sends a report to the central station and provides an alarm sound at the keypad. (No bell output is provided.)
Type 09 Fire	<ul style="list-style-type: none"> Provides a fire alarm on short circuit and a trouble condition on open circuit. A fire alarm produces a pulsing bell output. This zone type is always active and cannot be bypassed. Note: Hardwired zone 1 should be used with 2-wire smoke detectors; zones 2-8 can be used with 4-wire smoke detectors; any wireless zone can be used as a fire zone.
Type 10 Interior w/Delay	<ul style="list-style-type: none"> Provides entry delay (using the programmed entry time), if tripped when the panel is armed in the Away mode. Entry Delay begins whenever sensors in this zone are violated, regardless of whether or not an entry/exit delay zone was tripped first. Bypassed when the panel is armed in the Stay or Instant modes.
Type 12 Monitor Zone	<ul style="list-style-type: none"> Works as a dynamic monitor of a zone fault/trouble. In the case of a short/open, the message, "ALARM-24 Hr. Non-Burg. -#XXX" (where XXX is the zone number) will be sent to the Central Station. The system keypad will display a "check" message indicating the appropriate zone (but keypad beeping does not occur). Upon restoral of the zone, the message, "RESTORE-24 Hr. Non-Burg. -#XXX" will be sent to the Central Station. The "check" message will automatically disappear from the keypad dynamically when the zone restores; a user code + off sequence is not needed to reset the zone. Faults of this zone type are independent of the system, and can exist at the time of arming without interference. Since this is a "trouble" zone type, do not use this zone type with relays set to activate upon "alarm."
Type 14 Carbon Monoxide	<ul style="list-style-type: none"> Assigned to any zone with a carbon monoxide detector. The bell output will pulse when this zone type is alarmed. Always active and cannot be bypassed.
Type 16 Fire w/Verification	<ul style="list-style-type: none"> Provides a fire alarm when zone is shorted, but only after alarm verified. System verifies alarm by resetting zones for 12 seconds after short is detected. A subsequent short circuit within 90 seconds triggers fire alarm. Provides a trouble response when zone is open.
Type 20 Arm-Stay	<ul style="list-style-type: none"> Arms the system in Stay mode when the zone is activated. Pushbutton units send the user number to the central station when arming or disarming. User code for button must be assigned.

- Type 21 Arm-Away**
 - Arms the system in Away mode when the zone is activated.
 - Pushbutton units send the user number to the central station when arming or disarming.
 - User code for button must be assigned.

- Type 22 Disarm**
 - Disarms the system when the zone is activated.
 - User code for button must be assigned.

- Type 23* No Alarm Response**
 - Can be used on a zone when an output relay action is desired, but with no accompanying alarm (e.g., lobby door access).

- Type 24 Silent Burglary**
 - Usually assigned to all sensors or contacts on exterior doors and windows where bells and/or sirens are NOT desired.
 - Provides an instant alarm, with NO audible indication at any keypad or external sounder, if the zone is faulted when the system is armed in the Away, Stay, Instant, or Maximum modes.
 - A report is sent to the central station.

- Type 77 Keyswitch**
 - Assign to zone wired to a keyswitch.

- Type 81 AAV Monitor Zone**
 - Assign to zone connected to AAV module.
 - Monitors 2-way voice sessions as follows:
 - When the zone is faulted, all alarm sounding and dialer reporting stops, except for fire alarms, which immediately terminate the voice session and cause a fire report to be sent.
 - When the zone is restored (session ended), sounding resumes (if bell timeout has not expired) and reports that were stopped are sent.

- Types 90-93 Installer Defined**
 - These zone types can be programmed for various custom responses. See data fields *182-*185.
 - Types 92 and 93 can only be programmed via the downloader.
 - UL: Zone types 90-93 may not be used as fire or burglar zones in fire or UL burglar alarm installations.

*The system can still be armed when these zone types are in a faulted condition.

Schedules (installer code + [#] + [6] [4]; *master code can only access schedules 01-16 for VISTA-20P, 01-04 for VISTA-15P, and events 00-07 for both controls; VISTA-15P supports up to 8 schedules, VISTA-20P supports up to 32 schedules*)

No.	Event (see list below)	Device No. for "01" events: enter 01-18	Group No. for "02" events: enter 1-8	Partition for "04-06" events: enter 1, 2, or 3	Start Time/ Days	Stop Time/ Days	Repeat (yes/no)	Random (yes/no)
01								
02								
03								
04								
05								
06								
07								
08								
09								
10								
11								
12								
13								
14								
15								
16								
17								
18								
19								
20								
21								
22								
23								
24								
25								
26								
27								
28								
29								
30								
31								
32								

- | | | | |
|---------|-------------------------|-------------------------|--------------------------------|
| Events: | <u>Master/Installer</u> | | <u>Installer Only</u> |
| | 00 = clear event | 04 = forced STAY arm | 10 = display custom words 8-10 |
| | 01 = device on/off | 05 = forced AWAY arm | 11 = periodic test report |
| | 02 = user access | 06 = auto disarm | |
| | 03 = latch key report | 07 = display "reminder" | |

ALPHA VOCABULARY LIST (For Entering Zone Descriptors)

000 (Word Space)	• 057 DOOR *	- L -	- R -
- A -	• 059 DOWN	• 106 LAUNDRY *	155 RADIO
• 001 AIR	• 060 DOWNSTAIRS	• 107 LEFT	• 156 REAR
• 002 ALARM *	061 DRAWER	108 LEVEL	157 RECREATION
004 ALLEY	• 062 DRIVEWAY	• 109 LIBRARY *	159 REFRIGERATION
005 AMBUSH	• 064 DUCT	• 110 LIGHT	160 RF
• 006 AREA	- E -	111 LINE	• 161 RIGHT
• 007 APARTMENT	• 065 EAST	• 113 LIVING *	• 162 ROOM *
• 009 ATTIC *	066 ELECTRIC	• 114 LOADING	163 ROOF
010 AUDIO	067 EMERGENCY *	115 LOCK	- S -
- B -	068 ENTRY	116 LOOP	164 SAFE
• 012 BABY *	• 069 EQUIPMENT	117 LOW	165 SCREEN
• 013 BACK *	• 071 EXIT *	• 118 LOWER	166 SENSOR
• 014 BAR	072 EXTERIOR	- M -	• 167 SERVICE
• 016 BASEMENT *	- F -	• 119 MACHINE	• 168 SHED *
• 017 BATHROOM *	• 073 FACTORY	121 MAIDS	169 SHOCK
• 018 BED	075 FAMILY	122 MAIN *	• 170 SHOP *
• 019 BEDROOM *	• 076 FATHERS	• 123 MASTER *	171 SHORT
020 BELL	• 077 FENCE	• 125 MEDICAL *	• 173 SIDE *
• 021 BLOWER	• 079 FIRE *	126 MEDICINE	174 SKYLIGHT
• 022 BOILER	• 080 FLOOR *	128 MONEY	175 SLIDING *
023 BOTTOM	081 FLOW	129 MONITOR	• 176 SMOKE *
025 BREAK	082 FOIL	• 130 MOTHERS	• 178 SONS
• 026 BUILDING	• 083 FOYER	• 131 MOTION *	• 179 SOUTH
- C -	084 FREEZER	132 MOTOR	180 SPRINKLER
028 CABINET	• 085 FRONT *	- N -	• 182 STATION
• 029 CALL	- G -	• 134 NORTH	184 STORE
030 CAMERA	• 089 GARAGE *	135 NURSERY	• 185 STORAGE *
031 CAR	• 090 GAS	- O -	186 STORY
033 CASH	091 GATE	• 136 OFFICE *	190 SUPERVISED *
034 CCTV	• 092 GLASS	• 138 OPEN *	191 SUPERVISION
035 CEILING	093 GUEST	139 OPENING	192 SWIMMING
036 CELLAR	094 GUN	• 140 OUTSIDE	193 SWITCH
• 037 CENTRAL	- H -	142 OVERHEAD	- T -
038 CIRCUIT	• 095 HALL *	- P -	194 TAMPER
• 040 CLOSED *	• 096 HEAT	143 PAINTING	196 TELCO
• 046 COMPUTER	098 HOLDUP	• 144 PANIC *	197 TELEPHONE
047 CONTACT	099 HOUSE	145 PASSIVE	• 199 TEMPERATURE
- D -	100 INFRARED	• 146 PATIO *	200 THERMOSTAT
• 048 DAUGHTERS	• 101 INSIDE *	147 PERIMETER	• 201 TOOL
049 DELAYED	102 INTERIOR	• 148 PHONE	202 TRANSMITTER
• 050 DEN *	103 INTRUSION	150 POINT	- U -
051 DESK	- J -	151 POLICE *	• 205 UP
• 052 DETECTOR *	104 JEWELRY	152 POOL *	• 206 UPPER
• 053 DINING *	- K -	• 153 POWER	• 207 UPSTAIRS *
054 DISCRIMINATOR	• 105 KITCHEN *		• 208 UTILITY *
055 DISPLAY			245 Custom Word #1
			246 Custom Word #2
			247 Custom Word #3
			248 Custom Word #4
			249 Custom Word #5
			250 Custom Word #6
			251 Custom Word #7
			252 Custom Word #8
			253 Custom Word #9
			254 Custom Word #10

Note: Bulleted (*) words in **boldface type** are those that are also available for use by the 4285/4286 Phone Module. If using a Phone module, and words other than these are selected for Alpha descriptors, the module will not provide annunciation of those words.

Italicized words followed by an asterisk indicate those words supported by the 6160V/6150V Voice Keypads

CHARACTER (ASCII) CHART (For Adding Custom Words)

32 (space)	41)	50 2	59 ;	68 D	77 M	86 V
33 !	42 *	51 3	60 <	69 E	78 N	87 W
34 "	43 +	52 4	61 =	70 F	79 O	88 X
35 #	44 ,	53 5	62 >	71 G	80 P	89 Y
36 \$	45 -	54 6	63 ?	72 H	81 Q	90 Z
37 %	46 .	55 7	64 @	73 I	82 R	
38 &	47 /	56 8	65 A	74 J	83 S	
39 '	48 0	57 9	66 B	75 K	84 T	
40 (49 1	58 :	67 C	76 L	85 U	

5800 Series Transmitter Input Loop Identification

All of the transmitters illustrated below have one or more unique factory assigned input (loop) ID codes. *Each of the inputs requires its own programming zone* (e.g., a 5804's four inputs require four programming zones).

WIRELESS INPUT TYPES

"RF" (Supervised RF) Type send periodic check-in signals, as well as fault, restore and low battery signals. The transmitter must remain within the receiver's range.


"UR" (Unsupervised RF) Type send all the signals that the "RF" Type does, but the control does not supervise the check-in signals. The transmitter may, therefore, be carried off-premises.

"BR" (Unsupervised Button RF) Type only send fault signals. They do not send restore or check-in signals. They will indicate a low battery condition when tested or activated normally. They can be carried off-premises.

Note: For information on any transmitter not shown above, refer to the instructions accompanying that transmitter for details regarding loop numbers, etc.

UL NOTE: The following transmitters are not intended for use in UL installations: 5802MN, 5802MN2, 5804, 5804BD, 5814, 5816TEMP, 5819, 5819WHS & BRS, and 5850.

The 5827BD and 5800TM can be used in UL Listed Residential Burglar installations.

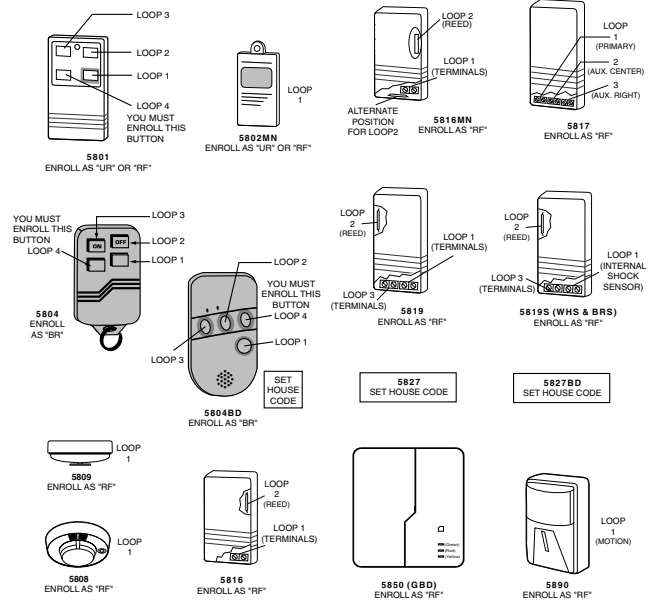

Wireless Key Predefined Default Templates

For 5804	Loop	Function	Zone Type	For 5804BD	Loop	Function	Zone Type
TEMPLATE 1	1	No Response	23	TEMPLATE 4	1	No Response	23
	2	Disarm	22		2	No Response	23
	3	Arm Away	21		3	Arm Away	21
	4	No Response	23		4	Disarm	22
TEMPLATE 2	1	No Response	23	TEMPLATE 5	1	No Response	23
	2	Disarm	22		2	Arm Stay	20
	3	Arm Away	21		3	Arm Away	21
	4	Arm Stay	20		4	Disarm	22
TEMPLATE 3	1	24-hour audible	7	TEMPLATE 6	1	24-hour audible	7
	2	Disarm	22		2	Arm Stay	20
	3	Arm Away	21		3	Arm Away	21
	4	Arm Stay	20		4	Disarm	22

Table of Device Addresses

This Device	Uses Address	Reports as††	Enabled By...
RF Receiver	00	100	*56 zone programming: input device type entry
Long Range Radio	03	103	automatic if output to long range radio field *29 enabled
4286 Voice Module	04	104	automatic if phone module access code field *28 enabled
Zone Expanders (4219/4229): module 1 (for zones 09 - 16) module 2 (for zones 17 - 24) module 3 (for zones 25 - 32) module 4 zones 33 - 40 module 5 zones 41 - 48	07 08 09** 10** 11**	107 108 109 110 111	*56 zone programming: input device type entry, then: automatic if zone no. 9-16 entered as AW type or relay assigned automatic if zone no. 17-24 entered as AW type or relay assigned automatic if zone no. 25-32 entered as AW type or relay assigned automatic if zone no. 33-40 entered as AW type or relay assigned automatic if zone no. 41-48 entered as AW type or relay assigned
Relay Modules (4204): module 1 module 2 module 3 module 4	12 13 14** 15**	112 113 114 115	*79 output device programming: device address prompt: entered at device address prompt entered at device address prompt entered at device address prompt entered at device address prompt
Keypads: keypad 1 keypad 2 keypad 3 keypad 4 keypad 5 keypad 6 keypad 7 keypad 8	16 17 18 19 20 21 22 23	n/a n/a n/a n/a n/a n/a n/a n/a	data field programming as listed below: always enabled, all sounds enabled. data field *190 data field *191 data field *192 data field *193 data field *194 data field *195 data field *196
5800TM Module	28	n/a	automatic

** These module addresses apply to VISTA-20P only.

†† Addressable devices are identified by "1" plus the device address when reporting. Enter report code for zone 91 to enable addressable device reporting (default = reports enabled). See field *199 for addressable device (ECP) 3-digit/2-digit identification keypad display options.



A DIVISION OF PITTLWAY CORPORATION
165 Eileen Way, Syosset, NY 11791
Copyright © 2001 Pitlway Corporation



24-HR BATTERY STANDBY REQUIRED FOR FIRE INSTALLATIONS. USE 12V, 17.2AH BATTERY FOR 600mA AUX POWER. SEE INSTRUCTIONS.

BATTERY CAPACITY FOR EMERGENCY BURGLARY STANDBY USE AT LEAST 4 HRS

CHARGING VOLTAGE 13.8VDC. MAXIMUM CHARGING CURRENT 650mA.

SEALED LEAD-ACID TYPE. BATTERY NORMALLY NEED NOT BE REPLACED FOR AT LEAST 3 YRS.

TO DETERMINE TOTAL STANDBY LOAD ON BATTERY, ADD 100mA TO TOTAL OF AUX. POWER OUTPUT AND REMOTE KEYPAD CURRENTS.

USE UL LISTED LIMITED ENERGY CABLE FOR ALL CONNECTIONS

CLASS 2 PLUG-IN TRANSFORMER 16.5VAC, 25VA (e.g. ADEMCO No. 1321). (USE No. 1321CN IN CANADA)

USE 4300 / 1321X10 TRANSFORMER INTERFACE IN PLACE OF 1321 OR 1321CN WHEN POWER LINE CARRIER DEVICES ARE BEING USED. (SEE INSTRUCTIONS FOR CONNECTIONS)

THIS EQUIPMENT SHOULD BE INSTALLED IN ACCORDANCE WITH THE NATIONAL FIRE PROTECTION ASSOCIATION'S STANDARD 72, CHAPTER 2 (NATIONAL FIRE PROTECTION ASSOCIATION, BATTERY-MARCH PARK, QUINCY, MA 02269). PRINTED INFORMATION DESCRIBING PROPER INSTALLATION, OPERATION, TESTING, MAINTENANCE, EVACUATION PLANNING AND REPAIR SERVICE IS TO BE PROVIDED WITH THIS EQUIPMENT

CONNECTION OF THE FIRE ALARM SIGNAL TO A FIRE ALARM HEADQUARTERS OR A CENTRAL STATION SHALL BE PERMITTED ONLY WITH THE PERMISSION OF THE LOCAL AUTHORITY HAVING JURISDICTION. THE BURGLAR ALARM SIGNAL SHALL NOT BE CONNECTED TO A POLICE EMERGENCY NUMBER.

BATTERY FUSE FOR REPLACEMENT, USE SAME VALUE (e.g. ADEMCO No. 90-12)




FLYING LEADS FOR BATTERY CONNECTION

RED JUMPER CUT FOR BELL SUPERVISION. ALSO, CONNECT 2000 OHM RESISTOR DIRECTLY ACROSS SOUNDER.

8-PIN CONNECTOR USED FOR 4300/1321X10 TRANSFORMER

CONNECTIONS AND FOR ON-BOARD TRIGGERS SEE INSTRUCTIONS



(USE SA4120XM-1 CABLE) TO TRANS. TO TERM 4 (BLK), TO TERM 5 (RED), TO TERM 6 (GRN), TO TERM 7 (YEL)

OPTIONAL FOR UP TO 40 ADDITIONAL ZONES (FROM EITHER OR BOTH GROUPS)



ADEMCO No. 4219 WIRED EXPANSION MODULE (8 ADD'L EOLR WIRED ZONES)

OR ADEMCO No. 4229 WIRED EXPANSION/RELAY MODULE (8 ADD'L EOLR WIRED ZONES PLUS 2 OUTPUT RELAYS)




OR ADEMCO No. 4204 RELAY MODULE (4 OUTPUT RELAYS)

AND/OR ADEMCO 5881* Type RF RECEIVER WIRELESS ZONES

5881L: UP TO 8
5881M: UP TO 16
5881H: UP TO 64
*5882 IN CANADA

SET UNITS DIP SWITCH FOR DEVICE ADDRESSES 7 - 15 SEE INSTRUCTIONS


SET RECEIVER'S DIP SWITCH FOR DEVICE ADDRESS OF '0'. SEE INSTRUCTIONS

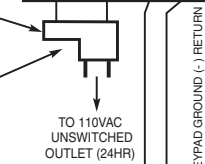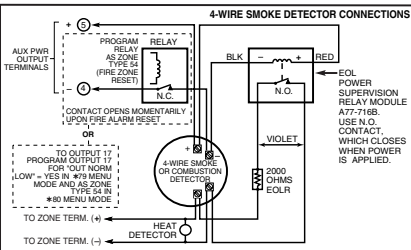

ALARM OUTPUT 10.5-13.8VDC, 2A MAX. (600mA MAX. FOR UL USAGE, INCLUDING AUX POWER) STEADY FOR BURGLARY/PANIC, TEMPORAL PULSE SOUNDING FOR FIRE. CAN USE ADEMCO No. 702 SIREN, OR 12V BELL. SEE INSTRUCTIONS.


NOTE: KEYPAD (S) CURRENT (IN BOTH PARTITIONS) AND ALL OTHER DEVICES DRAWING POWER FROM TERMS 4 & 5 MUST BE INCLUDED IN AUX CURRENT DRAIN CALCULATIONS.

FOR COMPLETE INFORMATION, SEE INSTRUCTIONS K5305-1V1

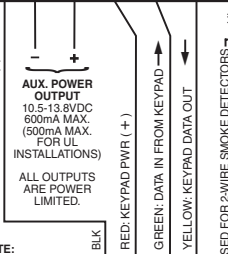


REMOTE KEYPADS AND OTHER ADDRESSABLE DEVICES (e.g. 5800TM, 4285/4286, L.R.R., 4219, 4229, 4204, 5881)

REMOTE KEYPADS CAN USE 6150 OR 6160 KEYPADS. LOCAL PROGRAMMING MUST BE DONE WITH A 6138S6160, BUT NEED NOT REMAIN IN THE SYSTEM (SET TO ADDRESS 16).

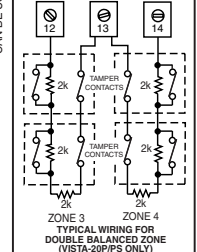


- MAXIMUM LOOP RESISTANCE: (EACH ZONE) 300 OHMS (PLUS EOLR)
- RESPONSE, ZONES 1-8: 10, 350, OR 700 MSEC (PROGRAMMABLE)
- MAXIMUM NUMBER OF 2-WIRE SMOKE DETECTORS ON ZONE 1 IS 16; DETECTORS MUST HAVE COMPATIBILITY IDENTIFIER AS "A".

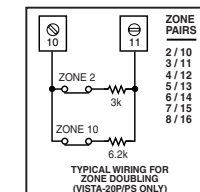

POWER SHUTDOWN NOTE: SYSTEM SHUTS DOWN SENSOR DETECTION PROCESSING IF CONTROL'S VOLTAGE DROPS BELOW 9.6V.

ALL DEVICES AND ACCESSORIES USED IN A CANADIAN INSTALLATION MUST BE LISTED FOR USE IN CANADA

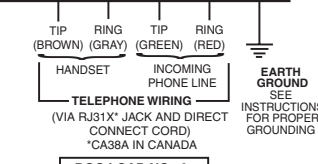

TELEPHONE WIRING (VIA RJ31X* JACK AND DIRECT CONNECT CORD) *CA38A IN CANADA

DOC LOAD NO.: 3

FOR CONNECTION OF OPTIONAL 4285 OR 4286 VIP MODULES TO PHONE TERMINALS, SEE INSTRUCTIONS

WARNING: TO PREVENT RISK OF SHOCK, DISCONNECT TELEPHONE LINE AT TELCO JACK BEFORE SERVICING THIS UNIT.

THIS DEVICE COMPLIES WITH PART 15 OF FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRABLE OPERATION.

WEEKLY TESTING IS REQUIRED TO ENSURE PROPER OPERATION OF THIS SYSTEM. IN ADDITION, THIS SYSTEM MUST BE CHECKED BY A QUALIFIED TECHNICIAN AT LEAST ONCE EVERY THREE (3) YEARS.

VISTA-20P/PS SERIES, VISTA-15P SERIES SUMMARY OF CONNECTIONS