

ART HANGING INSTRUCTION

RECOMMENDED TOOLS




Drill



Tape Measure



Hammer

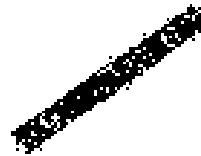

Level



Pencil

HARDWARE SUPPLIED




Blue Anchors




Screws

MOUNT ART TO DRYWALL SURFACE AS FOLLOWS:


1. Mark wall anchor locations; make certain the marks are level and spaced apart as necessary

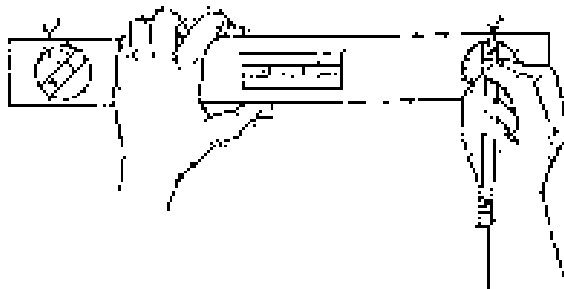


3. Tap the supplied drywall anchors firmly into drilled holes

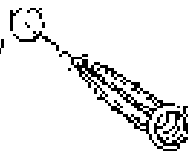

5. Hang your art and enjoy!

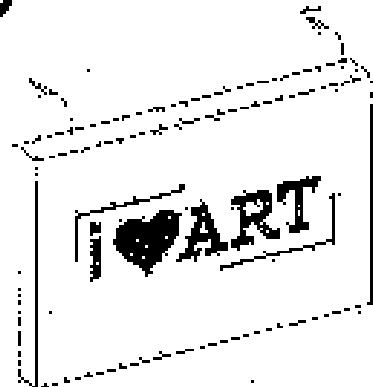

2. Drill holes, 3/16" diameter through drywall

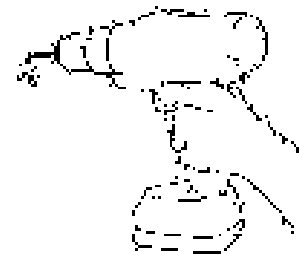

4. Carefully drive the drywall screws into the anchors, leaving the screw heading protruding from the wall surface as follows:

Thin Art Frames 1/4"



Thick Art Frames 1/8"



iCanvas Quality Guarantee:

When possible, to avoid the frustration of any issues with art, iCanvas is picky about only using premium images, materials and packing to ensure that our customers receive art safely to your doorstep. If we find any defects in the condition or quality of your piece of art, we will exchange it for free of charge. Contact us at info@icanvas.com and we'll work it out.

iCanvas

CANVAS CARE GUIDE

RECOMMENDED TOOLS



Hammer




Towel





Ice cube

FIXING LOOSE CANVAS

In the corners of the canvas on the back, you will notice two wedges in each corner that allows you to adjust the tension by slightly tapping and tugging with a hammer.

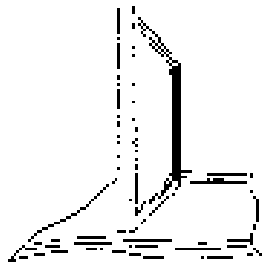


Stand piece of art upright on a flat surface and place a piece of cloth between the art and the surface to protect both.

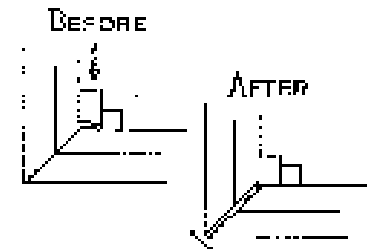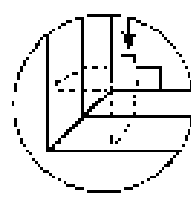


Tap down on the stretcher and give with a hammer where the brown point. Locate canvas so always be heading down towards the hard surface. Tap until you see the frame begin to split further apart. Repeat process until canvas is pulled taut.

FIXING INDENTATIONS & CREASES

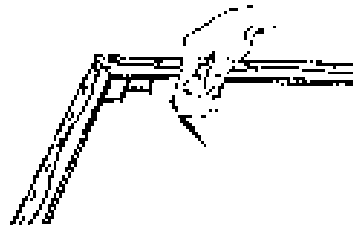


On the back of the canvas, in the place of indentation place the piece of ice directly to the new crease for about 30-60 seconds.

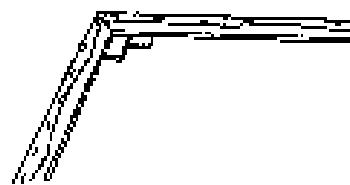


Let dry for 1-2 hours and the crease or indentation should go away. Avoid over saturating, or canvas may need for dry time a while longer.


FIXING WARPED FRAME

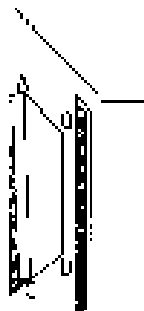

Warped frames can usually be fixed by bending them back.

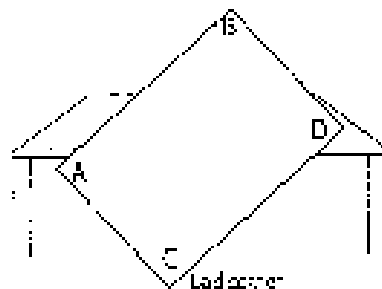

Place the work along a table's edge as shown. Place your hands on the corner that was coming away from the wall and slowly push towards center. Gently push down on the corners to stretch the canvas. Repeat using your arm piece on the wall and push it's still coming away the from wall, repeat steps.

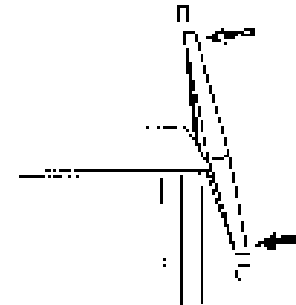

NEED HELP?

If you run into any trouble, please email help@icecanvas.com or contact us at 1-800-660-4700. Email: help@icecanvas.com

NOTE: It is not recommended to hang your art outdoors.