

Installation guide

IPS 8 extension module | 080G5040

Type **MCX08M2**



More info

Introduction

The IPS 8 extension module is always connected via CANbus, back to IPS with MCX15B2. The IPS 8 extension module includes 8 Digital Output which then give up to 8 additional Purge Points.




Reference: For details please refer data sheet Programmable controller, 8 relays, type MCX08M2


Applications

IPS 8 with MCX15B2 controller


Accessory package allowing extra Purge Points

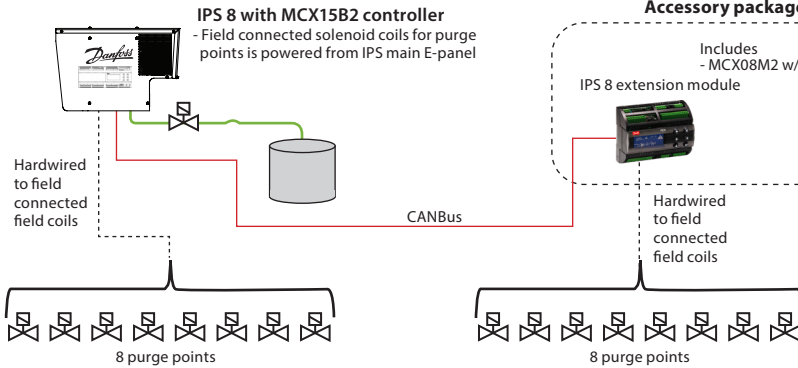

Dimension IPS 8

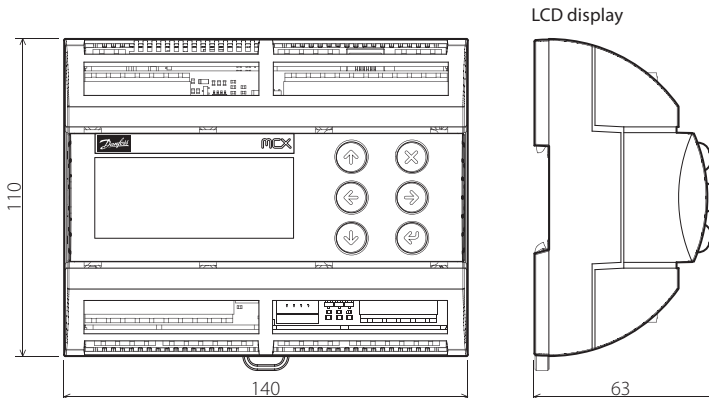

Bottom board

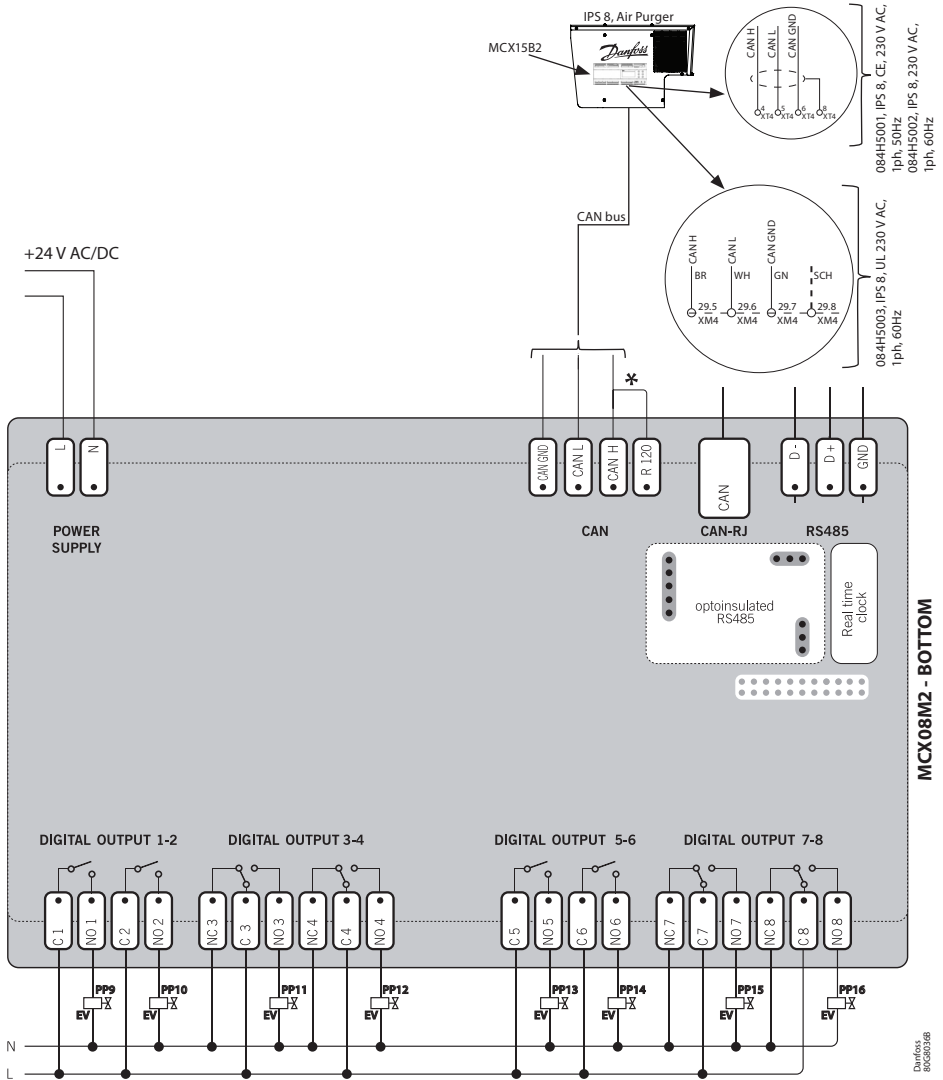

Connectors	Type	Dimensions
Power supply connector	2 way screw plug-in connector type	- pitch 5 mm - section cable 0.2–2.5 mm²
CAN connector	4 way screw plug-in connector type	- pitch 5 mm - section cable 0.2–2.5 mm²
Digital output 1-8 connector	4 way screw plug-in connector type	- pitch 5 mm - section cable 0.2–2.5 mm²

General features		
Features		Description
Power supply		20–60 V DC and 24 V AC ± 15% 50/60 Hz SELV Maximum power consumption: 10 W, 17 V A Insulation between power supply and the extra-low voltage: functional
Plastic housing		DIN rail mounting complying with EN 60715 Self extinguishing V0 according to IEC 60695-11-10 and glowing / hot wire test at 960 °C according to IEC 60695-2-12
Ball test		125 °C according to IEC 60730-1 Leakage current: ≥ 250 V according to IEC 60112
Operating conditions		CE: -20T60 / UL: 0T55, 90% RH non-condensing
Storage conditions		-30T80, 90% RH non-condensing
Integration		In Class I and / or II appliances
Index of protection		IP40 only on the front cover
Period of electric stress across insulating parts		Long
Resistance to heat and fire		Category D
Immunity against voltage surges		Category II
Software class and structure		Class A
Digital outputs		
Type	Num	Specifications
Relay	8	Insulation between relay: functional Insulation between relays and the extra-low voltage parts: reinforced Total current load limit: 32 A C1-NO1, C2-NO2 High inrush current (80 A–20 ms) normally open contact relays 16 A Characteristics of each relay: • 10 A 250 V AC for resistive loads - 100.000 cycles • 3.5 A 230 V AC for inductive loads - 230.000 cycles with cos(phi) = 0.5 C5-NO5, C6-NO6 Normally open contact relays 8 A Characteristics of each relay: • 6 A 250 V AC for resistive loads - 100.000 cycles • 4 A 250 V AC for inductive loads - 100.000 cycles with cos(phi) = 0.6 Option for code 080G0314: • SPST SSR type • 0.5 A 250 V AC resistive load (115 W) C3-NO3-NC3, C4-NO4-NC4, C7-NO7-NC7, C8-NO8-NC8 Changeover contacts relay 8 A Characteristics of each relay: • 6 A 250 V AC for resistive loads - 100.000 cycles • 4 A 250 V AC for inductive loads - 100.000 cycles with cos(phi) = 0.6

IPS 8 extension module - Main screen

Serial setting:

ID: 125 - expansion module address 125
ComS: 34800 - expansion module baud rate 34800
IPSB ID: 1- main controller address 1

```
IPS 8 Expansion 8.102
ID:125 C S: 50K11-28
ComS: 34800-8E1
IPS 8 ID: 1
```

IPS 8 with MCX15B2 controller - settings

All settings are configured in the main controller

A. How to activate Expansion module?

«Main Menu» → «Start» → «Main switch OFF» →
«Main menu» → «Login» → «Password 200» →
«General» → «Expansion settings» → «Yes» →
«Main Menu» → «Start» → «Main switch OFF»

```
Enable expansion
```

```
Ex1 YES
```

B. How to change the number of purge points?

«Main Menu» → «Start» → «Main switch OFF» →
«Main menu» → «Login» → «Password 200» →
«Parameters» → «Unit config» → «Valve settings» →
«Max PP ...» → «Main Menu» → «Start» →
«Main switch OFF»

```
Max_PP
```

```
V10 16
```

C. How to reconfigure Digital output?

For example: DO23 as valve 16.

«Main Menu» → «Start» → «Main switch OFF» →
«Main menu» → «Login» → «Password 200» →
«Input/output» → «I/O Configuration» →
«Valve settings» → «Digital output» →
«Digital output 23» → «Valve 16» →
«Main Menu» → «Start» → «Main switch OFF»

```
DOOutput: 23
```

```
Valve16
```

```
P: N.O.
```

Danfoss A/S

Climate Solutions • danfoss.com • +45 7488 2222

Any information, including, but not limited to information on selection of product, its application or use, product design, weight, dimensions, capacity or any other technical data in product manuals, catalogues descriptions, advertisements, etc. and whether made available in writing, orally, electronically, online or via download, shall be considered informative, and is only binding if and to the extent, explicit reference is made in a quotation or order confirmation. Danfoss cannot accept any responsibility for possible errors in catalogues, brochures, videos and other material. Danfoss reserves the right to alter its products without notice. This also applies to products ordered but not delivered provided that such alterations can be made without changes to form, fit or function of the product.

All trademarks in this material are property of Danfoss A/S or Danfoss group companies. Danfoss and the Danfoss logo are trademarks of Danfoss A/S. All rights reserved.