


Operating Instructions – Microwave Oven Montpellier MWBIC90029

Description of appliance

1. Door & Viewing Window
2. LED Display Panel
3. Control Panel
4. Rotary Selector Knob
5. Push Button Door Control

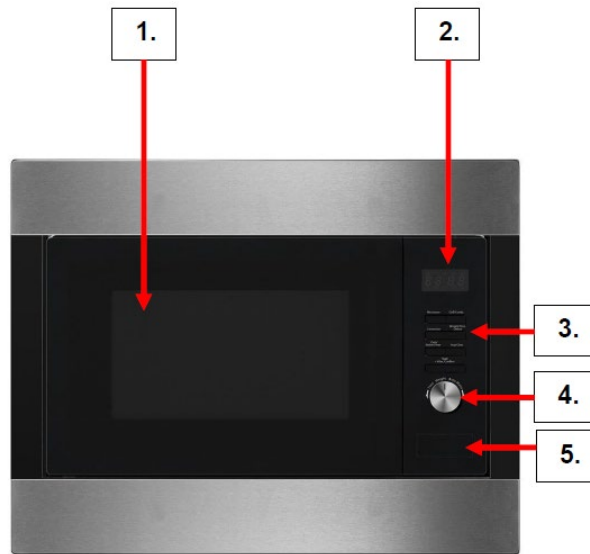

Setting the clock

1. Press the clock timer button once to select the clock function. The hours will flash in the LED panel.
2. Turn the rotary selector knob to select the correct hour.
3. Press the clock timer button, the minutes will flash in the LED panel.
4. Turn the rotary selector knob to select the correct minutes.
5. Press the clock timer button to confirm the new time setting.

Note the clock will not work correctly unless set when the appliance is first connected to the power.

6. Press stop/clear at any point to return to the previous status.

Microwave Cooking

1. Press microwave, the LED will display P100.
2. Press the same button or turn the rotary selector knob to select either P100, P80, P50, P30 or P10.
3. Press the start button and then use the rotary selector knob to select the required cooking time.
4. Press the start button again to begin cooking.
5. Press stop/clear at any time to end or cancel the cooking time.

Please note the following power levels:

- P100 = 100%
- P80 = 80%
- P50 = 50%
- P30 = 30%
- P10 = 10%

Grill or Combi Cooking

1. Press the Grill/ Combi key once, G-1 will display
2. Press the Grill/ Combi key to select the cooking mode, C-1, C-2 C-3 or C-4 will display
3. Press the start button to confirm the cooking mode.
4. Turn the rotary knob to adjust the cooking time.
5. Press the start button to start cooking.

Note: Combination instructions

Instructions	Display	Microwave	Grill	Convection
1	C-1	●		●
2	C-2	●	●	
3	C-3		●	●
4	C-4	●	●	●

Convection Cooking (with Pre-heat Function)

1. Press the convection key once, 130 will flash.
2. Keep pressing convection or turn the rotary knob to select the convection function.
Note the temperature can be chosen from 130 degrees to 220 degrees.
3. Press the start button to confirm the temperature.
4. Press the start button to start preheating. When the preheating temperature arrive, the buzzer will sound twice to remind you to put the food into the oven.
5. Put the food into the oven and close the door. Turn the rotary knob to adjust the cooking time (maximum setting time is 95 minutes)
6. Now press the start button to commence cooking.

Convection Cooking (without Pre-heat Function)

1. Press the convection key once, 130 will flash.
2. Keep pressing convection or turn the rotary knob to select the convection function.
Note the temperature can be chosen from 130 degrees to 220 degrees.
3. Press the start button to confirm the temperature.
4. Turn the rotary knob to adjust the cooking time (maximum setting time is 95 minutes)
5. Now press the start button to commence cooking.

Quick Start

Press the start button to start cooking with 100% power. Each additional press will increase the cooking time by 30 seconds for up to 95 minutes.