




- 1 Loosen scope ring screws so main tube rotates freely with minimal effort.
- 2 Using thumb screw, attach Scope Jack to rail so lifting arm is positioned under flat section under scope. In case of minimal clearance, it may be required to unscrew clamp.

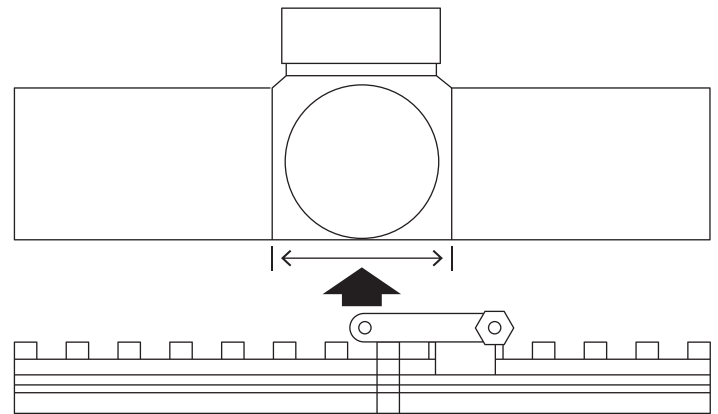

(Minimum 0.26" clearance)

- 3 Using 1/4" driver, rotate lifting arm until it makes contact with flat section on bottom of scope. Continue applying gentle pressure until scope settles to a level position.
- 4 While maintaining light pressure on the lifting arm, snug ring screws in a cross pattern. Apply manufacturer specified torque for final tightening.

