

**01504.2**

Line/Field coupler KNX standard



---

|   |    |
|---|----|
| <b>1. Product description</b> .....                   | 4  |
| <b>2. KNX topology</b> .....                          | 4  |
| <b>3. Device frontend</b> .....                       | 5  |
| 3.1 Installation example .....                        | 6  |
| <b>4. Operational description</b> .....               | 6  |
| 4.1 Normal mode .....                                 | 6  |
| 4.2 Program mode .....                                | 6  |
| 4.3 Function button .....                             | 6  |
| 4.3.1 Manual function .....                           | 6  |
| 4.3.2 Factory reset .....                             | 6  |
| <b>5. Application description line coupler</b> .....  | 7  |
| <b>6. ETS-Parameters line coupler</b> .....           | 7  |
| 6.1 Settings .....                                    | 7  |
| 6.2 General .....                                     | 8  |
| 6.3 Main line .....                                   | 8  |
| 6.4 Sub line .....                                    | 8  |
| <b>7. Application description line repeater</b> ..... | 10 |
| <b>8. ETS-Parameters line repeater</b> .....          | 11 |
| 8.1 Settings .....                                    | 11 |
| 8.2 General .....                                     | 11 |
| 8.3 Main line .....                                   | 12 |
| 8.4 Sub line .....                                    | 13 |

## Product description - KNX topology

### 1. 01504.2 product description

The 01504.2 media coupling device can be used as a line coupler, as a backbone coupler or as a line repeater. The basic functionality of the 01504.2 is coupling a KNX TP main line with a KNX TP sub line. Providing galvanic isolation between the two connected lines it enables a data connection between the upper line (main line or backbone) and the lower line.

Due to its flexibility the coupler can be used as a line coupler to connect a sub line to a main line or as a backbone coupler to connect a main line to a backbone line. The main task of the 01504.2 is to filter the traffic according to the installation place in the hierarchy (individually addressed telegrams, in this document named Physical telegrams) or according to the built in filter tables for group oriented communication (Group telegrams).

Compared to other similar products the 01504.2 provides outstanding features, for example its support of long messages (up to 240 byte APDU length) and a configurable one button activation of the "Manual Function" (transmit all telegrams, transmit Physical telegrams or transmit Group telegrams). This functionality is helpful during installation, during run time and for trouble shooting. To easily identify common communication problems due to bus load or retransmissions on both lines the high informative 6 duo LED display shows the bus status on each line accurately.

The 01504.2 is also able to link two lines for data transfer. As a line repeater the 01504.2 still provides galvanic isolation between the connected lines. Result is up to four lines can form a single sub line with up to three line repeaters used after the line coupler. Each sub line segment requires its own KNX power supply unit.

### 2. KNX topology

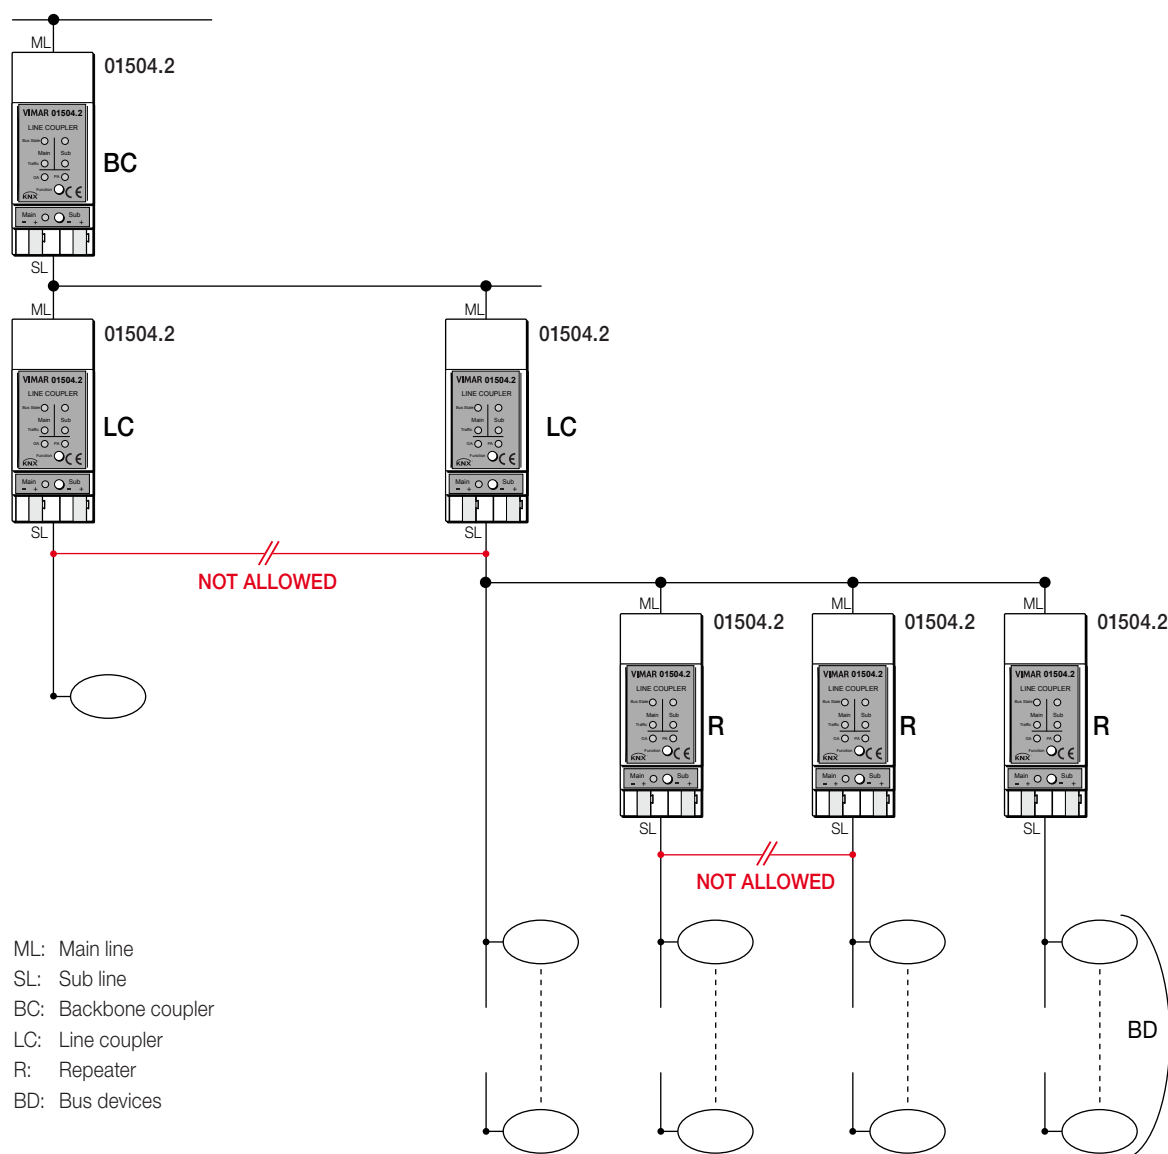


Fig. 1: Topology

#### Please note:

Commissioning at delivery status means:

- All telegrams are blocked because the filter table is not defined
- The fallback time after manual operation is 120 min
- The physical address is 15.15.0

## Device frontend

### 3. Device frontend

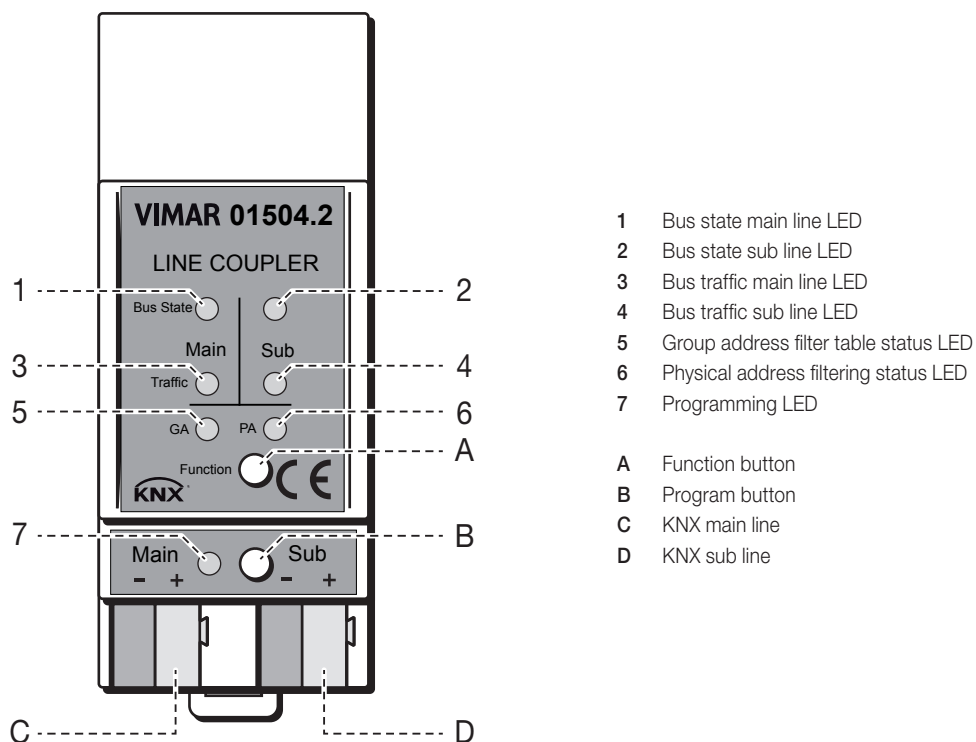


Fig. 2: Front view

#### 3.1 Installation example

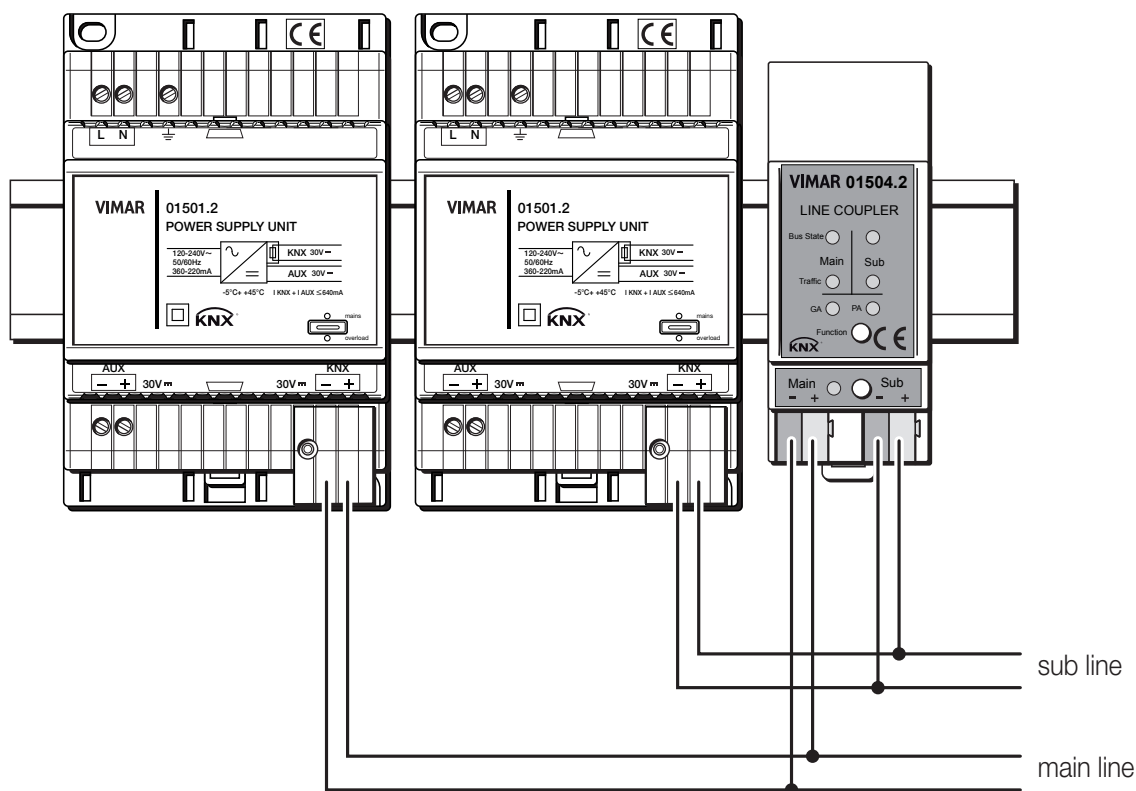


Fig. 3: Connections

## Operational description

### 4. Operational description

According either to the factory default settings or to the latest parameter settings (downloaded from ETS, also other tools) being in "Normal Mode" the 01504.2 operates as it is supposed to.

The default configurations of the "Normal Mode" are set by the main line and the sub line parameters.

#### 4.1 Normal mode

|                                  | Green   | Red                                       |
|----------------------------------|---|---|
| <b>LED 1</b><br>Bus State Main   | Off: main line error or not connected<br>On: main line OK                                 | On: manual overwrite active.              |
| <b>LED 2</b><br>Bus State Sub    | Off: sub line not connected<br>On: sub line OK  | N.A.                                      |
| <b>LED 3</b><br>Traffic Main     | Blinking: bus traffic on main line (only valid telegrams)<br>Off: no traffic on main line | Blinking: transmission error on main line |
| <b>LED 4</b><br>Traffic Sub      | Blinking: bus traffic on sub line (only valid telegrams)<br>Off: no traffic on sub line   | Blinking: transmission error on sub line  |
| <b>LED 5</b><br>Group Address    | Routing of Group telegrams<br>Off: main and sub different,<br>On: Filter table is active  | Block                                     |
|                                  | On with <b>Amber</b> colour: route all  |   |
| <b>LED 6</b><br>Physical Address | Routing of Physical telegrams<br>Off: main and sub different,<br>On: Filter table active  | On: block                                 |
|                                  | On with <b>Amber</b> colour: route all  |   |
| <b>LED 7</b><br>Programming      | N.A.  | On: device in "Program Mode"              |

#### 4.2 Program mode

With the Programming button the device can be switched between "Normal Mode" and "Program Mode". To download the physical address to the device this function is essential. After the download the 01504.2 automatically returns to the "Normal Mode".

##### Programming LED (7):

Off: Normal Mode

On: Program Mode

#### 4.3 Function button

The function button is used for two purposes, either to switch to "Manual Function" or to do a factory reset. Being in "Normal Mode" it depends on the duration of time the button is being pressed.

##### 4.3.1 Manual function

###### • Long press (≈ 3 sec) in "Normal Mode"

The device activates the "Manual Function" and the LEDs change their status.

Pressing the button again for some seconds deactivates the "Manual Function".

After expiration of the Fallback time the device returns to "Normal Mode" automatically. To configure the "Manual Function" and set the Fallback time use the parameter tab "General".

##### Please note:

*The latest downloaded settings (parameters) and the filter table are still available after switching back from "Manual Function" to "Normal Mode".*

##### 4.3.2 Factory reset

###### • Very long press (≈ 15 s) in "Normal Mode"

A factory reset is carried out by pressing the button for about 15 seconds (LEDs 1,2,5,6 light with mixed colour). After release, pressing it again for some seconds resets all the parameters to factory default (incl. physical address). Subsequently, the LEDs change their status.

## Application description line coupler - ETS-Parameters line coupler

### 5. Application description line coupler

With the coupler receiving physically addressed telegrams (Physical telegrams), for example during commissioning, it compares the physical address of the receiver with its own physical address to decide whether to route the telegrams or not. On receiving telegrams with group addresses (Group telegrams) the coupler proceeds in accordance with its parameter settings.

At default setting the coupler only routes those telegrams whose group addresses have been entered in its filter table.

In case of not receiving an acknowledgement after routing a telegram, due to a bus transmission error for example, the coupler repeats the telegram up to three times (depending on the corresponding parameter that is set by ETS). With the parameters „Repetitions if errors ...“ this function can be adjusted separately for both connected lines. The default settings of these parameters should be retained.

### 6. ETS-Parameters line coupler

All screenshots in this document describing ETS parameters represent the Line/Field coupler's database entry in the ETS5.

#### 6.1 Settings

In the properties window the basic settings of the Line/Field coupler can be adjusted and checked. Under the Settings tab the device name and the physical address (individual address) can be changed/downloaded to the device.

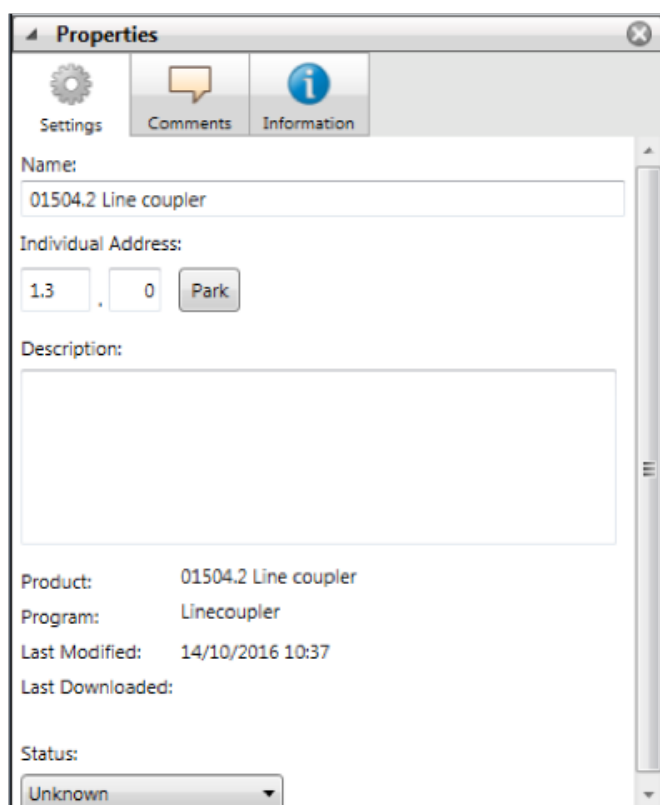


Fig. 4a: Properties/Settings

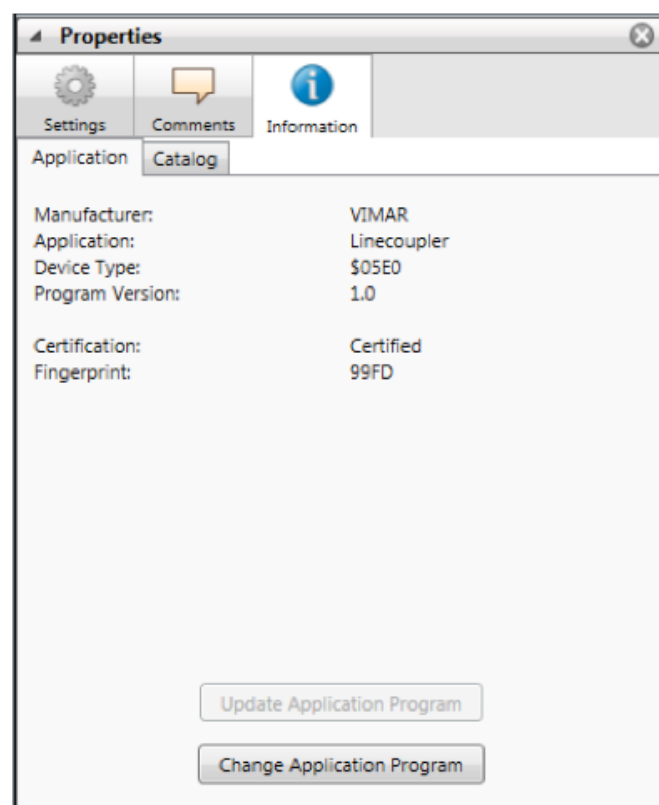


Fig. 4b: Properties/Information

When not already configured as "Line coupler", the application program for "Line coupler" has to be downloaded to the device.

Under the Information tab this configuration can be changed by the menu "Change Application Program". After changing the configuration the filter table entries can be added manually. Also updating the application program can be done here.

## ETS-Parameters line coupler

### 6.2 General

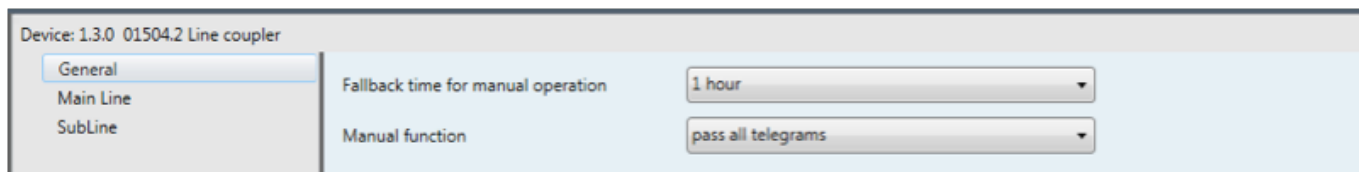


Fig. 5: General

| ETS-Text                           | Selection<br>[Factory default]  | Comment   |
|------------------------------------|---|---|
| Fallback time for manual operation | 10 min, 1 hour, 4 hours, 8 hours<br>[1 hour]  | After this time period the "Manual Function" is switched off automatically. |
| Manual function                    | disabled<br>pass all telegrams<br>pass physical telegrams<br>pass group telegrams<br>[pass all telegrams] | Telegram routing configuration for the "Manual Function".                   |

### 6.3 Main line

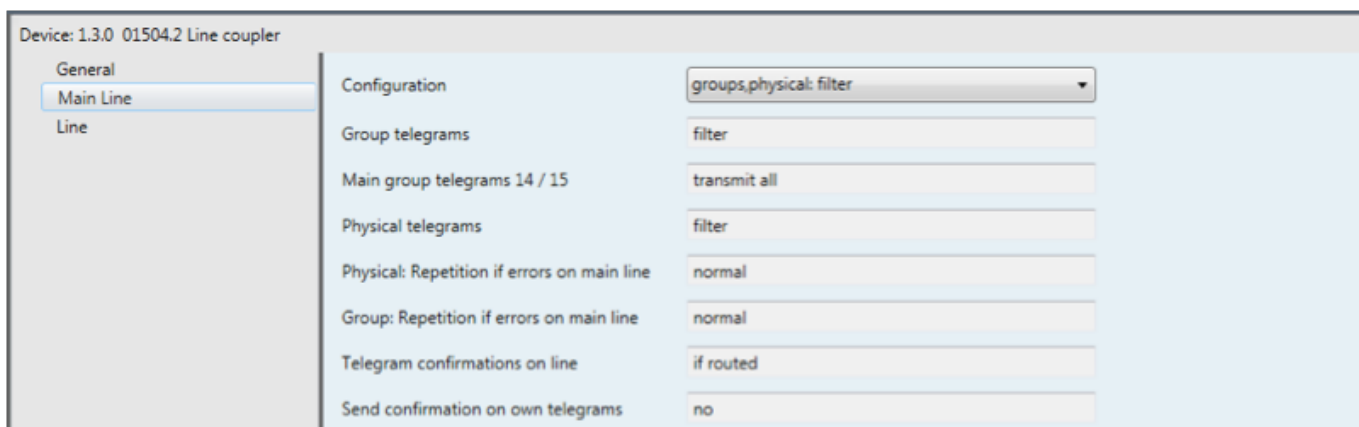


Fig. 6: Main line configuration

**Important note:**

The parameter "transmit all" for Group telegrams or Physical telegrams is intended only for testing purposes. This setting should not be used during normal operation.




## ETS-Parameters line coupler

| ETS-Text                                      | Selection<br>[Factory default]   | Comment  |
|---|--|--|
| Configuration                                 | groups: filter, physical: block groups, physical: filter groups: route, physical: filter groups, physical: route configure<br>[groups, physical: filter] | <ul style="list-style-type: none"> <li>- <b>Block:</b> no telegram is routed.</li> <li>- <b>Filter:</b> only telegrams are routed which are entered in the filter table.</li> <li>- <b>Route:</b> the telegrams are routed.</li> <li>- <b>Configure: the following parameters can be set manually.</b></li> </ul> This parameter is to be set depending on the planed configuration. |
| Group telegrams                               | 1. transmit all ( <i>not recommended</i> )<br>2. block<br>3. filter<br>[filter]  | 1. All group telegrams are transmitted.<br>2. No group telegram is transmitted.<br>3. Only Group telegrams entered in the filter table are routed.<br>ETS3/4 produces the filter table automatically.  |
| Main group telegrams 14/15                    | 1. transmit all<br>2. block<br>[transmit all]  | 1. Group telegrams with the sub group 14 or 15 (e.g. 14/1) are routed.<br>2. Group telegrams with the sub group 14 or 15 (e.g. 14/1) are not routed.   |
| Physical telegrams                            | 1. transmit all ( <i>not recommended</i> )<br>2. block<br>3. filter<br>[filter]  | 1. All Physical telegrams are transmitted.<br>2. No Physical telegram is transmitted.<br>3. Depending on the physical address only Physical telegrams are routed.  |
| Physical: Repetition when errors on main line | 1. no<br>2. normal<br>3. reduced<br>[normal]   | If a transmission error (e.g. due to missing receiver) is found after sending a Physical telegram on the main line:<br>1. Physical telegrams are not repeated.<br>2. Physical telegrams are repeated up to three times.<br>3. Physical telegrams will be repeated only once  |
| Group: Repetition when errors on main line    | 1. no<br>2. normal<br>3. reduced<br>[normal]   | If a transmission error (e.g. due to missing receiver) is found after sending a Group telegram on the main line:<br>1. Physical telegrams are not repeated.<br>2. Physical telegrams are repeated up to three times.<br>3. Physical telegrams will be repeated only once.  |
| Telegram confirmations on line                | 1. if routed<br>2. always<br>[if routed]   | 1. Only telegrams which are to be routed are confirmed on the main line (ACK).<br>2. Each telegram on the main line is confirmed (ACK).  |
| Send confirmation on own telegrams            | 1. yes<br>2. no<br>[no]  | 1. Every telegram on the main line is confirmed with its own ACK (from the Line coupler).<br>2. No confirmation with own ACK<br>→ See note below.  |

**Please note:**

If the parameter "Send confirmation on own telegrams" is set to yes the line coupler will send an ACK systematically on any own routed telegram.

### 6.4 Sub line

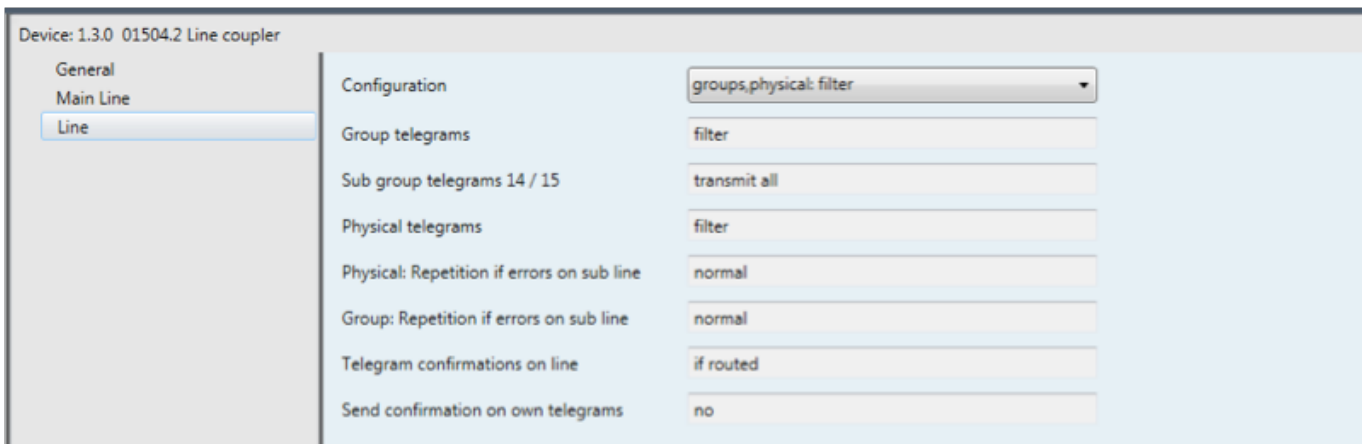

Device: 1.3.0 01504.2 Line coupler

General  
Main Line  
**Line**

Configuration: groups, physical: filter

Group telegrams: filter

Sub group telegrams 14 / 15: transmit all

Physical telegrams: filter

Physical: Repetition if errors on sub line: normal

Group: Repetition if errors on sub line: normal

Telegram confirmations on line: if routed

Send confirmation on own telegrams: no

Fig. 7: Sub line configuration

## ETS-Parameters line coupler - Application description line repeater

| ETS-Text   | Selection<br>[Factory default]   | Comment  |
|--|--|--|
| Configuration  | groups: filter, physical: block groups, physical: filter groups: route, physical: filter groups, physical: route configure<br>[groups, physical: filter] | - <b>Block:</b> no telegram is routed.<br>- <b>Filter:</b> only telegrams are routed which are entered in the filter table.<br>- <b>Route:</b> the telegrams are routed.<br>- <b>Configure: the following parameters can be set manually.</b>                                |
| Group telegrams                                      | 1. transmit all ( <i>not recommended</i> )<br>2. block<br>3. filter<br>[filter]  | 1. All group telegrams are transmitted.<br>2. No group telegram is transmitted.<br>3. Only group telegrams entered in the filter table are routed.<br>ETS3/4 produces the filter table automatically   |
| Sub group telegrams 14/15                            | 1. transmit all<br>2. block [transmit all]   | 1. Group telegrams with the sub group 14 or 15 (e.g. 14/1) are routed.<br>2. Group telegrams with the sub group 14 or 15 (e.g. 14/1) are not routed.   |
| Physical telegrams                                   | 1. transmit all ( <i>not recommended</i> )<br>2. block<br>3. filter<br>[filter]  | 1. All Physical telegrams are transmitted.<br>2. No Physical telegram is transmitted.<br>3. Depending on the physical address only Physical telegrams are routed.  |
| Physical: Repetition if errors on the sub line occur | 1. no<br>2. normal<br>3. reduced<br>[normal]   | If a transmission error (e.g. due to missing receiver) is found after sending a physical telegram on the main line:<br>1. Physical telegrams are not repeated.<br>2. Physical telegrams are repeated up to three times.<br>3. Physical telegrams will be repeated only once. |
| Group: Repetition if errors on the sub line occur    | 1. no<br>2. normal<br>3. reduced<br>[normal]   | If a transmission error (e.g. due to missing receiver) is found after sending a group telegram on the main line:<br>1. Physical telegrams are not repeated.<br>2. Physical telegrams are repeated up to three times.<br>3. Physical telegrams will be repeated only once..   |
| Telegram confirmations on line                       | 1. if routed<br>2. always<br>[if routed]   | 1. Only telegrams which are to be routed are confirmed on the sub line (ACK).<br>2. Each telegram on the sub line is confirmed (ACK).  |
| Send confirmation on own telegrams                   | 1. yes<br>2. no<br>[no]  | 1. Every telegram on the sub line is confirmed with its own ACK (from the Line coupler).<br>2. No confirmation with own ACK  |

### 7. Application description line repeater

Line repeaters do not use a filter table. A received telegram is routed to all lines irrespective of in which line it is processed. It is therefore not important whether the telegram is triggered within a line or whether it is sent from an upper line to a lower line via a coupler.

When an error occurs during transmission of a telegram according to the physical address of a receiver the line repeater is able to repeat the telegram. With the parameters „Physical:

Repetition if errors on main line/on sub line“ this function can be set separately for both lines.

In case of routing a group telegram with not receiving an acknowledgement or in case of a bus device detecting a transmission error the line repeater repeats the telegram three times.

With the parameters „Group: Repetition if errors on main line/on sub line“ this function can be adjusted separately for both lines.

## ETS-Parameters line repeater

### 8. ETS-Parameters line repeater

#### 8.1 Settings

In the properties window the basic settings of the Line/Field coupler can be adjusted and checked. Under the Settings tab the device name and the physical address (individual address) can be changed and downloaded to the device.

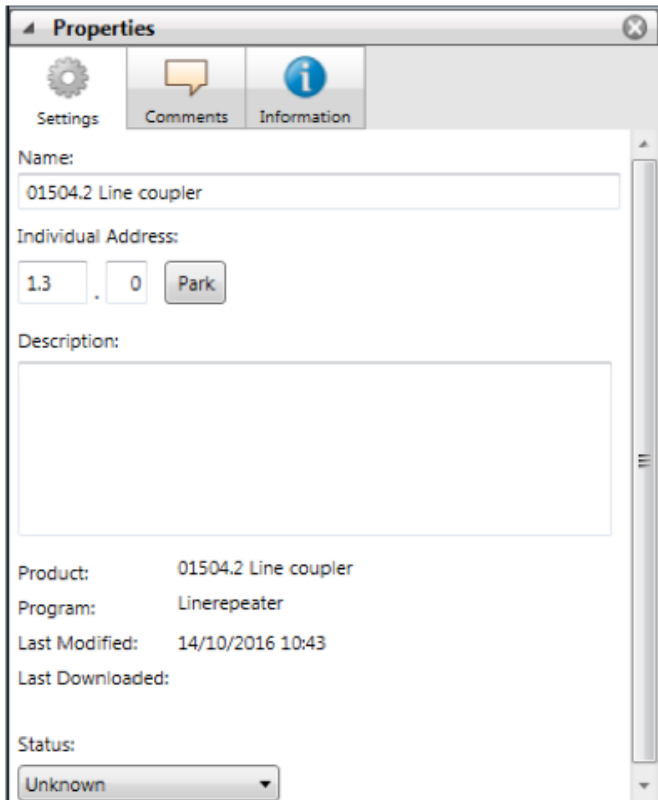


Fig. 8a: Properties/Settings

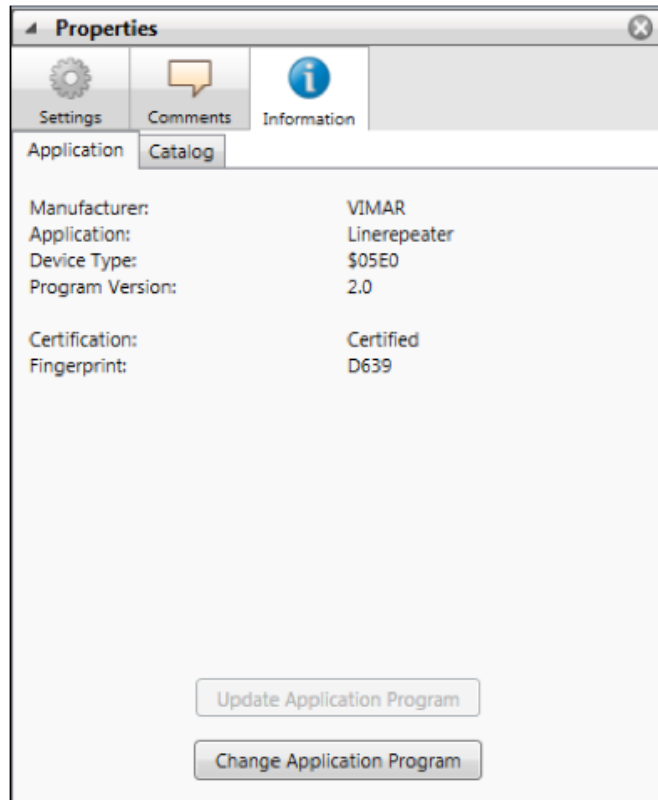


Fig. 8b: Properties/Information

When not already configured as “Line repeater”, the application program for “Line repeater” has to be downloaded to the device. Under the Information tab this configuration can be changed by the menu “Change Application Program”. After changing the configuration the filter table entries can be added manually. Also updating the application program can be done here.

#### 8.2 General

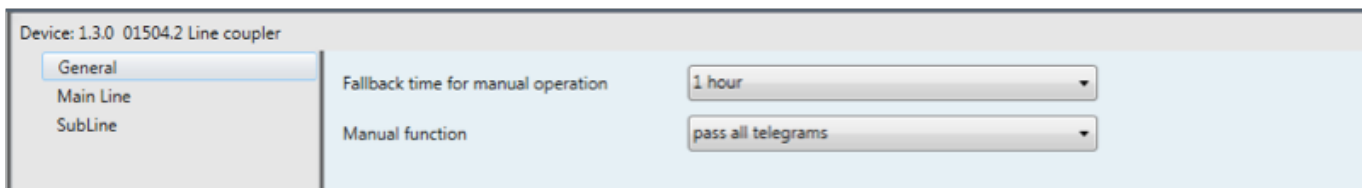


Fig. 9: General

| ETS-Text                           | Selection<br>[Factory default]  | Comment   |
|------------------------------------|---|---|
| Fallback time for manual operation | 10 min, 1 hour, 4 hours, 8 hours<br>[1 hour]  | After this time period the “Manual Function” is switched off automatically. |
| Manual function                    | disabled<br>pass all telegrams<br>pass physical telegrams<br>pass group telegrams<br>[pass all telegrams] | Telegram routing configuration for the “Manual Function”.                   |

## ETS-Parameters line repeater

### 8.3 Main line

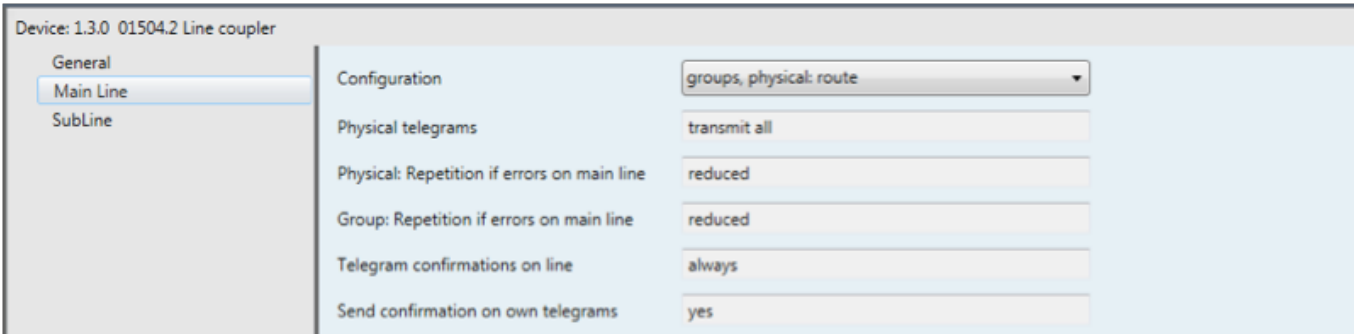


Fig. 10: Main line configuration

**Important note:**

The parameter “transmit all” for Group telegrams or Physical telegrams is intended only for testing purposes. This setting should not be used during normal operation.

| ETS-Text  | Selection<br>[Factory default]                                 | Comment  |
|---|--|--|
| Configuration                                       | groups, physical: route configure<br>[groups, physical: route] | - <b>Route:</b> the telegrams are routed.<br>- <b>Configure:</b> the following parameters can be set manually.   |
| Physical telegrams                                  | 1. transmit all<br>2. block<br>[transmit all]                  | 1. All physical telegrams are transmitted.<br>2. No physical telegram is transmitted.  |
| Physical:<br>Repetition when<br>errors on main line | 1. no<br>2. normal<br>3. reduced<br>[reduced]                  | If a transmission error (e.g. due to missing receiver) is found after sending a Physical telegram on the main line:<br>1. Physical telegrams are not repeated.<br>2. Physical telegrams are repeated up to three times.<br>3. Physical telegrams will be repeated only once. |
| Group:<br>Repetition when<br>errors on main line    | 1. no<br>2. normal<br>3. reduced<br>[reduced]                  | If a transmission error (e.g. due to missing receiver) is found after sending a Group telegram on the main line:<br>1. Physical telegrams are not repeated.<br>2. Physical telegrams are repeated up to three times.<br>3. Physical telegrams will be repeated only once.    |
| Telegram<br>confirmations on line                   | 1. if routed<br>2. always<br>[always]                          | 1. Only telegrams which are to be routed are confirmed on the main line (ACK).<br>2. Each telegram on the main line is confirmed (ACK).  |
| Send confirmation<br>on own telegrams               | 1. yes<br>2. no<br>[yes]                                       | If a transmission error (e.g. due to missing receiver) is found after sending a group telegram on the main line:<br>1. Physical telegrams are not repeated.<br>2. Physical telegrams are repeated up to three times.<br>3. Physical telegrams will be repeated only once..   |

**Please note:**

If the parameter “Send confirmation on own telegrams” is set to yes the line repeater will send an ACK systematically on any own routed telegram. With the repeater using no filter table it is useful to send an ACK with every routed telegram.

## ETS-Parameters line repeater

### 8.3 Sub line

Device: 1.3.0 01504.2 Line coupler

General  
Main Line  
**SubLine**

Configuration  
Physical telegrams  
Physical: Repetition if errors on sub line  
Group: Repetition if errors on sub line  
Telegram confirmations on line  
Send confirmation on own telegrams

groups, physical: route  
transmit all  
reduced  
reduced  
always  
yes

Fig. 11: Sub line configuration

| ETS-Text   | Selection<br>[Factory default]                                 | Comment  |
|--|--|--|
| Configuration  | groups, physical: route configure<br>[groups, physical: route] | - <b>Route</b> : the telegrams are routed.<br>- <b>Configure</b> : the following parameters can be set physically.   |
| Physical telegrams                                   | 1. transmit all<br>2. block<br>[transmit all]                  | 1. All physical telegrams are transmitted.<br>2. No physical telegram is transmitted.  |
| Physical: Repetition if errors on the sub line occur | 1. no<br>2. normal<br>3. reduced<br>[reduced]                  | If a transmission error (e.g. due to missing receiver) is found after sending a Physical telegram on the main line:<br>1. Physical telegrams are not repeated.<br>2. Physical telegrams are repeated up to three times.<br>3. Physical telegrams will be repeated only once. |
| Group: Repetition if errors on the sub line occur    | 1. no<br>2. normal<br>3. reduced<br>[reduced]                  | If a transmission error (e.g. due to missing receiver) is found after sending a group telegram on the main line:<br>1. Physical telegrams are not repeated.<br>2. Physical telegrams are repeated up to three times.<br>3. Physical telegrams will be repeated only once.    |
| Telegram confirmations on line                       | 1. if routed<br>2. always<br>[always]                          | 1. Only telegrams which are to be routed are confirmed on the sub line (ACK).<br>2. Each telegram on the sub line is confirmed (ACK).  |
| Send confirmation on own telegrams                   | 1. yes<br>2. no<br>[yes]                                       | If a transmission error (e.g. due to missing receiver) is found after sending a group telegram on the main line:<br>1. Physical telegrams are not repeated.<br>2. Physical telegrams are repeated up to three times.<br>3. Physical telegrams will be repeated only once..   |



01504.2 EN 03 2102



**VIMAR**

Viale Vicenza 14  
36063 Marostica VI - Italy  
[www.vimar.com](http://www.vimar.com)