



ST25R300 evaluation board GUI for the STEVAL-25R300KA kit

Introduction

The PC software package (STSW-ST25R023) contains the ST25R300 evaluation board GUI and the ST25PC-NFC software (STSW-ST25PC001).

The ST25R300 evaluation board GUI allows the user to communicate with the ST25R300 evaluation board (STEVAL-25R300KA). It provides an interface to change a wide range of settings. It also allows different features of the STEVAL-25R300KA kit to be executed and evaluated. This user manual provides a detailed description of the ST25R300 evaluation board GUI.

The ST25PC-NFC software (STSW-ST25PC001) gives access to all features of the ST25 NFC/RFID tags and ST25 dynamic NFC tags. It is not the object of this user manual.

The PC software must be used with the ST25R300 evaluation board, which contains all the necessary modules for a fully functional NFC reader.


1 Preface

1.1 Downloading and installing the software

After downloading the software (available at st.com), double-click the executable file to begin the installation.


- Select whether to install the software for each user of the PC or only for the current user.

Figure 1. Selecting install mode

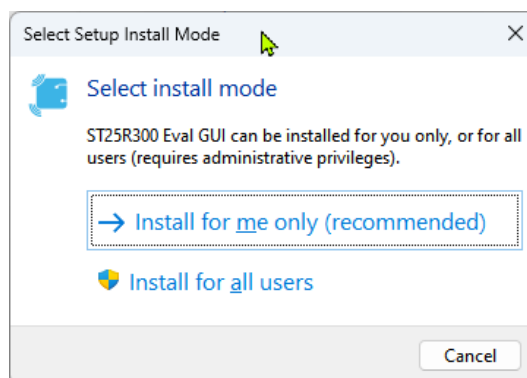


- Select the path to install the software.

Figure 2. Selecting the program destination

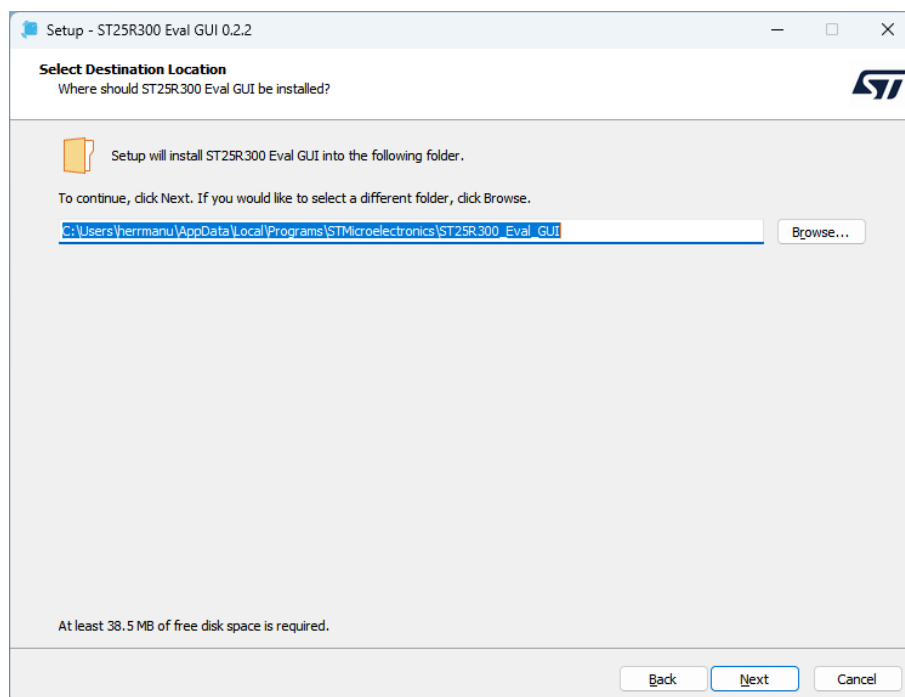


- It is possible to add the ST25R300 evaluation GUI to the start menu. This is recommended to allow the user to always find the software easily using the Windows® search function. If the user does not want to add the software to the start menu, they just need to tick the checkbox in the bottom left corner of the window.

Figure 3. Selecting a start menu folder

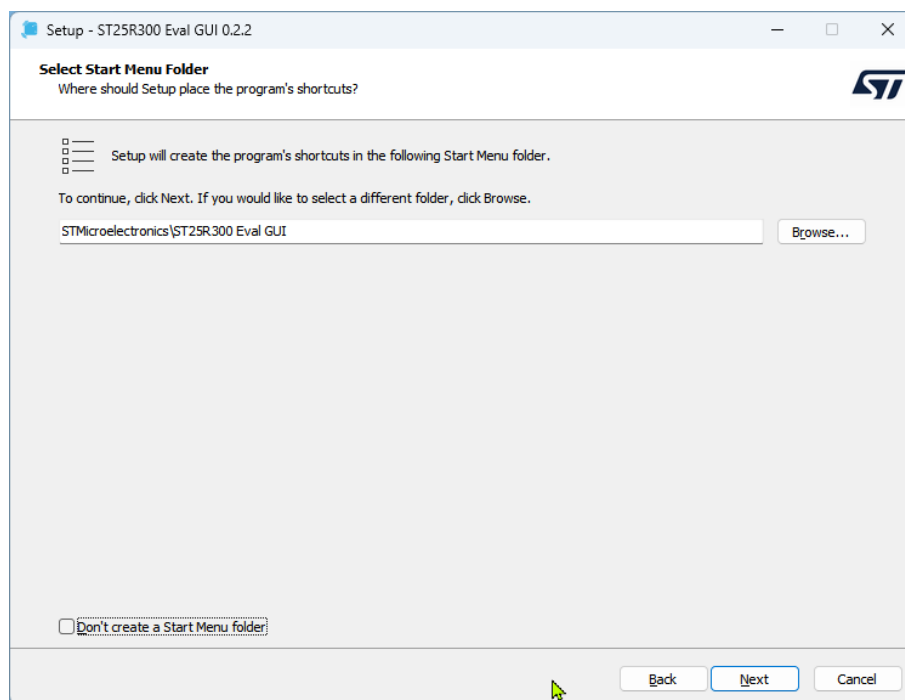


- To create a shortcut on the desktop, tick the checkbox shown below.

Figure 4. Creating a desktop shortcut

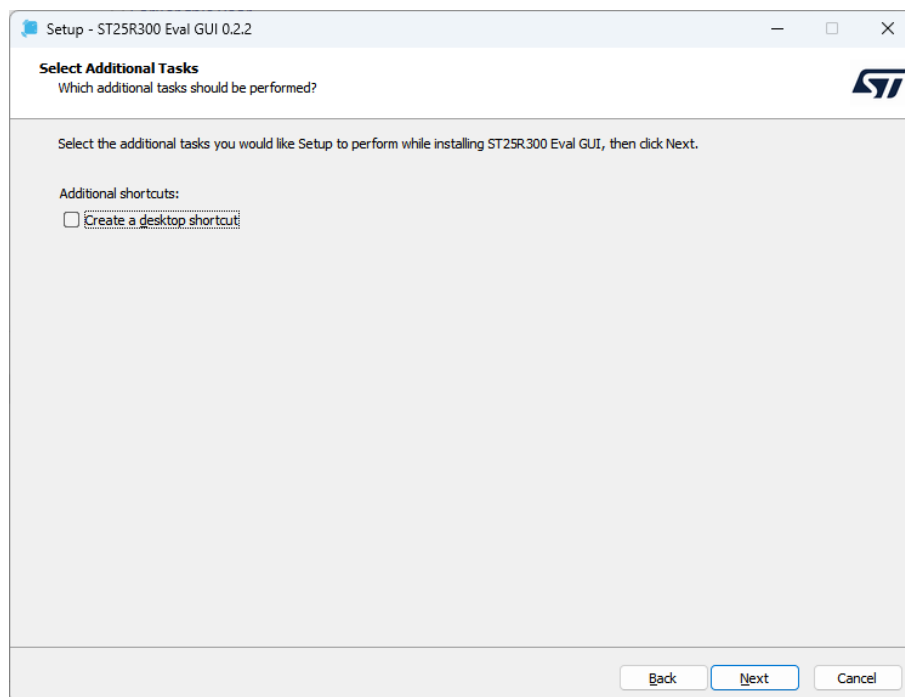


- The figure below shows a summary of the selected installation directories. Click install.

Figure 5. Ready to install

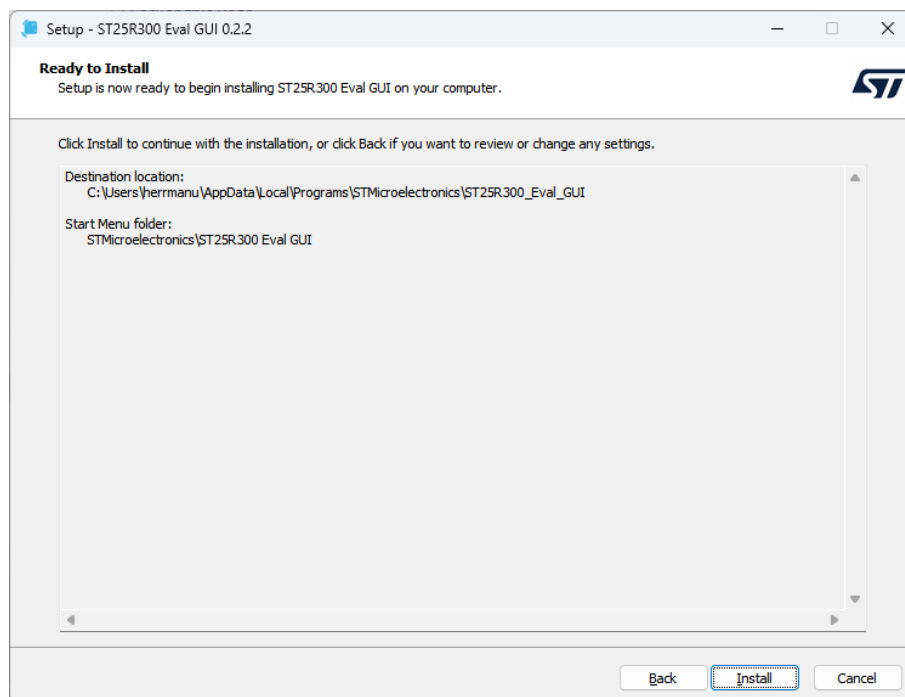

- Installing takes no more than a few minutes to complete. Launch the application by clicking the finish button.

Figure 6. Installation completed

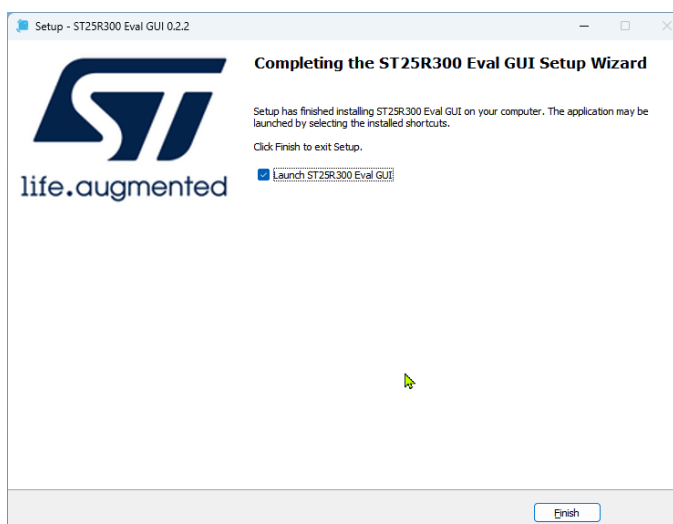


Note: This software is only available for PCs running on Microsoft® Windows®.

1.2 Hardware preparations

Communication with the board happens through the mini-USB J2 (STLINK-USB). On this port the STLINK provides a virtual COM port used for communication.

Using the on-board UI please select PCLink before connecting from PC GUI.

Figure 7. ST25R300 evaluation board - top view

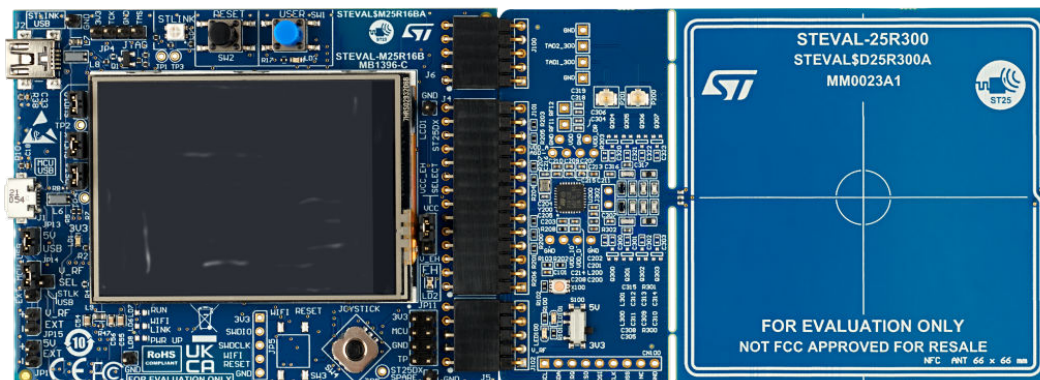

The STEVAL-25R300KA kit is described in a separate user manual.


2 Reader mode

The application offers two different GUI modes:

- **ST25PC-NFC**
It opens a new window which allows to access ST25 Tags and its specific features through the connected STEVAL-25R300 board.
- **Reader mode**
It allows the user to explore a wide range of functions in detail.

This section provides an overview of all the functions available in reader mode.

Figure 8. GUI modes

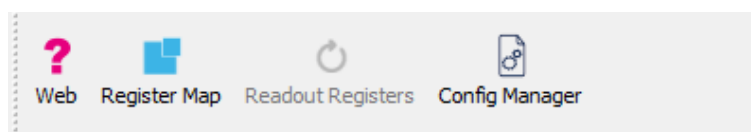


The brighter blue color indicates that reader mode is enabled. To change the mode, click on the appropriate icon.

2.1 Main tab

The **Main** tab contains the **Board Info** tab and the **Overview** tab.

2.1.1 Board info tab

Figure 9. Board info tab

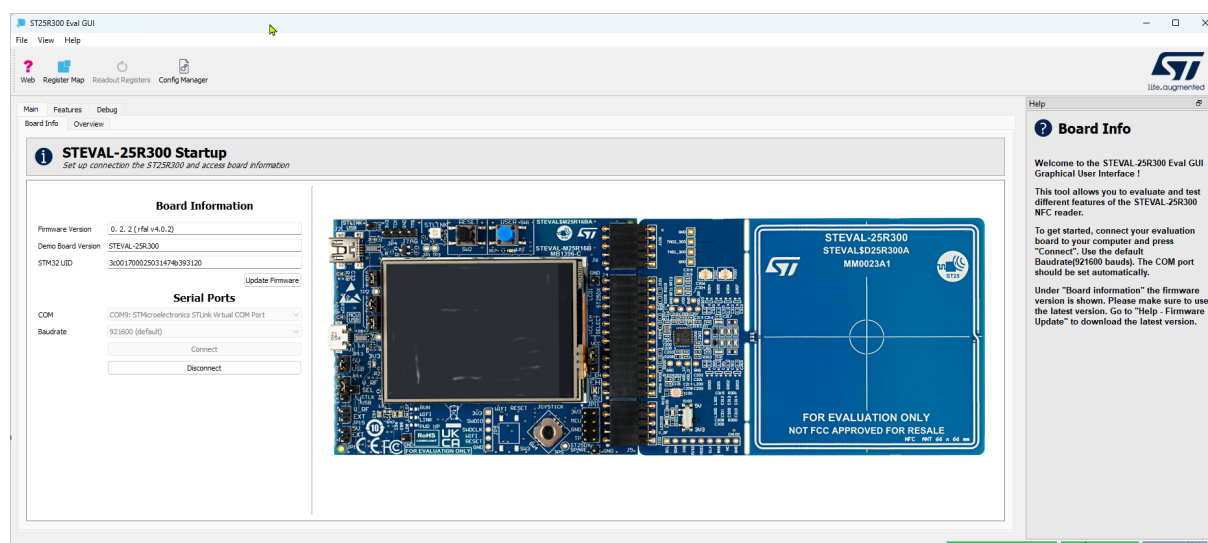

The **Board info** tab allows the GUI to be connected to the ST25R300 evaluation board. To connect a board, ensure that the correct COM port and baud rate are selected.

When a board is connected, this tab displays basic information about the connected hardware.

- **Firmware version**
The firmware version currently running on the MCU.
- **Demo board version**
The type of demonstration board.
- **STM32 UID**
The unique ID of the STM32 on the STEVAL-M25B1 main board.


The **Update firmware** button allows the user to update the firmware running on the STM32G0 on the STEVAL-M25B1 main board. See Updating the firmware for more information.

2.1.2 Overview tab

The **Overview** tab is a quick demonstration showing a typical NFC application combining wake-up mode and NFC polling. As soon as wake-up mode detects a variation, standard NFC polling is performed and the cards/devices found are listed.


The demonstration remains in polling mode until no more cards/devices are detected.

Figure 10. ST25R300 overview

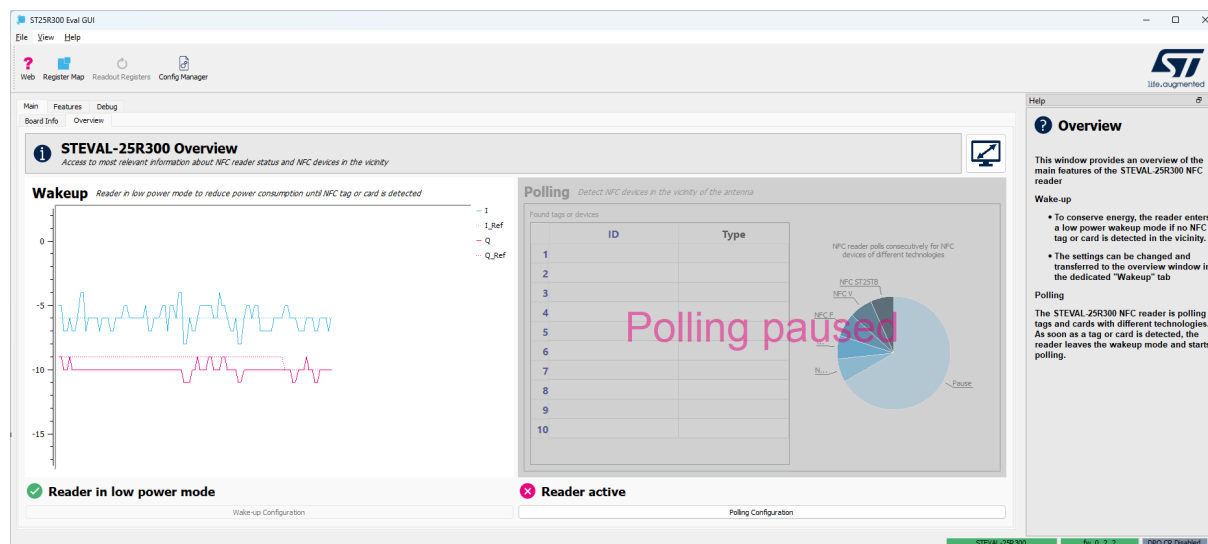

A small window with settings opens after clicking on the **Polling Configuration** button.

Figure 11. Polling configuration

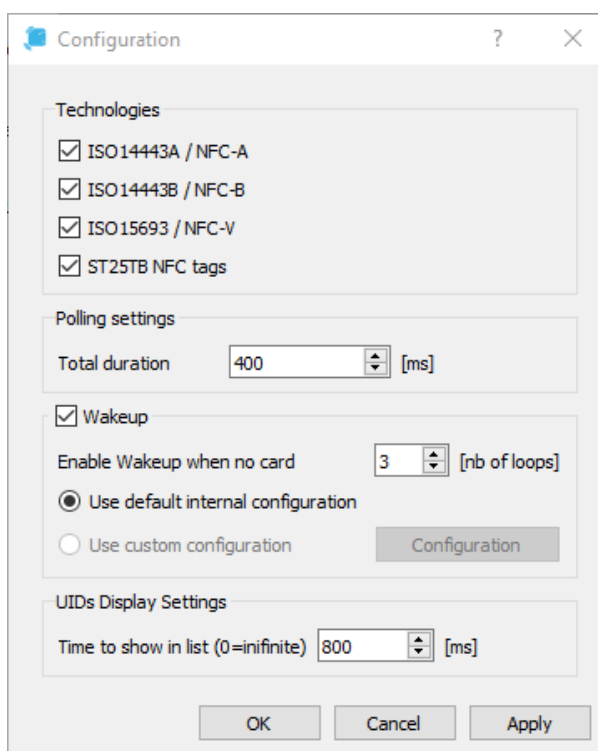

These settings allow the user to enable/disable polling for different technologies. It is also possible to enable polling only and not to perform a wake-up.

To view the tab in full screen, click on the extended view icon.

Figure 12. Extended view



Click the same button again to exit full screen mode.

2.2 Features tab

This tab allows the user to discover the different features of the ST25R300 in the subtabs. Each subtab represents a feature and provides different settings for the corresponding functionality.


2.2.1 Power tab

The **Power** tab allows the user to set the ST25R300 to five different modes:

- Reset
- Power-down
- Wake-up
- Ready
- Ready + Field on

Each mode has a different power consumption (use the pins of L200 to measure the actual power consumption of the chip). The mode can be changed using the radio buttons on the left. The bar graph on the right side visualizes the different power consumption of the different modes. The currently selected mode is highlighted by a darker color in Figure 13.

Figure 13. Power consumption

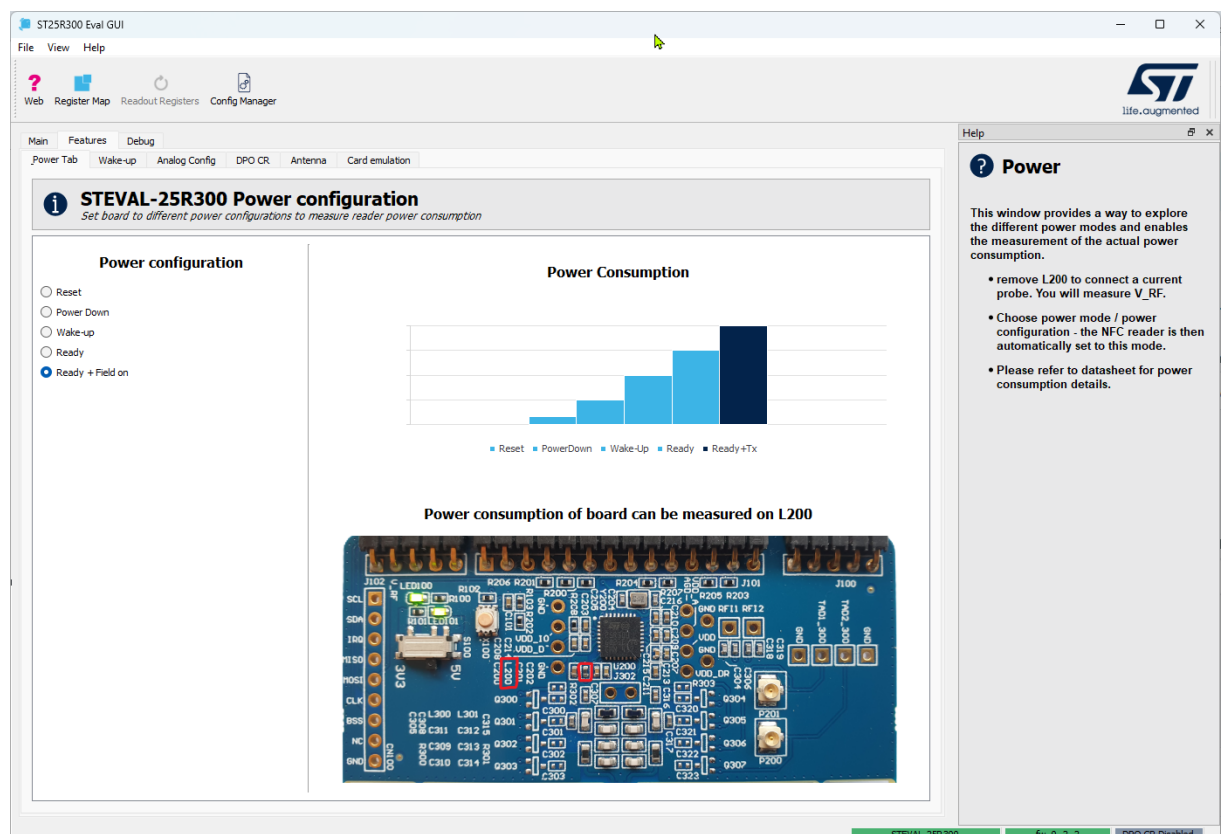

2.2.2 Antenna tab

The needle shows the amplitude as measured on RFI, and the phase difference between RFI and RFO (calculated back from I/Q channel values).

Additionally, other analog voltages and current can be measured.


Click on the **measure antenna** button to measure these values.

Activate VNA puts the output driver into high-Z state to be able to connect a VNA without damaging it. This blocks the GUI until the user has confirmed that VNA is removed.

Amplitude and phase difference can be continuously monitored using the **continuous measurement** button.

Moreover, when this option is activated and a piece of metal is approached to the antenna, a detuning effect can be observed.

Figure 14. Antenna tab

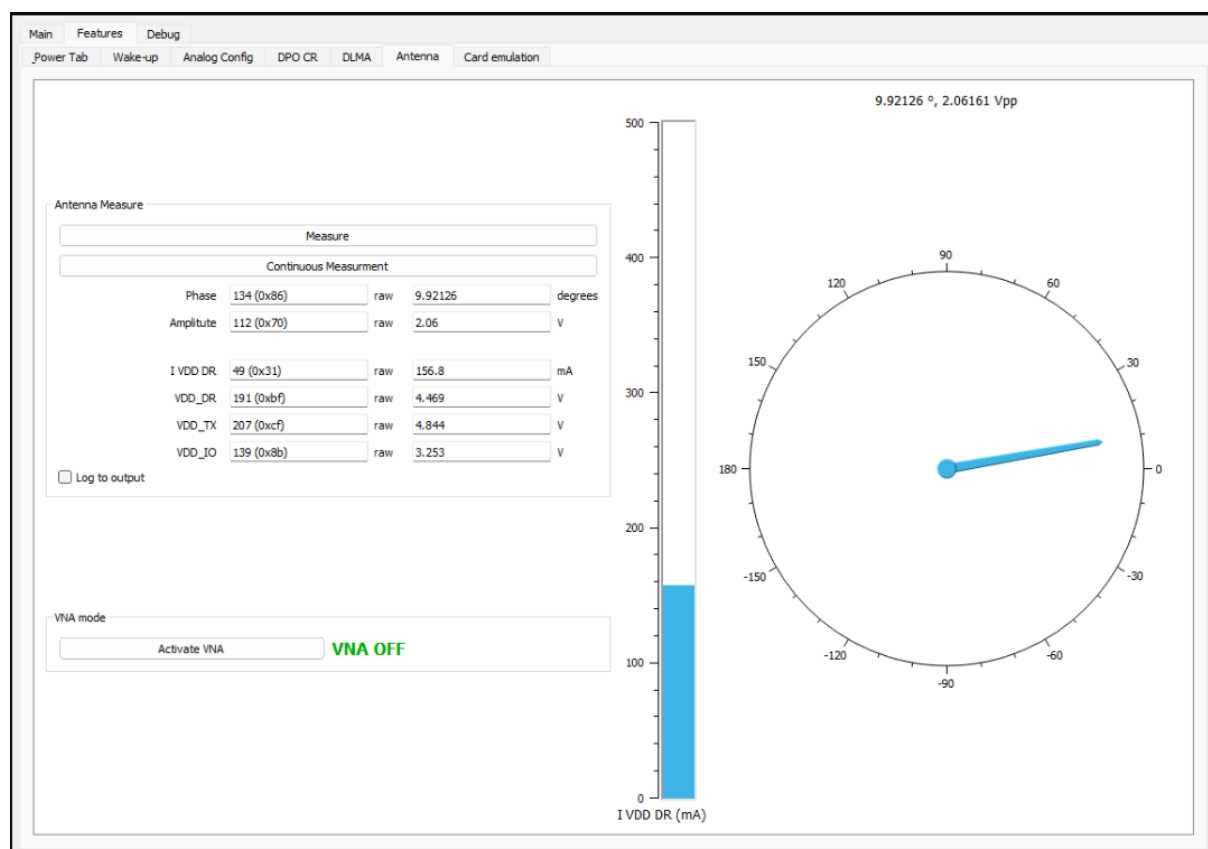


2.2.3 Wake-up tab

The wake-up mode uses very low power to detect if an object has entered the reader field. The field is switched on for a short time to measure whether an object has entered the field. The measurement provides the I and Q channel values. For more information, see the ST25R300 datasheet (DS14655) and application note (AN6298).

Two graphs show the measured I and Q values. Click the **Start** button to start wake-up mode. The graphs in pink correspond to the measured values. The blue-colored graphs represent the upper and lower thresholds. The last measured I and Q ADC values are displayed above the two graphs.


Figure 15. Wake-up tab with the configuration shown

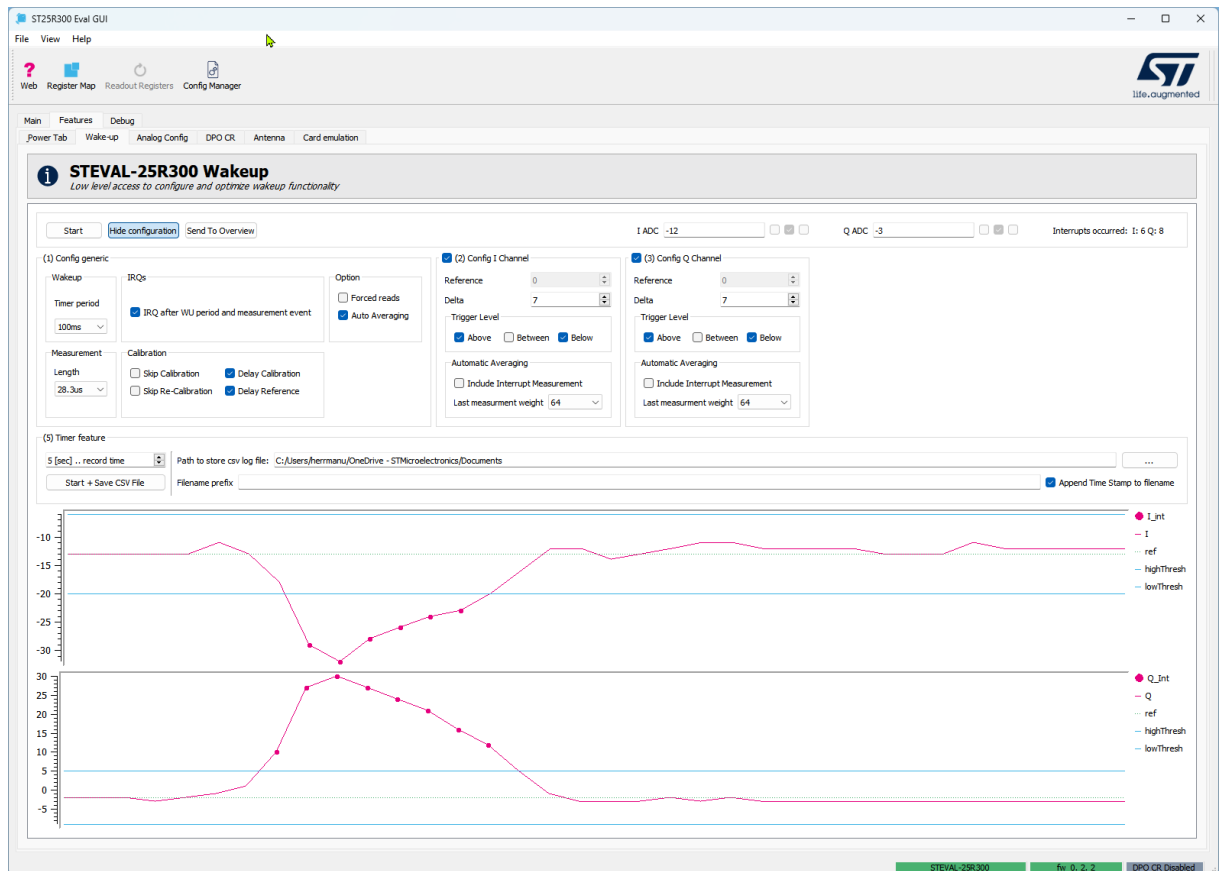

By default, a wake-up is triggered when the pink line (measurement) crosses one of the blue lines (threshold). When a wake-up interrupt is triggered, the pink line is marked with a circle.

Click on the **Show configuration** button to display the wake-up mode settings. These settings are mainly those found in the ST25R300 datasheet (DS14655). To change the settings, stop wake-up mode if it is currently enabled.

Figure 16. Wake-up configuration shown

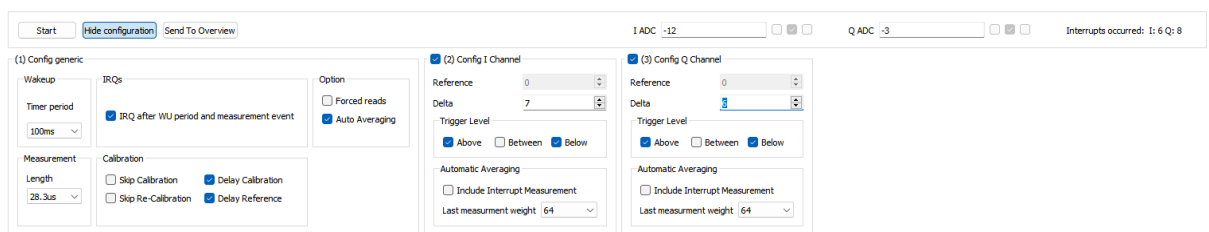


Click the **Send To Overview** button to apply the selected settings to the wake-up functionality provided by the **Overview** tab (refer to [Overview tab](#)).

The timer feature allows to monitor the I/Q values over a fixed time for post-processing (e.g. calculate standard deviation).

2.2.4

Analog config tab

This tab contains important configuration settings required to set chip-specific configurations for different technologies and bitrates at different operating times. The concept of analog configuration is part of the RFAL library and is used throughout the different ST25R devices. See the RFAL user manual (UM2890) for more details.

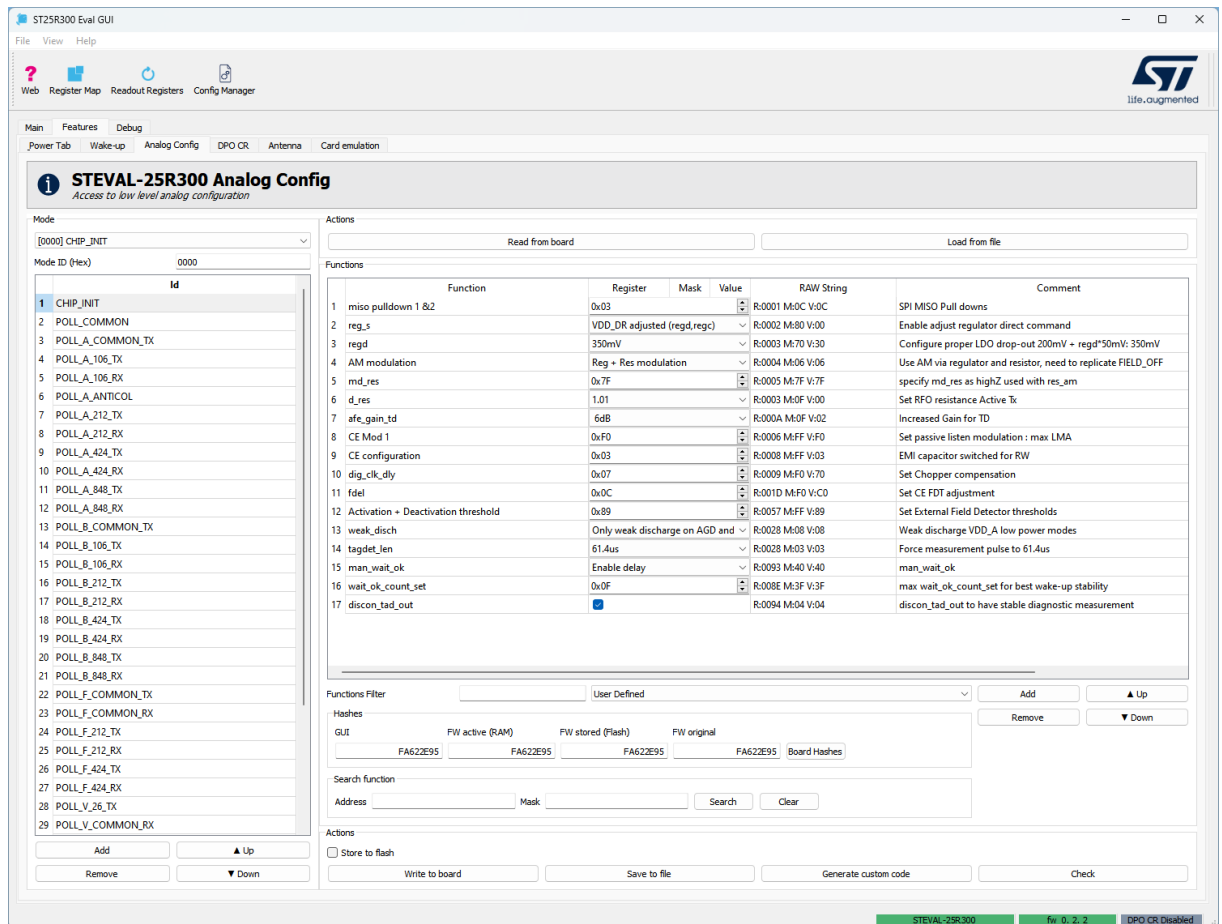Figure 17. ST25R300 Analog config tab


The **Analog Config** tab is divided into the **Mode**, **Functions**, **Actions**, and **Hashes** sections.

Mode

The **Mode** section provides a drop-down box containing several chip-specific supported technologies and events. A specific mode can be added to the mode list. This makes it easy to have individual settings for all transmit and receive modes. The **CHIP_INIT** mode sets global registers that must be used independently of other selected modes. For example, the pull-down of SPI lines can be enabled.

Functions

The **Functions** section contains register values associated with modes. A function consists of a name, the corresponding register, a mask, and the required value for the register. Frequently used functions can be selected from the drop-down box and added to the functions list. These functions are already defined and can be selected from a drop-down box.

For better readability, modes can be ordered using the up and down arrows in the mode section.

Attention: *Be careful when defining the same registers or functions for multiple entries in the mode list: for example, if a function is added to ISO 14443A and not restored in ISO 14443B mode, it is also applied to ISO 14443B.*

Actions

The **Actions** buttons complete the analog configuration concept. They read and write information to the board or to the PC.

The **Read from board** button reads the analog configuration from the connected board.

Note: *The values currently displayed on the GUI are overwritten.*

The **Write to board** button writes the current configuration from the **Analog Config** tab to the connected board.

*Note: If the **Analog Config** tab is left empty, the board remains with its stored values.*

The **Load from file** button is used to load a previously saved configuration file into the **Analog Config** tab.

Use **Write to board** to write these newly loaded settings to the connected board.

The **Save to file** button saves the current configuration in the **Analog Config** tab to the file system.

The **Generate custom code** button can be used to automatically generate a C header file for direct inclusion in a compiled firmware image. See the RFAL user manual (UM2890) for further details.

The **Store to Flash** allows to send the settings into STM32 flash. It is used as new default on start-up.

Hashes


The **Hashed** section shows the analog configuration hashes currently loaded into the different areas. The **FW active (RAM)** field is the configuration currently in use. It can be different from the **FW stored (Flash)** field. The **FW stored (Flash)** field contains the hash value that is loaded when the chip is switched on. It is possible to load an analog configuration temporarily until the chip is switched off and on again. Click on **Write to board** without ticking the **Store to flash** checkbox to load a temporary configuration.

2.2.5

DPO CR

DPO CR is a software-based feature that allows dynamic control of the transmitter voltage (VDD_DR), driver resistance, and the generated RF field depending on the presence of a PICC. A dynamic RF power adjustment can be useful in challenging environments where strong antenna detuning causes an abrupt increase in driver current and a violation of the maximum allowed field strength in the applicable standard. The dynamic adjustment of output power uses the current measurement capabilities of the ST25R300.

Figure 18. DPO CR panel overview

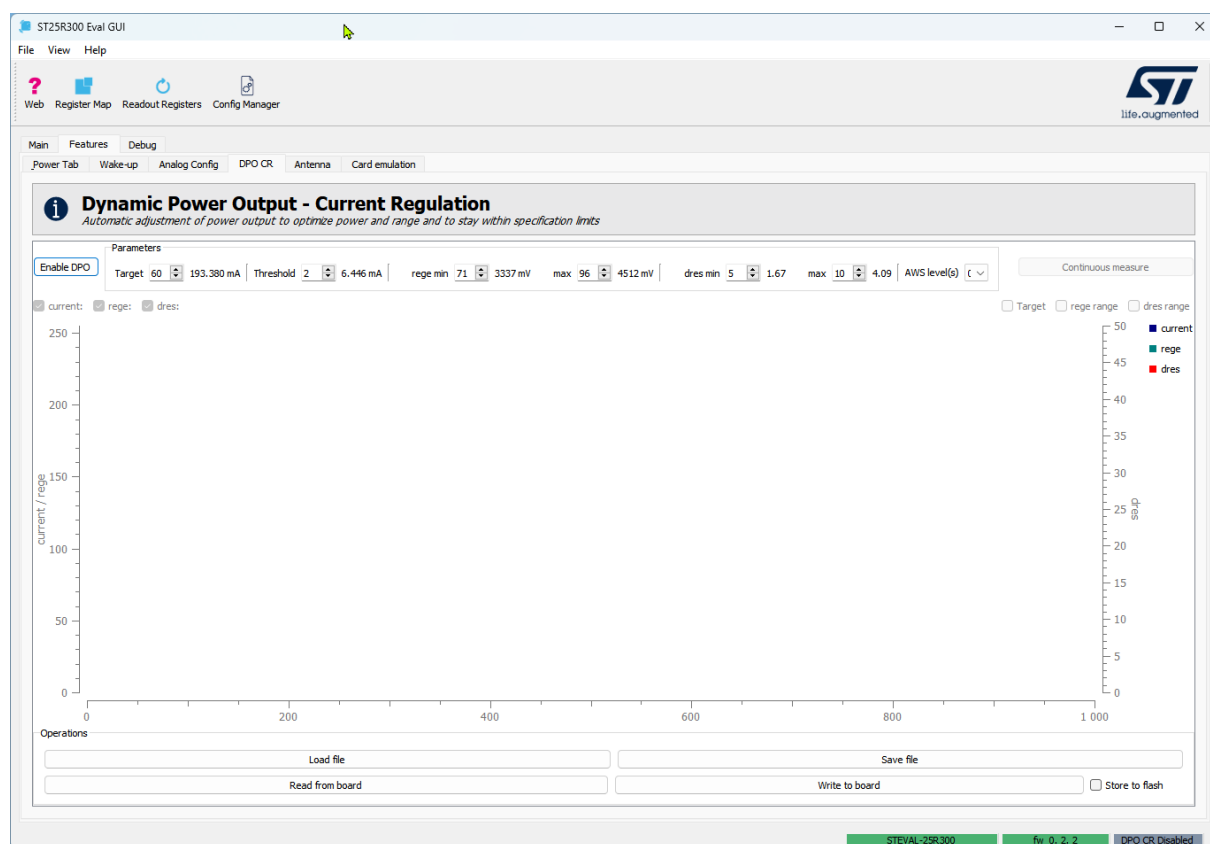

The DPO function is enabled by clicking on the “Enable DPO” button.

The following section describes the DPO functionality and using the ST25R300.

2.2.5.1

DPO CR details

The goals of DPO CR are:

1. reduce output power to ensure H_{MAX} anywhere in the operating volume (especially in close distance)
2. increase output power to ensure H_{MIN} anywhere in the operating volume (especially in far distance (4 cm))
3. Limit the power consumption in strong coupling conditions to avoid overloading the board's and USB supply capabilities


It performs this task by changing the ST25R300 internal regulator (rege) to lower VDD_DR (the output driver supply voltage) and by adjusting the driver resistance (dres). The criterion for regulation is the chip internal measurement of the current flowing through the VDD_DR regulator. The algorithm tries to maintain the lowest dres if possible.

The inputs of the algorithm are:

- Target current with a threshold, when measured value is off by threshold the algorithm tries to again regulate
- rege min and max: Allowed voltage value range. Limits to be taken into account:
 - Rege min needs to be above 3.3 V to have current measurement operational
 - Rege max setting of VDD_DR should have at least 300mV drop to VDD_TX to have current measurement operational
- dres min and max: Allowed driver resistance setting range. Displayed value is factor for RRFO
- AWS levels can be used to apply different AWS settings depending on rege settings.

The following example illustrates the operation of DPO CR when started from unloaded condition, then a load (field detector) being placed and subsequently removed:

Figure 19. DPO CR operation

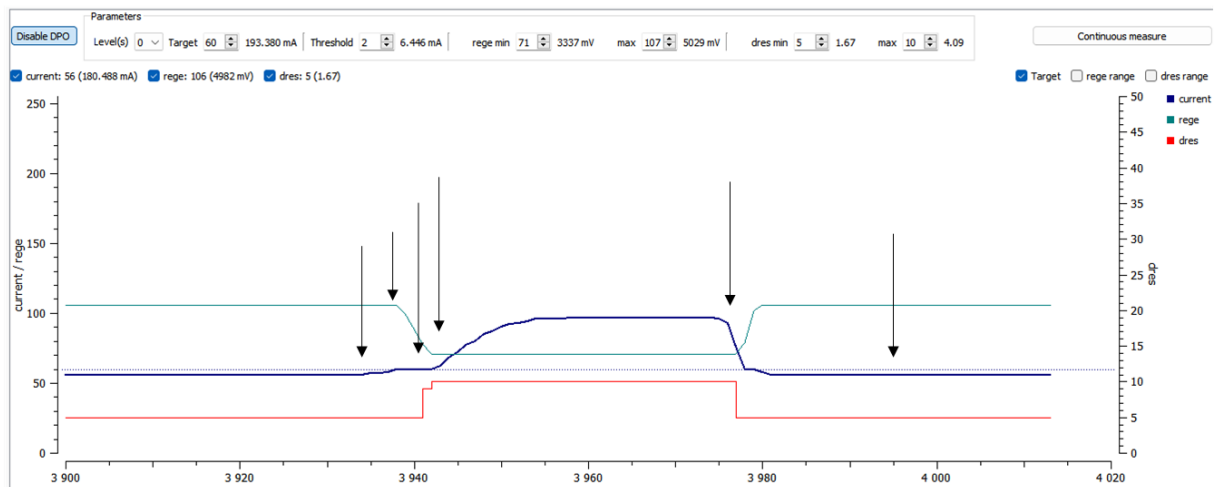

The arrows indicate:

1. Current slightly below target, system at maximum rege:107 and minimum dres:5. With approaching load the current increases
2. Current was too high and algorithm starts to decrease rege
3. Decreasing rege was not sufficient anymore, now also dres is getting increased.
4. Rege at minimum, dres at maximum, output power cannot be further decreased. With increasing load now also the current is increasing.
5. Load is getting removed, first dres gets decreased, then also rege gets increased
6. System settled back again to unloaded condition at max rege and min dres

2.2.5.2

DPO CR parameters

To use the dynamic power adjustment, the user has to choose parameters.

Figure 20. DPO CR settings

The parameters are:

- Target current which the algorithm tries to achieve by changing regulator and driver resistance settings.
- Hysteresis threshold to avoid oscillation. The default is 2.
- Power output is adjusted through regulator voltage (rege) and driver resistance (dres). Minimum rege is the lowest driver supply, resulting in lower output power.
- Power output is adjusted through regulator voltage (rege) and driver resistance (dres). Maximum rege is the highest driver supply, resulting in higher output power.
- Power output is adjusted through regulator voltage (rege) and driver resistance (dres). Minimum dres results in lowest driver resistance and highest output power.
- Power output is adjusted through regulator voltage (rege) and driver resistance (dres). Maximum dres results in highest driver resistance and lowest output power.
- AWS levels can be used to define waveshape settings depending on the regulated voltage chosen by the algorithm.

The behavior of DPO CR can be observed by pressing the **Continuous measure** button. Then, the ST25R300 emits a continuous carrier with basic A/B polling, and displays the measured current, rege and dres values, and DPO status in the GUI.

The DPO CR area in the status bar at the bottom right displays the actual AWS level used by the algorithm. It is depicted by the background color (blue, green, yellow, or pink). The area is updated during continuous measurement, displaying the rege voltage and the dres value used by the regulation algorithm. The dres value is marked with an indicator showing when the limit set is reached: the character '_' denotes that the minimum dres value is reached, and the character '^' denotes that the maximum value is reached. Typically, DPO CR is used to reduce the generated field in close proximity to the reader.

2.2.5.3 Saving a DPO setting

The **Load file** button enables to restore DPO CR parameters from a file, tune them using the GUI until a satisfying configuration has been found, and save them thanks to the **Save file** button.

Figure 21. Load and Save DPO dataset

The **Read from board** button enables reading the current configuration used by the firmware within the connected board. The Write to board button allows writing the configuration displayed by the GUI to the board into volatile memory (RAM). This means that these parameters are lost after the board is reset or removed from the PC. To write the configuration permanently in persistent memory, click on the checkbox **Store to flash** and press the **Write to board** button: the configuration is applied to the board and remains after reset or removal of the board.

2.2.5.4 AWS

AWS (active wave shaping) is a feature of the ST25R300. It lets the user control the shaping of the rising and falling edges of the modulated signal. Choosing the number of levels makes more GUI features available, which let the user additionally influence the wave-shaping feature of ST25R300 depending on regulator setting and used technology. The DPO tab lets the user control the static AWS configuration of the ST25R300 in a more flexible way:

- Adjust transients for the waveshapes with slow to fast preset values
- Fine-tune RF undershoot and overshoot patterns per power level and mode
- More granular adjustments of driver resistance
- Selection of modulation index used for each DPO level.

The active wave shaping in ST25R300 is accomplished primarily by using the corresponding AWS registers. Refer to the document for more details.


These parameters are stored and transferred to the analog configuration settings and are automatically parsed while switching to the DPO CR tab.

As a result, the user finds the following new modes controlling AWS:

- DPO_A_106_Level0
- DPO_A_106_Level1
- DPO_A_106_Level2
- DPO_A_106_Level3
- DPO_B_106_Level0
- DPO_B_106_Level1
- DPO_B_106_Level2
- DPO_B_106_Level3

They contain functions with register settings for mode A and B, with distinct parameters for up to four power levels.

Figure 22. Analog configuration with DPO modes

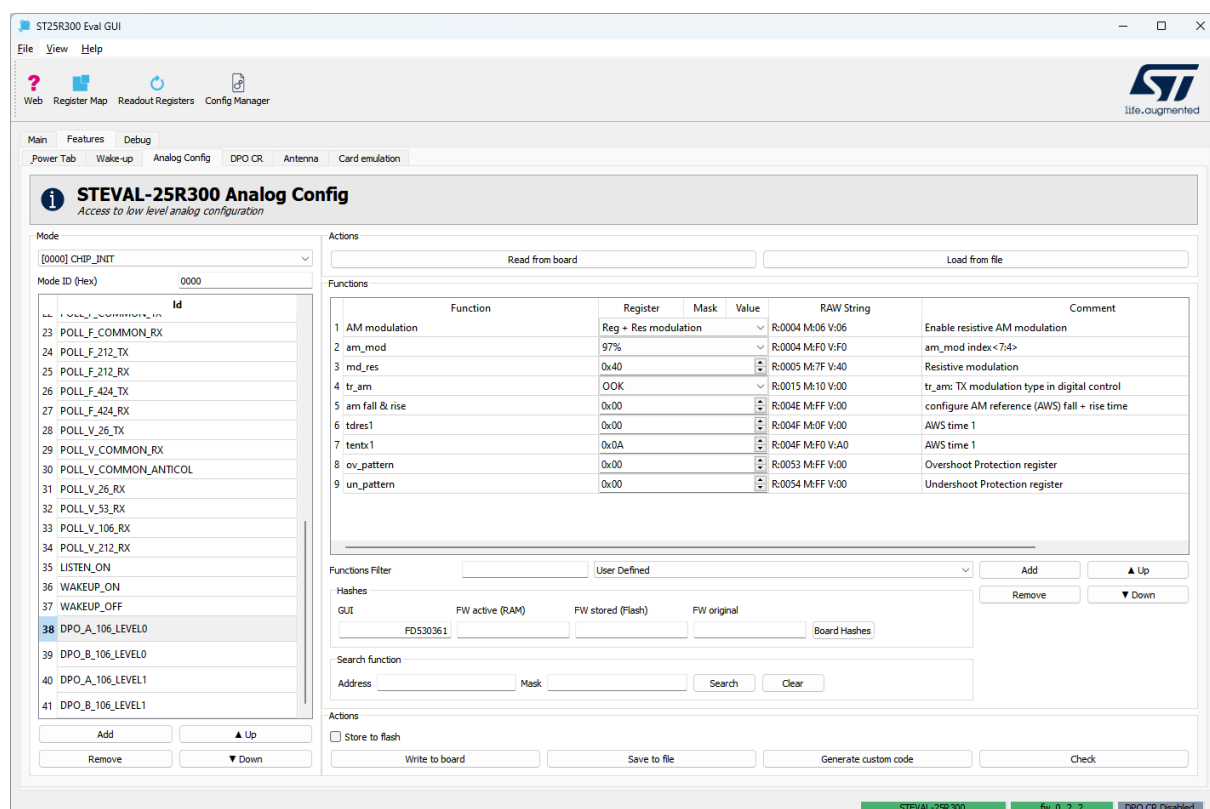

When using such an analog config containing AWS settings, the GUI detects them when switching to the DPO tab. This automatically sets the number of levels and enables advanced GUI widgets, showing NFC-A and NFC-B wave shapes, providing an easy way to fine-tune AWS parameters, as depicted in the following figure.

Figure 23. DPO CR tab

The user can access a given set of power level parameters by clicking on the matching power level bar. The set of registers and the wave shape background color are updated accordingly.

Figure 24. Choose a power level set of parameters

The user can either set manually undershoot/overshoot register value both NFC-A and NFC-B, or click on the tick boxes. The corresponding register value is updated too.

Once the continuous measure button is pressed, the current AWS parameters are saved to the board, and alternatively WUPA and WUPB commands are continuously sent. This feature allows quickly fine-tuning and directly seeing the effect with a scope, without going through the different tabs provided by the tool.

New parameters are sent to the firmware when restarting the continuous measure.

The AWS settings are shared with the analog configuration tab. They are updated when switching back to the analog configuration tab. The log window shows:

Figure 25. Log confirming export of AWS registers

This allows the user to review them and uses the actions documented in the **Analog Config** tab chapter . For example: save a file or generate custom code.

2.2.5.5

Card emulation tab

This tab allows the user to configure the ST25R300 in card emulation. It either emulates a T4T (in case of NFC-A), or a T3T (in case of NFC-F). Different contents can be configured.

Figure 26. Card emulation tab

The screenshot displays the 'Card emulation' tab of the ST25R300 configuration software. The interface is divided into several sections:

- Top Navigation:** Includes tabs for 'Main', 'Features', and 'Debug'. Below these are sub-tabs: 'Power Tab', 'Wake-up', 'Analog Config', 'DPO CR', 'Antenna', and 'Card emulation' (which is currently active).
- NFC Mode Selection:** Two radio buttons are present: 'NFC A' (selected) and 'NFC F'.
- NFC-A Configuration:**
 - UID Length:** A dropdown menu set to '4'.
 - UID:** A text field containing '5F53544D'.
 - ATQA:** A text field containing '4200'.
 - SAK:** A text field containing '20'.
- NFC-F Configuration:**
 - System Code:** A text field containing '12FC'.
 - IDm:** A text field containing '0011223344556677'.
 - PMm:** A text field containing '00f000000ffff00'.
- URI Configuration:**
 - Sub-tabs: 'URI' (selected), 'Text', and 'Image'.
 - Fields: 'Prefix' (containing 'http://www.') and 'URI' (containing 'st.com').
- NDEF Configuration:**
 - Radio buttons: 'NDEF' (selected) and 'ReflectMode'.
- Action:** A 'Configure' button is located at the bottom left of the main configuration area.

Note that some changes to the default values can make this emulation not inter-operable with a phone anymore. The memory of the card emulated is hosted on the GUI, and depends upon the PC reactivity and speed.

2.2.5.6 DLMA

Figure 27. DLMA



DLMA (dynamic load modulation amplitude) allows to configure the load modulation amplitude depending on perceived field strength. The shown table is used to traverse through the different CEM_RES values. Measured values can be visualized.

Visualization shows only interesting values if an external reader or mobile phone is presented.

Two different values are shown:

- The value at field on as used by the DLMA algorithm
- A live measurement triggered by GUI timer (accuracy subject to PC load). This value is different from the other value if the reader is moving in relation to the STEVAL-25R300 board.

2.3 Debug tab

The **Debug** tab allows the user to access the STEVAL-25R300KA at lower levels. Specifically, the user can explore the different technologies in detail using the **NFC-A / ISO 14443A**, **NFC-B / ISO 14443B**, and **NFC-V / ISO 15693** subtabs. The **Low level** subtab is not dedicated to a specific technology. It allows the user to control the assembled reader chip using chip specific commands as specified in the DS13658 datasheet.

2.3.1 NFC-A / ISO 14443A tab

Figure 28. NFC-A/ISO 14443A tab

The screenshot displays the 'NFC-A / ISO 14443A' tab within the UM3536 Reader mode software. The interface is organized into several sections:

- Top Navigation:** Includes tabs for 'Main', 'Features', and 'Debug'. Below these are specific technology tabs: 'NFC-A / ISO 14443A', 'NFC-B / ISO 14443B', 'NFC-F / Felica', 'NFC-V / ISO 15693', and 'Low level'.
- Section Header:** A large header area contains an information icon, the title 'NFC-A / ISO14443A', and the subtitle 'Execute ISO14443A technology commands'.
- NFC-A Poller:** This section includes a 'Field Off' button (highlighted in blue) and an 'Initialize' button.
- Compliance mode:** A dropdown menu currently set to 'NFC'.
- Device List:** A section with a 'TechnologyDetection' button and a 'Device List' dropdown menu.
- CollisionResolution:** A button located below the 'TechnologyDetection' button.
- Sleep/Wakeup:** Two buttons, 'Sleep' and 'Wakeup', positioned to the right of the 'CollisionResolution' button.
- IsoDep:** This section is divided into two columns. The left column contains:
 - Frame Size (FSD):** A dropdown menu set to '256 bytes'.
 - Device Identifier (DID):** A dropdown menu set to '0'.
 - Maximum Baudrate:** A dropdown menu set to '106 kbit/s'.
 - HandleActivation:** A button.
 - Deselect:** A button at the bottom of the left column.
- IsoDep Info:** A large central area for displaying information, currently empty.
- Send BaudRate (DSI):** A dropdown menu set to '106 kbit/s'.
- Receive BaudRate (DRI):** A dropdown menu set to '106 kbit/s'.
- RATS/PPS:** Two buttons, 'RATS' and 'PPS', located below the baudrate dropdowns.
- ATS Info:** A box on the right side of the 'IsoDep Info' area, currently empty.
- PPS Info:** A box on the right side of the 'IsoDep Info' area, currently empty.
- IsoDep APDU:** This section at the bottom includes:
 - Predefined:** A dropdown menu set to 'NDEF Select App'.
 - Send Data:** A text input field containing the hexadecimal value '00 A4 04 00 07 D2 76 00 00 85 01 01 00'.
 - Receive Data:** An empty text input field.
 - Transceive:** A button to the right of the 'Send Data' field.

The **NFC-A / ISO 14443A** tab allows the execution/debugging of the different stages of NFC-A technology in accordance with the NFC Forum™/ISO 14443A standard. The GUI highlights the next button to click to assist the user. If the button is clicked and the operation is successful, the next suggested button is highlighted in blue. If a card is present, successful communication guides the user through the **TechnologyDetection** and **CollisionResolution** steps. The user then activates the card by clicking **HandleActivation**. After activation of the card, the user sends predefined or custom commands to the card using the **Transceive** button.

Note: NFC Forum and the NFC Forum logo are trademarks of the Near Field Communication Forum.

2.3.2 NFC-B / ISO 14443B tab

Figure 29. NFC-B / ISO 14443B tab


The screenshot displays the 'NFC-B / ISO 14443B' tab in the UM3536 Reader mode GUI. The interface is organized into several sections:

- Top Navigation:** Includes tabs for 'Main', 'Features', and 'Debug'. Below these are specific protocol tabs: 'NFC-A / ISO 14443A', 'NFC-B / ISO 14443B' (selected), 'NFC-F / Felica', 'NFC-V / ISO 15693', and 'Low level'.
- Section Header:** 'NFC-B / ISO14443B' with a sub-label 'Execute ISO14443B technology commands'.
- NFC-B Poller:** Contains buttons for 'Field Off' (highlighted in blue) and 'Initialize'.
- Compliance mode:** A dropdown menu set to 'NFC'.
- Device List:** A dropdown menu with 'TechnologyDetection' selected.
- Buttons:** 'CollisionResolution', 'Sleep', and 'Wakeup'.
- IsoDep:**
 - Frame Size (FSD):** Dropdown set to '256 bytes'.
 - Maximum Baudrate:** Dropdown set to '106 kbit/s'.
 - Device Identifier (DID):** Dropdown set to '0'.
 - PARAM1:** Dropdown set to '0'.
 - Buttons:** 'HandleActivation' and 'Deselect'.
- IsoDep Info:** A large empty box for information.
- AttribRes Info:** A large empty box for information.
- IsoDep APDU:**
 - Predefined:** Dropdown set to 'NDEF Select App'.
 - Send Data:** A text input field.
 - Receive Data:** A text input field.
 - Buttons:** 'Transceive' and 'Transceive' (repeated).

The **NFC-B / ISO 14443B** tab provides functionality to execute/debug the different stages of NFC-B communication according to the NFC Forum™/ISO 14443B standard. The GUI assists to the user by highlighting a suggestion of the next button to press. The highlighted buttons take the user through the **Initialize**, **TechnologyDetection**, **CollisionResolution**, and **HandleActivation** steps.

2.3.3 NFC-F/FeliCa tab

Figure 30. NFC-F / FeliCa tab

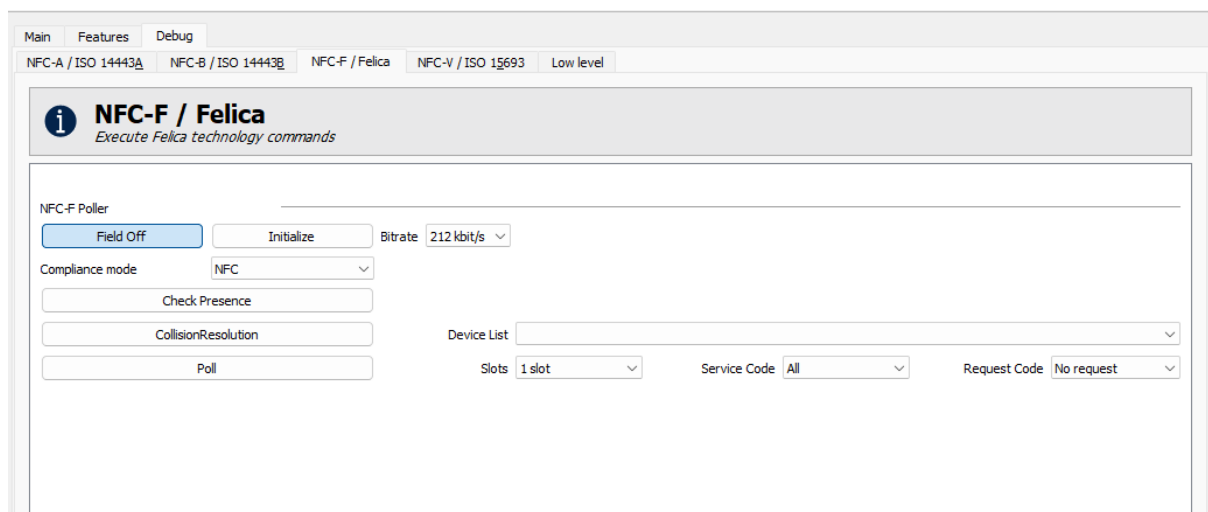


The screenshot shows the 'NFC-F / Felica' tab in the UM3536 software. The tab has a title bar with 'Main', 'Features', and 'Debug' tabs. Below the title bar, there are several sub-tabs: 'NFC-A / ISO 14443A', 'NFC-B / ISO 14443B', 'NFC-F / Felica', 'NFC-V / ISO 15693', and 'Low level'. The 'NFC-F / Felica' tab is selected. The main content area has a header with an information icon and the text 'NFC-F / Felica' and 'Execute Felica technology commands'. Below this, there is a 'NFC-F Poller' section. It contains a 'Field Off' button (highlighted in blue), an 'Initialize' button, a 'Bitrate' dropdown menu set to '212 kbit/s', a 'Compliance mode' dropdown menu set to 'NFC', a 'Check Presence' button, a 'CollisionResolution' button, and a 'Poll' button. To the right of these buttons, there is a 'Device List' dropdown menu, a 'Slots' dropdown menu set to '1 slot', a 'Service Code' dropdown menu set to 'All', and a 'Request Code' dropdown menu set to 'No request'.

The NFC-F / FeliCa tab provides functionality to execute/debug the different stages of NFC-F communication according to the NFC Forum/FeliCa standard. The GUI assists to the user by highlighting a suggestion of the next button to press. The highlighted buttons take the user through the **Initialize**, **TechnologyDetection**, and **CollisionResolution** steps.

2.3.4 NFC-V / ISO 15693 tab


Figure 31. NFC-V / ISO 15693 tab

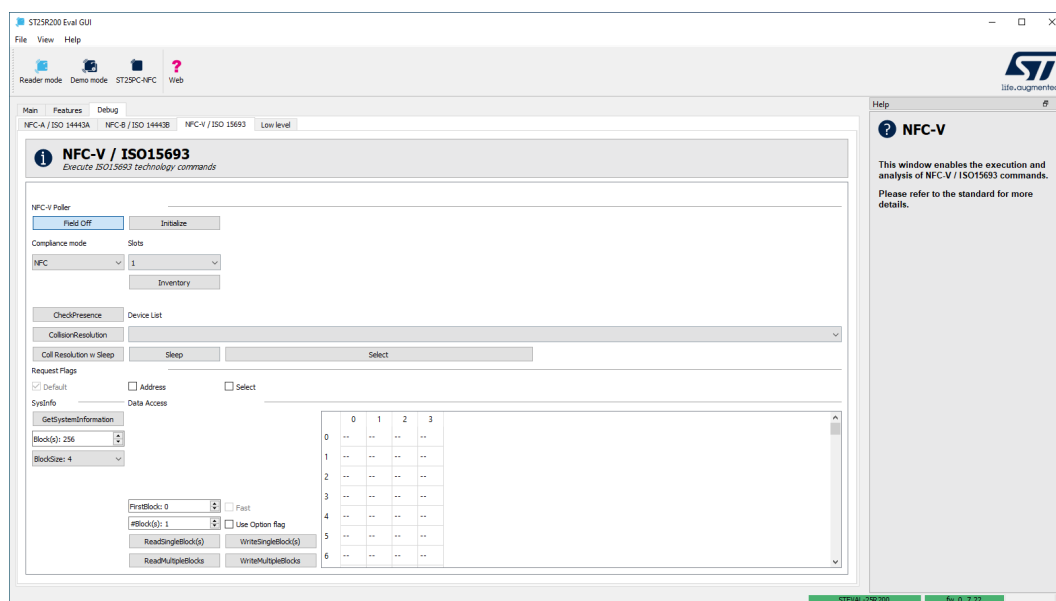

The **NFC-V / ISO 15693** tab provides functionality to execute/debug the different stages of NFC-V communication according to NFC Forum™/ISO 15693. It provides help to the user by highlighting buttons to press. The highlighted buttons guide the user through the **Initialize**, **CheckPresence**, and **CollisionResolution** steps. After that, it is possible to execute **ReadSingleBlock(s)** to read one block of the card memory.

2.3.5 Low level tab

Figure 32. Low level tab

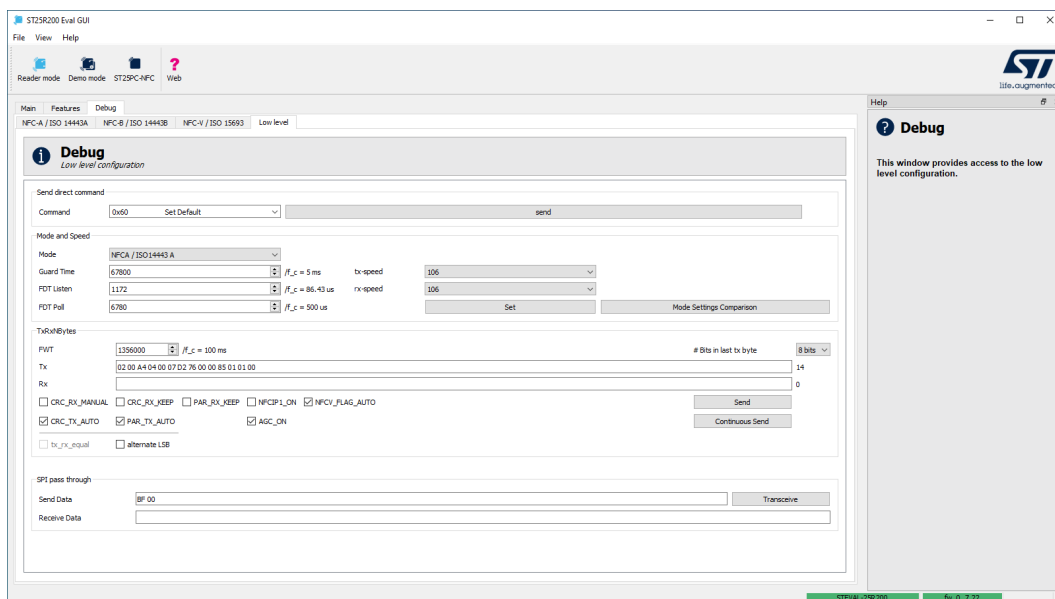


The **Low level** tab allows direct control of the ST25R300 reader mounted on the board. For details, see the ST25R300 datasheet (DS14655).

3 Other dialog boxes and panels

3.1 Register map

In the menu, click **View > Register Map** to open the register map.

Figure 33. Open the register map

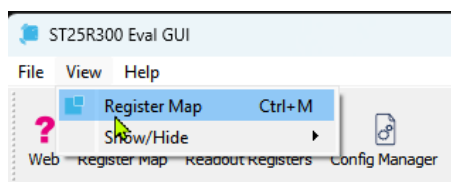

The **Register Map** window, shown in the figure below, is a view that displays all registers and their values. It also allows changes to the register settings.

Figure 34. Register map

Register Map										
File View										
	Addr.	7	6	5	4	3	2	1	0	Value
00h: Operation	0x00	0	0	0	0	1	0	0	0	0x08
01h: General	0x01	0	0	0	0	1	1	0	0	0x0c
02h: Regulator	0x02	0	1	1	1	1	1	1	1	0x7f
03h: TX Driver Config	0x03	0	0	1	1	0	0	0	0	0x30
04h: TX Modulation 1	0x04	0	1	1	1	0	1	1	0	0x76
05h: TX Modulation 2	0x05	0	1	1	1	1	1	1	1	0x7f
06h: CE Modulation 1	0x06	1	1	1	1	0	0	0	0	0xf0
07h: CE Modulation 2	0x07	0	0	0	0	0	0	0	1	0x01
08h: GPIO Control	0x08	0	0	0	0	0	0	1	1	0x03
09h: RX Path Ana 1	0x09	0	1	1	1	0	0	1	1	0x73
0Ah: RX Path Ana 2	0x0a	0	0	0	0	0	0	1	0	0x02
0Bh: RX Path Ana 3	0x0b	1	0	0	0	0	1	0	1	0x85
0Ch: RX Path Ana 4	0x0c	0	0	0	0	0	0	0	0	0x00
0Dh: RX Digital	0x0d	1	1	0	0	1	1	0	0	0xcc
0Eh: Correlator 1	0x0e	1	1	0	0	0	0	0	1	0xc1
0Fh: Correlator 2	0x0f	0	1	0	1	1	0	1	0	0x5a
10h: Correlator 3	0x10	0	0	0	0	0	1	1	1	0x07
11h: Correlator 4	0x11	1	0	1	0	1	0	1	0	0xaa
12h: Correlator 5	0x12	0	0	0	0	0	0	1	1	0x03
13h: Correlator 6	0x13	0	0	1	1	0	0	0	0	0x30

When the **Register Map** window is open, it displays a list of register names with their addresses on the left side. On the right side, it shows the register values in hexadecimal. Between the register names and the register values, there are also 8 bits, which represent the current contents of the registers. Click on a bit to toggle the state from 1 to 0, or vice versa. This feature is disabled for some read-only registers. When it is the case, the register bits are grayed out.


3.2 Updating the firmware

To update the firmware, do one of the following:

- Click the **Update Firmware** button in the **Board Info** tab.
- In the top menu, click **Help > Firmware Update**.
- Press CTRL + F.

The **Firmware update** dialog box illustrated below allows the flashing of firmware on the MCU of the ST25R300 evaluation board directly from the ST25R300 Eval GUI. The GUI comes with firmware for the evaluation board. The firmware combo box shows all the pieces of firmware located in the firmware folder specified by the firmware dir parameter. The latest version of the firmware can be found at st.com. Clicking the **Update Firmware (using mass storage transfer)** button flashes the firmware to the board. If multiple boards are connected, ensure that the correct board is selected in the **Boards** combo box.

Figure 35. Firmware update

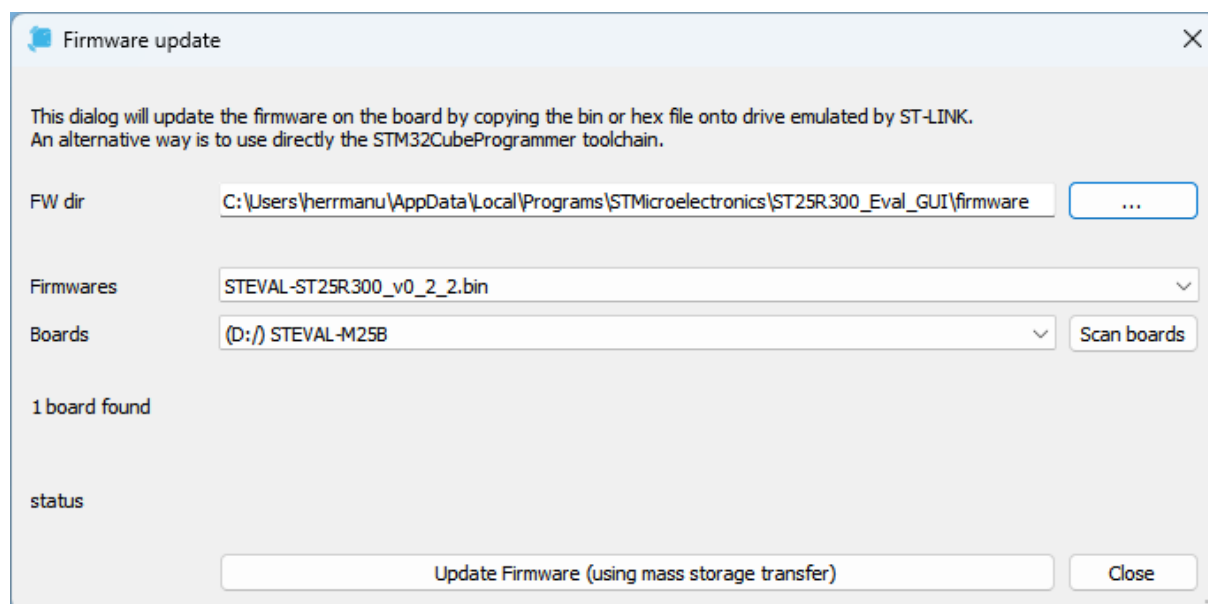


3.3

Logging

The **Logging** window is at the bottom of the GUI. It can be enabled/disabled in the **View** menu by selecting **Show/Hide > Logging**. It shows the entire communication between the GUI and the connected reader. Any request from the GUI is displayed in gray, while a positive response is displayed in green.

Figure 36. Logging

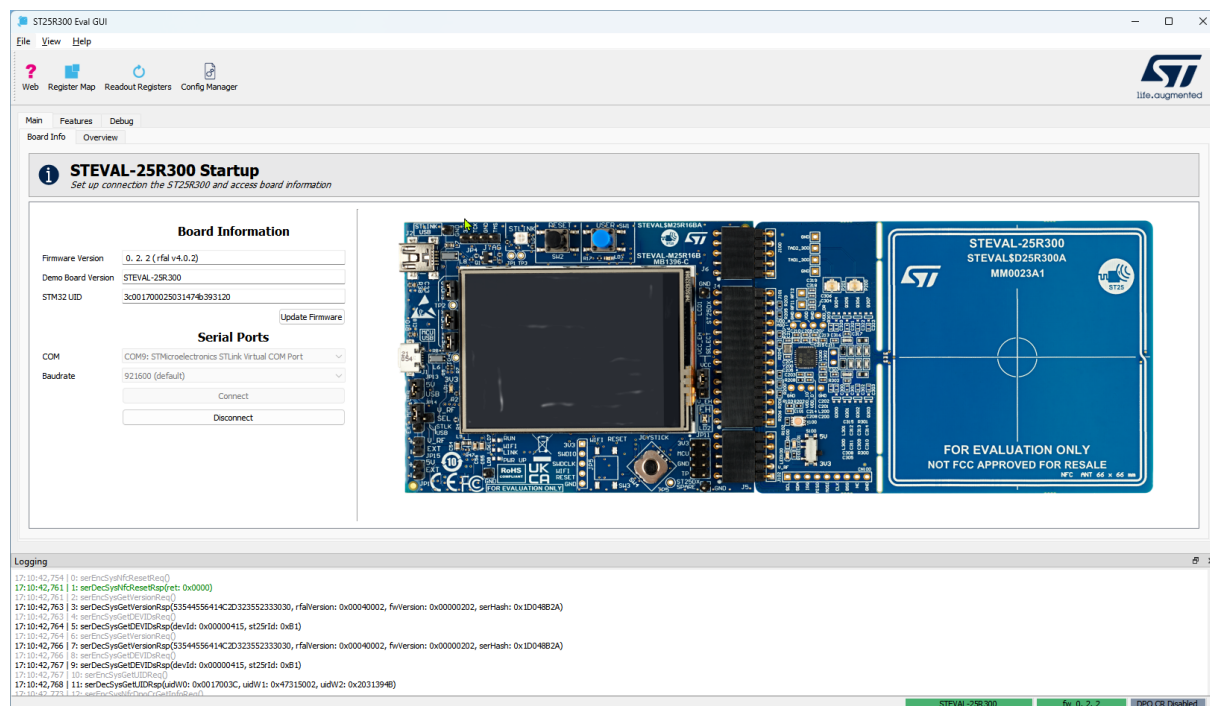


If the communication fails for any reason, this is indicated by a red font in the **Logging** window.

3.4 Help panel


To the right of each tab, there is a help panel that provides basic information about the current tab.

Figure 37. Overview

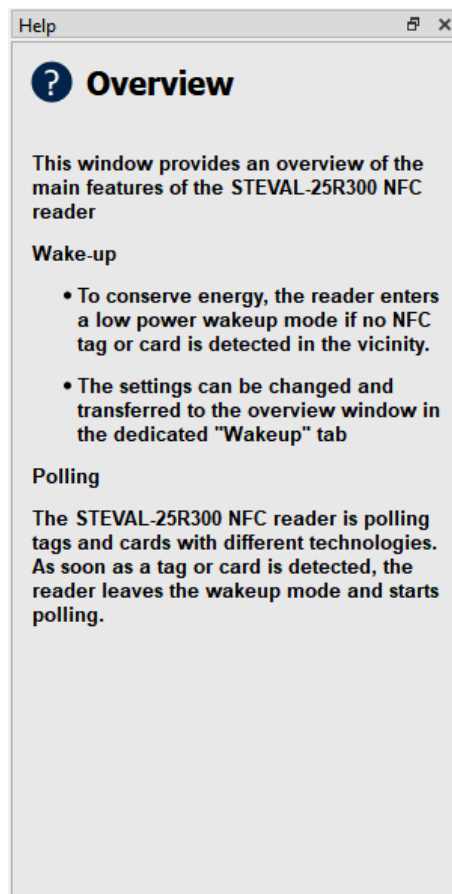

3.5 Configuration manager

Figure 38. Configuration manager

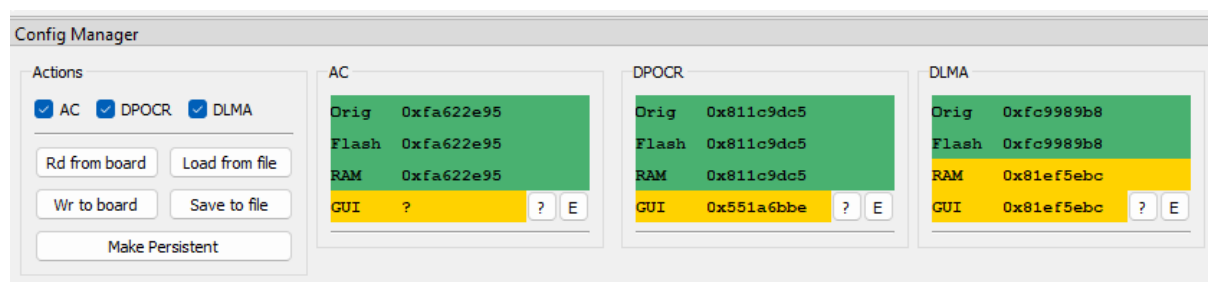

The config manager allows to load and store complete bundles of analog Configs and DPO CR configuration in files and also in firmware - either RAM or with "Make persistent" also into an STM32 flash page.

Revision history

Table 1. Document revision history

Date	Version	Changes
24-Jun-2025	1	Initial release.

Contents

1	Preface	2
1.1	Downloading and installing the software	2
1.2	Hardware preparations	5
2	Reader mode	6
2.1	Main tab	6
2.1.1	Board info tab	6
2.1.2	Overview tab	7
2.2	Features tab	8
2.2.1	Power tab	8
2.2.2	Antenna tab	9
2.2.3	Wake-up tab	9
2.2.4	Analog config tab	10
2.2.5	DPO CR	12
2.3	Debug tab	18
2.3.1	NFC-A / ISO 14443A tab	19
2.3.2	NFC-B / ISO 14443B tab	20
2.3.3	NFC-F/FeliCa tab	21
2.3.4	NFC-V / ISO 15693 tab	22
2.3.5	Low level tab	23
3	Other dialog boxes and panels	24
3.1	Register map	24
3.2	Updating the firmware	25
3.3	Logging	26
3.4	Help panel	27
3.5	Configuration manager	27
	Revision history	28
	List of tables	30
	List of figures	31



List of tables

Table 1. Document revision history 28

List of figures

Figure 1.	Selecting install mode	2
Figure 2.	Selecting the program destination	2
Figure 3.	Selecting a start menu folder	3
Figure 4.	Creating a desktop shortcut	3
Figure 5.	Ready to install.	4
Figure 6.	Installation completed	4
Figure 7.	ST25R300 evaluation board - top view	5
Figure 8.	GUI modes	6
Figure 9.	Board info tab.	6
Figure 10.	ST25R300 overview	7
Figure 11.	Polling configuration	7
Figure 12.	Extended view	8
Figure 13.	Power consumption.	8
Figure 14.	Antenna tab	9
Figure 15.	Wake-up tab with the configuration shown	10
Figure 16.	Wake-up configuration shown.	10
Figure 17.	ST25R300 Analog config tab	11
Figure 18.	DPO CR panel overview	12
Figure 19.	DPO CR operation	13
Figure 20.	DPO CR settings	14
Figure 21.	Load and Save DPO dataset	14
Figure 22.	Analog configuration with DPO modes.	15
Figure 23.	DPO CR tab.	16
Figure 24.	Choose a power level set of parameters	16
Figure 25.	Log confirming export of AWS registers	16
Figure 26.	Card emulation tab	17
Figure 27.	DLMA	18
Figure 28.	NFC-A/ISO 14443A tab	19
Figure 29.	NFC-B / ISO 14443B tab	20
Figure 30.	NFC-F / FeliCa tab	21
Figure 31.	NFC-V / ISO 15693 tab	22
Figure 32.	Low level tab	23
Figure 33.	Open the register map.	24
Figure 34.	Register map	24
Figure 35.	Firmware update.	25
Figure 36.	Logging	26
Figure 37.	Overview	27
Figure 38.	Configuration manager	27

IMPORTANT NOTICE – READ CAREFULLY

STMicroelectronics NV and its subsidiaries ("ST") reserve the right to make changes, corrections, enhancements, modifications, and improvements to ST products and/or to this document at any time without notice. Purchasers should obtain the latest relevant information on ST products before placing orders. ST products are sold pursuant to ST's terms and conditions of sale in place at the time of order acknowledgment.

Purchasers are solely responsible for the choice, selection, and use of ST products and ST assumes no liability for application assistance or the design of purchasers' products.

No license, express or implied, to any intellectual property right is granted by ST herein.

Resale of ST products with provisions different from the information set forth herein shall void any warranty granted by ST for such product.

ST and the ST logo are trademarks of ST. For additional information about ST trademarks, refer to www.st.com/trademarks. All other product or service names are the property of their respective owners.

Information in this document supersedes and replaces information previously supplied in any prior versions of this document.

© 2025 STMicroelectronics – All rights reserved