

Intelligent Fire Panel
AFP-100/AFP-100E
Instruction Manual

Fire Alarm System Limitations

While a fire alarm system may lower insurance rates, it is not a substitute for fire insurance!

An automatic fire alarm system—typically made up of smoke detectors, heat detectors, manual pull stations, audible warning devices, and a fire alarm control with remote notification capability—can provide early warning of a developing fire. Such a system, however, does not assure protection against property damage or loss of life resulting from a fire.

The Manufacturer recommends that smoke and/or heat detectors be located throughout a protected premise following the recommendations of the current edition of the National Fire Protection Association Standard 72 (NFPA 72), manufacturer's recommendations, State and local codes, and the recommendations contained in the Guide for Proper Use of System Smoke Detectors, which is made available at no charge to all installing dealers. A study by the Federal Emergency Management Agency (an agency of the United States government) indicated that smoke detectors may not go off in as many as 35% of all fires. While fire alarm systems are designed to provide early warning against fire, they do not guarantee warning or protection against fire. A fire alarm system may not provide timely or adequate warning, or simply may not function, for a variety of reasons:

Smoke detectors may not sense fire where smoke cannot reach the detectors such as in chimneys, in or behind walls, on roofs, or on the other side of closed doors. Smoke detectors also may not sense a fire on another level or floor of a building. A second-floor detector, for example, may not sense a first-floor or basement fire.

Particles of combustion or "smoke" from a developing fire may not reach the sensing chambers of smoke detectors because:

- Barriers such as closed or partially closed doors, walls, or chimneys may inhibit particle or smoke flow.
- Smoke particles may become "cold," stratify, and not reach the ceiling or upper walls where detectors are located.
- Smoke particles may be blown away from detectors by air outlets.
- Smoke particles may be drawn into air returns before reaching the detector.

The amount of "smoke" present may be insufficient to alarm smoke detectors. Smoke detectors are designed to alarm at various levels of smoke density. If such density levels are not created by a developing fire at the location of detectors, the detectors will not go into alarm.

Smoke detectors, even when working properly, have sensing limitations. Detectors that have photoelectronic sensing chambers tend to detect smoldering fires better than flaming fires, which have little visible smoke. Detectors that have ionizing-type sensing chambers tend to detect fast-flaming fires better than smoldering fires. Because fires develop in different ways and are often unpredictable in their growth, neither type of detector is necessarily best and a given type of detector may not provide adequate warning of a fire.

Smoke detectors cannot be expected to provide adequate warning of fires caused by arson, children playing with matches (especially in bedrooms), smoking in bed, and violent explosions (caused by escaping gas, improper storage of flammable materials, etc.).

Heat detectors do not sense particles of combustion and alarm only when heat on their sensors increases at a predetermined rate or reaches a predetermined level. Rate-of-rise heat detectors may be subject to reduced sensitivity over time. For this reason, the rate-of-rise feature of each detector should be tested at least once per year by a qualified fire protection specialist. Heat detectors are designed to protect property, not life.

IMPORTANT! Smoke detectors must be installed in the same room as the control panel and in rooms used by the system for the connection of alarm transmission wiring, communications, signaling, and/or power. If detectors are not so located, a developing fire may damage the alarm system, crippling its ability to report a fire.

Audible warning devices such as bells may not alert people if these devices are located on the other side of closed or partly open doors or are located on another floor of a building. Any warning device may fail to alert people with a disability or those who have recently consumed drugs, alcohol or medication. Please note that:

- Strobes can, under certain circumstances, cause seizures in people with conditions such as epilepsy.
- Studies have shown that certain people, even when they hear a fire alarm signal, do not respond or comprehend the meaning of the signal. It is the property owner's responsibility to conduct fire drills and other training exercise to make people aware of fire alarm signals and instruct them on the proper reaction to alarm signals.
- In rare instances, the sounding of a warning device can cause temporary or permanent hearing loss.

A fire alarm system will not operate without any electrical power. If AC power fails, the system will operate from standby batteries only for a specified time and only if the batteries have been properly maintained and replaced regularly.

Equipment used in the system may not be technically compatible with the control. It is essential to use only equipment listed for service with your control panel.

Telephone lines needed to transmit alarm signals from a premise to a central monitoring station may be out of service or temporarily disabled. For added protection against telephone line failure, backup radio transmission systems are recommended.

The most common cause of fire alarm malfunction is inadequate maintenance. To keep the entire fire alarm system in excellent working order, ongoing maintenance is required per the manufacturer's recommendations, and UL and NFPA standards. At a minimum, the requirements of Chapter 7 of NFPA 72 shall be followed. Environments with large amounts of dust, dirt or high air velocity require more frequent maintenance. A maintenance agreement should be arranged through the local manufacturer's representative. Maintenance should be scheduled monthly or as required by National and/or local fire codes and should be performed by authorized professional fire alarm installers only. Adequate written records of all inspections should be kept.

Installation Precautions

Adherence to the following will aid in problem-free installation with long-term reliability:

WARNING - Several different sources of power can be connected to the fire alarm control panel. Disconnect all sources of power before servicing. Control unit and associated equipment may be damaged by removing and/or inserting cards, modules, or interconnecting cables while the unit is energized. Do not attempt to install, service, or operate this unit until this manual is read and understood.

CAUTION - System Reacceptance Test after Software Changes. To ensure proper system operation, this product must be tested in accordance with NFPA 72 Chapter 7 after any programming operation or change in site-specific software. Reacceptance testing is required after any change, addition or deletion of system components, or after any modification, repair or adjustment to system hardware or wiring.

All components, circuits, system operations, or software functions known to be affected by a change must be 100% tested. In addition, to ensure that other operations are not inadvertently affected, at least 10% of initiating devices that are not directly affected by the change, up to a maximum of 50 devices, must also be tested and proper system operation verified.

This system meets NFPA requirements for operation at 0-49° C/32-120° F and at a relative humidity of 85% RH (non-condensing) at 30° C/86° F. However, the useful life of the system's standby batteries and the electronic components may be adversely affected by extreme temperature ranges and humidity. Therefore, it is recommended that this system and all peripherals be installed in an environment with a nominal room temperature of 15-27° C/60-80° F.

Verify that wire sizes are adequate for all initiating and indicating device loops. Most devices cannot tolerate more than a 10% I.R. drop from the specified device voltage.

Like all solid state electronic devices, this system may operate erratically or can be damaged when subjected to lightning-induced transients. Although no system is completely immune from lightning transients and interferences, proper grounding will reduce susceptibility. Overhead or outside aerial wiring is not recommended, due to an increased susceptibility to nearby lightning strikes. Consult with the Technical Services Department if any problems are anticipated or encountered.

Disconnect AC power and batteries prior to removing or inserting circuit boards. Failure to do so can damage circuits.

Remove all electronic assemblies prior to any drilling, filing, reaming, or punching of the enclosure. When possible, make all cable entries from the sides or rear. Before making modifications, verify that they will not interfere with battery, transformer, and printed circuit board location.

Do not tighten screw terminals more than 9 in-lbs. Over-tightening may damage threads, resulting in reduced terminal contact pressure and difficulty with screw terminal removal.

Though designed to last many years, system components can fail at any time. This system contains static-sensitive components. Always ground yourself with a proper wrist strap before handling any circuits so that static charges are removed from the body. Use static-suppressive packaging to protect electronic assemblies removed from the unit.

Follow the instructions in the installation, operating, and programming manuals. These instructions must be followed to avoid damage to the control panel and associated equipment. FACP operation and reliability depend upon proper installation by authorized personnel.

FCC Warning

WARNING: This equipment generates, uses, and can radiate radio frequency energy and if not installed and used in accordance with the instruction manual, may cause interference to radio communications. It has been tested and found to comply with the limits for class A computing device pursuant to Subpart B of Part 15 of FCC Rules, which is designed to provide reasonable protection against such interference when operated in a commercial environment. Operation of this equipment in a residential area is likely to cause interference, in which case the user will be required to correct the interference at his own expense.

Canadian Requirements

This digital apparatus does not exceed the Class A limits for radiation noise emissions from digital apparatus set out in the Radio Interference Regulations of the Canadian Department of Communications.

Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de la classe A prescrites dans le Règlement sur le brouillage radioélectrique édicté par le ministère des Communications du Canada.

Precau-L-11-2001.fm

Acclimate Plus™, HARSH™, NOTI-FIRE-NET™, ONYX™, and VeriFire™ are trademarks, and FlashScan® and VIEW® are registered trademarks of NOTIFIER. NION™ and UniNet™ are trademarks of NIS. NIS™ and Notifier Integrated Systems™ are trademarks and NOTIFIER® is a registered trademark of Fire-Lite Alarms, Inc. Echelon® is a registered trademark and LonWorks™ is a trademark of Echelon Corporation. ARCNET® is a registered trademark of Datapoint Corporation. Microsoft® and Windows® are registered trademarks of the Microsoft Corporation. LEXAN® is a registered trademark of GE Plastics, a subsidiary of General Electric Company.

This page intentionally left blank

Table of Contents

1. Product Description

Overview	9
Features	9
Options	10
Supplemental Documentation	10
Components	11
Main Circuit Board	11
Cabinet	11
Transformer Assembly.....	11
Controls and Indicators	12
Membrane Panel	12
System Status LED Indicators	12
LCD Display	12
Local Sounder	12
Terminals, Connectors & Switches.....	13
Circuits	14
Signaling Line Circuit (SLC).....	14
Output Circuits	14
Notification Appliance Circuits (NACs).....	14
Relays.....	14
Accessories and Options	15
Dress Panel.....	15
Transformers	15
Batteries and Battery Boxes.....	15
Chargers and Power Supplies	15
Field Charger/Power Supply - FCPS-24	15
Battery Charger - CHG-120.....	15
Programming Utility	16
Addressable Devices.....	17
Intelligent Detectors	17
Bases and Accessories	18
Modules.....	18
Monitor Modules - FMM-1, FZM-1 & FDM-1	18
Monitor Module - FMM-101	18
Control Module, NAC - FCM-1	19
Control Module, Relay - FRM-1	19
Fault Isolator Module - IXO-X.....	19
Pull Station - NBG-12LX	19
Optional Internal Modules	20
RTM-8F Relay/Transmitter Module.....	20
UDACT - Universal Digital Alarm Communicator/Transmitter	20
PIM-24 Printer/PC Interface Module	20
DIM-485 Display Interface Module	20
Annunciators.....	21
ACS Series LED Zone Type Annunciators	21
Annunciator Control Module - ACM-16AT	21
Annunciator Expander Module - AEM-16AT.....	21
Annunciator Control Module - ACM-32A	21
Annunciator Expander Module - AEM-32A	21
Annunciator Fixed Modules.....	22
Annunciator Fixed Module - AFM-16AT	22
Annunciator Fixed Module - AFM-32A	22

Annunciator Fixed Module - AFM-16A	22
Annunciator Devices	22
Annunciator Relay Control Module - ACM-8R	22
LCD-2X20 Series Remote Fire Annunciators	23
Lamp Driver Annunciator Module - LDM-32	23
Lamp Driver Annunciator Expander Module - LDM-E32	23
Lamp Driver Relay Expander Module - LDM-R32.....	23

2. Installation

Overview.....	25
Checklist	25
Cabinet Mounting.....	26
Component Installation.....	28
Power Connections	29
AC Connections	29
Earth Ground Connections	29
Battery (DC) Connections.....	30
DC Power Output Connections.....	31
Standard Relays Circuits	31
Annunciator Circuits.....	32
Notification Appliance Circuits.....	32
Wiring a Signaling Line Circuit.....	33
Overview	33
Device Capacity	33
Surge Suppression.....	33
Installation.....	33
UL Power-limited Wiring Requirements	34
General	34
RTM-8F.....	34
Installing a RTM-8F Module.....	35
Mounting	35
Connections & Components.....	36
Notes:	36
Printer and PC Interface	38
Overview	38
Programming.....	38
Installation.....	38
Printer Configuration.....	39
PC Configuration.....	39
PIM-24 Interface Module.....	39

3. Programming

Overview.....	41
Initial Power-up	42
Menu Selections	42
1 = Programming.....	42
2 = Read Status.....	42
3 = AC/BAT	42
Enter Programming Mode.....	43
Passwords.....	43
Program Change – Level One	44
Clear	44
Autoprogram	44
New Detectors.....	45

Monitor Modules	47
Control Modules	48
Point Edit.....	48
System Edit	49
Password Change	50
Load	50
Program Change – Level Two.....	51
Disable	51
Clear History	52
Walktest	52
Shorted/Alarm Condition.....	52
Open Condition.....	53
Set Time and Date.....	53
Check	53
Screen Options Flowchart	55

4. Operation

Control Keys	58
Acknowledge/Step	58
Alarm Silence.....	58
Drill Hold 2 Sec.	58
System Reset	58
System Status LED Indicators	59
AC Power.....	59
Fire Alarm	59
Supervisory	59
Alarm Silence.....	59
System Trouble	59
Normal Operation	60
Trouble Operation.....	61
Addressable Smoke Detectors	61
Monitor and Control Modules.....	62
Acknowledge	63
Alarm Operation	64
Supervisory Operation.....	64
NAC (Notification Appliance Circuit) Operation	64
Control-By-Event (CBE)Operation.....	65
Detector Functions	65
Maintenance Alert.....	65
Automatic Test Operation.....	65
Type Code Supervision.....	65
System Alarm Verification	65
Time Functions: Real-time Clock	65
Coded Operation - NAC 01 and NAC 02	66
Presignal.....	66
Special System Timers	67
Silence Inhibit Timer (None or 60 Seconds)	67
Auto-silence Timer (None or 10 Minutes).....	67
Trouble Reminder	67
Alarm Verification (None or 73 Seconds)	67
Waterflow Circuits Operation	68
Disable/Enable Operation	68
Wiring Fault	68
Read Status	69

Read Status Entry	69
Display Point	70
Read History	70
Print Program	70
Print History	70
Print Detector Data	71

Appendix A: Power Supply Calculations

The AC Branch Circuit	72
The Main Power Supply	73
Calculating the Battery Capacity	75

Appendix B: Electrical Specifications

Electrical Specifications	76
AC Power	76
Battery	76
Signaling Line Circuit	76
Notification Appliance Circuits	76
Alarm, Trouble and Supervisory Relays	76
DC Power for Output Circuits	77
Wire Requirements	77
Overview	77

Appendix C: Software Zones

Overview of Software Zones	80
Examples of Software Zones	80
Correlation of Inputs and Outputs to Zones	81
Sample Programming Sheets	82
Zoning Sheet	84

Appendix D: NFPA Standard-Specific Requirements

Overview	88
Minimum Requirements	88
Additional Requirements	88
Central and Remote Station Service	88
Auxiliary Fire Alarm System	88
Remote Station Fire Alarm System	88
Proprietary Fire Alarm System	88
Central & Remote Station Service (Protected Premises Unit)	89
Auxiliary Fire Alarm System	91
Remote Station Protective Signaling System	92
Proprietary Protective Signaling Systems	93

1. Product Description

Overview

The AFP-100 is a compact, cost effective, intelligent FACP (Fire Alarm Control Panel) with an extensive list of powerful features. The combination of Notifier's addressable devices and the AFP-100 offers the latest in fire protection technology. The power supply and all electronics are contained on a single circuit board housed in a metal cabinet, providing a complete fire control system for most applications. Optional modules, such as the RTM-8F and ACM-8R, which plug into the main circuit board, are available for special functions. Available accessories include LED, graphic and LCD annunciators, digital communicator, local downloading software and remote power expansion. The AFP-100E offers the same features as the AFP-100 but allows connections to 220/240 VAC input.

Note: Unless otherwise specified the term "control panel" or AFP-100 refers to both the AFP-100 and the AFP-100E Fire Alarm Control Panel.

Features

The control panel features the following:

- Single standard SLC loop which meets NFPA Style 4, 6 and 7 requirements
- 198 addressable device capacity (99 detectors and 99 monitor/control modules)
- 56 software zones
- Two main circuit board NACs (Notification Appliance Circuits)
- 300 mA resettable power
- 300 mA nonresettable power
- 3.0 amps NAC power (expandable to 6.0 amps with optional XRM-24)
- 40 character LCD display (backlit)
- Real-time clock/calendar
- History file with 500 event capacity
- Advanced fire technology features:
 - Automatic device Type Code verification
 - Auto detector test
 - Maintenance alert
 - Point trouble identification
- Three levels of detector sensitivity
- Waterflow (nonsilenceable) selection per module point
- Supervisory (latching or nonlatching) selection per point
- System alarm verification selection
- Walktest with report of two devices set to same address
- Presignal per NFPA 72
- Continuous/March Time/Temporal or California code for main circuit board NACs
- Remote ACK/Silence/Reset/Drill via monitor modules, AFM annunciators or LCD-2X20 Remote Fire Annunciator
- Autoprogram (learn mode) reduces installation time
- Password and key-protected nonvolatile memory
- User programmable password
- Fully programmable from panel keyboard or off-line PC
- Rapid poll algorithm for manual stations (U.S. Patent Pending)
- SLC operates up to 10,000 ft. (3,000 m) or 1,000 ft. (300 m) with untwisted, unshielded wire (U.S. Patent #5,210,523)

Options

- RTM-8F eight zone relay module with local energy/reverse polarity transmitter
- ACM-8R Relay Control Module
- Printer/PC Interface
- LED, LCD or Graphic Annunciators
- Silence inhibit timer option
- Autosilence timer option

Supplemental Documentation

The table below accommodates a list of document sources containing additional information regarding the AFP-100:

For information on...	Refer to...	Part Number
All features	AFP-100 Data Sheet	DN-6629
System Connections	AFP-100 Basic System Drawing	51272
SLC Wiring Instructions	SLC Wiring Manual	51253
Off-line programming utility	VeriFire™ CD Medium System Programming Utility - PID	51249
Compatible Devices	Notifier Device Compatibility Document	15378
Annunciators	Annunciator Control System Manual Annunciator Fixed Module Manual	15842 15048
Annunciator Control	ACM-8R Annunciator Control Module Manual	15342
Battery Charger	CHG-120 Battery Charger Manual	50641
Field Charger/Power Supply	FCPS-24 Field Charger/Power Supply Manual	50059
Lamp Driver Annunciator	LDM Series Lamp Driver Annunciator Manual	15885
Remote Fire Annunciator	LCD-2X20 Remote Fire Annunciator Manual	51105
Universal Digital Alarm Communicator/Transmitter	The UDACT Instruction Manual	50050
Digital Communications	MS-5012 Control Communicator Manual	15465
Fire Alarm Receiver	RS-82 Receiving Station Manual	15400

Table 1 Supplemental Documentation


Components

The following components are included in the Basic Equipment package (BE-AFP100G).

- Main Circuit Board
- Cabinet Door
- Transformer Assembly (1)


Main Circuit Board

The main circuit board contains the system's CPU, power supply, other primary components and wiring interface connectors. Optional modules plug-in and are mounted to the main circuit board.

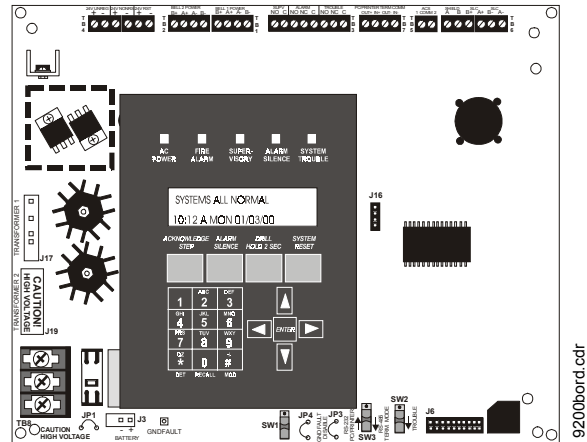


Cabinet

The AFP-100 cabinet door is gray with a navy blue front overlay. The backbox is ordered separately. The Main Circuit Board is mounted onto rails of the backbox. Ample knockouts are provided for system wiring.

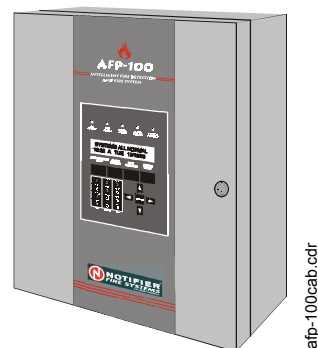

Transformer Assembly

One XRM-24 (XRM-24E for 220/240 VAC applications) 100 VA transformer, providing 3.6 amps maximum, is provided standard with the panel. The transformer mounts horizontally (as shown) in the cabinet.

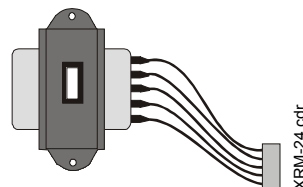

Controls and Indicators

The controls and indicators on the Main Circuit Board include: a membrane panel, five system status LED indicators, the LCD display, and the local panel sounder.

Membrane Panel

Mounted on the main circuit board, the membrane panel includes five system status LED indicators and a window for the LCD display. The membrane panel, which is visible with the cabinet door closed, has 21 keys, including a 12 key alphanumeric pad similar to a telephone keypad.

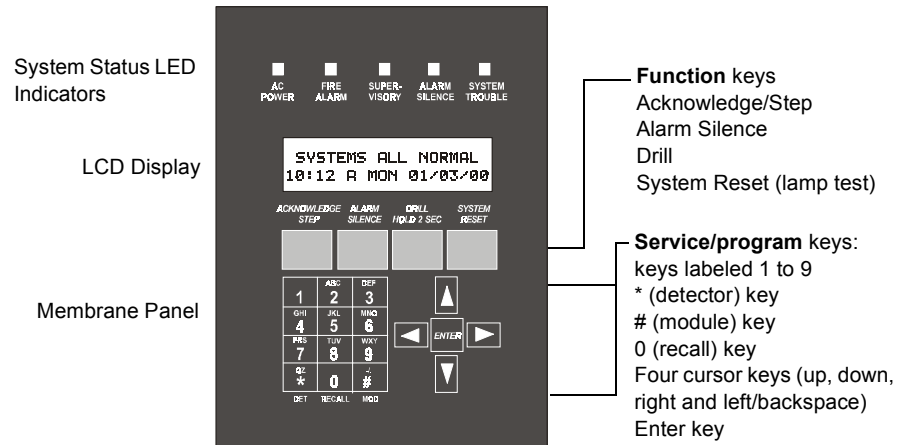


Figure 1 Membrane/Display Panel

System Status LED Indicators

System Status LED Indicators are provided to annunciate the following conditions:

- AC Power (green)
- Fire Alarm (red)
- System Trouble (yellow)
- Supervisory (yellow)
- Alarm Silence (yellow)

LCD Display

The control panel uses a 40-character (2 lines x 20 characters) high viewing angle LCD display with a character height of 3/16 inches. The display includes a long-life LED backlight that remains illuminated. If AC power is lost and the system is not in alarm, the LED backlight will turn off to conserve batteries.

Local Sounder

The control panel has a local sounder to provide separate and distinct pulse rates for alarm, trouble, and supervisory conditions.

9200disp.cdr

Terminals, Connectors & Switches

The figure below shows the terminals, connectors and switches that are located on the AFP-100 main circuit board.

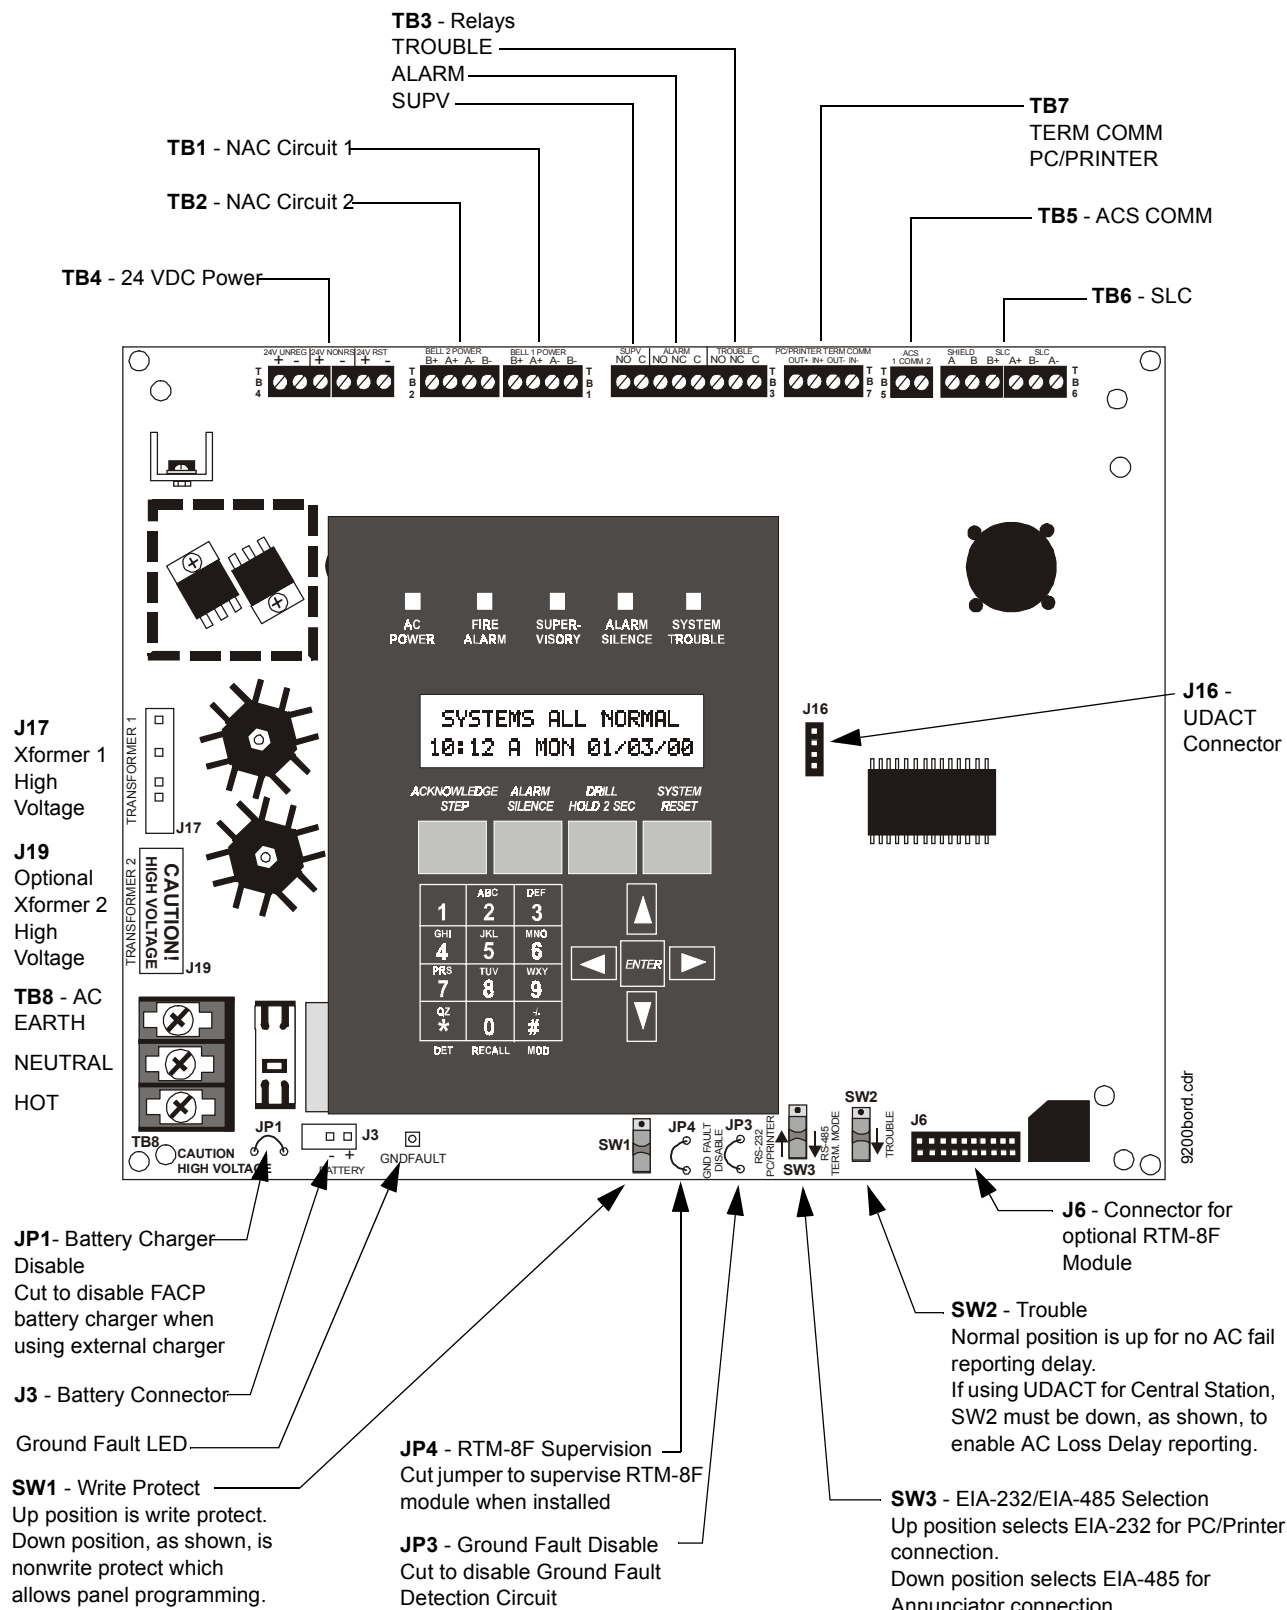


Figure 2 AFP-100 Main Circuit Board

Circuits

Shown below is a layout of the terminal blocks on the main circuit board and a brief description of what is provided.

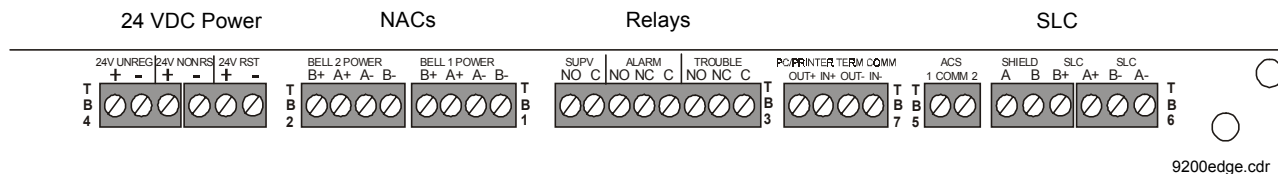


Figure 3 Terminal Layout

Signaling Line Circuit (SLC)

One SLC, configurable for NFPA Style 4, 6 or 7, is provided for communication to addressable monitor (initiating device) and control (output device) modules.

Output Circuits

The following output circuits are available on the FACP:

- 24 VDC Resettable Power Output 300 mA
- 24 VDC Nonresettable Power Output 300 mA
- 24 VDC Battery Charger (up to 18 AH batteries)

Notification Appliance Circuits (NACs)

Two NACs, configurable for Style Y (Class B) or Style Z (Class A), are provided with various programmable features.

Relays


Three dry contact relays are provided for System Alarm and System Trouble (Form-C contacts) and Supervisory (Form-A contacts). Contacts are rated 2.0 amps @ 30 VDC (resistive) and 0.5 amps @ 30 VAC (resistive).

Accessories and Options

Dress Panel

A blue Dress Panel DP-1-BC is available as an option. The dress panel restricts access to the system wiring while allowing access to the membrane panel.

Note: Required for Canadian installations, and included with the Basic Equipment package for Canada.

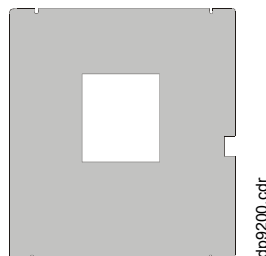

dp9200.cdr

Transformers

An optional XRM-24 (XRM-24E for 220/240 VAC applications) 100 VA transformer is available to provide maximum accessory power (6.6 amps total).


Batteries and Battery Boxes

The control panel uses only sealed lead-acid batteries for standby power. The cabinet provides space for two 12 AH batteries. Batteries must be ordered separately.

The **BB-17** battery box may be used to house two 18 AH batteries. The battery box mounts directly below the AFP-100 cabinet. The **BB-55** battery box may be used to house two 25 AH batteries, two 55 AH batteries or one 100 AH battery. Both boxes are gray and provided with knockouts.

For 25 to 120 AH batteries, use the CHG-120 Battery Charger. When this charger is mounted in the BB-55, two 25 AH or one 55 AH battery may also be housed in the battery box.

Chargers and Power Supplies

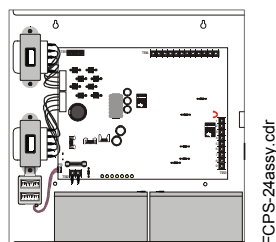


FCPS-24assy.cdr

Field Charger/Power Supply - FCPS-24

A compact, cost-effective remote power supply and battery charger. It consists of a filtered, 24 VDC output that can drive up to four Notification Appliance Circuits (NACs).

For information and installation instructions refer to *FCPS-24 Field Charger/Power Supply* manual.

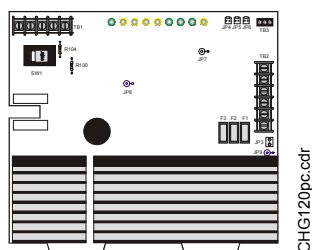

CHG120pc.cdr

Battery Charger - CHG-120

Designed to charge 25 to 120 AH lead-acid batteries that provide emergency standby power for a Fire Alarm Control Panel. Provides two (2) output circuits for connection to multiple loads. Can be mounted into a BB-55 Battery Box.

For information and installation instructions refer to *CHG-120 Battery Charger* manual.

Programming Utility

You can use the “Veri•Fire CD Medium System Programming Utility” to program the control panel directly from most IBM compatible personal computers, including laptops and portables, equipped with a serial port. Typically, program files can also be created and stored on the PC, then downloaded to the control panel. The software is on a CD (compact disk).

Addressable Devices

Addressable devices include intelligent detectors, monitor modules, control modules and manual pull stations.

Intelligent Detectors

Intelligent addressable detectors provide analog information to the control panel on a Signaling Line Circuit (SLC). This allows the control panel to continually process this information to determine the status (alarm, trouble, maintenance or normal) of each detector. Each detector responds to an SLC address that is manually set in the detector head using built-in rotary decimal switches. The detectors send a unique Type Code to aid the automatic programming feature in the control panel.


FSI-751 - Analog, addressable, low profile intelligent smoke detector that incorporates an ionization sensing chamber. Designed to provide open area protection.

FSP-751 - Same as FSI-751, but uses a photoelectric sensing chamber. The **FSP-751T** adds thermal sensors that will alarm at a fixed temperature of 135° F. Designed to provide open area protection.


FST-751 - Intelligent thermistor sensing circuit for fast response. Designed to provide open area protection with 50 foot spacing capability. The **FST-751R** incorporates a thermal rate of rise of 15°F (9.4°C).

FSD-751 - Photoelectric Duct Detector. The **FSD-751RP** includes an alarm relay.

HPX-751 - A special smoke detector that provides early warning smoke detection in hostile environments where traditional smoke detectors are not practical.

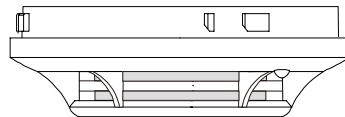

FSI-751 and FSP-751

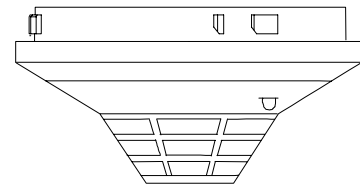

FST-751

Bases and Accessories

Several bases, to which the detectors are affixed, are available:

B710LP	Standard U.S. Low-Profile base
B501	Standard European flangeless base
B501BH	Sounder base, includes B501
B501BHT	Same as B501BH, but includes Temporal Sounder
B224RB	Low Profile Intelligent relay base
B524BI	Intelligent isolator base
RA400Z	A Remote Single LED Annunciator that can be wired directly off of an addressable detector for annunciation of that detector's alarm status.


Modules

Control Modules and Monitor Modules provide an interface between the control panel and conventional notification and initiating devices. Each module can be set to respond to an address with built-in rotary switches.

Note: For a list of approved notification and initiating devices, refer to the *Device Compatibility Document*.

Below are descriptions of various addressable monitor modules and control modules used with the control panel.


Note: A blinking LED on a monitor module indicates communication between the module and the control panel.

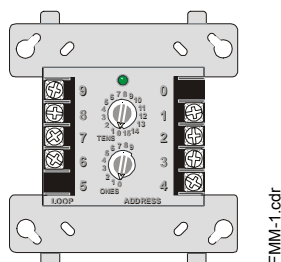

FMM-1.cdr

Monitor Modules - FMM-1, FZM-1 & FDM-1


Addressable monitor modules for monitoring conventional initiating devices. The FMM-1 is used for normally open contact alarm initiating devices, such as manual pull stations, four-wire smoke detectors, heat detectors, waterflow, security contacts, and supervisory devices. Use the FZM-1 for specific two-wire smoke detectors in addition to normally open contacts. The FDM-1 provides two independent 2-wire IDCs at two separate, consecutive addresses. Wire supervised IDCs as NFPA Style B (Class B) or Style D (Class A) circuits. The modules come with a thermoplastic cover for mounting to a 4-inch square mounting box.

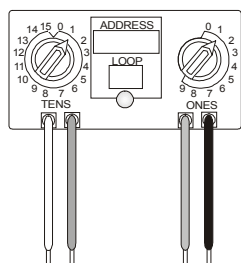

FMM-101.cdr

Monitor Module - FMM-101

An addressable module that is functionally similar to an FMM-1 Monitor Module—but offered in a smaller package for mounting directly in the electrical box of the device being monitored.

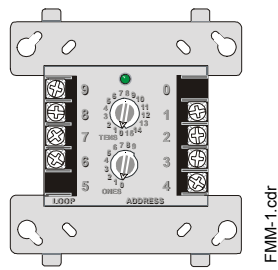


FMM-1.cdr

Control Module, NAC - FCM-1

Addressable Control Module used as Notification Appliance Circuits (NACs) to power and supervise compatible, UL-listed notification appliances. Wired supervised NACs as NFPA Style Y (Class B) or Style Z (Class A). The modules come with a thermoplastic cover for mounting to a 4-inch square mounting box.

Control Module, Relay - FRM-1

Similar to the FCM-1 except used as a Form-C control relay module.

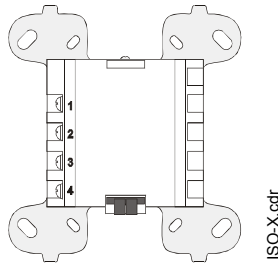

ISO-X.cdr

Fault Isolator Module - IXO-X

This module is not addressable, but listed here due to its use in an SLC. Protects the system against wire-to-wire short circuits on the SLC. It should be placed between groups of sensors in an SLC to isolate short circuit problems and protect the rest of the loop so it can continue to operate normally.




NBG12lax.cdr

Pull Station - NBG-12LX

A non-coded addressable manual pull station with key-lock reset feature. An FSM-101 addressable module is housed within the pull station.

Optional Internal Modules


The AFP-100 main circuit board includes option module connectors which are located on the right side of the board. Available optional modules are as follows:

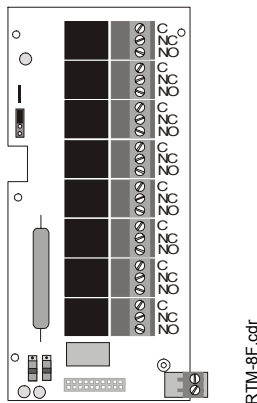

RTM-8F Relay/Transmitter Module

The RTM-8F provides eight high current (5 amps) Form-C relays. These relays track software zones 1 through 8. The module also provides Municipal Box or Remote Station transmitters. A control panel equipped with an RTM-8F meets NFPA 72 codes for Auxiliary and Remote Station requirements. In remote station applications, the RTM-8F can be configured to transmit alarm only or alarm and trouble signals. Disable switches and indicators are provided on the RTM-8F module. The module plugs into connector J6 and mounts on the right side of the AFP-100 main circuit board.

Refer to "Installing a RTM-8F Module" on page 35 for additional information.

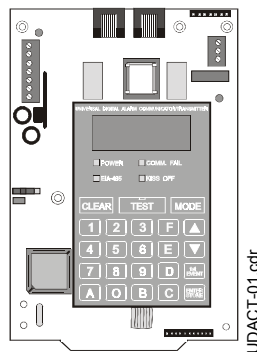

UDACT - Universal Digital Alarm Communicator/Transmitter

The UDACT transmits system status to UL-listed Central Station receivers through the public switched telephone network. The UDACT is compact in size and may be mounted inside the FACP cabinet, plugging into the J16 connector, or may mount externally in a separate cabinet. EIA-485 annunciator communications bus and filtered 24 VDC connections are required. The UDACT transmits 198 points or 56 zones when connected to the AFP-100.

For more information and installation instructions refer to the *UDACT Instruction* manual.

Refer to "System Edit" on page 49, for information on programming the AFP-100 for use with the UDACT.

PIM-24 Printer/PC Interface Module

Older versions of the AFP-100 main circuit board will require the PIM-24 Printer/PC Interface Module to permanently connect a printer to the control panel or to connect a computer for upload/download of programming data. The module plugs into the J11 connector on the older AFP-100 main circuit board.

Note: The PIM-24 option cannot be used simultaneously with the DIM-485/LCD-2x20 option.

DIM-485 Display Interface Module

Older versions of the AFP-100 main circuit board will require the DIM-485 Display Interface Module to connect an LCD-2X20 Series Remote Fire Annunciator to the control panel. The module plugs into the J11 connector on the older AFP-100 main circuit board.

Note: The the DIM-485 and LCD-2x20 cannot be used simultaneously with the PIM-24 module.

Annunciators


ACS Series LED Zone Type Annunciators

The "Annunciator Control System" Series annunciators remotely display system status. Connections are through an EIA-485 serial connection from TB5 on the control panel.

For information and installation instructions refer to *Annunciator Control System* manual.

Refer to "System Edit" on page 49, for information on programming the AFP-100 for annunciator use.

Below are brief descriptions of Annunciator Control and Annunciator Expander Modules used with the control panel.

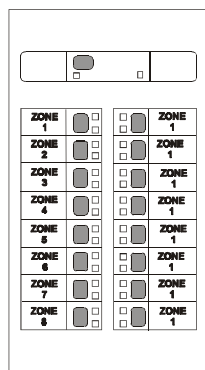

ACM-16AT.cdr


Annunciator Control Module - ACM-16AT

Provides features for audible and visual indication of alarm and trouble conditions at each annunciator. They include: 16 red alarm LEDs, 16 yellow trouble LEDs, 16 momentary touch-pad switches for controlling each point, System trouble LED, Online/Power LED, Local sounder, Silence/Acknowledge switch, and Remote functions.

Annunciator Expander Module - AEM-16AT

Expands the ACM-16AT by 16 system points and is identical in size and appearance. Three expander modules are supported by one control module providing a maximum of 64 system points.

Note: An AEM-16AT cannot be used to expand an ACM-32A.

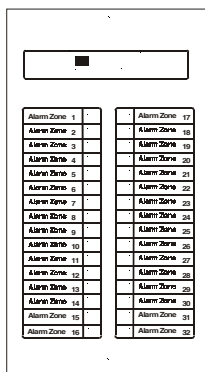

ACM-32A.cdr

Annunciator Control Module - ACM-32A

Provides features for audible and visual indication of alarm and trouble conditions at each annunciator. They include: 32 red alarm LEDs, System trouble LED, Online/Power LED, Local sounder, and Silence/Acknowledge switch.

Annunciator Expander Module - AEM-32A


Expands the ACM-32A by 32 system points and is identical in size and appearance. One expander module is supported by the control module providing a maximum of 64 system points.

Note: An AEM-32A cannot be used to expand an ACM-16AT.

Annunciator Fixed Modules

Provide the control panel with discrete display and control points. Fixed modules turn their LEDs on and off as directed by the CPU, and also report switch activations to the CPU for action. You can only use one fixed module in a system. Each annunciator's address is fixed at address 1. Connections are through an EIA-485 serial connection from TB5 on the control panel.


For information and installation instructions refer to the *Annunciator Fixed Module* manual.

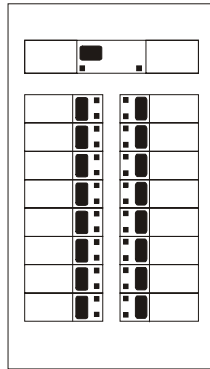

AFM-16AT.cdr

Annunciator Fixed Module - AFM-16AT

Contains 16 red alarm and 16 yellow trouble LEDs, a system trouble LED, an Online/Power LED, and a local sounder, and switches for control panel Acknowledge, Alarm Silence, and System Reset. Use the AFM-16AT for systems that require 16 or fewer annunciation points.

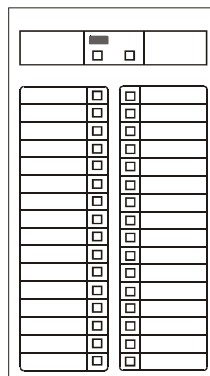

AFM-32.cdr

Annunciator Fixed Module - AFM-32A


Contains 32 red alarm LEDs, a system trouble LED, an ON LINE/POWER LED, and a local panel sounder with a silence/acknowledge switch. The Local Silence/Acknowledge switch functions as local lamp test and silence for annunciator piezo.

The AFM-32A will not accept expander modules, however multiple annunciators may be used by setting all annunciators to Receive Only, except the last AFM-32A in line.

Annunciator Fixed Module - AFM-16A

The same as the AFM-32A except it has 16 red alarm LEDs.

Annunciator Devices

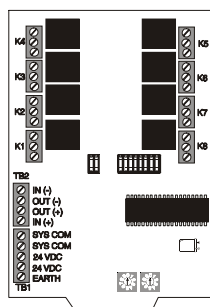


ACM-8R.cdr

Annunciator Relay Control Module - ACM-8R

Provides the control panel with a mappable relay control module. Relays can be selected for mapping anywhere in the system memory map (in groups of eight). Provides eight Form-C relays with 5 A @ 125 VAC (resistive) or 30 VDC (resistive) and 2 A @ 125 VAC (inductive) contacts. Tracks any group of eight zones within the system. The module is externally mounted in an ABS-8R enclosure and is connected to the ACS (EIA-485) annunciator communications bus, up to 6,000 feet (1,800 m) away from the control panel. Power-limited, filtered, nonresettable power must be supplied by the FACP.

For more information and installation instructions refer to the *ACM-8R Annunciator Relay Control Module* manual.

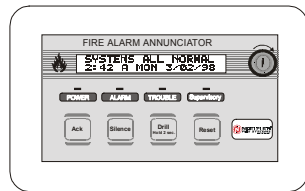


lcd2x20.cdr

LCD-2X20 Series Remote Fire Annunciators

Consists of the LCD-2X20 and LCD-2X20L, are compact, 40-character backlit LCD fire annunciators that are capable of displaying English-language text. The LCD-2X20 mimics the display on the control panel and annunciates device type, point alarm, trouble or supervisory condition, zone assignment plus any custom alpha labels programmed into the control panel. They also provide system

status LEDs to display power, alarm, trouble and supervisory conditions. Additionally, the LCD-2X20 is capable of performing critical system functions such as acknowledge, silence, reset and drill, remotely from the host control panel.

For information and installation instructions refer to *LCD-2X20 Remote Fire Annunciator* manual.

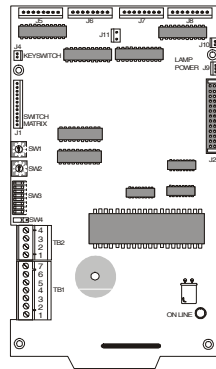

LDM-32.cdr

Lamp Driver Annunciator Module - LDM-32

Provides 32 alarm lamp driver outputs for connection to a custom graphic annunciator. DIP switch selectable for 16 alarm, 16 trouble and 16 switch inputs for control of system control functions as Signal Silence and System Reset.

For information and installation instructions refer to *LDM Series Lamp Driver Annunciator* manual.

Lamp Driver Annunciator Expander Module - LDM-E32

Expands the LDM-32 by 32 system points, to a maximum of 64 points.

Lamp Driver Relay Expander Module - LDM-R32

Provides the LDM-32 or LDM-E32 with 32 dry Form-A (normally open) contacts.

Notes

2. Installation

Overview

Carefully unpack the system and check for shipping damage. Mount the cabinet in a clean, dry, vibration-free area where extreme temperatures are not encountered. The area should be readily accessible with sufficient room to easily install and maintain the control panel.

Checklist

The table below contains an installation checklist for installing, wiring and testing an AFP-100 system. It has references to installation information not included in this manual.

Seq	Task	Refer to
1	Mount Cabinet to Wall	"Cabinet Mounting" on page 26
2	Install Transformer(s)	"Component Installation" on page 28
3	Install Main Circuit Board	"Component Installation" on page 28
4	Calculate the proper battery rating	"Appendix A: Power Supply Calculations" on page 72
5	Connect AC & DC power cables CAUTION: Do NOT connect AC power and Do NOT connect batteries at this time.	"Power Connections" on page 29
6	Connect DC power outputs	"DC Power Output Connections" on page 31
7	Connect Standard Relay circuits	"Standard Relays Circuits" on page 31
8	Connect Annunciator Circuits	"Annunciator Circuits" on page 32
9	Connect the NACs	"Notification Appliance Circuits" on page 32
10	Wire the Signaling Line Circuit	"Wiring a Signaling Line Circuit" on page 33
11	Install Optional Modules: Relay/Transmitter RTM-8F UDACT	"Installing a RTM-8F Module" on page 35 <i>UDACT Instruction Manual</i>
12	Install Printer/Personal Computer	"Printer and PC Interface" on page 38
13	Apply AC power to the Main Circuit Board by placing the Circuit breaker to the ON position.	
14	Connect the batteries using the interconnect cable	"Battery (DC) Connections" on page 30
15	Program the Control Panel	"3. Programming" on page 41

Table 2 Installation Checklist

Cabinet Mounting

This section provides instructions for mounting the AFP-100 cabinet. Follow these guidelines when mounting the backbox:



Caution: Unless you are familiar with the placement of components within this cabinet, only use the knockout locations provided for conduit entry.

- Locate the top of the cabinet approximately 5 feet (1.5 m) above the floor with the hinge mounting on the left.
- Use the four holes in the back surface of the backbox to provide secure mounting.
- Mount the cabinet on a surface that is in a clean, dry, vibration free area.

Step	Action
1	Mark and predrill holes for the top two keyhole mounting bolts using the dimensions shown below.
2	Install two upper fasteners in the wall with the screw heads protruding.
3	Using the upper “keyholes,” mount the backbox over the two screws.
4	Mark and drill the lower two holes.
5	Secure backbox by installing the remaining fasteners and tightening all screws.

The figure below shows the mounting hole location of the cabinet backbox:

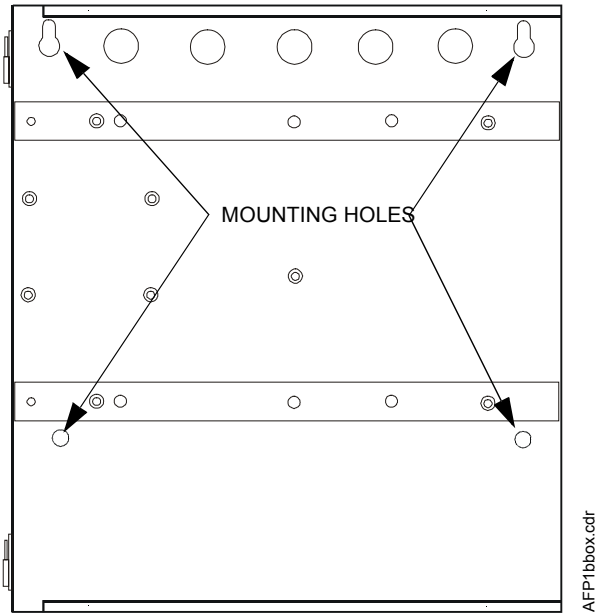


Figure 4 Mounting Holes of Backbox

Shown below are dimensions for the AFP-100 cabinet.

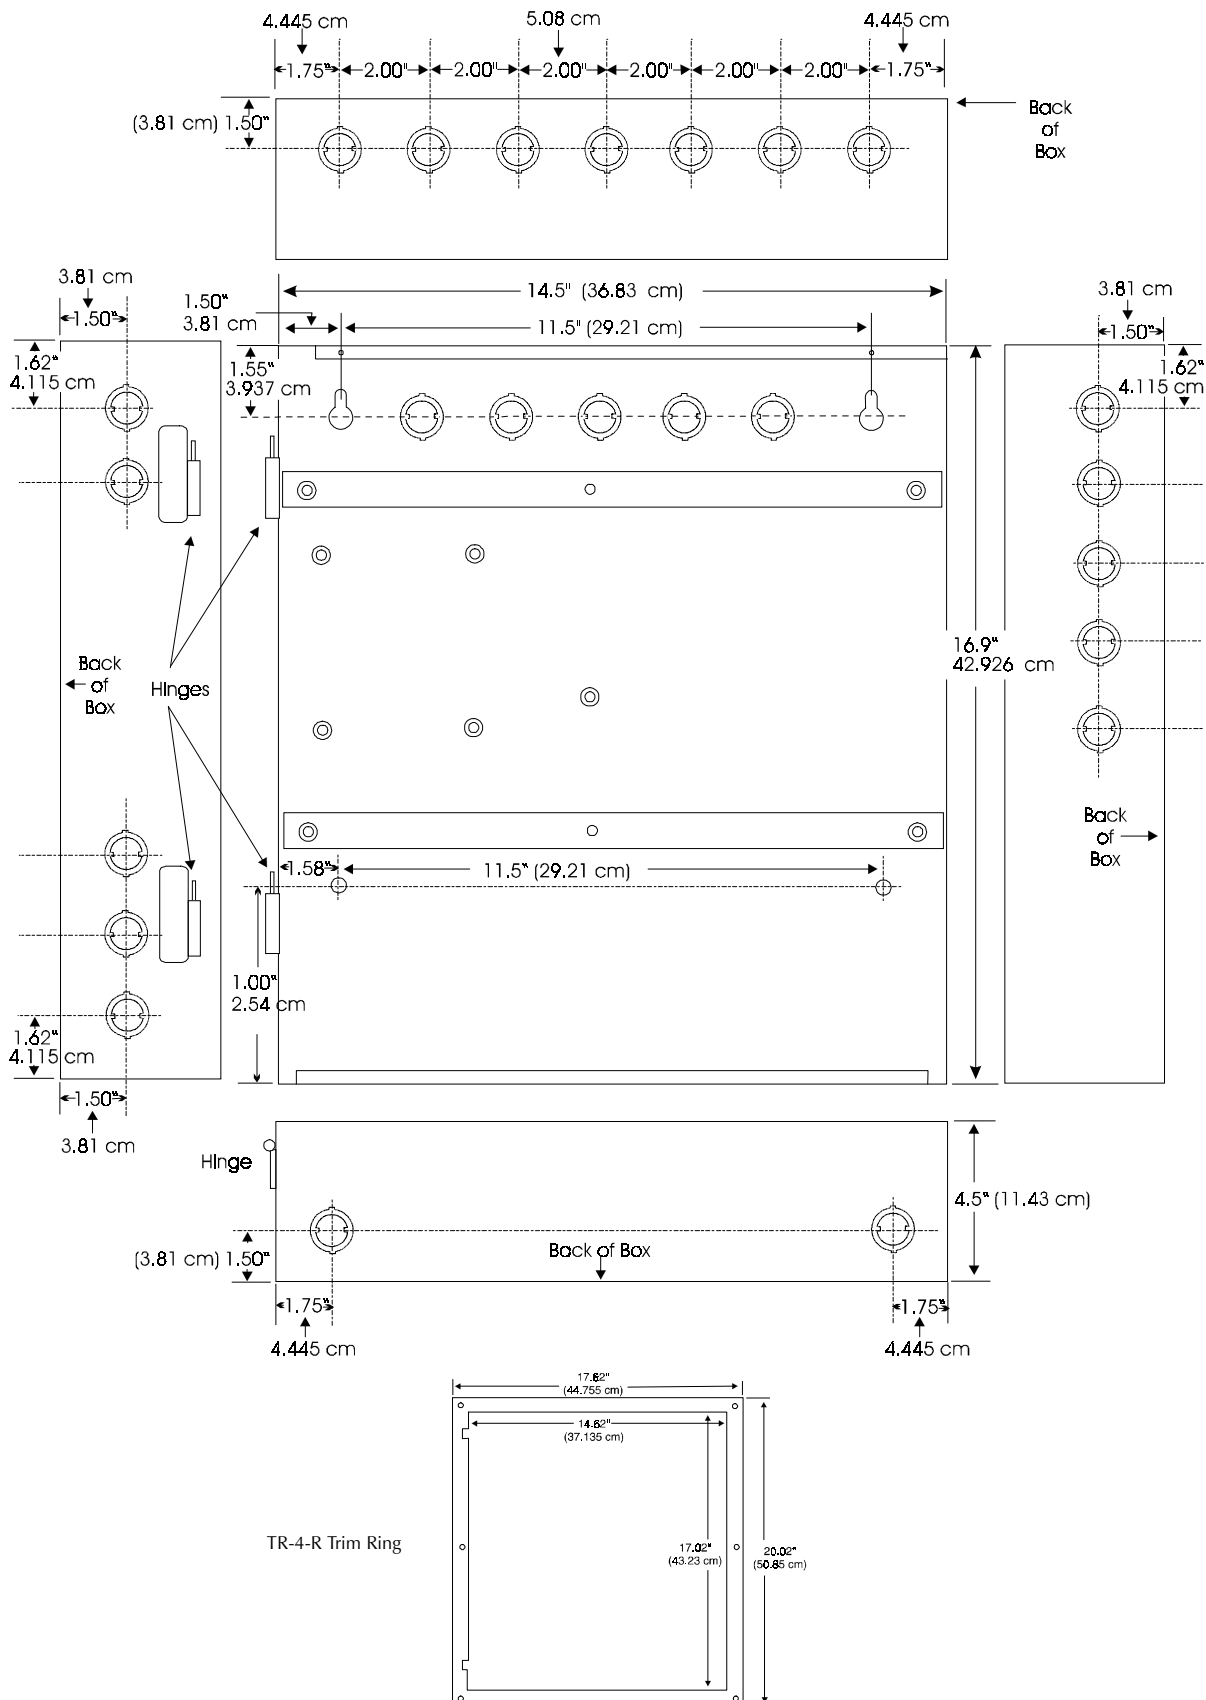


Figure 5 AFP-100 Cabinet Dimensions

Component Installation

This section provides instructions for installing the main components of the system:

- XRM-24 Transformer(s)
- Main Circuit Board

Step	Action
1	Ascertain that backbox area is dry and free of construction dust.
2	Mount the transformer(s) to the backbox studs as shown below.
3	Using the nuts supplied, secure transformer(s) to studs.
4	Install four standoffs in the locations shown below.
5	Position the Main Circuit Board over the backbox rails, aligning mounting holes, as shown below.
6	Secure in place with four (4) screws. Tighten securely.
7	Plug transformer leads into circuit board connectors: <ul style="list-style-type: none">• Top transformer (supplied) to J17• Bottom transformer (optional) to J19

Transformer and main circuit board mounting into backbox:

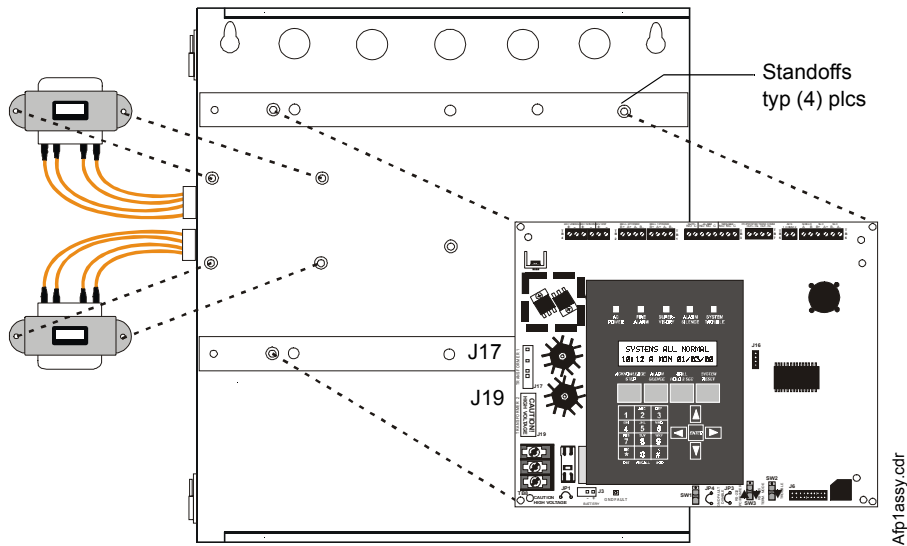


Figure 6 Component Mounting

Power Connections



Caution: You can connect different sources of power to the control panel. Before servicing, disconnect all sources of power. Damage to the control panel and associated equipment can result when removing and/or inserting cards, modules or interconnecting cables while the control panel is energized.

AC Connections

Primary power required for the AFP-100 control panel is 110/120 VAC, 60 Hz, 2.3 amps and for the AFP-100E is 220/240 VAC, 50 HZ, 1.2 amps.

Overcurrent protection for this circuit must comply with Article 760 of the National Electrical Code (NEC) and/or local codes. Use #14 AWG (2.00 mm²) or larger wire with 600 VAC insulation rating.

In order for the AFP-100E to comply with Compatibility Directive 89/336/EEC for European Communities (EU Requirements), a ferrite bead P/N: 29085, must be installed on the Mains for RF filtering. Refer to Document #50404 for details.

The figure below shows connections for AC power:

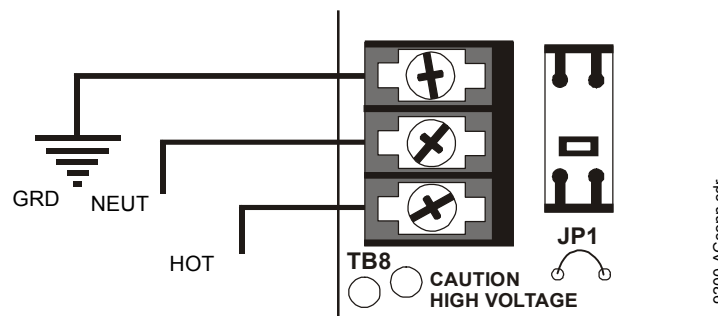


Figure 7 AC Power Connections

Earth Ground Connections

Connect a wire from the labeled grounding stud located inside the backbox to a known solid earth ground. This connection is vital for maintaining the control panel's immunity to unwanted transients generated by lightning and electrostatic discharge.

Battery (DC) Connections



WARNING: Battery contains sulfuric acid which can cause severe burns to the skin and eyes and can destroy fabrics. If contact is made with sulfuric acid, immediately flush the skin or eyes with water for 15 minutes and seek immediate medical attention.



Caution: Do NOT connect the battery interconnect wire at this time. Make this connection AFTER initial system primary powerup.

Observe polarity when connecting the battery. Connect the battery cable to terminal J3 on the main circuit board using the plug-in connector provided. Connect red wire to positive (+) terminal and black wire to negative (–) terminal on opposing batteries.

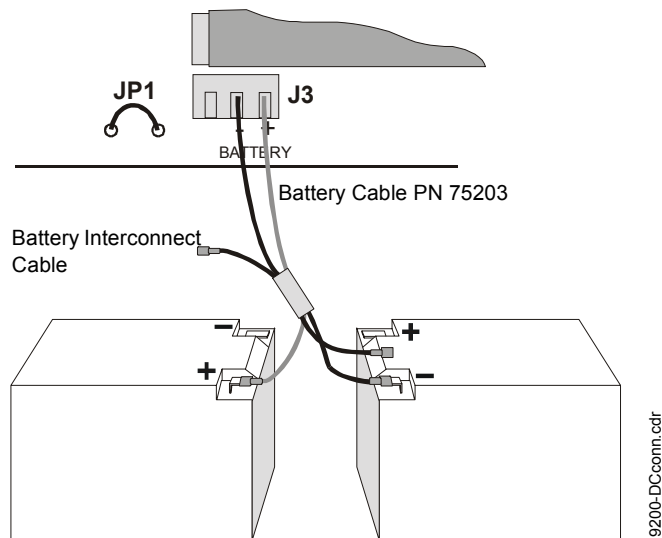


Figure 8 Battery Connections

DC Power Output Connections

All DC power outputs are power-limited and connections are available from TB4 on the control panel as shown below.

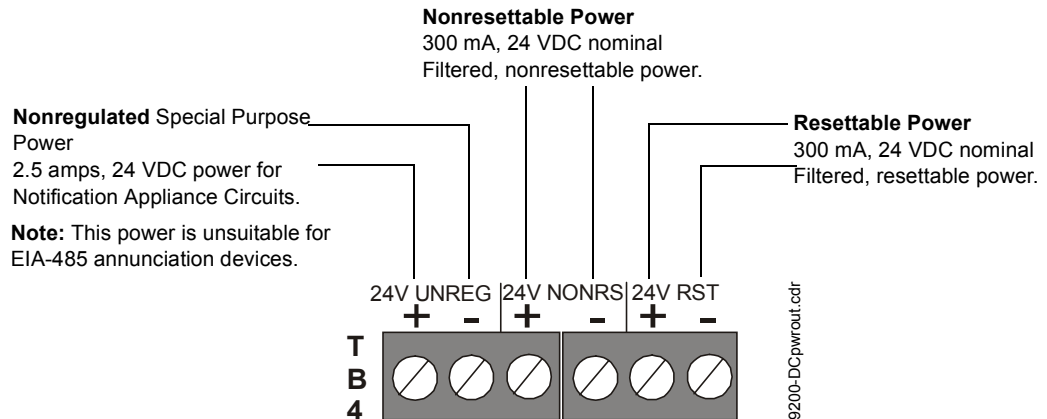


Figure 9 DC Power Outputs (TB4)

Standard Relays Circuits

Through terminal block TB3 the AFP-100 provides a set of Form-C alarm and Form-C trouble contacts rated for 2.0 amps @ 30 VDC (resistive). The control panel also provides a Form-A supervisory contact rated for 2.0 amps @ 30 VDC (resistive).

Relay connections may be power-limited or nonpower-limited, provided that 0.25 inch spacing is maintained between conductors of power-limited and nonpower-limited circuits, or leave one unused terminal between power-limited and nonpower-limited circuits.

Note: Note: If relays are used as power-limited circuits, affix supplied label to terminal block to indicate use of power-limited wiring.

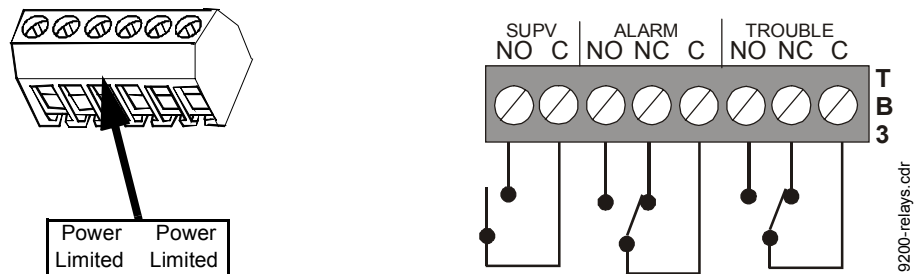


Figure 10 Relay Connections (TB3)


Annunciator Circuits

Connectors are provided for Terminal Mode (TB7) and ACS Mode (TB5) annunciators. When connecting a Terminal Mode annunciator be sure to configure switch SW3 on the main circuit board for the appropriate device. Note that TB7 Out and In polarities are used for connecting Terminal Mode annunciators.

Note: Devices connected to the standard EIA-485 connector, the optional EIA-232/EIA-485 connector may be protected from voltage transients by using one of the UL-listed compatible surge suppressors listed in the *Notifier Device Compatibility Document*.

EIA-485 connection for Terminal Mode annunciator. Refer to appropriate annunciator manual for information on wiring.

Note: TB7 is also an EIA-232 connection for a PC/Printer.

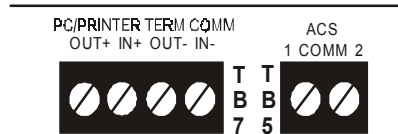

EIA-485 connection for ACS Mode annunciator. Refer to "UDACT", or appropriate annunciator manual for information on wiring.

9200ACST.cdr

Figure 11 Annunciator Interface

Notification Appliance Circuits

The AFP-100 provides two Notification Appliance Circuits configurable for Style Y or Style Z. Each circuit is capable of 2.5 amps of current. Total current drawn from these as well as other DC power outputs cannot exceed 6.0 amps. Use UL-listed 24 VDC notification appliances only. Circuits are supervised and power-limited. Refer to the *Device Compatibility Document* for a listing of compatible notification appliances. The two NACs (Notification Appliance Circuits) located on the main circuit board may be expanded using the FCPS-24(E) Field Charger/Power Supply.

Note: Surge protection for notification appliances may be provided by using one of the UL-listed compatible surge suppressors listed in the *Device Compatibility Document*.

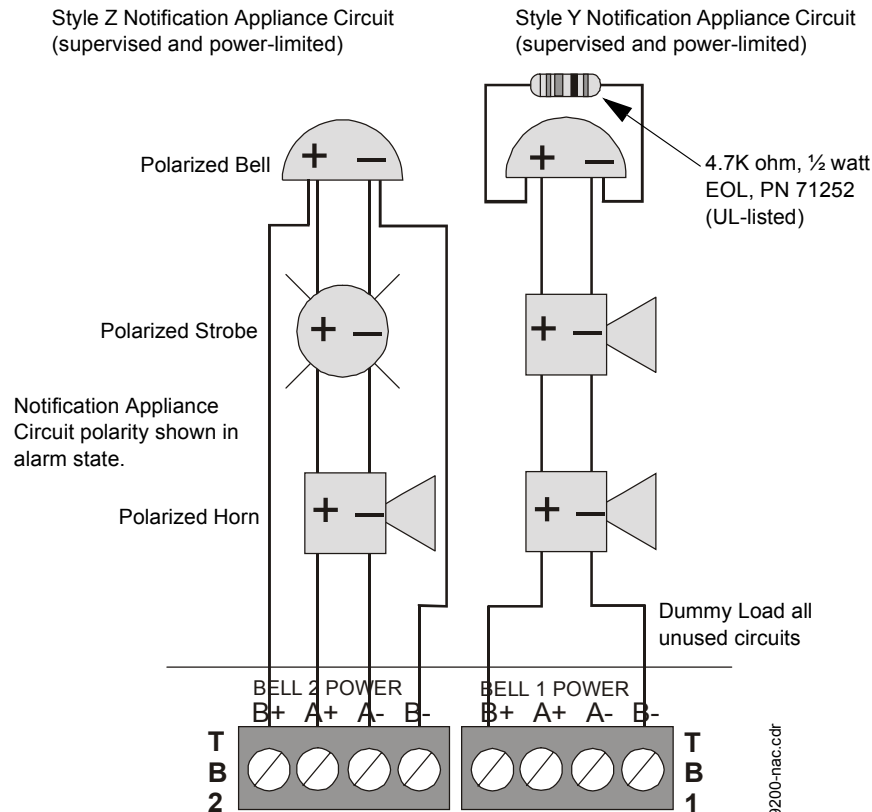


Figure 12 NAC Connections

Wiring a Signaling Line Circuit

Overview

The AFP-100 communicates with addressable initiating, monitor and control devices through a Signaling Line Circuit (SLC). You can wire the SLC to meet the following NFPA requirements of NFPA Style 4, Style 6 or Style 7.

Device Capacity

The capacity of the AFP-100 includes up to 99 addressable detectors and an additional combination of up to 99 addressable pull stations, control modules, and monitor modules. In addition, the control panel supports two NACs.

Surge Suppression

Surge protection for the SLC may be provided by using one of the UL-listed compatible surge suppressors listed in the *Notifier Device Compatibility Document*. The SLC is allowed to leave the building only with the use of a UL-listed surge suppressor found in the Notifier Device Compatibility Document.

Installation

For installation information see the *SLC Wiring Manual*.

UL Power-limited Wiring Requirements

General

Power-limited and nonpower-limited circuit wiring must remain separated in the cabinet.

All power-limited circuit wiring must remain at least 0.25 inches (6.35 mm) away from any nonpower-limited circuit wiring.

Furthermore, all power-limited circuit wiring and nonpower-limited circuit wiring must enter and exit the cabinet through different knockouts and/or conduits.

A typical wiring diagram for the AFP-100 is shown below.

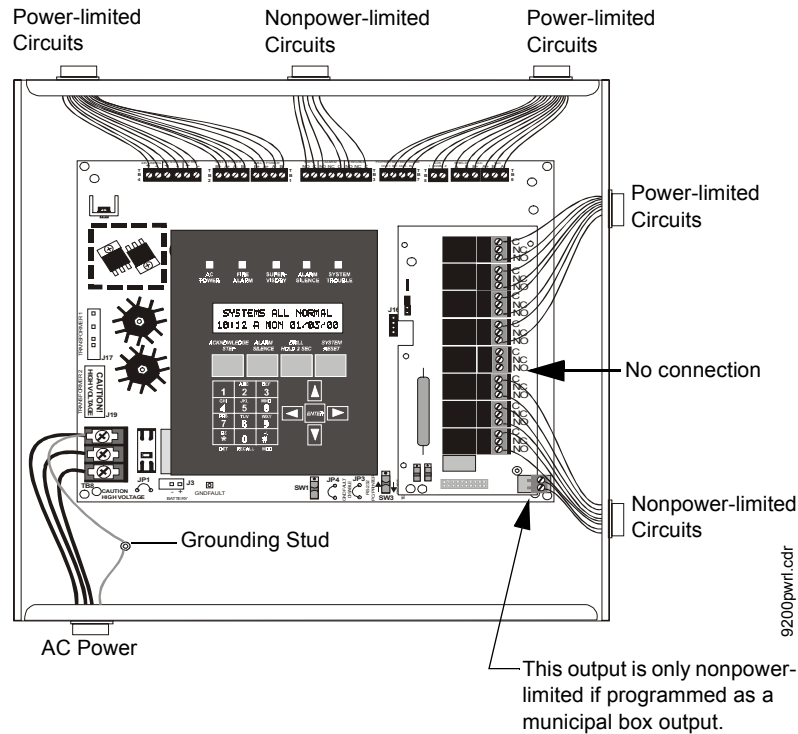


Figure 13 Typical UL Power-limited Wiring Requirements

RTM-8F

Nonpower-limited and power-limited wiring must have a minimum distance of 0.25 inches wire-to-wire. If this module is used to drive nonpower-limited and power-limited circuits, follow the instructions below:

1. Skip a set of dry contacts to maintain the 0.25 inches required space between power-limited and nonpower-limited circuits.
2. If this module is needed to drive power-limited and nonpower-limited relays that are next to each other, make no connection to the Normally Open contact which separates the two groups of relays. Refer to the wiring diagram above.

Note: Refer to "Installing a RTM-8F Module" on page 35, for additional information on the RTM-8F.

Installing a RTM-8F Module



Caution: Disconnect all sources of power (AC and DC) before installing or removing any modules or wiring.

Mounting

To install an RTM-8F module, follow these steps and refer to the figures below:

Step	Action
1	Cut jumper JP4 (to enable module placement supervision) on the Main Circuit Board.
2	Snap the three 3/4" nylon standoffs (supplied) into the holes located on the right-side of the Main Circuit Board.
3	Install the 3/4" metal standoff (supplied) into the hole at the lower-right corner of board. Secure with nut and tighten securely.
4	Carefully align the J1 connector on the RTM-8F module board with the pins of J6 on the Main Circuit Board.
5	Press firmly on the RTM-8F until it locks in place on the standoffs and the connector is seated onto the pins.
6	Secure RTM-8F to the Main Circuit Board at the lower-right corner mounting standoff (metal) using the provided screw. Tighten securely. Note: This is critical to the RTM-8F transient protection.
7	If required, affix the terminal identification labels (see Figure 15 on page 36).

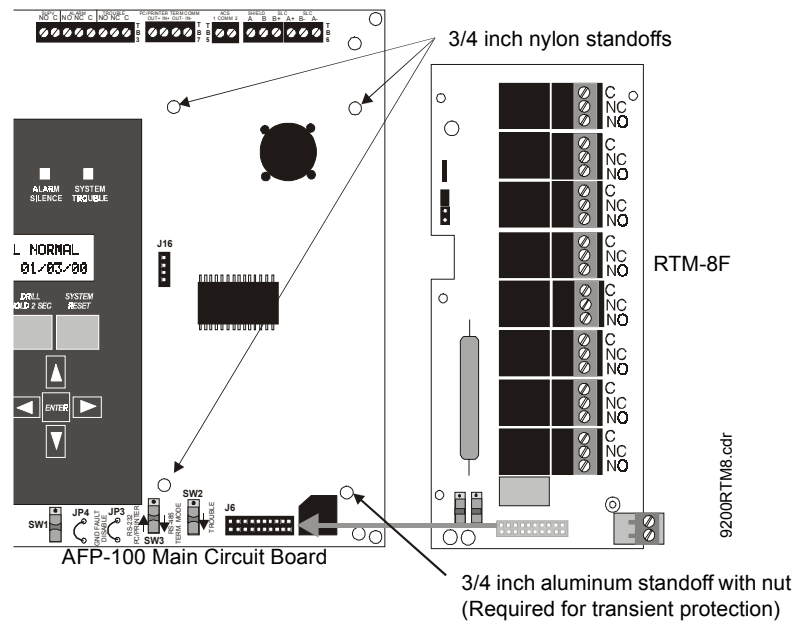


Figure 14 RTM-8F Module Installation

Connections & Components

Components on the RTM-8F board:

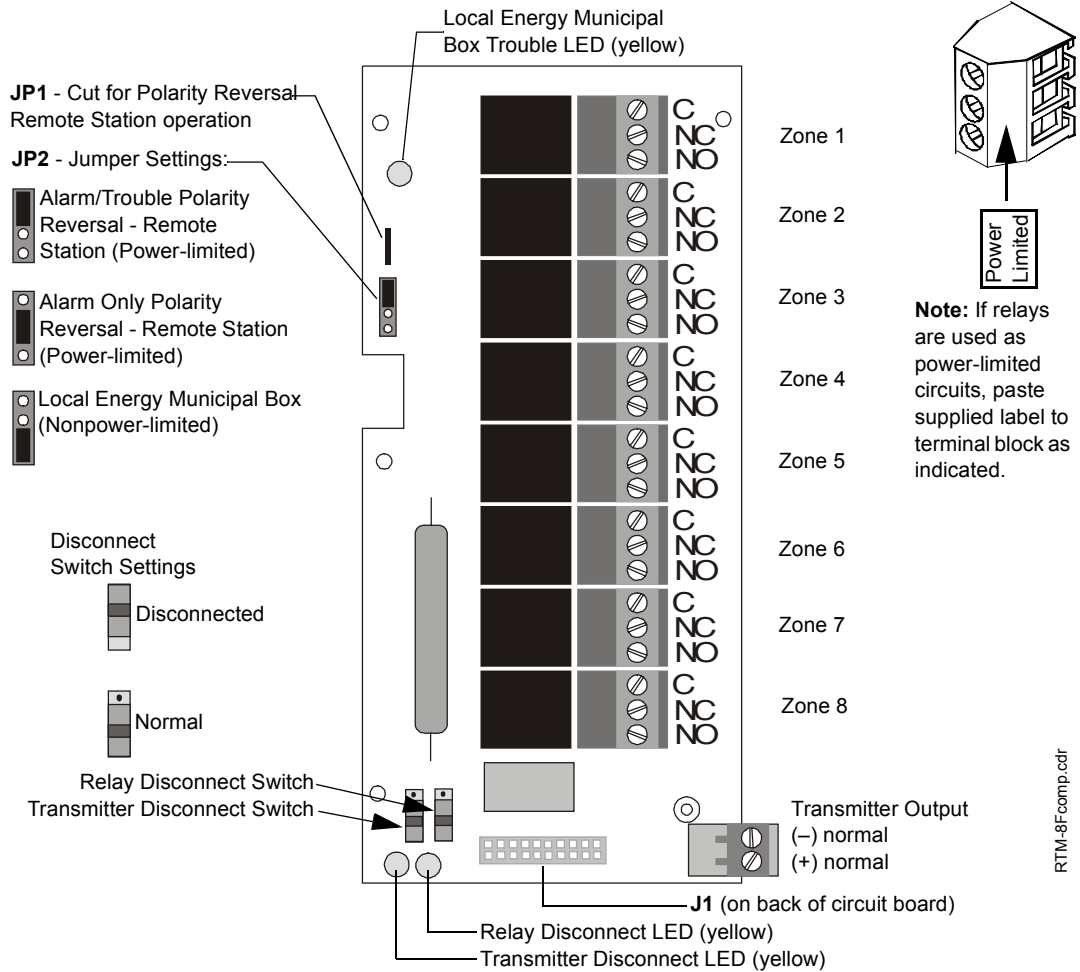


Figure 15 RTM-8F Components

Notes:

- Zone Relay Contact Ratings:
 - Maximum Switched Power is 170W or 1800 VA
 - Maximum Switched Current is 6 amps
 - Maximum Switched Voltage is 30 VDC or 300 VAC
 - UL Rating is 6 amps @ 28 VDC or 120/300 VAC
1/8 HP @ 120/240 VAC (100,000 CYC)
1.5/0.8 A @ 120/240 VAC
Pilot Duty is 30,000 CYC
 - Contact Material is Silver Nickel, Gold Plated
- Polarity Reversal Output: 24 VDC (nominal), 18.5 mA maximum rated current. Internal Resistance: 1,200 ohms (nominal). Intended for connection to the polarity reversal circuit of a remote station receiving circuit (such as the Fire•Lite RS-82 Receiving Station) having compatible ratings. The RTM-8F is not suitable for separate transmission of both alarm and trouble signals simultaneously to a remote station. Output is power-limited and wiring can leave the building.

3. Municipal Box output: Supervised for open circuit. Output is power-limited and wiring can leave the building. Yellow Trouble LED, when on, indicates open circuit condition. Check wiring and make certain Municipal Box is reset according to local codes. Maximum current (short circuit) is 0.6 amps. Maximum Voltage (open circuit) is 30.0 V. Maximum Wire Resistance is 3 ohms.
4. To prevent the yellow Trouble LED from turning on when the Transmitter Output is not used (no connections), move jumper JP2 to the Local Energy Municipal Box position (bottom two pins) and install a dummy load across the Transmitter Output terminals as shown below. The dummy load is a 1N4004 diode. The cathode must be connected to the terminal labeled '(-) normal' in Figure 15, and the anode must be connected to the terminal labeled '(+) normal'. Polarity must be observed or the Trouble LED will remain on.

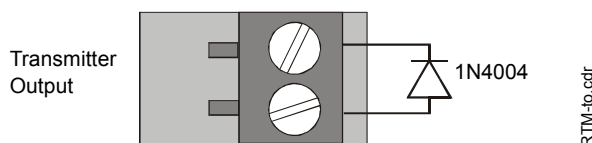


Figure 16 Transmitter Output Dummy Load



Caution: The diode must be removed when using the Transmitter Output to properly supervise the connections.

Printer and PC Interface

Overview

A remote serial printer or personal computer may be connected to TB7 on the FACP main circuit board. Switch SW3, located on the bottom center of the main circuit board (see Figure 2 on page 13), must be set to configure terminal block TB7 for the appropriate device. Placing SW3 in the “up” position [RS-232 PC/Printer] will allow connection for most 40 and 80 column printers and most IBM compatible personal computers, including laptops. (Placing SW3 in the “down” position [RS485 Terminal Mode] will allow connection of most Terminal Mode annunciators.)



Caution: Circuit damage may result if a ground fault exists on the control panel. **Do not** connect a printer or PC to the control panel if a ground fault exists on the control panel.

Programming

For printer or PC programming instructions, refer to "System Edit" on page 49.

Installation

Remote printers and PCs require 120 VAC, 60 Hz or 240 VAC, 50 Hz primary power.

Installation of a printer or PC requires an interface cable prewired to a DB9F connector (see below). Connect the interface cable to TB7 on the AFP-100 main circuit board and the attached cable to the EIA-232 serial port on the printer or PC, as shown below. Use a DB25 adapter if a nine pin connector is not available on your PC or printer. Note that a ground fault may occur on the AFP-100 panel, dependent on the printer used, when this connection is made. For this reason, it is important that there be no pre-existing ground fault on the control panel. Consult the factory for recommended printers.

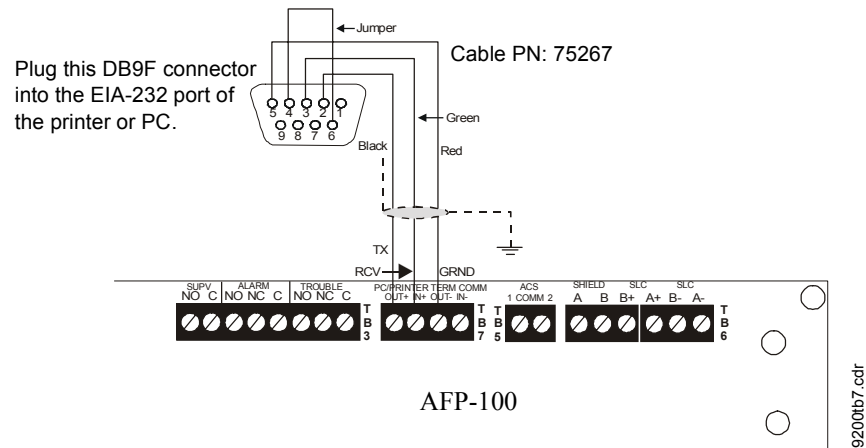


Figure 17 Printer and Computer Connections

Printer Configuration

Refer to the documentation supplied with the printer for additional pertinent information. Set the printer's options as listed below:

BUFFER:	LARGE
DATA BITS:	7
PARITY:	EVEN
STOP BIT:	1 STOP
BAUD RATE:	2400

PC Configuration

Connecting the control panel to a PC requires the following:

- The Windows-based VeriFire CD Medium System Programming Utility

PIM-24 Interface Module

Older circuit boards require the PIM-24 which includes the Printer/PC Interface Module, interface cable prewired to a DB9F connector, as shown below, and a DB25 adapter. Connect the Printer/PC Interface board to J11 on the AFP-100 main circuit board and the attached cable to the serial EIA-232 serial port on the printer or PC. Use the DB25 adapter if a nine pin connector is not available on your PC or printer. Note that a ground fault may occur on the AFP-100 panel, dependent on the printer used, when this connection is made. For this reason, it is important that there be no pre-existing ground fault on the panel. Consult the factory for recommended printers.

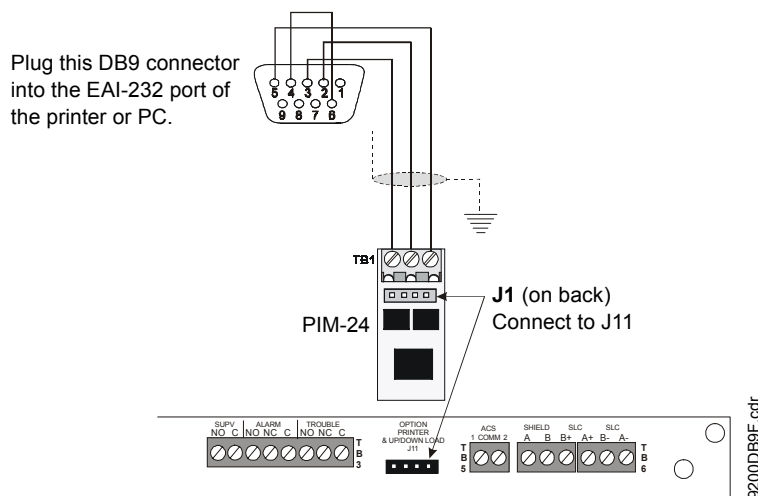


Figure 18 Printer and Computer Connections with PIM-24

Notes

3. Programming

Overview

This section provides detailed instructions for programming the control panel. For your convenience, a programming flowchart has been included at the end of this chapter (see "Screen Options Flowchart" on page 55). It may be helpful to follow along with the flowchart as this section is reviewed.

The control panel is completely field programmable and requires no special software skills. Programming may be accomplished in one of three ways:

- The Autoprogram Feature - this method is very convenient for quickly bringing the control panel on-line or for program editing.
- Manual Programming or editing, using the control panel keypad.
- The Off-Line Programming Feature - this method allows creation of site-specific custom programs using a Windows-based computer. For programs requiring a large amount of data entry, this method may be preferred. You can order the VeriFire CD Medium System Programming Utility for off-line programming.

When a programmed system is normal with no active alarms, troubles or supervisories, the 'SYSTEMS ALL NORMAL' screen will be displayed as shown below.

```
SYSTEMS ALL NORMAL
10:00 A MON 01/03/00
```

To (1) program the system, (2) read system status, (3) print, (4) edit or (5) Walktest, the ENTER key must first be pressed. After pressing the ENTER key, the following screen displays:

```
1 = PROGRAMMING
2=RD.STATUS 3=AC/BAT
```

Pressing the **1** key will select system Programming, which may only be accomplished by an authorized user. Before attempting to program the system the SW1 Write Protect switch, located on the lower-right side of the main circuit board, must be placed in the down position. If the switch is in the up 'Write Protect' position while attempting to enter the Programming Mode, the following message appears in the LCD display:

```
WRITE PROTECT!!!
PRESS BACKSPACE
```

To program the system (Program Level 1 and Program Level 2), you must first enter a valid password. Once the correct password is entered, you can select Autoprogram or Program Edit. After programming is completed, return switch SW1 to the Write Protect position.

Initial Power-up

After completing the wiring of addressable devices to the SLC, power up the fire alarm system. Because the addressable devices are not programmed into the control panel, their LEDs will not flash, the System Trouble LED will be on and the LCD display will alternate between the following two displays:

```

TROUBLE IN SYSTEM
PROGRAM CORRUPTED

```

```

TROUBLE IN SYSTEM
NO DEVICES INSTALL

```

If the system remains unprogrammed, the panel sounder will activate after two minutes. It can be silenced by pressing the ACKNOWLEDGE/STEP key, but it will continue to resound until the system is programmed.

Menu Selections

1 = Programming

There are two programming levels:

- **Program Level 1** is for system configuration in which data relating to device types, zoning, messages, etc. is entered into the system memory. Refer to "Program Change – Level One" on page 44.
- **Program Level 2** is where a qualified operator can access features such as Disable, Clear History, Walktest, Time Change and Program Check. For Program Level 2, the SW1 Write Protect switch should remain in the up 'Write Protect' position. Refer to "Program Change – Level Two" on page 51.

2 = Read Status

Entering Read Status allows the user to read the status of any point/zone in the system plus display or print the history file or print the entire user program. The Read Status feature is NOT password protected. Read Status is explained in "Read Status" on page 69.

3 = AC/BAT

Entering AC/BAT allows the user to read the battery voltage and the AC line voltage. The AC/BAT feature is NOT password protected. The following screen is displayed upon entering AC/BAT:

For the
AFP-100

```

BATTERY:  24.00 V
AC LINE:  120.00V

```

For the
AFP-100E

```

BATTERY:  24.00 V
AC LINE:  240.00V

```

Enter Programming Mode

From the “SYSTEMS ALL NORMAL” screen, press the ENTER key. The screen below will appear:

```
1=PROGRAMMING  
2=RD>STATUS 3=AC/BAT
```

To enter the programming mode, press 1. The display will read as follows:

```
KEY PASSWORD, ENTER
```

Passwords

There are two factory set programming passwords, '00000' and '11111', which will access two different screens as indicated below. From either of the screens, access to specific system and device programming may be obtained. All programming entries are stored in nonvolatile memory. The factory set passwords can be changed by the user and a method exists to clear one or both passwords. If an invalid password is entered, the display will read 'INCORRECT PASSWORD'. To exit from Programming operations at any time, press the Backspace (left arrow) key repeatedly.

Note: For Canadian applications, both passwords must be changed from the factory settings.

Entering the Level 1 password (default = 00000) will cause the following screen to appear (refer to "Program Change – Level One" on page 44):

```
0=CLR 1=AUTO 2=POINT  
3=SYS 4=PWORD 5=LOAD
```

Entering the Level 2 password (default = 11111) will cause the following screen to appear (refer to "Program Change – Level Two" on page 51):

```
1=DISABL 2=CLR HIST  
3=WALK 4=TIME 5=CHK
```

Program Change – Level One

When the correct password is entered, the control panel will enter 'Level One' program mode. In this mode, the trouble relay is activated and the System Trouble LED flashes and cannot be changed to steady and the panel sounder is off. The following display will appear:



```
0=CLR 1=AUTO 2=POINT
3=SYS 4=PWD 5=LOAD
```

Clear

The Clear function is useful when the control panel is first installed, before autoprogramming. Pressing the **0** key clears all general system programming options described in "System Edit" on page 49, and all programmed addressable devices from the nonvolatile memory of the control panel. Before executing the Clear command, the display will prompt the user to press the ENTER key to verify the command before the system actually clears programming data.

Note: It is necessary to autoprogram the control panel after using the clear function.

Autoprogram

The first time the system is brought on-line, it must be autoprogrammed. Pressing the **1** key enters the Autoprogramming mode. The main purpose of autoprogramming is to allow the installer a fast and easy way to bring the system on-line as quickly as possible.

Note: Autoprogram is also the only way to add or delete devices.

Once Autoprogram is selected, the control panel automatically polls all devices installed/wired to the SLC. The control panel communicates with each individual addressable device and displays the type of device at each address location starting with detectors and then modules.

While autoprogramming the system, the control panel will display the following:



```
AUTOPROGRAM
PLEASE WAIT
```

Verification of each device address and type installed on the SLC may now occur. If information is correct, press the ENTER key to save the device in the program; if incorrect, press the left arrow key to delete the device. In addition, adjective and noun descriptors plus zone assignments may be added to the display field per device address. If the SYSTEM RESET key is pressed at this time or the control panel is allowed to time-out after 10 minutes of inactivity, a "System Corrupted" message will appear. Be certain to step through all devices, using the ENTER or left arrow key.

The first time that autoprogramming is selected, **all points** installed on the SLC are identified. Default device type (monitor, smoke detector, control) and software zone assignments for each device are displayed. On any successive enabling of the autoprogram feature, the LCD display only displays the newly installed, deleted, or changed devices on the SLC.

Devices which match the program already in memory are not changed and are not shown to the operator. Devices which do not match the program (not the same address and/or type) are shown to the operator. Devices inadvertently set to the same address are identified and displayed on the screen.

New Detectors

For each new detector, the Autoprogram Feature selects default program values and presents the information to the user. A typical example follows:

```

PROGRA SMOKE DET P01
<ADJ>  <NOUN>  MZ00
  
```

In the preceding example:

- ‘P’ in “P01” represents the actual Type Code (photoelectric) of the detector found at address 01. (‘I’ would represent an ionization detector, ‘T’ would represent a thermal detector).
- The ADJ (adjective) and NOUN fields are blank, but may be user programmed.
- “MZ00” is the default detector sensitivity and zone selection where ‘M’ indicates medium sensitivity and ‘Z00’ indicates “general alarm” (main circuit board NAC outputs 1 and 2). Refer to "Appendix C: Software Zones" on page 80, for software zone assignments. Sensitivity settings includes (H)igh, (M)edium, and (L)ow where “H” indicates the highest sensitivity to smoke. The zone and detector sensitivity can be user-programmed.

After the new detector is displayed, press the ENTER key to accept the default information shown or press the left arrow (triangle to the left of the ENTER key) to reject the autoprogram information and not enter it into memory. In most cases, adjective, noun descriptors and zone assignments will be added by using the following procedure.

The control panel will lead you through the program editing process. A blinking cursor moves through the fields as you press the right arrow key (triangle to the right of the ENTER key). After moving into other fields, you may return to a previous field by pressing the left arrow. Change the blinking fields by pressing the up arrow key, the down arrow key or by pressing the appropriate numeric key.

Custom words may be entered via the keypad. The alphanumeric operation of the keypad changes a blinking letter in the ADJ and NOUN fields. For example, to enter the letter “R”, repeatedly press the 7 key to step through 7, P, R and S, stopping when R is displayed. Press the right arrow key (do not press the ENTER key at this time) to move to the next letter display position.

The ADJ field serves one of two puposes:

- Allow a second zone to be associated with the detector. For example, entering “Z10” associates the detector with zone 10. Because the ADJ field can be five characters long, the last two characters should not be used when associating a second zone.
- Provide an adjective portion of the description for the detector.

To reduce the number of key presses, the user may also select from a library of stored words. The ADJ field library provides five-character words selected by the up arrow or down arrow keys from the following list of available words:

_____ (default of blanks)	FIRST
NORTH	__2ND
SOUTH	__3RD
__EAST	__4TH
__WEST	__5TH
FRONT	FLR_1
CENTR	FLR_2
__REAR	FLR_3
UPPER	FLR_4
LOWER	FLR_5
__MAIN	RM___

Table 3 Adjective Library

Continued on the next page...

The ADJ (adjective) field may be loaded from the library list above and then modified letter-by-letter if desired. Pressing the up or down arrow keys steps through the library. Once the up or down arrow keys are pressed, the blinking cursor moves to the last character of the ADJ field, assuming that the user will next want to move beyond this field.

Pressing a key on the 12-key pad changes the letter indicated by the blinking cursor. Any alphanumeric character may be entered. Pressing the right or left arrow key moves the blinking cursor one letter right or left. When the right arrow key is pressed with the blinking cursor on the last letter of the ADJ label, the cursor will move to the first letter of the NOUN field.

Altering the NOUN field is done in a similar way. Use the up or down arrow keys to step through the NOUN library which is listed below:

_____ (default of blanks)	HVAC_ROOM
BASEMENT_	KITCHEN_
BOILER_RM	LOBBY_
CLASSROOM	OFFICE_
CLOSET_	PATIENT_
CORRIDOR_	RESTROOM_
ELECT._RM	ROOM_
ELEVATOR_	STAIRWAY_
ENTRANCE_	STOREROOM
FLOOR_	WING_
GARAGE_	ZONE_
HALLWAY_	

Table 4 Noun Library

In addition, the user may use the Recall/Increment function at any time when the cursor is on the first letter of the ADJ or NOUN field as follows:

- If the **0** key is pressed, a '0' is placed in the first letter position.
- If the zero key is then pressed a second time with no intervening key actions, the entire ADJ field is replaced with the field entered for the previous device programmed, and the cursor moves to the last character of the field (Recall function). The Recalled ADJ or NOUN field may now be changed letter-by-letter.
- If the **0** key is pressed again with no other intervening key actions and the last character in the field is a number '0-9', the number is incremented by one. If the last character is a letter, it changes to a '0'. If the last character goes from 9 to 0 and the characters to the left of the last character are also numbers, they are also incremented (overflow).
- The above increment function may be repeated with each press of the **0** key

As an example, the user could quickly enter 'FLR_3_ROOM_305' as follows:

1. The cursor is on the first letter of the ADJ field. Press the **0** key twice to display 'FLR_3'.
2. With the cursor on the first letter of the NOUN field, press the **0** key twice to recall the display 'ROOM_304'. The cursor automatically jumps from the first to the last letter of the NOUN field.
3. With the cursor on the last letter of the NOUN field, press the **0** key again to increment the room number to '305'.
4. Press the right arrow key to advance to the Zone field.
5. Select a zone number from 00 to 56. Z00 (default zone) is the general alarm zone. Z01 through Z56 may be selected to link software zones.

To load the addressable device's program into memory at any time, press the ENTER key. After pressing the ENTER key, autoprogram displays the next new detector. If a detector was previously entered into memory, but is missing (no answer), the LCD display shows the following:

```

PROGRA SMOKE DET P01
NO ANSWER  DELETE

```

If the ENTER key is pressed, the device is deleted from memory and autoprogram displays the next new device. If the left arrow is pressed, the program is unchanged and the next new device is displayed.

After all new detectors are presented for editing, the autoprogram feature displays the modules on the SLC starting with the device found at the lowest address.

Monitor Modules

This program is similar to the New Detector Autoprogram. When a new monitor module is presented, a typical display might be:

```

PROGRAM MONITOR  M01
<ADJ>  <NOUN>  Z00

```

The major program editing for monitor modules is the selection of the Type Code on the first line. To change this selection, use the up and down arrow keys as the entire field blinks. The default selection is monitor as shown in the screen above. Note that selection of a Type Code may change the functional operation of the addressable device as shown below.

Type Code Label	Special Function
MONITOR	none (default)
PULL BOX	none
HEAT DET	none
SMOKE ZON	none
WATERFLOW	causes a nonsilenceable alarm
SUPERVISY	becomes supervisory point (see Section 4, Operation)
AUTO SUPV	becomes supervisory point (nonlatching supervisory)
TAMPLER_SW	becomes supervisory point (see Section 4, Operation)
_____	none (blank label for use when no other Type Code applies)
ACK_SW ____	functions like the ACKNOWLEDGE switch
SILENC SW	functions like the SILENCE switch
RESET SW	functions like the RESET switch
DRILL ____	functions like the DRILL switch

Table 5 Monitor Module Type Codes

Follow the same procedure as described in New Detectors section, for editing of the ADJ and NOUN fields. The default zone selection is Z00 (main circuit board NAC outputs 1 and 2) and may be set to Z01 through Z56 if desired. See "Appendix C: Software Zones" on page 80.

The ADJ field for monitor modules can also be used to associate a second zone as described in "New Detectors" on page 45.

Control Modules

A typical control module autoprogram screen is shown below:

```

PROGRAM CONTROL  CNN
<ADJ>          ZNN ZNN ZNN
  
```

Control modules default to Zone 00 (general alarm). All Type Code options are silenceable except Relay and Strobes. The selection of control module Type Codes may change their function. Select the Type Code from the library list shown below, using the arrow keys as described in "New Detectors" on page 45.

Type Code Label	Special Function
CONTROL	none (default)
BELL CKT	silenceable
HORN CKT	silenceable
SOUNDERS	silenceable
_____	none (blank label for use when no other Type Code applies), silenceable
RELAY	ignore open circuit (nonsilenceable)
STROBES	nonsilenceable

Table 6 Control Module Type Codes

Select an adjective descriptor from the library list shown in Table 3 on page 45. Use the arrow keys as described in the New Detectors section. Control modules may be assigned to a maximum of three software zones (refer to "Appendix C: Software Zones" on page 80). Zone Z00 represents general alarm. All control modules are assigned to Zone Z00 upon initial power-up.

Point Edit

While displaying the Program Level 1 Menu screen (see "Program Change – Level One" on page 44), pressing the **2** key allows for editing of the point (addressable device) descriptor screens. These screens show the device type, the device address, adjective and noun field descriptors and the software zone locations that the point is assigned to. Point editing is performed *after autoprogramming* and may be done at any time, except during an alarm condition. The following display will appear:

```

POINT PROG.  EDIT
PRESS */#, AA,ENTER
  
```

For example, select detector address 3 program edit by pressing * key (* = detector), followed by numeric key **3**, followed by the ENTER key. To select module address 3 for program edit, press the # key (# = module), press the **3** key, then press the ENTER key. If there is no device installed at this address, the control panel displays the next higher address where a device is installed. After finished editing, press the ENTER key, the display returns to the above menu. *Rather than reentering the next point number, the user may press the up or down arrow key to display the next lower or higher existing point.*

Using software PN #AFP100V1.0 or greater, to edit NAC 1 or NAC 2, press the * key, then the # key, then press **1** for NAC 1 or **2** for NAC 2. Select either 'BELL_CKT' for silenceable functionality or 'STROBE' for nonsilenceable functionality. Use the system edit menu described in "System Edit" on page 49, to select coding. Coding is only possible if the NAC is programmed as 'BELL_CKT'. The point display formats and the method of editing are described in "Autoprogram" on page 44.

System Edit

The System Edit function is selected by pressing the **3** key. The system edit screen appears as shown below.

Use the up and down arrow keys to scroll through the choices for each option and the left and right arrow keys to move from option to option.

```
V=N I=N A=N P=N C=N
A/U=N L/P=N S=4 R=N
```

There are nine system function options. The factory default selections and user option selections are shown below:

Function	Default	Option Selection
V = Alarm Verification	(N)one	(Y) 120 seconds
I = Silence Inhibit	(N)one	(Y) 60 seconds ¹
A = Autosilence	(N)one	(Y) 10 minutes ¹
P = Presignal	(N)one	(Y) 3 minutes with 15 second Acknowledge ¹
C = Bell Code	(N)one	(M) = March Time (T) = Temporal (C) = California
A/U = Annunciators with or without UDACT	(N)one	(Z) = 56 Zones (ZU) = 56 Zones Annunciator with UDACT ² (P) = 198 Points (PU) = 198 Points Annunciator with UDACT ²
L/P = LCD-2X20 or Printer/PC in use	(N)one	L = LCD-2X20 Series installed P = Printer or local PC installed
S = SLC style	(4) = Style 4	(6) = Style 6
R = Alarm/Trbl Reminder	(N)o	(Y)es = Sound onboard piezo every 15 seconds during alarm and every two minutes during trouble after pressing the ACKNOWLEDGE or SILENCE key.
¹ Requires prior approval of Local Authority Having Jurisdiction. ² When the UDACT has a fault, this entry allows the FACP to display 'DACT Trouble' on the LCD display and printer hardcopy. The history file will also be updated with this information. For zone annunciation, up to 56 zones, use AFM Series Annunciators or LDM Series Annunciators. For 198 point annunciation, use the LDM Series Annunciators.		

Table 7 System Function Options

Password Change

While displaying the Program Menu, press the **4** key to change either of two passwords. One high level password, defaulted to '00000', allows for point and system programming. A second lower level password, defaulted to '11111', allows for status changes such as:

- Disable points/zones
- Clear history file
- Walktest enable
- Time and date set
- Program check

Pressing the **4** key will display the following:

```
*,NNNNN, E=LEVEL 1 PW
#,NNNNN, E=LEVEL 2 PW
```

Select the password to change by typing * or #, then enter the new password. As the new program or status password is entered, it is displayed. When the enter key is pressed, the display reads “PRESS ENTER IF OK, NNNNN=NEW PROGRAM PW”. After the ENTER key is pressed, the new password is stored in EEPROM memory and the program returns to the program change screen. If BACKSPACE is entered, the password remains unchanged and the program returns to the program change screen.

Load



Caution: Changes to program entries occur as a result of the downloading process. After successful downloading, make sure to perform the following steps:

1. Print out all programmed data via the print mode or manually view programmed entries and compare to intended program data.
2. Test all affected control panel operations.
3. Immediately correct any problems that you find.

While displaying the Program Menu, program selection **5** sets up the control panel for transfer of its application database from/to a Windows-based computer. This may be used to save the program that exists in an control panel for security and future service reasons; or may be used to transfer a program created off-line to the control panel. Refer to the Veri•Fire CD Medium System Programming Utility help function for additional information. When the Load option is selected, the following screen will be displayed:

```
CONNECT COMPUTER NOW
RUN PROGRAM FROM PC
```

The PC connects to the EIA-232 printer interface (instructions provided with the Veri•Fire CD Medium System Programming Utility or see "Printer and PC Interface" on page 38). The left arrow key may be used to return to the program change screen. Continue to press the left arrow key to return to the main program screen.

At the completion of system programming, switch SW1 (Write Protect) should be set to the Write Protect position to prevent inadvertent changes to programmed features. Slide the switch to the up position to select the Write Protect feature.


Program Change – Level Two

While the control panel is normal with no active alarms, troubles or supervisories, the screen shown below will be displayed:



```
SYSTEMS ALL NORMAL
10:00A MON 01/03/00
```

To access the programming mode, the ENTER key must be pressed, causing the following screen to be displayed:

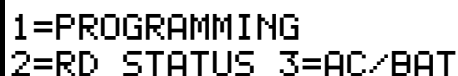


```
1=PROGRAMMING
2=RD STATUS 3=AC/BAT
```

Pressing **1** will cause the following screen to appear:



```
KEY PASSWORD, ENTER
```

Enter the Level 2 password (default = **1111**) then press the ENTER key to access Programming Change Level 2. The screen shown below will appear:

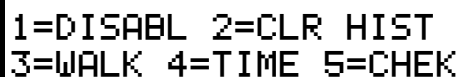

```
1=DISABL 2=CLR HIST
3=WALK 4=TIME 5=CHK
```

From this screen, the available function choices include Point Disable, Clear History, Walktest, Set Time and Check programming.

Disable

Press the **1** key to display the following screen:



```
DISABLE/ENABLE
PRESS */#,AA,ENTER
```

Press the * key to display detectors, the # key to display modules, enter the device address, then press the ENTER key. A typical display is shown below:



```
ENABLE SMOKE DET P01
NORTH BASEMENT MZ01
```

A point is then displayed on the screen similar to a Point Edit display but with the current status label (ENABLE shown) blinking. The current status label may show: NORMAL, TROUBL, DISABL, ENABLE, ALARM, ACTIVE, PROGRM, TEST 01, ON, OFF. The status label can be changed to DISABL or back to its present status by pressing the up or down arrow keys. The disable status is entered/stored in memory by pressing the ENTER key. The display then returns to the DISABLE/ENABLE screen shown above. The operator may then enter a new point number, or may press up/down to bring up the next lower/higher address point.

Note: The control panel only disables initiating devices that are in alarm or control points that are ON occurs after the SYSTEM RESET key is pressed.

All disabled points will scroll on the LCD display and the system will remain in trouble until all programmed points are enabled.

Clear History

Press the **2** key to display the following screen:

```
ENTER TO CLEAR HIST.  
BACKSPACE TO ESCAPE
```

Press the ENTER key to clear the 500-event History file. Press the left arrow key (backspace) to exit without clearing the History file.



Caution: Pressing the ENTER key will clear all History events associated with this control panel. Care should be taken to ensure this is the appropriate action.

Walktest

From the Program Menu, press the **3** key, then press the ENTER key to display the following:

```
WALKTEST    1-SILENT  
2-PULSE SOUNDERS
```

Press the **1** key to perform a silent Walktest with all sounding devices, control modules and the NAC 1 and NAC 2 outputs OFF. Press the **2** key to perform an audible Walktest which sounds all silenceable control modules and NAC 1 and NAC 2 (if programmed as BELL_CKT as explained in "Point Edit" on page 48) output during Walktest. Disabled NAC outputs will not activate during Walktest. Each alarm and trouble condition (short and open) will be printed in real-time and stored in the 500 event history buffer. After pressing either '1' or '2', the screen shown below will appear:

```
ENTER START WALKTEST  
BACKSPACE TO STOP
```

If the ENTER key is pressed, the second line goes blank and the control panel is in Walktest mode. Walktest may be stopped at any time by pressing the left arrow key (backspace), which returns the control panel to the "All Systems Normal" display. A one hour time-out automatically returns the system to normal operation.

Shorted/Alarm Condition

When in Walktest, the control panel responds to each new alarm and activates its programmed control outputs for four seconds, if those control outputs have been programmed for silenceable activation. It also stores each alarm in the history file and printer with a 'TEST XX' status label. XX is a count of the number of times a device with this address has been tested. Note that this is a convenient way to identify two detectors that are erroneously set to the same address. A complete Walktest will cause a 'TEST 02' indication for the addresses to which both devices are set and no TEST report for the address that one of the devices should have been set to.

Note: If the system under Walktest includes one or more enabled FZM-1 modules, the following may apply:

If the FZM-1 module is used for a supervised, two-wire smoke zone, alarming any monitor module in the system will result in the activation of programmed control outputs for an additional 8 seconds or less. This is caused by the temporary removal of 24 VDC resettable power from the FZM-1 and it reports this loss of power as an open condition in addition to the alarm condition.

Open Condition

All intelligent devices on the SLC, as well as the two main circuit board NACs, are monitored for fault conditions during Walktest mode. When a new trouble condition occurs, it activates all control modules programmed for Walktest and Bell Circuit 1, then shuts them off after an 8 second interval (4 seconds longer than alarms). The trouble status label is 'TEST T'.

While in Walktest, the trouble relay is on and the System Trouble LED flashes (as in all of Program and Status change operations). The alarm relay is not activated. The LCD displays the following:

A rectangular LCD screen with a black border displaying the text "ENTER START WALKTEST" in a monospaced, all-caps font.

Set Time and Date

From the Program Menu, press the **4** key to display the following screen:

A rectangular LCD screen with a black border displaying the text "CHANGE TIME/DATE" on the first line and "10:00 A MON 01/03/00" on the second line in a monospaced, all-caps font.

The first digit of the hours is flashing and may be changed with the numeric pad. The right arrow moves to the next digit. The up and down arrows select (A)M or (P)M, day of the week, month, day and year. Pressing the ENTER key stores the time and date and returns to the Level 2 screen.

Check

Program selection **5** performs a check on software zone assignments. The control panel looks for output devices assigned to a software zone that does not contain any input devices (detectors, monitor modules). If multiple devices fail the check, the up and down arrow keys are used to step through the list of devices. The user *must* return to point editing to correct any errors.

Note: The system continues monitoring alarm conditions during all Programming and Read Status operations with the exception of Walktest.

At the completion of system programming, switch SW1 (Write Protect) should be set to the Write Protect position to prevent inadvertent changes to programmed features. Slide the switch to the up position to select the Write Protect feature.

This page intentionally left blank

Screen Options Flowchart

The charts below and on the following page contain diagrams of the programming options available with software PN #AFP100V1.0 and greater.

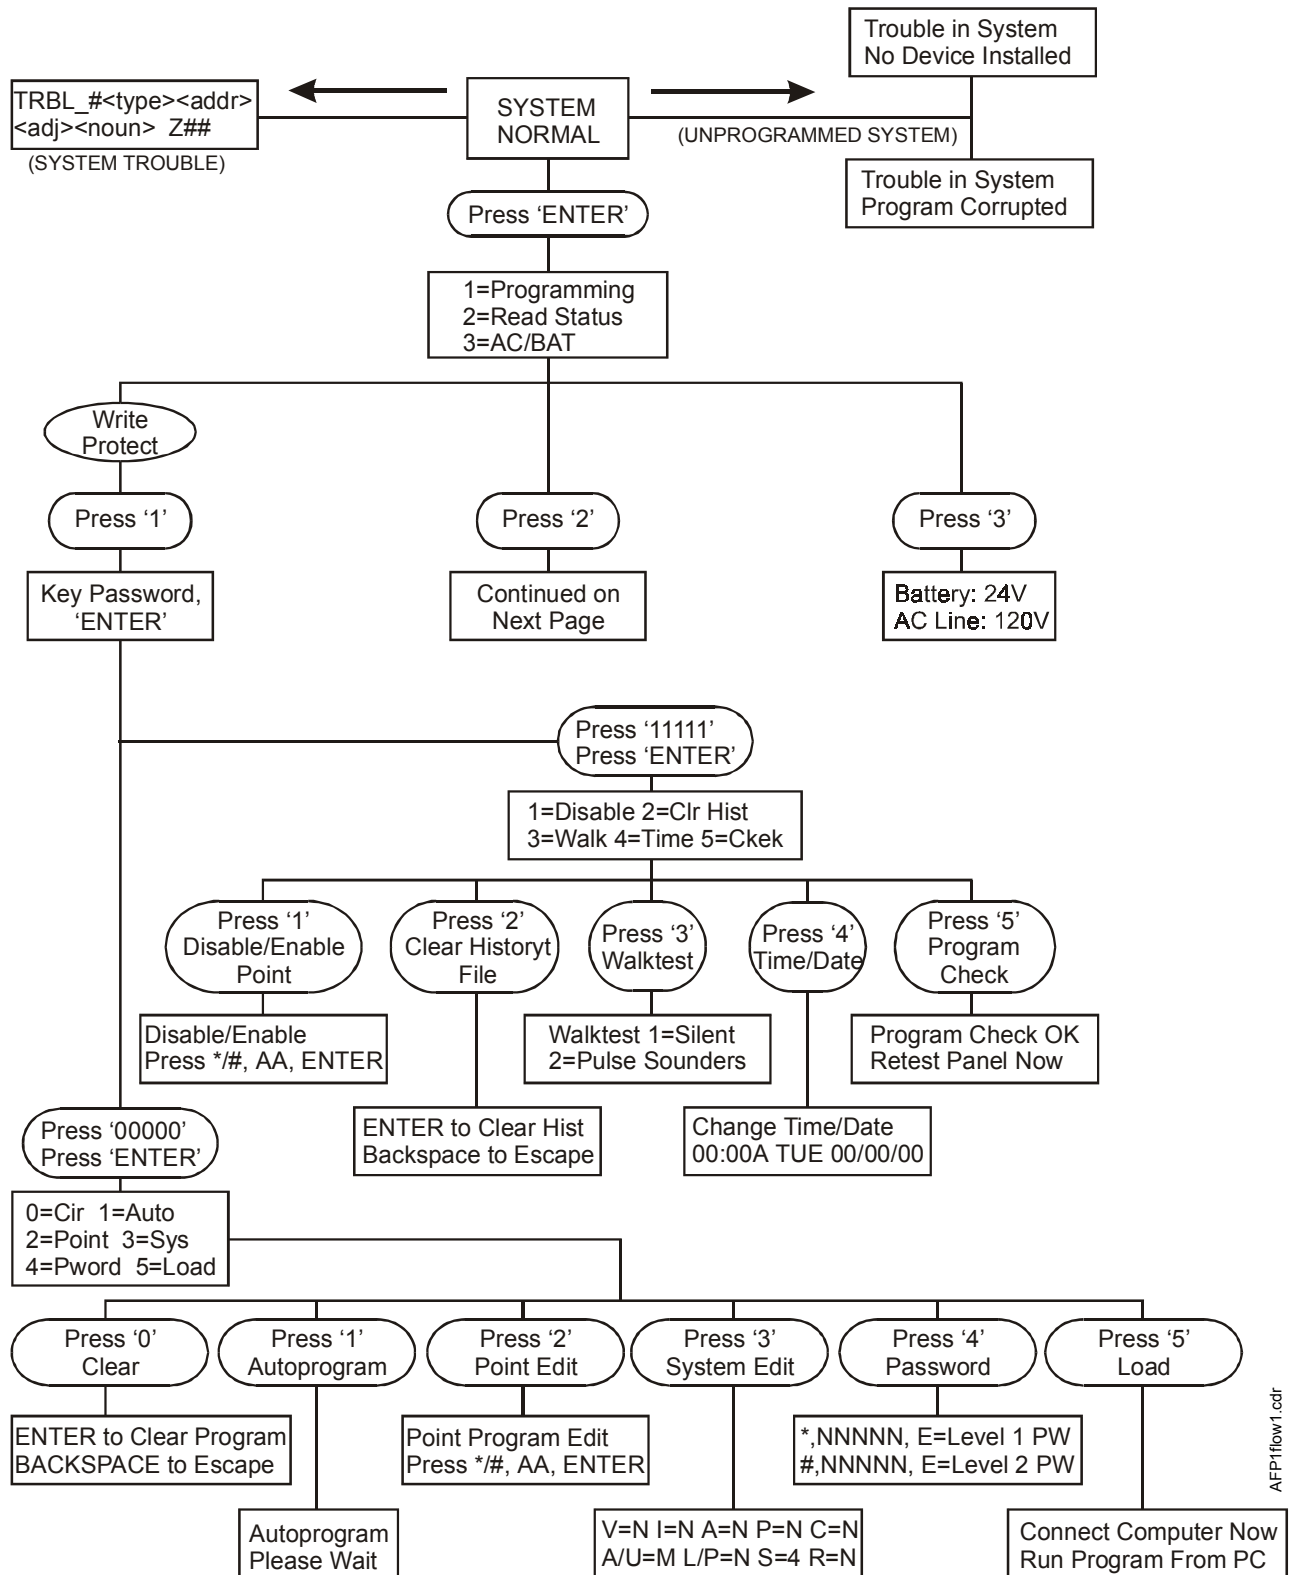


Figure 19 Screen Options Flowchart - 1

Read Status Options (see "Read Status" on page 69).

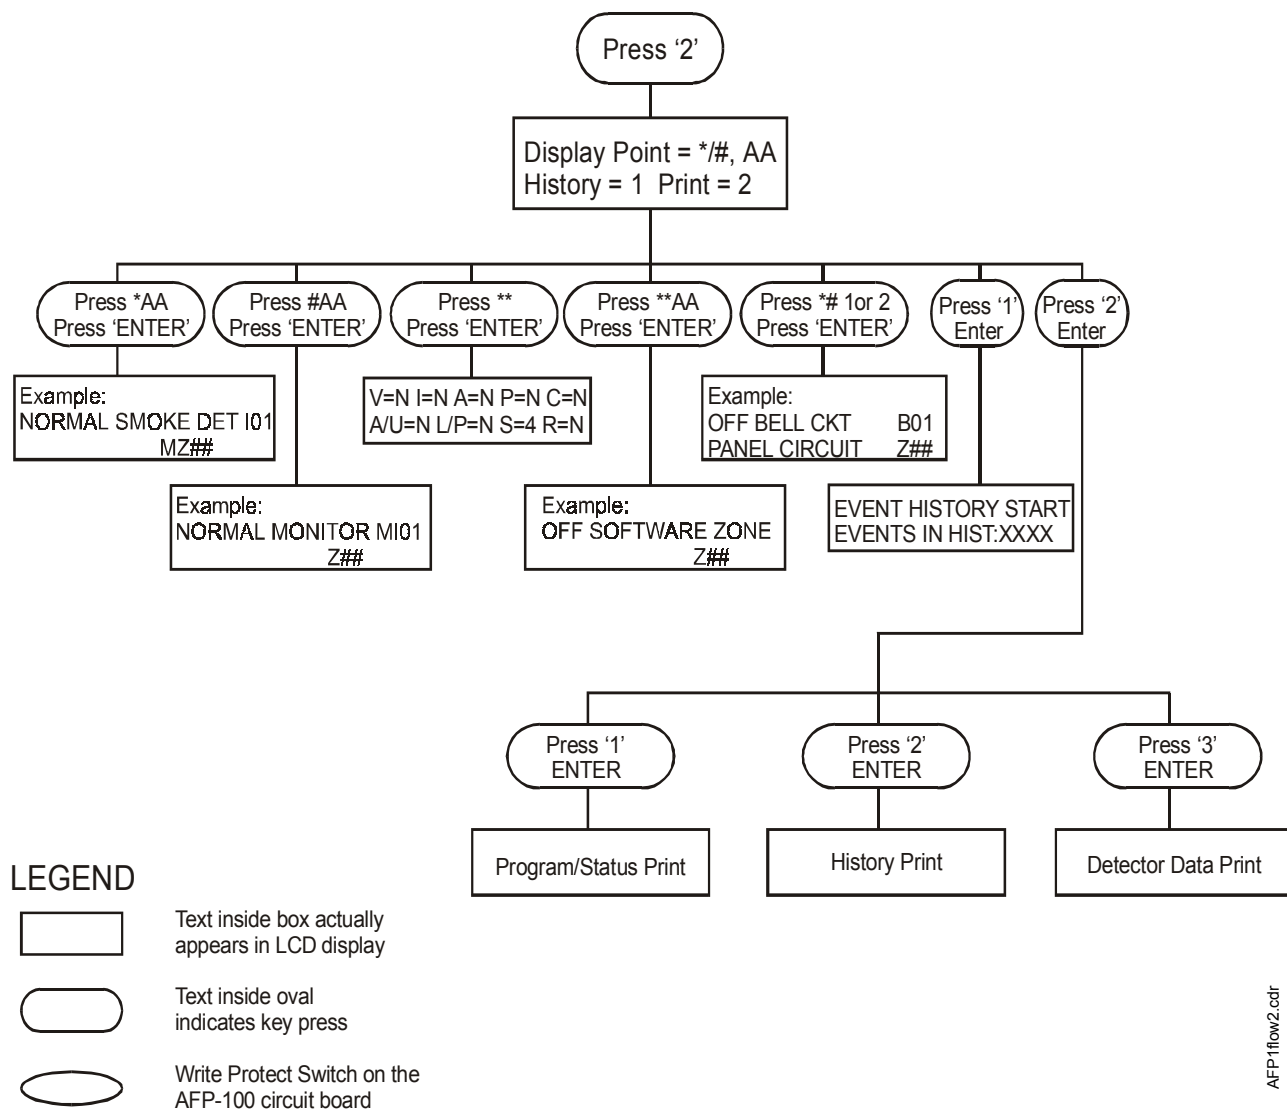


Figure 20 Screen Options Flowchart - 2

AFP1flow2.cdr

Notes

4. Operation

Control Keys

The figure below shows the control keys on the control panel:

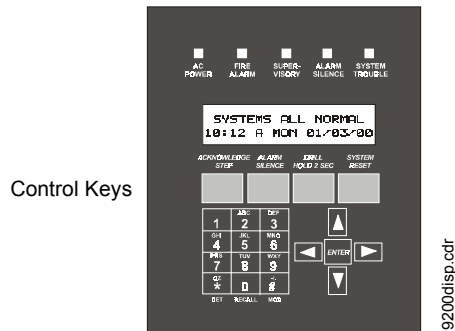


Figure 21 Control Keys

Acknowledge/Step

The ACKNOWLEDGE/STEP key silences the control panel sounder and changes all flashing LEDs to steady. Only one key press is necessary regardless of the number of new alarms, troubles or supervisory signals. When the panel sounder is silenced, an “Acknowledge” message is sent to the printer and the history file. Multiple active events are scrolled on the display at a three second rate. Acknowledge also automatically sends a “Silence Piezo” command to the LCD-2X20, AFM and LDM Series annunciators.

When more than one event exists, the first press of the ACKNOWLEDGE/STEP key silences the panel sounder and changes all flashing LEDs to steady. The second key press stops the scrolling and holds the event on the display for 1 minute. Subsequent pressing of the key “steps” through each active event.

Alarm Silence

The ALARM SILENCE key performs the same functions as ACKNOWLEDGE/STEP key. In addition, if an alarm exists, it turns off all silenceable circuits and causes the Alarm Silence LED to turn on. It also sends an “Alarm Silenced” message to the printer, the history file and the LCD-2X20. A subsequent new alarm will resound the system.

Note: The ALARM SILENCE key operates on *silenceable* NAC outputs only.

Drill Hold 2 Sec.

When the DRILL key is held for 2 seconds (time required to prevent accidental activations), the control panel turns on both control panel NAC outputs and all silenceable circuits (all control modules/NACs that are programmed silenceable) and turns off the ALARM SILENCE LED. The “Manual Evacuate” message is shown on the LCD display. The same message is sent to the printer and history file.

System Reset

Pressing the SYSTEM RESET key turns off all control modules and NACs, temporarily turns off resettable power to 4-wire detectors, causes an “All Systems Normal” message to be displayed on the LCD and stores “System Reset” in the printer and history file. It also turns on all LEDs, panel sounder and LCD display segments as long as the SYSTEM RESET key is held (lamp test). Any alarm or trouble that exists after pressing the SYSTEM RESET key will resound the system.

System Status LED Indicators

The control panel has five System Status LED Indicators on the front of the control panel as shown below:

System Status
LED Indicators

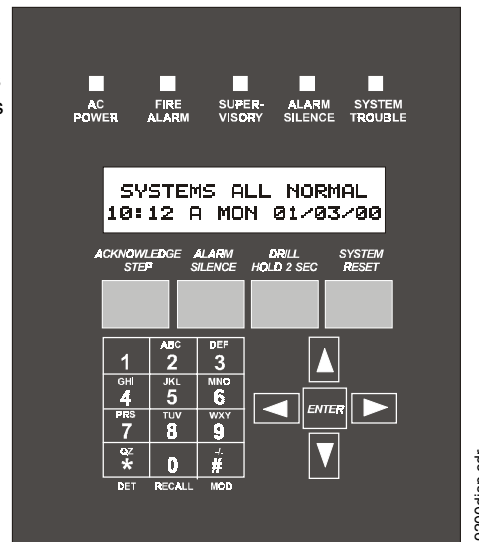


Figure 22 System Status LED Indicators Keys

AC Power

This is a green LED which illuminates if AC power is applied to the control panel.

Fire Alarm

This is a red LED that flashes when one or more alarms occur. The FIRE ALARM LED illuminates steady when you press the ACKNOWLEDGE/STEP key or the ALARM SILENCE key. The FIRE ALARM LED turns off when you press the SYSTEM RESET key.

Supervisory

This is a yellow LED that flashes when one or more supervisory conditions occur, such as a sprinkler valve tamper condition. It illuminates steady when you press the ACKNOWLEDGE/STEP key or the ALARM SILENCE key. The SUPERVISORY LED turns off when you press the SYSTEM RESET key.

Alarm Silence

This is a yellow LED that turns on after the ALARM SILENCE key is pressed (preceded by a fire alarm condition). It turns off when you press the DRILL key or the SYSTEM RESET key.

System Trouble

This is a yellow LED that flashes when one or more trouble conditions occur. It stays on steady when the ACKNOWLEDGE/STEP key or ALARM SILENCE key is pressed. The LED turns off when all trouble conditions are cleared. This LED will also illuminate if the microprocessor watchdog circuit is activated.

Normal Operation

With no alarms or troubles in the system, the display message is 'Systems All Normal' along with the current time and date as shown below:

A rectangular LCD display with a black border. The text is in a monospaced, pixelated font. The top line reads "SYSTEMS ALL NORMAL" and the bottom line reads "10:00 A MON 01/03/00".

```
SYSTEMS ALL NORMAL
10:00 A MON 01/03/00
```

Note: To set the time and date, refer to "Set Time and Date" on page 53.

The control panel performs the following functions at regular intervals while in normal mode:

- Polls all devices on the SLC, checking for valid reply, alarms, troubles, etc.
- Monitors the AC input voltage and the battery capacity
- Refreshes the LCD display and updates the system time
- Scans the keypad for entries
- Performs detector auto test
- Tests memory
- Update and reads the EIA-485 communications bus

Trouble Operation

With no alarms, the detection of a trouble in the system will cause the panel sounder to sound, the System Trouble LED to flash and the trouble relay to activate. A message will appear on the LCD display indicating the trouble condition. The same message is sent to the printer and history file along with time and date. A ground fault will also cause the yellow Ground Fault LED, located on the bottom of the main circuit board, to turn on.

Addressable Smoke Detectors

For addressable Ionization or Photoelectric smoke detectors, the following is a typical message that could appear on the LCD display for a detector in trouble.

```
TRBL # SMOKE DET P01
<ADJ> <NOUN>      MZ00
```

The information displayed in the first line in the example above provides the following information:

- The type of event – in this example, TRBL indicates device trouble.
- The Specific Device Trouble for a Detector - the # symbol will be replaced by a digit representing a specific trouble condition (refer to the list of Specific Device Troubles listed below).
- Type of device – in this example, SMOKE DET indicates smoke detector.
- Point type and address – in this example, P01 indicates Photoelectric detector assigned to address 01.

The information displayed in the second line in the example above provides the following information:

- <ADJ> – user programmed adjective descriptor from library list or custom entry (five characters maximum).
- <NOUN> – user programmed noun descriptor from library list or custom entry (ten characters maximum).
- Zone – zone to which the point is assigned.

The # symbol in the display will be replaced by a digit that represents the Specific Device Troubles as listed below:

#	Specific Device Troubles
1	Invalid Reply - may be due to: 1) incorrect pulse width received from a detector. 2) no answer from a detector due to either a complete device failure or removal from the SLC loop. 3) an incorrect identification code received, i.e. a photo detector replaced by an ion detector or vice-versa.
2	Maintenance Alert - indicates that a detector has been within 80% of its alarm threshold for 24 hours, indicating that the detector needs cleaning.
3	Fail Automatic Test - indicates that a detector's sensing chamber and electronics (which are tested for normal safe operation every two hours) has failed the test.

Table 8 Specific Device Troubles for a Detector

Monitor and Control Modules

The following is a typical message that could appear on the LCD display for monitor modules and control modules in trouble.

```
TRBL # MONITOR M01
<ADJ> <NOUN>      Z00
```

The information displayed in the first line in the previous example provides the following information:

- The type of event – in this example TRBL indicates device trouble.
- The Specific Device Troubles for a module – the # symbol will be replaced by a digit representing a specific trouble condition (refer to the list of Specific Device Troubles for a module below).
- Type of device – in this example, MONITOR indicates a monitor module.
- Point type and address – in this example, M01 indicates monitor module assigned to address 01.

The information displayed in the second line in the previous example provides the following information:

- <ADJ> – user programmed adjective descriptor from library list or custom entry (five characters maximum).
- <NOUN> – user programmed noun descriptor from library list or custom entry (ten characters maximum).
- Zone – zone to which the point is assigned.

The # symbol in the display will be replaced by a digit that represents the Specific Device Troubles as listed below:

#	Specific Device Troubles
1	Invalid Reply - may be due to: 1) incorrect pulse width received from a module. 2) no answer from a module due to either a complete device failure or removal from the SLC loop. 3) an incorrect identification code received, i.e. a monitor module replaced by a control module or vice-versa.
2	Short Circuit Control Module - indicates a short circuit exists across a control module's NAC.
3	Open Circuit Monitor/Control Module - indicates an open circuit exists on a control module's NAC or the monitor module's Initiating Device Circuit.

Table 9 Specific Device Troubles for a Module

Acknowledge

Pressing the ACKNOWLEDGE/STEP key will cause the panel sounder to silence and the System Trouble LED to turn on steady. This occurs regardless of the number of troubles, alarms and supervisory events active in the system (block acknowledge). When you press the ACKNOWLEDGE/STEP key, and at least one new alarm or trouble exists in the system, the “Acknowledge” message is sent to the printer and history file. If the trouble clears, either before or after Acknowledge, the “Clear Trouble” message is sent to the printer as illustrated by the following example:

```
CLR TRBL_# SMOKE DET P01 <ADJ><NOUN> ZONE# TIME and DATE
```

If all troubles clear and there are no supervisory or fire conditions active in the system, the system returns to normal operation status and the “Systems All Normal” message is shown on the LCD display and stored in the history and printer files. Trouble restore occurs even if the troubles were never acknowledged (auto-restore).

If the ALARM SILENCE key is pressed when only troubles exist, it will have the same effect as the ACKNOWLEDGE/STEP key. The Alarm Silence LED will not be illuminated unless there was also an alarm in the system.

Note: If a combination of alarms, troubles and/or supervisory conditions occur in the system simultaneously, only the alarms are scrolled on the display.

If multiple trouble conditions exist in the system, they scroll on the LCD display automatically at a 3-second rate. If the ACKNOWLEDGE/STEP key is pressed, the display stops on the present item for one minute or until the Acknowledge/Step key is pressed again. As the ACKNOWLEDGE/STEP key is pressed, the control panel displays events in the following priority order:

1. Alarms in address order
2. Supervisories in address order
3. Troubles in address order

Alarm Operation

Alarm operation is similar to trouble operation, but with the following differences:

- The panel sounder produces a steady output, not pulsed.
- The System Alarm (not Trouble) LED flashes.
- ALARM: device name, type and address are displayed.
- Alarms latch and *are not allowed to clear automatically*.
- Alarms activate software zones (control-by-event logic) if so programmed.
- Timers (Silence Inhibit, Auto-silence, Trouble Reminder) are started.
- Alarms activate the general alarm relay and zone Z00 (NAC 01 and NAC 02).
- The trouble relay is not activated.

A typical alarm display would be:

```
ALARM: PULL STAT M02  
<ADJ> <NOUN> ZONE #
```

Supervisory Operation

Supervisory operation is similar to alarm operation but with the following differences:

- The panel sounder is a warbling sound.
- The Supervisory LED (not Alarm) flashes.
- The Display Status label is Active.
- Supervisory relay is activated.
- Silenced alarms are not resounded.
- Timers are not started.
- The alarm relay is not activated.

A typical supervisory event would display:

```
ACTIVE TAMPER M02  
<ADJ> <NOUN> ZONE #
```

Note that, like alarms, supervisory signals latch and can be assigned to a software zone. Supervisory alarms do not cause resound as do other alarm conditions. Open circuits in supervisory wiring are processed by the control panel the same way as other trouble conditions.

NAC (Notification Appliance Circuit) Operation

The control panel has two NACs: NAC 01 and NAC 02.

NAC 01 and NAC 02 are programmable. Both NACs may be either silenceable or nonsilenceable and may be programmed as steady or coded operations. Coded operation includes March Time, Temporal or California types. Refer to "Coded Operation - NAC 01 and NAC 02" on page 66, for additional information on coding.

Control-By-Event (CBE) Operation

Each addressable detector and monitor module can be assigned to one software alarm zone. Control modules may be assigned to a maximum of three software zones. A general alarm zone (Z00) may be listed for output (control) points, but it is not necessary to list Z00 for input points, as this is the default zone. Z00 is not activated by supervisory points.

When an input device (detector, monitor module) alarms and is not disabled, it activates all software zones assigned to it. An output device (control module or NAC) that is not disabled is turned on when any of the software zones, to which it is mapped, become active.

Note: For more information on CBE operation, refer to "Appendix C: Software Zones" on page 80".

Detector Functions

Maintenance Alert

Each detector is monitored by the control panel for its maintenance status. If a detector is within 80% of its alarm threshold for a 24-hour period, a "Maintenance Alert" message will be automatically displayed, signaling that the detector needs servicing.

Automatic Test Operation

An automatic test of each detector is performed every 2 hours. The detector's sensing chamber and electronics are functionally tested for normal, safe operation. A trouble message is displayed upon failure of this test. You can also clear this trouble by pressing the SYSTEM RESET key.

Type Code Supervision

The control panel monitors hardware device type codes at slow intervals. Mismatch of any type code, compared to the system program, will cause a device trouble.

System Alarm Verification

You can also program the control panel to perform alarm verification to detectors. Refer to "Alarm Verification (None or 73 Seconds)" on page 67 for a description of the Alarm Verification Timer.

Time Functions: Real-time Clock

The control panel includes a crystal-based clock that provides time of day, date and day of week. Time is displayed as 12 hour time with month/day/year and is stored in RAM. If both AC and battery power are lost, the time must be reset.

Coded Operation - NAC 01 and NAC 02

Shown below are the pulse rate outputs via NAC 01 or NAC 02 when coded operation is selected.

Code Selection	Pulse Rate
Continuous	Continuous
March Time	Pulses at 120 ppm (pulses per minute)
Temporal Code	Pulses at ½ second On, ½ second Off, ½ second On, ½ second Off, ½ second On, 1½ seconds Off
California Code	10 seconds On, 5 seconds Off

Table 10 Pulse Rates for NAC Coded Selections

Presignal

Presignal is used to delay output activation (control modules and NACs) while allowing for visual verification by a person. Once a detector or monitor module triggers an alarm, the panel sounder sounds immediately, but the Notification Appliance Circuits are not activated for 15 seconds. During this time, if the ACKNOWLEDGE/STEP key is pressed, the panel sounder is silenced and the notification appliances will not activate for up to three minutes. After three minutes, the NACs will activate if the source of the alarm is not cleared. This does not affect monitor modules programmed as waterflow or supervisory.

Note: Presignal operation requires the approval of the local Authority Having Jurisdiction.

Special System Timers

Silence Inhibit Timer (None or 60 Seconds)

This option, if selected, prevents the ALARM SILENCE key from functioning for 60 seconds after an alarm.

Note: Silence Inhibit operation requires the approval of the local Authority Having Jurisdiction.

Auto-silence Timer (None or 10 Minutes)

If Auto-silence is selected, the notification appliances are silenced automatically after 10 minutes of activation. Pressing the DRILL key will restart the timer with a new 10 minutes.

Note: Auto-silence operation requires the approval of the local Authority Having Jurisdiction.

Trouble Reminder

If selected, this feature causes a reminding “beep” tone every 15 seconds during an alarm (after the Silence key is pressed) and every 2 minutes during a trouble condition (after the ACKNOWLEDGE/STEP key or ALARM SILENCE key is pressed). The “beep” tones from the panel sounder will occur until the alarm or fault is cleared.

Alarm Verification (None or 73 Seconds)

If alarm verification is selected, an addressable smoke detector's alarm is ignored for a Retard period of 13 seconds and the detector's alarm condition is automatically reset. There will be no alarm indication at the control panel during the Retard period. A Confirmation period of 1 minute follows, during which a subsequent alarm from the same detector will cause the control panel to immediately activate the appropriate outputs and indicate the alarm condition at the control panel. If a different detector alarms any time during the first detector's verification period, the control panel will immediately activate all appropriate outputs and indicate the alarm condition at the control panel. If no additional detector alarms occur within 73 seconds of the first alarm (13 second retard plus 1 minute confirmation), the timer resets and the control panel is ready to verify any new detector alarms which may occur.

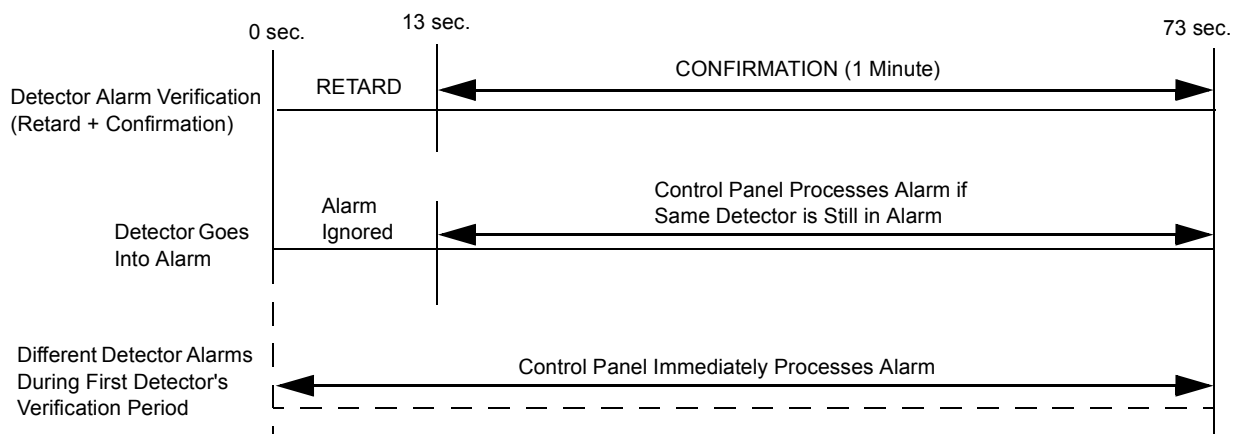


Figure 23 Alarm Verification Timing

Waterflow Circuits Operation

If an alarm exists from a monitor module point that has a WATERFLOW type code, the Alarm Silence key will not function.

Disable/Enable Operation

Input points which are disabled do not cause an alarm or any CBE (Control-By-Event) activity. Disabled output points are held in the off state. All disabled points are treated as if they were in trouble, with the exception being the status label that displays is DISABL.

Wiring Fault

If the SLC is wired and programmed for Style 6 and a single fault occurs, the control panel will detect the fault and drive both ends of the line, fully recovering from the fault. The control panel latches the trouble and displays it until the SYSTEM RESET key is pressed. The display shows **Style 6** trouble type.

Read Status

Read Status functions do not require a password. The control panel will continue to provide fire protection while in Read Status mode. Read Status may be entered while the control panel is in alarm or trouble. If a new alarm or trouble occurs during these functions, the Read Status is exited to prevent confusion. For your convenience, a programming flowchart is included (see Figure 20 "Screen Options Flowchart - 2" on page 56). It may be helpful to follow along with the flowchart as this section is reviewed.

Read Status Entry

Press the ENTER key to display the programming menu on the LCD display:

```
1=PROGRAMMING
2=RD STATUS 3=AC/BAT
```

To enter Read Status, press the **2** key. The control panel displays the following:

```
DISPLAY POINT=*/#,AA
HISTORY=1      PRINT=2
```

From the display shown above, you can take any of the functions listed below:

To	Do this
Display Point Status	Identify the type of device to be read by pressing the * key for a detector or the # key for a module. Key in the two-digit device address, then press the ENTER key.
Display System Parameters	Press the * key two times, then press the ENTER key.
Display Zone status	Press the * key two times, key in the zone number (1–56), then press the ENTER key. To view the next or previous zone, press the Up or Down arrow keys.
Display NAC status	Press the * key, press the # key, press the 1 or 2 key, then press the ENTER key.
To display the 500-event History file one event at a time	Press the 1 key then press the ENTER key. Use the Up and Down arrow keys to step through the entries in the history file.
Print the program contents and current system status or the history file	Press the 2 key, then press the ENTER key. A new menu appears which prompts the user to press '1' to print Program/Status, '2' to print History file, or '3' to print Detector Data.

Table 11 Read Status Operations

During all Read Status operations, except print operations, a 2-minute timer starts that causes the control panel to return to the previous display if no key is pressed within 2 minutes. Each key press restarts the 2-minute timer. Pressing the left arrow (backspace) key deletes the previous entry. (If there is no previous entry, it will cancel the Read Status operation and return to the previous display.) To cancel Read Status, press the SYSTEM RESET key.

Display Point

Display Point operations display addressable device status on the LCD display. After the status of the device displays, press the Up arrow key to display the status of the next highest addressable device or press the Down arrow key to display the status of the previous addressable device. The sequence of display point is 1) Detector points 01-99, 2) Module points 01-99, 3) NAC bell circuits 01 and 02, 4) System Parameters, and 5) Zones 1-56.

A typical Read Status display is as follows:



```
NORMAL SMOKE DET P01
WEST HALLWAY      MZ56
```

In the preceding display:

- **NORMAL** is the present status (could be ALARM, TRBL_#, DISABL, etc.)
- **SMOKE DET** is the device type; **P** indicates that this is a photoelectric detector and **01** is the device address
- **WEST HALLWAY** is the custom label programmed for this device
- **MZ56** is the assigned software zone

If the point is not installed, a Read Status command to that point will result in a "Not Installed" message on the display.

Read History

The control panel provides a history file that can store up to 500 events, such as Point Status, System Troubles, and Acknowledge/Step, Alarm Silence, Drill and System Reset key presses. All history events are recorded with the time and date.

History events are stored in volatile memory, therefore, removal of primary AC power and secondary battery power will clear the history buffer. To clear the History file without removing power, see "Clear History" on page 52. To view events in the history file, use the Up and Down arrow keys to step through the events.

Print Program

You can use Print Program function to print all user-programmed options, including device types, software zone assignments, system parameters, and current system status.

Note: For instructions on connecting a printer, refer to "Printer and PC Interface" on page 38.

Print History

You can use Print Program function to print the entire 500-event history file.

Note: For instructions on connecting a printer, refer to "Printer and PC Interface" on page 38.

Print Detector Data

An addressable smoke detector's ability to detect smoke can change over time as a result of component deterioration due to environmental contaminants and dirt. Use the Print Detector Data function to print the current sensitivity of each addressable smoke detector in the system.

To print each addressable smoke detector's (sensitivity) data, press '3' then ENTER while viewing the Print screen. A printout similar to the sample shown in Figure 24 will be generated to an optional printer connected to the FACP.

*****DETECTOR DATA*****		
DEVICE TYPE	CHAMBER READING	TIME/DATE
SMOKE DET P01	947	03:52P Fri 09/28/01
SMOKE DET P02	908	03:52P Fri 09/28/01
SMOKE DET I03	968	03:52P Fri 09/28/01
SMOKE DET T04	1000	03:52P Fri 09/28/01

Figure 24 Sample Detector Data Printout

Note: If a printer is not available, it is possible to store Detector Data information by using the HyperTerminal feature available on most personal computers running the Windows® operating system. Any settings which are configured in this feature must reflect the printer settings detailed in "Printer Configuration" on page 39. Refer to the Windows® Manual for information on the HyperTerminal feature.

The Chamber Reading

The Chamber Reading should be within the ranges indicated in Table 12. If the addressable smoke detector's Chamber Reading is not within the acceptable range, clean the detector, regenerate Detector Data, and recheck the Chamber Reading. If the reading is still not within the acceptable range, replace the detector immediately.

Model	Device Type	Acceptable Range
FSI-751	Low-Profile Intelligent Ionization Smoke Detector	270 - 1400
FSP-751 FSP-751T	Low-Profile Intelligent Photoelectric Smoke Detectors	500 - 1400
HPX-751	Analog Addressable Smoke Detectors	500 - 1400
FSD-751P FSD-751RP	Intelligent Photoelectric Duct Detectors	500 - 1400
FST-751 FST-751R	Intelligent Thermal Detectors	600 - 1800

Table 12 Acceptable Ranges for Addressable Detectors

Appendix A: Power Supply Calculations

The AC Branch Circuit

The control panel requires connection to a separate dedicated 120 VAC or 240 VAC branch circuit, which must be labeled “Fire Alarm.” The branch circuit must connect to the line side of the main power feed of the protected premises. No other equipment may be powered from the fire alarm branch circuit. The branch circuit wire must run continuously, without any disconnect devices, from the power source to the fire alarm control panel. Overcurrent protection for this circuit must comply with Article 760 of the National Electrical Code as well as local codes. Use #14 AWG (2.00 mm²) wire with 600 volt insulation for this branch circuit.

Use the table below to determine the total amount of current, in AC amps, that must be supplied to the fire alarm system.

Unit Type	Number of Units		Current Draw (amps)	Total Current
AFP-100 or AFP-100E	1	X	2.3 (AFP-100) 1.2 (AFP-100E)	=
CHG-120 Charger	[]	X	2.0	=
XRM-24(E) Transformer	[]	X	1.0	=
Total AC Branch Current Required				= Amps

Table 13 AC Branch Circuit Requirements

The Main Power Supply

The AFP-100 provides filtered power for operating the fire alarm control panel, operating external devices and operating the standby battery. The power for operating external devices is limited. Use Table 14 on page 73 (standby or nonalarm) and Table 15 on page 74 (alarm) to determine if external loading is within the capabilities of the AFP-100 power supply.

Note: Refer to the manufacturer's data sheet packaged with each smoke detector to find the standby and alarm current draws to use in the following tables.

Device Type	Number of Devices	Standby Current (amps)	Total Current ¹ (amps)
Main Circuit Board	1	X 0.08	= 0.08
RTM-8F	[] one max.	X 0.009	=
ACM-8R	[]	X 0.030 ²	=
AFM-16AT or AFM-32A	[] one max.	X 0.04 ²	=
AEM-16AT or AEM-32A	[]	X 0.002 ²	=
AFM-16A	[]	X 0.025 ²	=
UDACT	[] one max.	X 0.04	=
LDM-32	[]	X 0.04 ²	=
LDM-E32	[]	X 0.002 ²	=
LCD-2X20 Series	[]	X 0.064 ^{2,3}	=
4-Wire Smoke Detector	[]	X [] ⁴	=
Power Supervision Relay	[]	X 0.025	=
FSI Series detectors	[]	X 0.00027	=
FSP Series detectors	[]	X 0.00027	=
FST Series detectors	[]	X 0.00027	=
FMM-1	[]	X 0.0003	=
FMM-101	[]	X 0.0003	=
FZM-1	[]	X 0.0002	=
FCM-1	[]	X 0.0003 ⁵	=
FRM-1	[]	X 0.0002	=
ISO-X	[]	X 0.0004	=
NBG-12LX	[]	X 0.0002	=
Auxiliary Devices Powered from TB4	[]	X []	=
Sum Column for Standby Load			=

1. Refer to current limitations on the following page.
2. TB4 nonresettable terminals (auxiliary power) 300 mA - filtered 24 VDC +/- 5% 120Hz ripple @ 10 mV_{RMS}.
3. During AC loss, LCD-2X20 backlight is extinguished to conserve power, reducing the standby current draw from the batteries to 0.029 amps.
4. TB4 resettable terminals (smoke detector power) 300 mA - filtered 24 VDC +/- 5% 120Hz ripple @ 10 mV_{RMS}.
5. TB4 nonregulated terminals - 24 VDC, 2.5 amps

Table 14 Filtered Load in Standby

Device Type	Number of Devices	Alarm Current (amps)	Total Current ¹ (amps)
Main Circuit Board	1	X 0.168 =	0.168
RTM-8F	[] one max.	X 0.146 ² =	
ACM-8R	[]	X 0.158 ³ =	
AFM-16AT AFM-32A	[] one max.	X 0.056 ⁴ =	
AEM-16A AEM-32A	[]	X 0.018d =	
AFM-16AT AFM-32A	[]	X 0.056 ⁴ =	
AFM-16A	[]	X 0.065 ⁴ =	
UDACT	[] one max.	X 0.075 ⁵ =	
LDM-32	[]	X 0.056 ⁶ =	
LDM-E32	[]	X 0.018 =	
LCD-2X20 Series	[]	X 0.066 ⁷ =	
4-Wire Smoke Detector	[]	X [] =	
Power Supervision Relay	[]	X [] =	
Addressable Devices	maximum draw for all devices	X 0.2 ⁸ =	0.2
Notification Appliances	[]	X [] =	
Auxiliary Devices Powered from TB4	[]	X [] =	
Sum Column for Alarm Load			Amps⁹

1. Current limitations of terminals:
 TB4 Nonregulated terminals = 2.5 amps
 TB4 Nonresettable terminals = 0.3 amps
 TB4 Resettable terminals = 0.3 amps
 TB1 and TB2, any one circuit = 2.5 amps
 Total current draw from all terminals cannot exceed 3.6 amps with standard transformer installed;
 6.0 amps with both standard transformer and optional XRM-24 (XRM-24E for 220/240 VAC applications) transformer installed. Note that total current from TB4 Nonresettable and Resettable terminals must not exceed 0.600 amps.
2. All RTM-8F Relays activated.
3. All eight ACM-8R Relays activated on a single module.
4. All annunciator LEDs on.
5. UDACT actively making phone call to Central Station. If the normally open contact is used, current consumption increases to 100 mA.
6. LDM-32 with LEDs on
7. During AC loss, LCD-2X20 backlight is extinguished to conserve power, reducing the alarm current draw from the batteries to 0.030 amps
8. Monitor Module current-limited at 90 mA in alarm.
9. This column must not exceed total system current draw of 6.6 amp.

Table 15 Filtered Load in Alarm

Calculating the Battery Capacity

Use this table to determine the battery capacity needed for the system:

Standby Load Current (amps) []	X	Required Standby Time in Hours (24 or 60) []	=	_____
Alarm Load Current (amps) []	X	Required Alarm Time in Hours (5 min. = 0.084) []	=	_____
Add Standby and Alarm Load for Required Ampere Hour Battery			=	_____
Multiply above total by the Derating Factor				X 1.2
Total Ampere Hours (AH) Required			=	_____

Table 16 Battery Calculations

The following notes apply to Table 16:

- Up to 12 AH batteries can be located in the AFP-100 backbox.
- 12 AH to 18 AH batteries require the Notifier BB-17 battery box.
- The AFP-100 main circuit board allows disabling of AFP-100 battery charger if using the CHG-120 Battery Charger for 25 AH to 100 AH batteries (requires separate housing).

Appendix B: Electrical Specifications

Electrical Specifications

AC Power

AFP-100: 120 VAC, 60 Hz, 2.3 amps
AFP-100E: 240 VAC, 50 Hz, 1.2 amps
Wire size: minimum #14 AWG (2.00 mm²) with 600 VAC insulation

Battery

The control panel uses only sealed lead-acid batteries for standby power:

Maximum Charging Circuit:	Normal Flat Charge — 27.6V @ 0.8 amp
Maximum Battery Charger Capacity:	18 Amp Hour

Signaling Line Circuit

The SLC (TB6) is supervised and power-limited. It can leave the protected premises, provided an appropriate surge suppressor is used.

Note: Refer to the *Device Compatibility Document* for a list of UL-listed compatible surge suppressors).

Voltage:	15 VDC nominal, 27.6 VDC maximum
Maximum length:	10,000 ft. (3,000 m) total twisted pair length
Maximum loop current:	250 mA (short circuit) or 100 mA (normal)
Maximum loop resistance:	40 ohms

Notification Appliance Circuits

The control panel provides two NACs (TB1 and TB2) that provide nonregulated, special purpose, power limited circuitry, with the following:

- | | |
|---|---|
| • Nominal operating voltage: 24 VDC | • Maximum voltage drop in wiring: 2.0 VDC |
| • Current-limit: Fuseless, electronic, power-limited circuitry | • Current for all external devices: 3.0 amps expandable to 6.0 amps |
| • End-of-line resistor: 4.7K ohms, ½ watt (PN 71252 UL-listed) for NACs | • Maximum signaling current per circuit: 2.50 amps |

Alarm, Trouble and Supervisory Relays

Specifications for the relays available from TB3 are:

Contact rating:	2.0 amps @ 30 VDC (resistive) 0.5 amps @ 30 VAC (resistive)
Alarm and Trouble relays:	Form-C
Supervisory relay:	Form-A

DC Power for Output Circuits

Three types of DC power circuits (power-limited) are provided (TB4) as listed below.

Four-wire smoke detector 24 VDC (nominal)	Maximum ripple voltage: 10 mV _{RMS} Maximum standby current: 50 mA Up to 300 mA is available for powering four-wire smoke detectors ^{1 2}
Nonresettable, filtered 24 VDC (nominal)	Maximum ripple voltage: 10mV _{RMS} Maximum standby current: 150 mA Total DC current available from this output is up to 300 mA ^{1 2}
Nonregulated special purpose 24 VDC (nominal)	Operating voltage range: 18 VDC to 30 VDC Total DC current available for powering external devices is 2.5 amps ² Note: This power is <u>not</u> to be used for AFM, LDM or LCD-2x20 annunciators

1. Total current for special purpose power, nonresettable power, four-wire smoke power, and the two NACs, must not exceed 6.0 amps. Total external system current in excess of 3.6 amps requires the XRM-24 transformer (XRM-24E for 220/240 VAC applications) and 12 AH or 18 AH batteries, not 7 AH batteries.
2. Total current for resettable four-wire smoke detector power and nonresettable power must not exceed 600 mA.

Wire Requirements

Overview

T-tapping of the SLC wiring is allowed for 2-wire (Style 4) configurations. The total resistance of any branch cannot exceed 40 ohms. The total wire length of all branches cannot exceed 10,000 feet (3,000 meters).

Connecting external system accessories to the AFP-100 main circuits must be carefully considered to ensure proper operation. It is important to use the correct type of wire, wire gauge and wire run length for each AFP-100 circuit. Reference the chart on next page to specify wire requirements and limitations for each AFP-100 circuit.

Note: If the SLC is to be run in conduit with Notification Appliance Circuits, the risk of encountering problems can be greatly reduced by exclusively employing electronic sounders (such as MA/SS-24D) instead of more electronically noisy notification appliances such as electromechanical bells or horns.

The following table contains wire requirements for the AFP-100:

CIRCUIT CONNECTIONS		WIRE REQUIREMENTS		
Circuit Type	Circuit Function	Wire Type and Limitations	Recommended Max. Distance Feet (meters)	Wire Gauge and Compatible Brands
SLC (power-limited)	Connects to Addressable Devices	Twisted, shielded pair, 40 ohms maximum per length of Style 6 and 7 loops. 40 ohms per branch maximum for Style 4 loops ¹	10,000 (3,000) 8,000 (2,400) 4,875 (1,450) 3,225 (980)	12 AWG (3.25 mm ²) 14 AWG (2.00 mm ²) 16 AWG (1.30 mm ²) 18 AWG (0.75 mm ²)
		Untwisted, unshielded pair	1,000 (300)	12-18 AWG (3.25 - 0.75 mm ²)
ACS COMM	Connects to annunciator modules	Twisted, shielded pair with a characteristic impedance of 120 ohms	6,000 (1,800)	18 AWG (0.75 mm ²)
TERM COMM	Connects to remote printer and PC computer	Twisted, shielded pair	50 (15)	18 AWG (0.75 mm ²) minimum
FMM-1 and FMM-101 (power-limited)	Initiating Device Circuit	Maximum loop wire resistance is 40 ohms for the FMM-1 and 20 ohms for the FMM-101	2,500 (760)	12-18 AWG (3.25 - 0.75 mm ²)
FCM-1 (power-limited)	Notification Appliance Circuit	In alarm, no more than a 1.2 volt drop allowed at end of circuit	Distance limitation set by 1.2 volt maximum line drop	12-18 AWG (3.25 - 0.75 mm ²)
24 VDC filtered resettable and nonresettable (power-limited)	Connects to annunciators and other accessories	No more than 1.2 volt drop allowed from supply source to end of any branch	Distance limitation set by 1.2 volt maximum line drop	12-18 AWG (3.25 - 0.75 mm ²)
24 VDC nonregulated (power-limited)	Connects to control modules and accessories	No more than 1.2 volt drop allowed from supply source to end of any branch	Distance limitation set by 1.2 volt maximum line drop	12-18 AWG (3.25 - 0.75 mm ²)
CHG-120	Remote secondary power source	12 AWG (3.25 mm ²) in conduit	20 (6)	12-18 AWG (3.25 - 0.75 mm ²)

1. When using untwisted, unshielded wire, full conduit is recommended for optimum EMI/RFI protection

Table 17 AFP-100 Wire Specifications

Notes

Appendix C: Software Zones

Overview of Software Zones

Setup and configuration of an addressable system differs from a conventional system. In a conventional system, assignment of input devices (smoke detectors, pull stations, heat detectors, etc.) to zones is straightforward. Wiring is direct from clearly marked control panel terminals to any device assigned to a particular zone. Connection of output devices (horns, bells, strobes, etc.) in a conventional system is done by direct wiring of the output device to terminals marked 'bell'.

With addressable systems, the same pair of wires is used to connect to all addressable input and output devices. Communications between the control panel and all addressable devices takes place over one pair of wires originating from the control panel. *Software programming is used to configure the system, versus direct wiring.* Zone assignment is created via software means, hence the term 'software zones'.

Setup of an AFP-100 software zone is straightforward. Any zone may have a minimum of one and a maximum of 198 addressable input devices. Each detector is automatically assigned to a general alarm output (zone Z00). A zone may also have a minimum of one and a maximum of 99 addressable output devices. Control modules can be assigned to a maximum of three software zones. Detectors and monitor modules can be assigned to a maximum of two software zones.

Use the charts on the following pages to help in 'zoning' the system. Note that monitor and control modules make up one group of 99 addresses. It is critical that addresses of detectors are not duplicated and that monitor and control module addresses are not duplicated.

Examples of Software Zones

In the example in Figure 25 on page 81, Software Zones are zoned as follows:

Software Zone 1 has the following addressable devices assigned to it:

- Two photoelectric detectors with addresses “01” and “02”
- One monitor module with address “01”
- Three control modules with addresses “03”, “04” and “05”

Software Zone 2 has the following addressable devices assigned to it:

- Two ionization detectors with addresses “03” and “04”
- One monitor module with address “02”
- Three control modules with addresses “05”, “06” and “07”
- One photoelectric detector with address “05”

Software Zone 3 has the following addressable devices assigned to it:

- Two photoelectric detectors with addresses “05” and “06”
- One ionization detector with address “07”
- Three control modules with addresses “05”, “08” and “09”

The figure also shows some of the key assignment features of the control panel:

- Addresses of detectors and addresses of monitor and control modules are not duplicated.
- The control module at address “05” is assigned to the maximum of three software zones (providing for floor above and floor below).
- The photoelectric detector at address “05” is assigned to the maximum of two software zones (providing a special action like elevator recall).
- Detectors and monitor modules are assigned to one software zone.

Note: Make sure to properly plan the installation before installing any devices.

Correlation of Inputs and Outputs to Zones

The figure below shows examples of software zones for inputs and outputs:

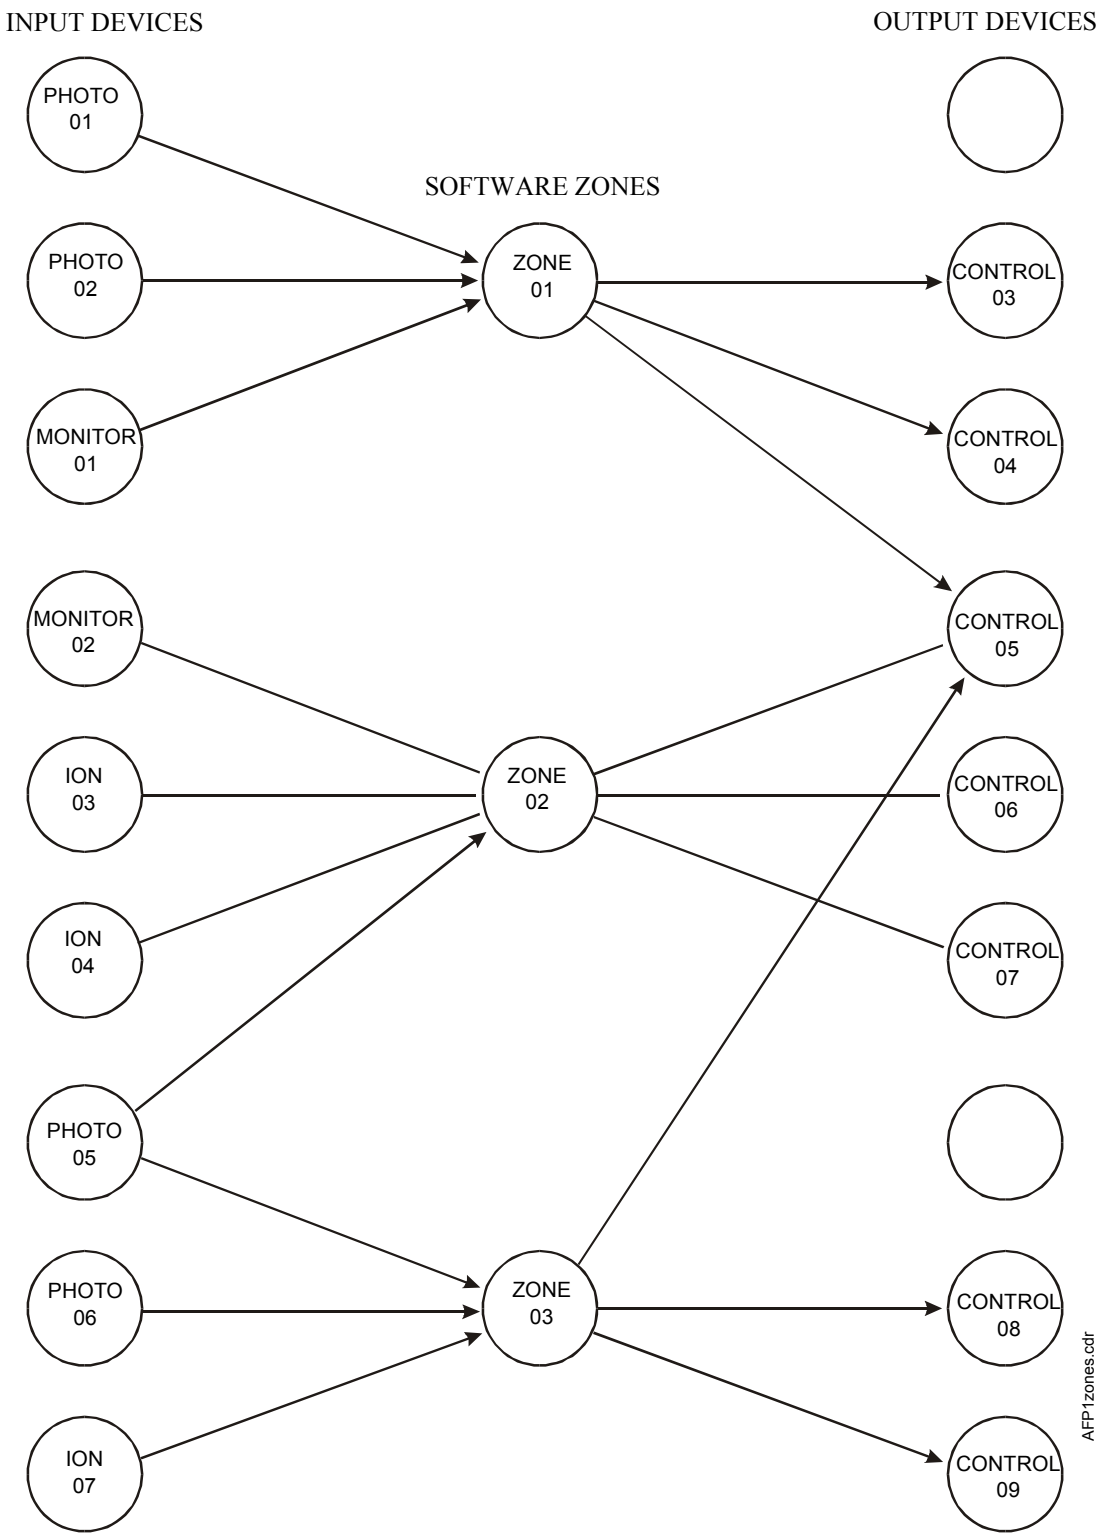


Figure 25 Software Zoning Examples

Sample Programming Sheets

The table below is a sample programming sheet for detectors.

DETECTOR ZONE ASSIGNMENT							
Address	Device Type	Zone Number	ADJ (5 char. max) NOUN (9 char. max)	Address	Device Type	Zone Number	ADJ (5 char. max) NOUN (9 char. max)
01	FSP-751	1	FIRST HALL	51			
02	FSP-751	1	ELEV. LOBBY	52			
03	FSI-751	2	2ND FLOOR	53			
04	FSI-751	2	ROOM 210	54			
05	FSP-751	2,3	3RD FLOOR	55			
06	FSP-751	3	MEZZANINE	56			
07	FSI-751	3	MECH. ROOM	57			
08				58			
09				59			
10				60			
11				61			
12				62			
13				63			
14				64			
15				65			
16				66			
17				67			
18				68			
19				69			
20				70			
21				71			
22				72			
23				73			
24				74			
25				75			
26				76			
27				77			
28				78			
29				79			
30				80			
31				81			
32				82			
33				83			
34				84			
35				85			
36				86			
37				87			
38				88			
39				89			
40				90			
41				91			
42				92			
43				93			
44				94			
45				95			
46				96			
47				97			
48				98			
49				99			
50							

Table 18 Detector Programming Sheet Example

The table below is a sample programming sheet for modules:










MONITOR/CONTROL MODULE ZONE ASSIGNMENT							
Address	Device Type	Zone Number	ADJ (5 char. max) NOUN (9 char. max)	Address	Device Type	Zone Number	ADJ (5 char. max) NOUN (9 char. max)
01	FMM-1	1	WEST HALL	51			
02	FMM-101	2	EAST STAIRWELL	52			
03	FCM-1	1	EAST HALL	53			
04	FCM-1	1	1ST FLOOR	54			
05	FCM-1	1,2,3	2ND FLOOR	55			
06	FCM-1	2	ELEV. LOBBY	56			
07	FCM-1	2	MEZZANINE	57			
08	FCM-1	3	3RD FLOOR	58			
09	FCM-1	3	MECH. ROOM	59			
10				60			
11				61			
12				62			
13				63			
14				64			
15				65			
16				66			
17				67			
18				68			
19				69			
20				70			
21				71			
22				72			
23				73			
24				74			
25				75			
26				76			
27				77			
28				78			
29				79			
30				80			
31				81			
32				82			
33				83			
34				84			
35				85			
36				86			
37				87			
38				88			
39				89			
40				90			
41				91			
42				92			
43				93			
44				94			
45				95			
46				96			
47				97			
48				98			
49				99			
50							

Table 19 Module Programming Sheet Example




The following pages contain: 1) Blank “Zoning Sheet”, 2) Blank “Detector Zone Assignment Sheet” and 3) Blank “Monitor/Control Module Zone Assignment Sheet”.

Zoning Sheet










INPUT DEVICES

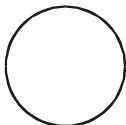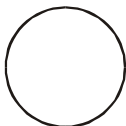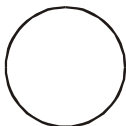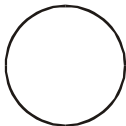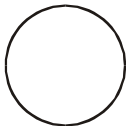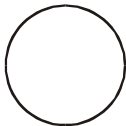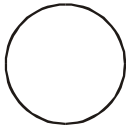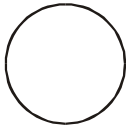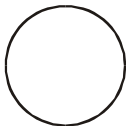

ZONES

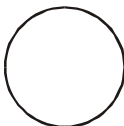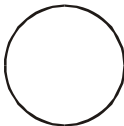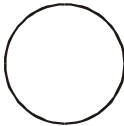

OUTPUT DEVICES

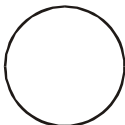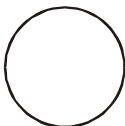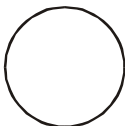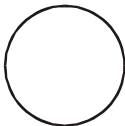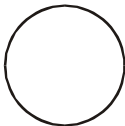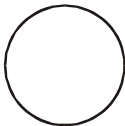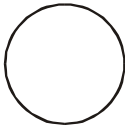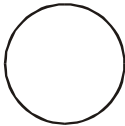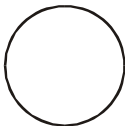

DETECTOR ZONE ASSIGNMENT							
Address	Device Type	Zone Number	ADJ (5 char. max) NOUN (9 char. max)	Address	Device Type	Zone Number	ADJ (5 char. max) NOUN (9 char. max)
01				51			
02				52			
03				53			
04				54			
05				55			
06				56			
07				57			
08				58			
09				59			
10				60			
11				61			
12				62			
13				63			
14				64			
15				65			
16				66			
17				67			
18				68			
19				69			
20				70			
21				71			
22				72			
23				73			
24				74			
25				75			
26				76			
27				77			
28				78			
29				79			
30				80			
31				81			
32				82			
33				83			
34				84			
35				85			
36				86			
37				87			
38				88			
39				89			
40				90			
41				91			
42				92			
43				93			
44				94			
45				95			
46				96			
47				97			
48				98			
49				99			
50							

MONITOR/CONTROL MODULE ZONE ASSIGNMENT							
Address	Device Type	Zone Number	ADJ (5 char. max) NOUN (9 char. max)	Address	Device Type	Zone Number	ADJ (5 char. max) NOUN (9 char. max)
01				51			
02				52			
03				53			
04				54			
05				55			
06				56			
07				57			
08				58			
09				59			
10				60			
11				61			
12				62			
13				63			
14				64			
15				65			
16				66			
17				67			
18				68			
19				69			
20				70			
21				71			
22				72			
23				73			
24				74			
25				75			
26				76			
27				77			
28				78			
29				79			
30				80			
31				81			
32				82			
33				83			
34				84			
35				85			
36				86			
37				87			
38				88			
39				89			
40				90			
41				91			
42				92			
43				93			
44				94			
45				95			
46				96			
47				97			
48				98			
49				99			
50							

Notes

Appendix D: NFPA Standard-Specific Requirements

Overview

The AFP-100 is designed for use in commercial, industrial and institutional applications and meets the requirements for service under the National Fire Protection Association (NFPA) Standards outlined in this Appendix.

Minimum Requirements

The minimum system components required for compliance with the appropriate NFPA standard are listed below:

- **AFP-100 Control Panel** - Contains the main control board, cabinet (backbox and door), main power supply transformer and power supply.
- **Batteries** - Refer to "Appendix A: Power Supply Calculations" on page 72, for Standby Power Requirements.
- **Initiating Devices** - Connected to one of the control panel's Initiating Device Circuits.
- **Notification Appliances** - Connected to the control panel's Notification Appliance Circuit via a control module.

Additional Requirements

The following additional equipment is needed for compliance with the NFPA 72 National Fire Alarm Standards as listed below:

Central and Remote Station Service

Central Station Service (Protected Premises Unit) and Remote Station Service (Protected Premises Unit) requires connection to a compatible listed Central Station DACR or Protected Premises Receiving Unit by one of the following:

- **MS-5012 Control Communicator** - This unit must be installed as outlined in "Central & Remote Station Service (Protected Premises Unit)" on page 89. For additional information see the *MS-5012 Control Communicator Manual*.
- **UDACT** - This unit is to be installed in accordance with the *UDACT Instruction Manual*. See Figure 27 on page 90 for an illustration of an internal installation of the UDACT.

Auxiliary Fire Alarm System

For connection to a compatible listed Local Energy Municipal Box the following unit is required:

- **RTM-8F Relay/Transmitter Module** - This unit must be connected as outlined in "Auxiliary Fire Alarm System" on page 91. For additional information see "Installing a RTM-8F Module" on page 35.

Remote Station Fire Alarm System

RTM-8F Relay/Transmitter Module for connection to the Notifier RS82 Remote Station Receiver. See "Remote Station Protective Signaling System" on page 92, for installation instructions for this unit.

Proprietary Fire Alarm System

AFP-100 Alarm, Trouble and Supervisory contacts connected to Transmitter(s). See "Proprietary Protective Signaling Systems" on page 93, for installation instructions for this unit.

Central & Remote Station Service (Protected Premises Unit)

The following figure illustrates the use of an MS-5012.

General Notes:

1. Program the MS-5012 for slave operation.
2. SW2 Trouble/No AC switch located on the bottom right of the AFP-100 main circuit board, must be positioned in the down position for this application. This prevents the transmission of a trouble on the loss of AC power.

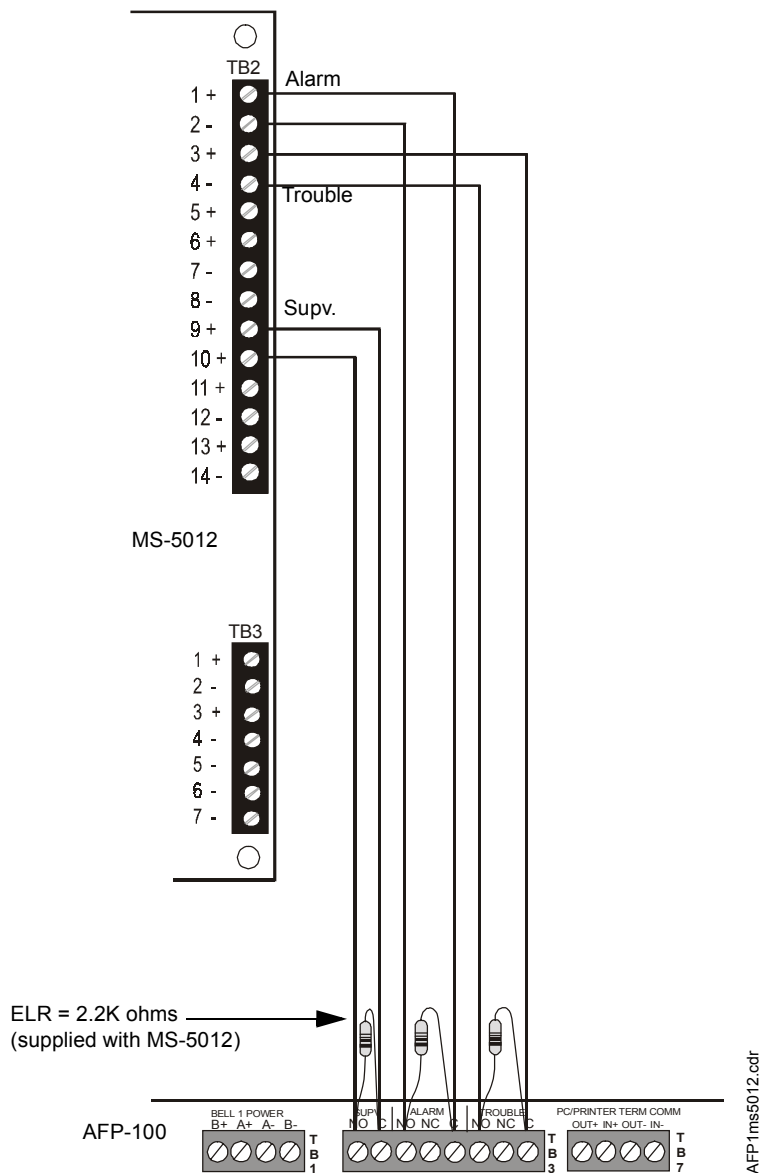


Figure 26 Central Station Service Using MS-5012

The following figure illustrates the internal mounting of a UDACT.

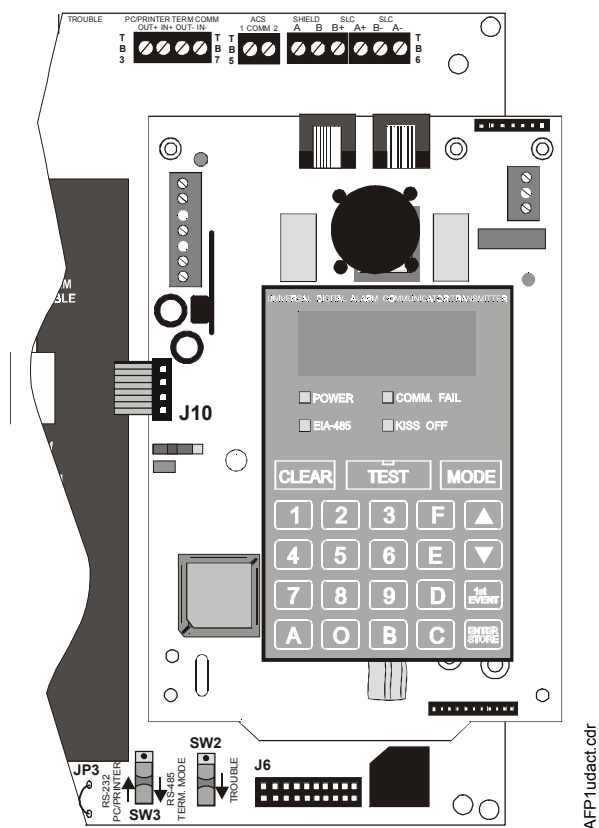


Figure 27 Internal installation of UDACT

Auxiliary Fire Alarm System

All connections are power-limited and supervised. This application is not suitable for separate transmission of sprinkler supervisory or trouble conditions.

General Notes:

1. The maximum loop resistance allowed for wiring from the AFP-100 to Municipal Box is 3 ohms.
2. Cut JP4 on the AFP-100 main circuit board to supervise placement of RTM-8F module and circuit.
3. Jumper JP2 must be in position **LE MUNCPL BOX** for use in this application.
4. For information on UL power-limited wiring requirements see "UL Power-limited Wiring Requirements" on page 34.

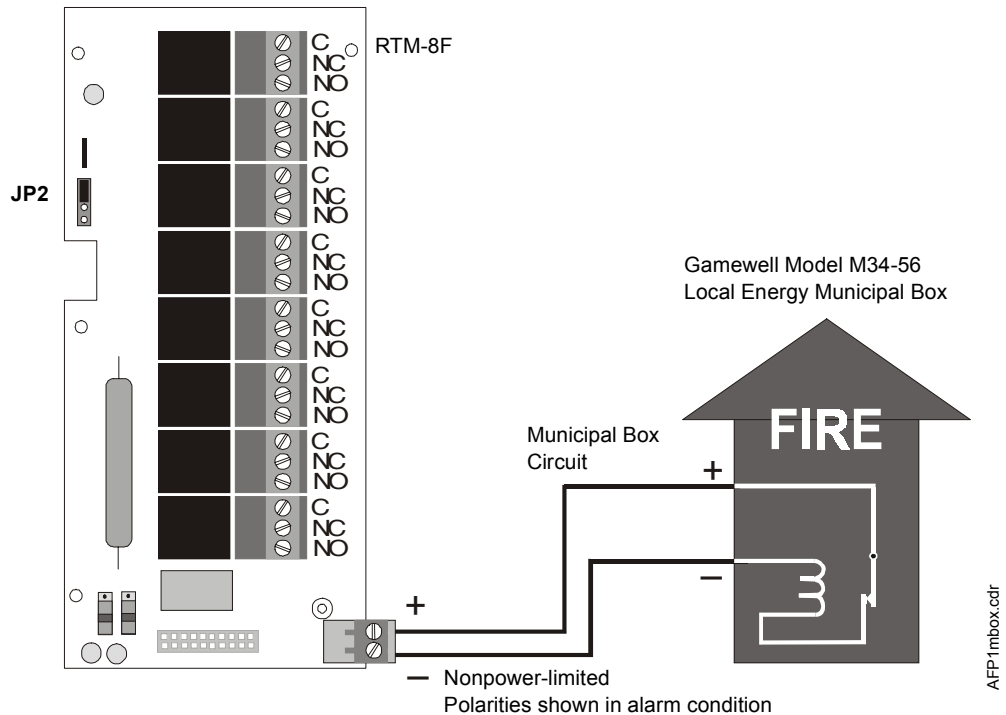


Figure 28 Municipal Box Connected to RTM-8F

Remote Station Protective Signaling System

General Notes:

1. Cut Jumper JP4 on the AFP-100 main circuit board to supervise placement of the RTM-8F module.
2. Jumper JP1 must be cut for polarity reversal Remote Station operation.
3. Jumper JP2 must be in position **ALARM/TROUBLE REVERSE POLARITY** for use in alarm and trouble transmission or **ALARM ONLY** for alarm transmission only.
4. For information on UL Power-limited wiring requirements see "UL Power-limited Wiring Requirements" on page 34 .

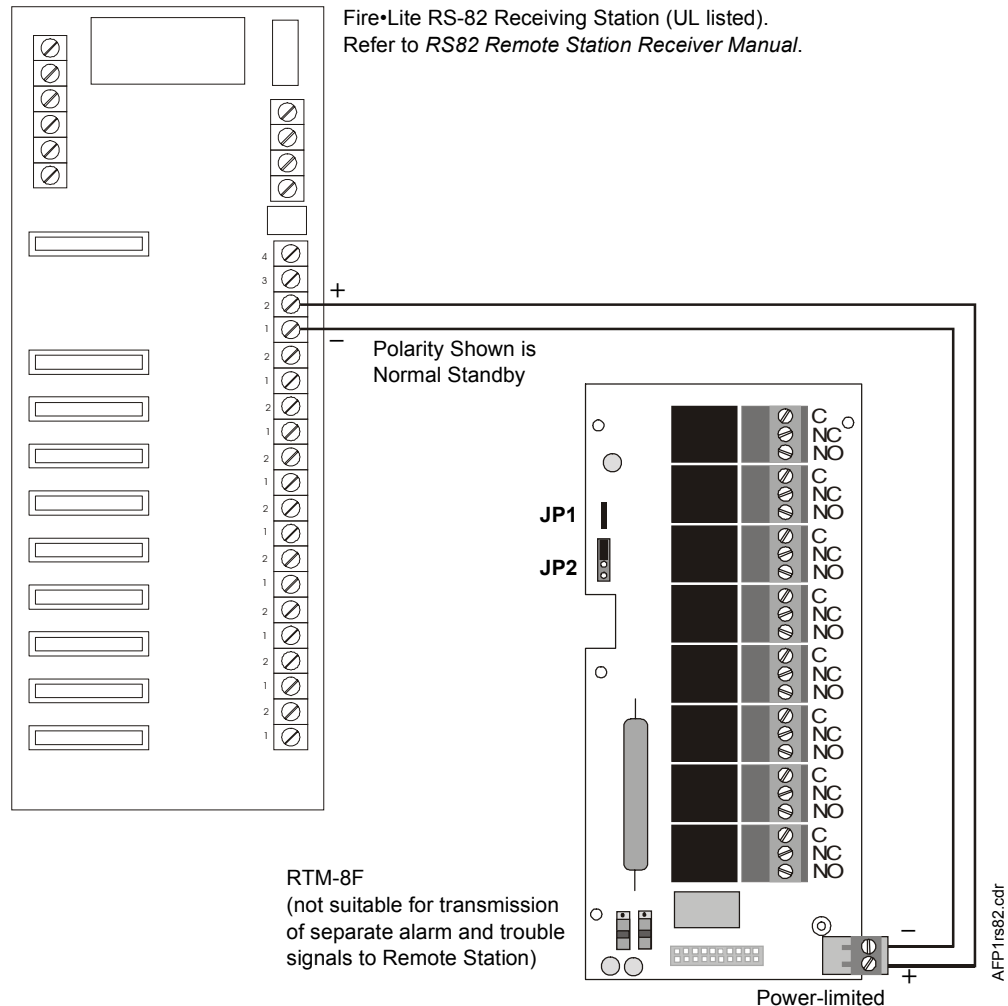


Figure 29 NFPA 72 Remote Station Protective Signaling System

Proprietary Protective Signaling Systems

Notes:

1. Connection between the AFP-100 and the transmitter are supervised by the transmitter.
2. This AFP-100/Transmitter arrangement can be employed for NFPA 72 Proprietary Protective Signaling System.

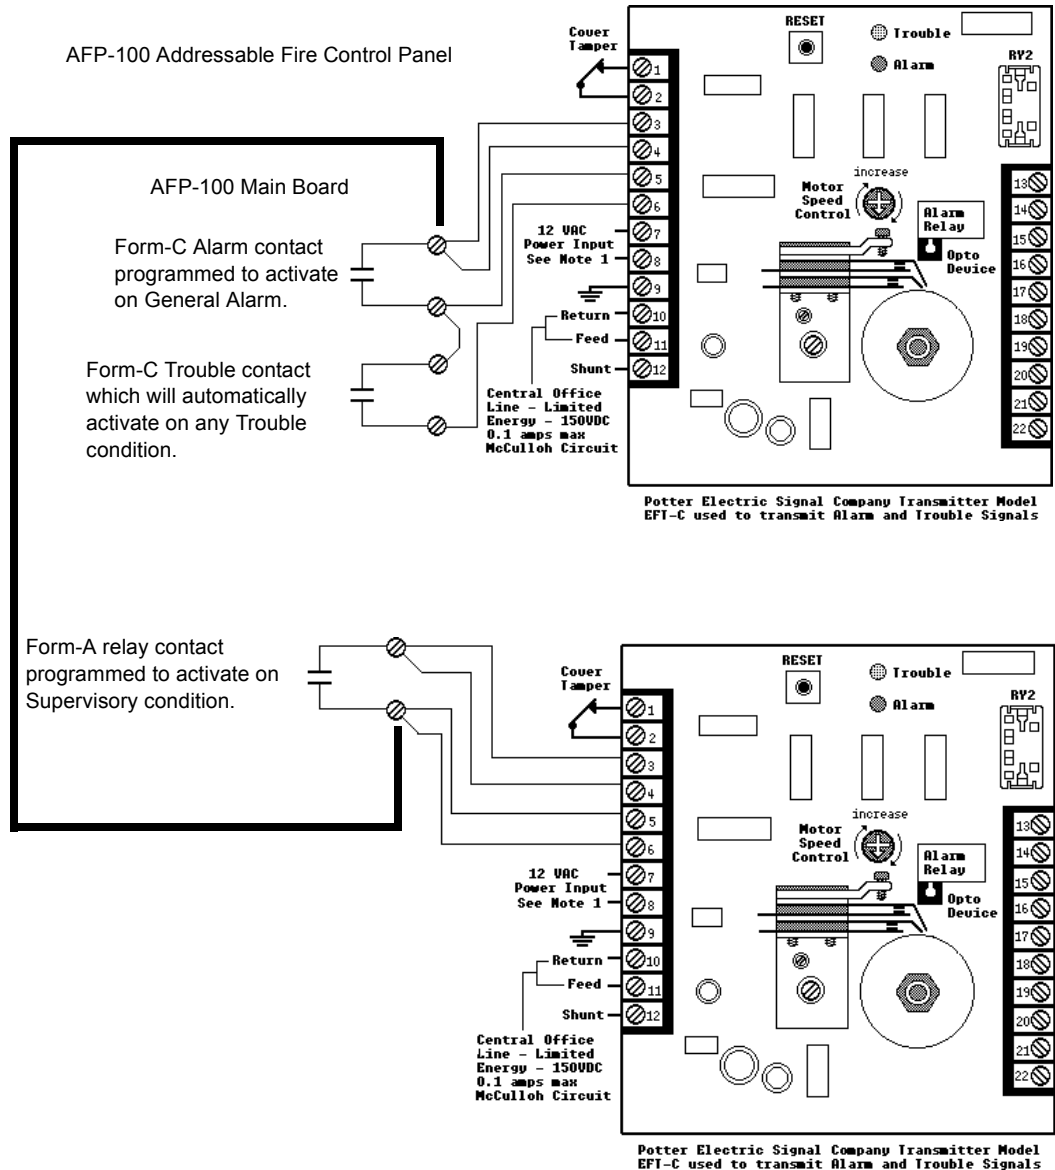


Figure 30 Proprietary Protective Signaling System

Notes

Index

Numerics

110/120 VAC 29
 14 AWG wire 29, 76
 220/240 VAC 29
 input 9
 24 VDC 14

A

ABS-8R enclosure 22
 AC Branch Circuit 72
 AC Connections 29
 AC line voltage 42
 AC Power 76
 AC Power LED 59
 AC power, loss of 12
 AC/BAT 42
 Accessories 18
 accessory power 15
 Acknowledge/Step key 42, 58, 59, 63, 66, 67
 ACM-16AT 21
 ACM-32A 21
 ACM-8R 22
 ACS Mode 32
 additional equipment 88
 additional information 10
 address 18
 addressable 14
 addressable devices 17, 80
 ADJ field 45, 46, 47
 AFM-16AT 22
 AFM-32A 22
 AFP-100, older versions 20
 alarm
 contacts 31
 display 64
 relay 17
 threshold 65
 verification 65
 Alarm Operation 64
 Alarm relay 76
 Alarm Silence key 58, 59, 63, 67
 Alarm Silence LED 58, 59
 Alarm Verification 67
 alphanumeric operation 45
 Annunciator Control Module 21
 Annunciator Control System 21
 Annunciator Fixed Module 22
 Annunciator Relay Control Module 22
 application database 50
 Article 760 29
 assignment features 80
 audible indication 21
 automatic test 65
 Autoprogram Feature 41, 45
 Autoprogramming mode 44
 Auto-silence Timer 67
 available words, list of 45

B

backbox 11, 29
 backlight, LED 12
 backspace key 12
 Bases, detector, listing of 18
 Basic Equipment package 11
 Basic Equipment package, Canada 15
 Battery 15
 box 15
 cable 30
 connecting 30
 interconnect wire 30
 specifications 76
 voltage 42
 Battery Charger 14, 15
 BB-17 Battery box 15
 BB-55 Battery box 15

C

cabinet 15
 cabinet dimensions 27
 cabinet door 11
 cabinet, locating 26
 Canadian installations 15
 capacity 33
 CBE (Control-By-Event) 68
 Central Station DACR 88
 Central Station receivers 20
 Central Station Service 88
 Chamber Reading 71
 Check 53
 CHG-120 Battery Charger 15
 Clear command 44
 Clear function 44
 Clear History 52
 Clock 65
 coded operation 66
 Command
 “Silence Piezo” 58
 Compatibility Directive 89/336/EEC 29
 computer 20
 Control Keys 58
 Control Module 17, 19
 control panel sounder 58
 Control-By-Event Operation 65
 CPU 11
 Current Draw 72
 current status 51
 custom words 45

D

DB25 adapter 39
 DB9F connector 39
 DC Power
 connecting 31
 outputs 32
 special purpose 77
 specifications 77

Index

- default password 43
- default zone selection 47
- Detector Data 71
- detector sensitivity 45
- detector, new 45
- detectors, listing of 17
- device trouble 61, 62, 65
- DIM-485 20
- diode, 1N4004 37
- Disable 51
- Disable/Enable 68
- Display Interface Module 20
- Display Point operations 70
- document sources, list of 10
- downloaded 16
- downloading 50
- Drill key 58, 67
- dry contact relays 14
- dummy load 32, 37

E

- editing process 45
- EIA-232 50
- EIA-232 serial port 39
- EIA-485 20, 21, 22
- electrical box 18
- emergency standby power 15
- English-language text 23
- Enter key 12
- enviroment, hostile 17
- European Communities 29
- expander modules 21
- external loading 73

F

- fault condition 53
- Fault Isolator Module 19
- FCM-1 19
- FCPS-24 15, 32
- FDM-1 18
- Features of FACP 9
- ferrite bead 29
- Field Charger/Power Supply 32
- field descriptors 48
- filtered power 73
- Fire Alarm LED 59
- Fixed modules 22
- Flowchart 55
- FMM-1 18
- FMM-101 18
- Form-A 76
- Form-A contacts 14, 31
- Form-C 76
- Form-C contacts 14, 31
- Form-C control relay module 19
- Form-C relays 20, 22
- Four-wire smoke detector power 77
- FRM-1 19
- Function keys 12
- functions of control panel, normal 60
- FZM-1 18, 52

G

- general alarm zone 65
- graphic annunciator 23
- ground connections 29
- ground fault 39
- grounding stud 29

H

- History
 - buffer 52
 - clear 52
 - events 52, 70
 - file 52, 70
- hostile enviroments 17

I

- initiating device 14, 18
- inputs 81
- installation checklist 25
- intelligent detectors 17
- Internal Resistance 36
- ionization 17
- Isolator Module 19
- IXO-X 19

J

- J11(PIM-24 or DIM-485 connection) 20
- J16 (UDACT connection) 20
- J17 (Transformer connection) 28
- J19 (Transformer connection) 28
- J3 (Battery connection) 30
- J6 (RTM-8F connection) 20
- JP1(RTM-8F reverse polarity) 92
- JP2 (RTM-8F Multi-function) 91, 92
- JP4 (Supervise RTM-8F) 35, 91, 92

K

- key-lock reset 19
- knockouts 11

L

- Lamp Driver Annunciator Module 23
- LCD display 12, 44
- LCD-2X20 Fire Annunciator 20, 23, 58
- LDM-32 23
- LED backlight 12
- LED Indicators 59
- list of available words 45
- Load option 50
- Local Energy Municipal Box 37
- local sounder 12

M

- main circuit board 11
- main components, installation of 28
- maintenance status 65
- Manual Programming 41
- mappable relay control module 22
- membrane panel 12
- Message
 - "Clear Trouble" 63

- "Not Installed" 70
- "Acknowledge" 58, 63
- "Maintenance Alert" 65
- "Manual Evacuate" 58
- "System Corrupted" 44
- "Systems All Normal" 63
- Monitor Module 17, 18
- mounting hole location 26
- MS-5012 Control Communicator 89
- Municipal Box 20, 91
- Municipal Box output 37

N

- NAC 14, 15
 - current draw 32
 - expanding with FCPS-24 32
 - Operation 64
 - specifications 76
- National Electrical Code 29
- NBG-12LX 19
- new detector 45
- new monitor module 47
- NFPA Requirements 88
- nine pin connector 39
- nonpower-limited circuits 31
- Nonregulated Special Purpose Power 77
- Nonresettable Power 14, 77
- Nonresettable Power, connecting 31
- nonvolatile memory 43
- normal mode 60
- Notification Appliance Circuit 14, 15, 32
- notification device 18
- NOUN field 45, 46
- NOUN library 46

O

- Off-Line Programming Feature 41
- Older circuit board 39
- older version AFP-100 20
- Open Condition 53
- option module connectors 20
- Optional Internal Modules 20
- Options 10
- Output Circuits 14, 77
- output device 14
- outputs 81

P

- panel sounder 42, 61, 63, 66
- Password 43, 50, 51
- Password, default 43
- photoelectric 17
- Piezo 58
- PIM-24 20, 39
- Point Edit 48, 51
- point programming 50
- polarity 30, 32, 36, 37
- Polarity Reversal Output 36
- polls 44
- power output connections 31
- Power Supply, remote 15

- power up 42
- power, emergency standby 15
- power-limited requirements
 - relays 31
 - wiring 34
- primary power 29
- Print Program 70
- printer 20
- Printer/PC Interface Module 20
- printer's options 39
- programmable features 14
- programmed points 51
- Programming 41, 42
- Programming Mode 43
- Programming Options, Flowchart 55
- Programming Sheet
 - detectors 82
 - modules 83
- programming utility 16
- Protected Premises Receiving Unit 88
- Protected Premises Unit 88
- public switched telephone network 20
- Pull Station 17, 19
- pulse rate outputs 66

R

- rate of rise, thermal 17
- Read Status 42
 - display 70
 - functions 69
- Recall/Increment function 46
- Relay Module 19
- Relay/Transmitter Module 20
- Relays 14
 - specifications 76
- Remote Fire Annunciator 20, 23
- Remote Power Supply 15
- Remote Station Service 88
- Remote Station transmitters 20
- reset, key-lock 19
- Resettable Power 14
- resettable power 58
- Resettable Power, connecting 31
- resistance 77
- Retard period 67
- rotary decimal switches 17
- rotary switches 18
- RS-82 Receiving Station 36, 92
- RTM-8F 20
 - components 36
 - module 35
 - wiring requirements 34
- RTM-8F Relay/Transmitter Module 91, 92

S

- second zone 47
- sensitivity settings 45
- serial connection 21, 22
- Service/program keys 12
- short circuits 19
- Shorted/Alarm Condition 52
- Signaling Line Circuit 17, 33, 76

Index

- Silence Inhibit Timer 67
- silenceable circuits 58
- slave operation 89
- SLC 14, 33, 77
 - device capacity 33
 - installation 33
 - specifications 76
 - surge protection 33
- smoke detector power, four-wire 77
- smoke detector, trouble 61
- software alarm zone 65
- software zone assignments 53
- Software Zones, examples 80
- sounder 58
- Special Function 47, 48
- Special Purpose Power 77
 - connecting 31
- Specific Device Troubles (Table) 61, 62
- sprinkler supervisory 91
- standby battery 73
- Standby Current 73
- standby power 15
- status 17, 51
- status changes 50
- stored words, library 45
- Style 4 33
- Style 6 33
- Style 7 33
- Style Y 14, 32
- Style Z 14, 32
- Supervisory
 - contact 31
 - event 64
 - LED 59
 - relay 14, 76
- Supervisory Operation 64
- Surge protection 32, 33
- surge suppressors 76
- SW1 (Write Protect switch) 41, 50, 53
- SW2 (Trouble/No AC switch) 89
- system
 - function options 49
 - memory map 22
 - programming 50
- System Alarm 14
- System Reset key 44, 58, 59, 65, 68, 69
- System Status LED Indicators 59
- System Trouble 14
- System Trouble LED 44, 59, 61

T

- TB3 (Relay connections) 31
- TB4 (DC power connection) 31
- TB5 (ACS Mode connection) 21, 22, 32
- TB7 (Terminal Mode connection) 32
- telephone network, public switched 20
- Terminal Mode 32
- thermal rate of rise 17
- thermistor 17
- Timer, Auto-silence 67
- Timer, Silence Inhibit 67
- transformer 11, 15

- transformer, installation of 28
- Trouble
 - control modules 62
 - monitor modules 62
- trouble condition 52, 53, 61, 62, 63, 64, 91
- trouble contacts 31
- Trouble Operation 61
- Trouble relay 76
- Trouble Reminder 67
- Troubles, Specific Device (Table) 61, 62
- T-tapping 77
- Type Code 17, 45, 47, 65
- Type Code Label 47, 48

U

- UDACT 20
- UDACT, internal mounting 90
- UL wire requirements 34
- Universal Digital Alarm Communicator/Transmitter 20
- unpacking the system 25
- upload/download 20

V

- Veri•Fire CD Medium System Programming Utility 16, 39, 50
- visual indication 21

W

- Walktest 41, 52
- watchdog circuit 59
- Waterflow 68
- wire requirements 78
- Wire size (AC power) 76
- Wiring Fault 68
- words, custom 45
- words, stored 45
- Write Protect 50

X

- XRM-24 11, 15, 28

Z

- zone selection 45
- zone selection, default 47
- zones 65

Limited Warranty

NOTIFIER® warrants its products to be free from defects in materials and workmanship for eighteen (18) months from the date of manufacture, under normal use and service. Products are date stamped at time of manufacture. The sole and exclusive obligation of **NOTIFIER®** is to repair or replace, at its option, free of charge for parts and labor, any part which is defective in materials or workmanship under normal use and service. For products not under **NOTIFIER®** manufacturing date-stamp control, the warranty is eighteen (18) months from date of original purchase by **NOTIFIER®**'s distributor unless the installation instructions or catalog sets forth a shorter period, in which case the shorter period shall apply. This warranty is void if the product is altered, repaired or serviced by anyone other than **NOTIFIER®** or its authorized distributors or if there is a failure to maintain the products and systems in which they operate in a proper and workable manner. In case of defect, secure a Return Material Authorization form from our customer service department. Return product, transportation prepaid, to **NOTIFIER®**, 12 Clintonville Road, Northford, Connecticut 06472-1653.

This writing constitutes the only warranty made by **NOTIFIER®** with respect to its products. **NOTIFIER®** does not represent that its products will prevent any loss by fire or otherwise, or that its products will in all cases provide the protection for which they are installed or intended. Buyer acknowledges that **NOTIFIER®** is not an insurer and assumes no risk for loss or damages or the cost of any inconvenience, transportation, damage, misuse, abuse, accident or similar incident.

NOTIFIER® GIVES NO WARRANTY, EXPRESSED OR IMPLIED, OF MERCHANTABILITY, FITNESS FOR ANY PARTICULAR PURPOSE, OR OTHERWISE WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF. UNDER NO CIRCUMSTANCES SHALL **NOTIFIER®** BE LIABLE FOR ANY LOSS OF OR DAMAGE TO PROPERTY, DIRECT, INCIDENTAL OR CONSEQUENTIAL, ARISING OUT OF THE USE OF, OR INABILITY TO USE **NOTIFIER®** PRODUCTS. FURTHERMORE, **NOTIFIER®** SHALL NOT BE LIABLE FOR ANY PERSONAL INJURY OR DEATH WHICH MAY ARISE IN THE COURSE OF, OR AS A RESULT OF, PERSONAL, COMMERCIAL OR INDUSTRIAL USE OF ITS PRODUCTS.

This warranty replaces all previous warranties and is the only warranty made by **NOTIFIER®**. No increase or alteration, written or verbal, of the obligation of this warranty is authorized.

"**NOTIFIER**" is a registered trademark.

Warn-NL-10-2001.fm



World Headquarters
12 Clintonville Road
Northford, CT 06472-1653 USA
203-484-7161
fax 203-484-7118

www.notifier.com

NOTIFIER is an operation of **Honeywell**

ISO 9001
CERTIFIED
ENGINEERING & MANUFACTURING