

[Skip to content](#)

Manuals+

User Manuals Simplified.



CROSLEY Retrospect Turntable Instruction Manual

Home » [Crosley](#) » CROSLEY Retrospect Turntable Instruction Manual 

CROSLEY Retrospect Turntable



Contents [[hide](#)]

- [1 Safety Instructions](#)
- [2 Items in this package](#)
- [3 Specifications](#)
- [4 Product Description](#)
- [5 Initial Setup](#)
 - [5.1 Essential Setup](#)
- [6 Stereo System Connection](#)
- [7 Aux Input Connection](#)
- [8 Turntable Operation](#)
- [9 Needle Replacement](#)
- [10 Bluetooth Operation](#)
- [11 Turntable Maintenance](#)
- [12 Troubleshooting](#)
- [13 FCC Statements](#)
- [14 File Downloads](#)
- [15 References](#)
- [16 Related Manuals](#)

Safety Instructions

Read and understand this entire manual before using this product. Keep these instructions for future reference.

1. Do not use this product near water
2. This product should be operated only by the type of power source indicated on the marking label or in this instruction manual.
3. Do not defeat the safety purpose of the polarized plug. A polarized plug has two blades with one blade wider than the other. This plug will fit into the power outlet only one way. If you are unable to insert the plug fully into the outlet try reversing the plug. If the plug should still fail to fit, contact your electrician.
4. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the product.
5. Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
6. Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
7. Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
8. Changes or modifications to this unit not expressly approved by the party responsible for compliance could void

the user's authority to operate the equipment.

9. Do not use attachments not recommended by the product manufacturer as they may cause hazards.
10. A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.
11. Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating. Do not block or cover these openings.
12. Unplug the product during lightning storm or when unused for long periods of time.

Items in this package

Before throwing away any packaging materials, please check thoroughly and make sure you find the following items that come along with this package:

- Turntable
- 45 RPM adapter
- Power adaptor
- 3.5mm auxiliary to RCA cable

Please contact Crosley customer service if there is any accessory missing from the package. **Retain the original packaging materials for exchange or return purposes.**

Specifications

Power

AC power adaptor, DC output 12V 0.5A

Power consumption

12W

Speaker

8Ω, 5W

Turntable speed

33 1/3, 45, 78 RPM


Replacement needle

Crosley NP5


Note:

- Design and specifications are subject to change without notice.
- **To help save power consumption, some models will comply with ERP energy saving standard. When there is no audio input for 20 minutes, their powers will automatically cut-off. To turn power back on and resume playing, you will need to turn off the power and turn it on again.**

Product Description

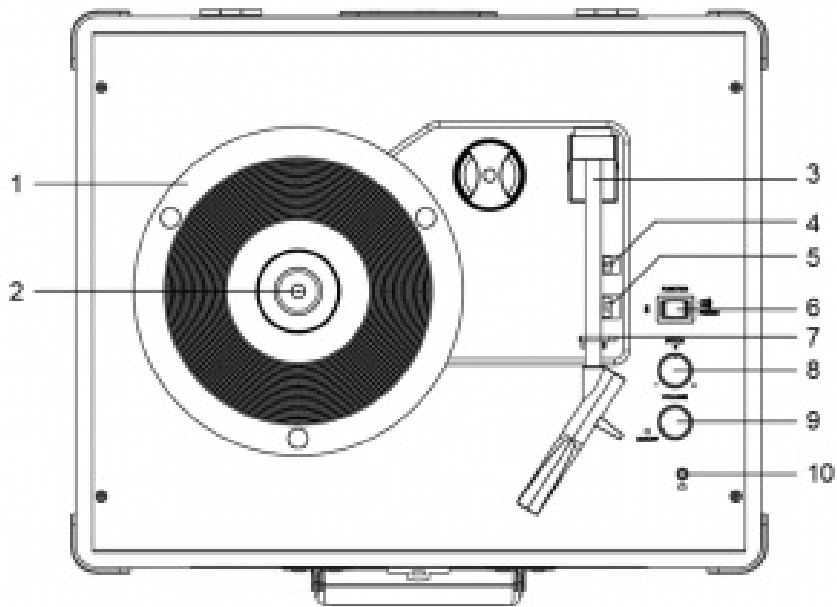

- 1. Turntable Platter
- 2. Turntable Spindle
- 3. Tonearm
- 4. Auto-stop Switch
- 5. Speed Switch
- 6. Function Switch
- 7. Hold Down Clip
- 8. Pitch Control
- 9. On/Off-Volume Knob
- 10. Headphone Jack

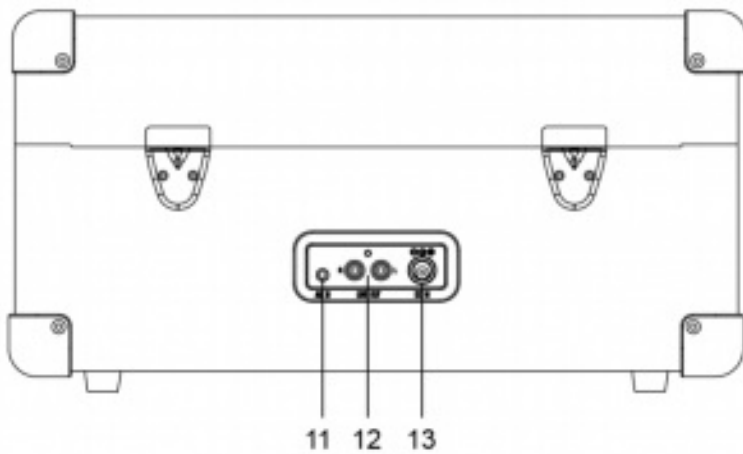

- 11. Aux In Jack
- 12. RCA Jacks
- 13. Power Jack



- 14. 45 RPM Adapter

Initial Setup

Essential Setup

1. Place the unit on a flat and level surface. The selected location should be stable and free from vibration.
2. Remove the tie-wrap that is holding the tonearm.
3. Connect AC adaptor to the Power Jack of the unit.

Note: Do not plug the AC power adaptor to power outlet before all the assembly is completed. Before turning the power on, make sure again all the connection settings are correct. Always turn off the power when connecting or disconnecting.

Stereo System Connection

RCA Jacks

- The RCA Jacks output analog line-level signals and could be connected directly with a pair of active/powered speakers or the appropriate input of your stereo system
- The Red plug connects with the Right channel and the White plug connects with the Left channel.

Note: The RCA Jacks are not designed to be connected directly to passive/unpowered speakers. If connected to passive speakers, the volume level will be very low.

Aux Input Connection

You can connect an audio device to this unit and play your music through its speakers. To do this, connect the 3.5mm auxiliary cable between your audio device and the Aux In Jack of this unit and start playing the music.

Note: The aux in connection will automatically override the turntable function. To resume using the turntable function, unplug the auxiliary cable from the aux in jack.

Turntable Operation

1. Rotate the On/Off Volume Knob clockwise to turn on the power.
2. Set the Function Switch to Bluetooth Output/PHONO position and the turntable will automatically start searching for external Bluetooth speaker.
 - a) If you would like to play your record through the turntable's internal speakers, continue with step 3 below.
Note: Please ensure there is no Bluetooth speaker within 30 feet working under pairing mode to prevent accidental Bluetooth connection establishment.
 - b) If you would like play the record over your Bluetooth speaker, turn on the Bluetooth speaker and set it into Bluetooth pairing mode. Once the Bluetooth speaker is successfully paired, you will hear a short confirmation sound from the turntable.
Note: If no Bluetooth speaker is paired with the turntable within 2 minutes, the turntable will de-active the Bluetooth searching function and will only play the record through its internal speakers. When you decide to connect the turntable to Bluetooth speaker later on after the 2-minute period, you will need to turn OFF the turntable and start over from Step 1 above.
3. Set the Speed Switch accordingly.
4. Place the record on the turntable. Use the 45 RPM Adapter if necessary.
5. Remove the stylus protector from the stylus assembly.
Note: To avoid stylus damage, make certain the included stylus guard is in place whenever the turntable is being moved or cleaned.
6. Release the tonearm Hold Down Clip.
Note: when the turntable is not in use, remember to lock back hold down clip.
7. Lift up the Tonearm and move it over the record where play is desired to begin. Gently put down the Tonearm and begin the playback.
8. When the record is finished playing, gently lift up the Tonearm and move it back to the Tonearm Rest. To suspend the playback, repeat the same steps.
9. Lock the Tonearm Clip to secure the tonearm.

Platter Auto-stop

If the Auto-stop Switch is set to ON position, the platter will stop spinning automatically when the record plays to the end. In some rare occasion, if the turntable stops playing before the end of the record, set the switch to OFF position the turntable should overcome this issue


Pitch Control

The turntable speed can be increased or decreased by approximately 10% by rotating the Pitch Control Knob. To increase the speed, turn the Pitch Control Knob clockwise. To decrease the speed, turn the knob counter-clockwise.


Needle Replacement

Removing Needle


1. Gently pull down the front edge of the needle.

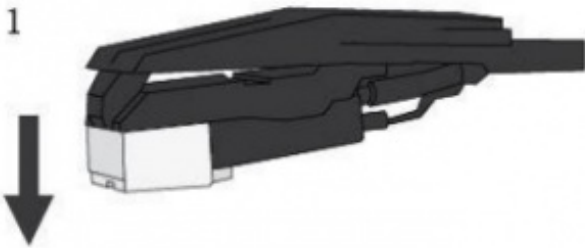

2. Pull needle forward.

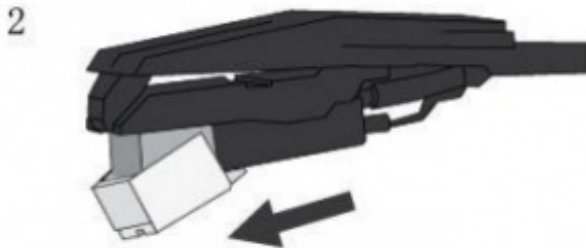


3. Pull out and remove.

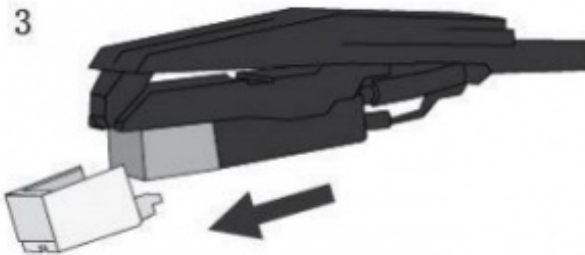


Installing Needle

1. Position the needle with its tip facing down.

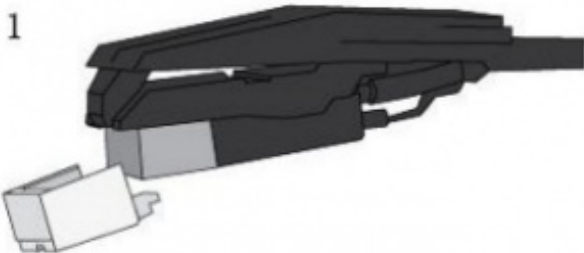


2. Line up the back of the needle with the cartridge.

2

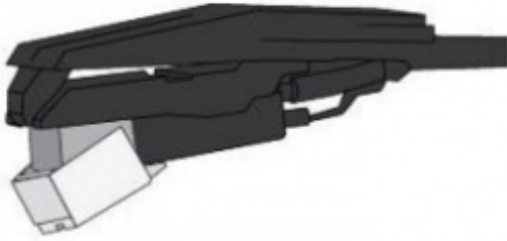

3. Insert the needle with its front end at a downward angle and gently lift the front of the needle upward until it snaps into place.

3

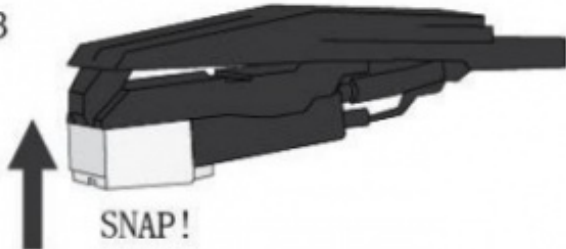

Bluetooth Operation

1. Turn the Function Switch to Bluetooth mode , you will hear an activation sound from the unit.
2. Turn on the Bluetooth feature of your audio device, search for “Crosley CR6254A” and pair.
3. Once your device is successfully paired with the unit, you will hear a short confirmation sound from the unit.
4. Play and stream music from your device to the unit.

Note: *Bluetooth version – 4.2*

Turntable Maintenance

1. Do not touch the stylus tip with your fingers. Avoid bumping the stylus on the turntable mat or a record’s edge.
2. Clean the stylus frequently with a soft brush with a back-to-front motion only.
3. Clean the records to get rid of dust or grease with a record cleaning brush and record cleaning solution.
4. Clean the turntable lid and turntable cabinet with a slightly dampened microfiber cloth.

Note: *Do not use cleanser that contain alcohol, benzene or any other harsh chemicals, which might damage the paint and finish of the turntable.*

Troubleshooting

There is no power

- Power adaptor is not connected correctly.
- No power at the power outlet.
- To help save power consumption, some models will comply with ERP energy saving standard. When there is no audio input for 20 minutes, their powers will automatically cut-off. To turn power back on and resume playing, turn off the power and turn it on again.

Power is on, but the platter does not turn

- Turntable’s drive belt has slipped off.
- An aux in cable is plugged into the aux in jack, unplug it.

Turntable is spinning, but there is no sound, or sound not loud enough

- Stylus protector is still on.
- Tone arm is lift up by the lever.

- Headphone is plugged in.

FCC Statements

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. this device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.



Crosley offers a product line of different cleaning accessories. Please ask your retailer or check out our website for more cleaning product information.

www.crosleyradio.com

File Downloads



Instruction Manual [Download](#) [optimized]
Retrospect Turntable, CR6254A [Download](#)

References

- [C Amplify Your Style | Crosley Radio](#)

Related Manuals

1. [CROSLEY Cruiser Deluxe Turntable Instruction Manual](#) CR8005D Cruiser Deluxe Turntable Instruction Manual Questions, problems, missing parts?...
2. [Crosley C6 Turntable C6B User Manual](#) Crosley C6 Turntable C6B User Manual Questions, problems, missing parts?...
3. [Crosley CR704C Instruction Manual](#) Crosley CR704C Instruction Manual – Download [optimized]Crosley CR704C Instruction Manual...
4. [CROSLEY Pantry CF3114 User Manual](#) Pantry CF3114 PART LIST HARDWARE LIST ADDITIONAL TOOLS (Not Provided)...
5. [crosley Fleetwood CR3501A Stereo User Manual](#) Crosley Fleetwood CR3501A Stereo Safety Instructions Read and understand this...
6. [Cruiser Deluxe Turntable CR8005D Instruction Manual](#) Cruiser Deluxe Turntable CR8005D Instruction Manual Questions, problems, missing parts?...