

Telrad AOL-Y729 User Manual

Index

1.	About this Manual.....	4
2.	Product Overview.....	4
3.	Login.....	4
4.	Home page.....	5
4.1	LTE	5
4.1.1	Overview	5
4.1.2	ND&S	6
4.1.3	PLMN Selection	6
4.1.4	Bearer Settings.....	7
4.1.5	PIN Management	8
4.2	Network	8
4.2.1	Overview	8
4.2.2	Internet.....	8
4.2.3	LAN.....	9
4.2.4	VPN.....	10
4.2.5	Qos.....	10
4.3	Applications.....	10
4.3.1	Port forwarding.....	10
4.3.2	DMZ	11
4.3.3	DDNS	11
4.4	Management	11
4.4.1	Device Management	11
4.4.2	TR069.....	12
4.4.3	SNMP	13
4.5	System	13
4.5.1	Password.....	13
4.5.2	Config Management	13
4.5.3	Firmware Update	14
4.6	Maintenance.....	14

4.6.1	Ping.....	14
4.6.2	Iperf	15
4.6.3	Traceroute.....	15
5.	Preface	16
5.1.1	Preface of product highlights and specifications	16
5.1.2	LTE Specification.....	16
5.1.3	Special Features :.....	17
6.	Mechanical Chapter	17
6.1.1	Installation	17
6.1.2	To mount the CPE to wall	18
6.1.3	Install the USIM card:	19
6.1.4	Product Shipping Package	19
7.	Revision History	22

1. About this Manual

The content of this User Manual has been made as accurate as possible. However, due to continual product improvements, specifications and other information are subject to change without notice.

2. Product Overview

This CPE supports LTE Band 42/43/48 (Subject to the configuration of LTE module) and it supports popular operating systems like Windows, Linux and Mac.

Once you have identified the place for CPE, insert USIM card supplied by your service provider at the appropriate place, plug in the adapter in the AC socket and DC in the power port of CPE. Power On device, after few minutes the CPE should attach itself to the LTE network. It is as simple as that. It is advised to read this manual at leisure to make best use of the CPE.

3. Login

Open your Web browser and enter 192.168.0.1, username: admin, Password: admin.

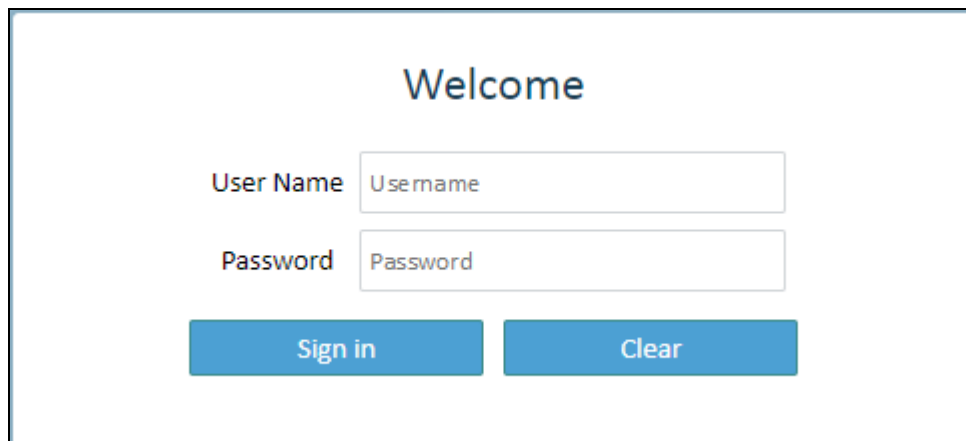


Figure 3-1-1 shows a login interface. At the top, the word "Welcome" is displayed in a large, blue font. Below it, there are two input fields: "User Name" with the placeholder text "Use mame" and "Password" with the placeholder text "Password". At the bottom, there are two blue buttons: "Sign in" and "Clear".

Figure 3-1-1 Login

4. Home page

4.1 LTE

There are 6 function on this page, they are "Overview", "ND & S", "PLMN Selection", "eNB Settings", "Bearer Settings", "PIN Management"


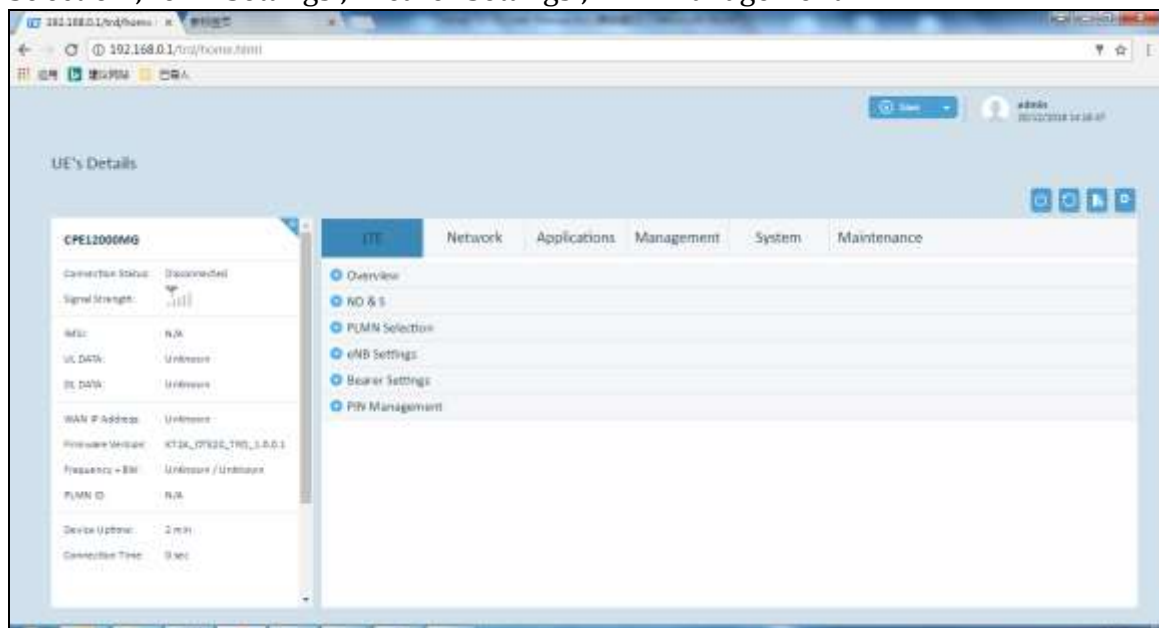


Figure 4-1-1 LTE

4.1.1 Overview

There are more LTE information on this page, they are "Serial Number", "IMEI", "IMSI", "Supported Band", "Firmware version" and so on.

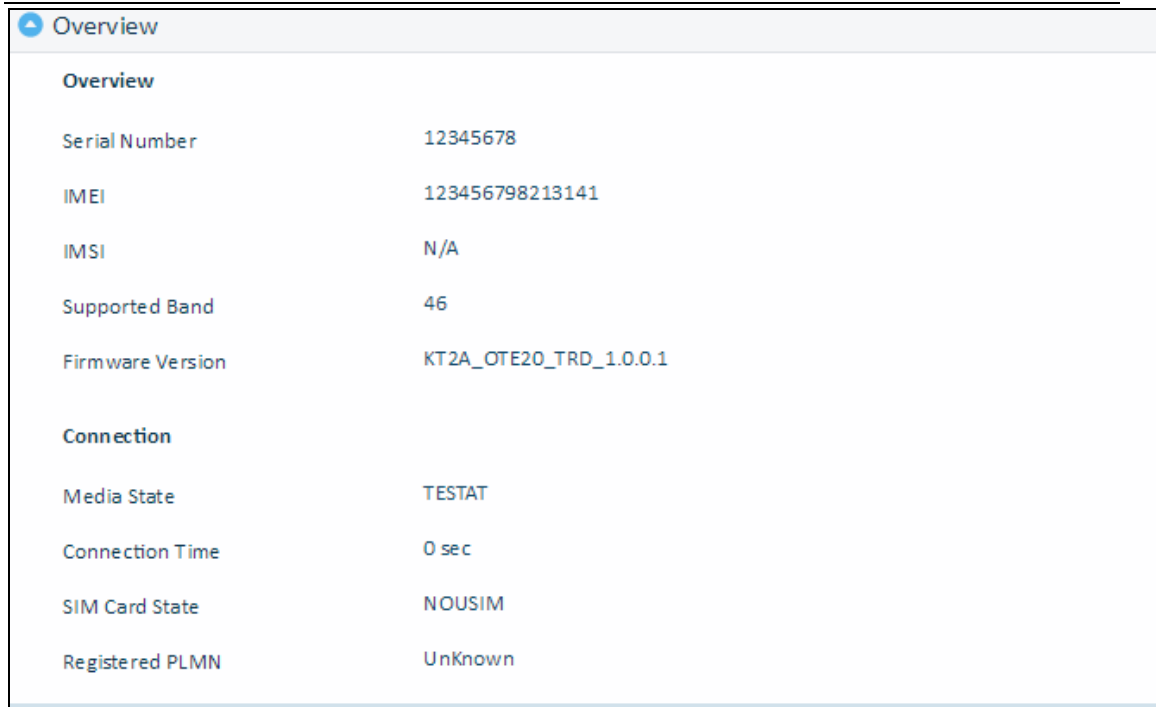


Overview	
Serial Number	12345678
IMEI	123456798213141
IMSI	N/A
Supported Band	46
Firmware Version	KT2A_OTE20_TRD_1.0.0.1
Connection	
Media State	TESTAT
Connection Time	0 sec
SIM Card State	NOUSIM
Registered PLMN	UnKnown

Figure 4-1-1-1 Overview

4.1.2 ND&S

On this page include “Uplink QAM64”, “Scan Mode” and “Band”

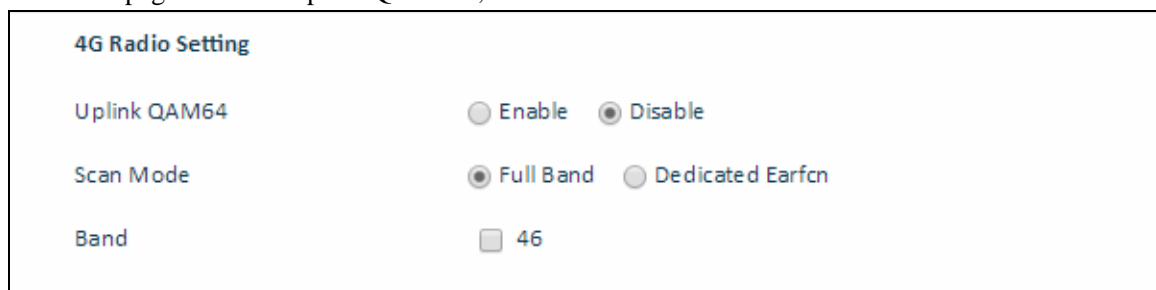

4G Radio Setting	
Uplink QAM64	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
Scan Mode	<input checked="" type="radio"/> Full Band <input type="radio"/> Dedicated Earfcn
Band	<input type="text" value="46"/>

Figure 4-1-2-1 ND&S

- **Uplink QAM64:** Enable/Disable
- **Scan Mode:** Full band/Dedicated Earfcn
- **Band:** Supported Band selection (Default band is 46)

4.1.3 PLMN Selection

On this page, include “Network Mode” and “Allow Roaming”



PLMN Selection		
Network Mode	Nomadic	
Allow Roaming	<input checked="" type="checkbox"/> Enable	
Equivalent PLMN-ID List		
Index	MCC	MNC

Figure 4-1-3-1 PLMN Selection

➤ **Network Mode:** there are two modes Nomadic, Mobile

➤ **Allow Roaming:**

If “allow roaming” is checked, then CPE first selects eNBs from the Home/ Equivalent PLMN-IDs, Otherwise If not available, it tries connection to “any” PLMN-ID.

If “allow roaming” is not checked, the CPE is allowed to connect to eNBs from Home/ Equivalent PLMN-IDs only.

➤ **Equivalent PLMN-ID List:** Home PLMN-ID can be created automatically from SIM’s IMSI (read-only). Customer can also add PLMN-ID.

➤ **Nomadic:**

eNB Settings

Preferred eNB Settings

Preferred eNB List ☐ Enable

Lock ND&S to the preferred list ☐ Enable

Auto-Rescan Duration Min(15~65535)

Preferred eNB List

Index	Priority	MCC(DEC)	MNC(DEC)	ECI(HEX)
-------	----------	----------	----------	----------


Preferred eNB List: Enable/ disable “preferred” selection checkbox

Lock ND&S to the preferred list: limit eNB selection to the “preferred” list only. Condition – this checkbox should be possible only if “enable preferred list” is checked.

Auto-Rescan Duration: Forces CPE to perform periodic re-scan/ re-connection (Nomadic mode only) – in order to connect to the best/ preferred eNB according to the “best eNB list”

Preferred eNB list: configure “preferred” list

4.1.4 Bearer Settings

The default APN is “internet”, if you want to configure the LTE APN, you can add the new APN and change default APN, then you can configure the APN settings by clicking on the “” button.

Bearer Default

PDN label	APN Name	PDN Type	AUTH Type	User Name	Password
internet		IPv4	RAP		

Bearer list

PDN label	APN Name	PDN Type	AUTH Type	User Name	Password
-----------	----------	----------	-----------	-----------	----------

Figure 4-1-4-1 Bearer Settings

4.1.5 PIN Management

From this page, you can see the USIM card status and PIN status.

The default PIN status is disabled; you can input the correct PIN to enable the PIN function. The maximum PIN attempts are 3, otherwise you must enter PUK to reset the PIN code. The USIM will be invalid after the unsuccessful attempts for 10 times.



The screenshot shows a 'PIN Information' section with two labels: 'USIM Card Status' and 'Remaining PIN Attempts'. The value for 'USIM Card Status' is 'NO UICC'. There is a 'Refresh' button on the right side of the section.

Figure 4-1-5-1 PIN Management

4.2 Network

4.2.1 Overview

On this page, you can see LAN setting information. They are “LAN IP address”, “LAN Subnet Mask”, “Local DNS”, “LAN Port Status”, “Speed / Duplex”, “Sent(Errors/Dropped)”, “Received(Error/Dropped)”, “RX CRC Errors” and so on.



The screenshot shows a 'LAN Status' section with a table of network parameters:

LAN Status	
LAN MAC Address	00:0A:3B:12:34:61
LAN IP Address	192.168.0.1
LAN Subnet Mask	255.255.255.0
Local DNS	
LAN Port Status	Up
Speed / Duplex	1000Mb/s / Full
Sent(Errors/Dropped)	0 packets / 0 packets
Received(Errors/Dropped)	0 packets / 0 packets
RX CRC Errors	0
Collisions	0
Sent	1898873 bytes / 4372 packets

Figure 4-2-1-1 Overview

4.2.2 Internet

On this page, include “Connection Mode”, “NAT”, “MGMT and Data Interface”, and “MTU”.



The screenshot shows an 'Internet Connection' section with the following settings:

- Connection Mode: ☒ Router / NAT, ☐ L2 Bridge(GRE), ☐ L3 Bridge
- NAT: ☒ Enable
- MGMT and Data interface: ☒ Combine, ☐ Separate
- Optional:
 - MTU: (Default: 1600)

Figure 4-2-2-1 Internet

- **Connection Mode:** Route/NAT, L2 Bridge(GRE), L3 Bridge
- **NAT:** Default Enable
- **MGMT and Data Interface:** Combine/ Separate

4.2.3 LAN

On this page, include “LAN Reset”, “Device IP” and “DHCP”

The screenshot shows a web interface for LAN configuration. It includes sections for 'LAN Reset' with a 'Reset' button, 'Duplex' and 'Max Bit Rate' both set to 'Auto', 'Device IP' with 'Local IP Address' set to '192.168.0.1' and 'Subnet Mask' set to '255.255.255.0', 'Manual DNS' with an 'Enable' checkbox, and 'DHCP' with a 'DHCP Server' checkbox checked and set to 'Enable'.

Figure 4-2-3-1 LAN

- **LAN Reset:** Restore of LAN default setting.
- **Duplex:** Auto/Full/Half
- **Max Bit Rate:** 10Mbps/100Mbps/1000Mbps
- **Local IP Address:** Enter the IP address of your router (factory default: 192.168.0.1).
- **Subnet Mask:** An address code that determines the size of the network. Normally use 255.255.255.0 as the subnet mask.
- **DHCP:** Default Enable
- **DHCP Address Allocation:** Specify an IP address for the DHCP server to start and end with when assigning IP address.
- **DHCP lease time:** The Lease Time is the amount of time a network user will be allowed connection to the router with their current dynamic IP address. Enter the amount of time in minutes and the user will be "leased" this dynamic IP address. After the time is up, the user will be assigned a new dynamic IP address automatically.
- **Static IP - IP/MAC binding function,** the system will assign a fixed IP address to the MAC according to the rules.

4.2.4 VPN

A virtual private network (VPN) is a point-to-point connection across a private or public network (Internet).

VPN Passthrough allows the VPN traffic to pass through the router. Thereby we can establish VPN connections to remote network.




The screenshot shows a configuration window titled "VPN Protocol". Inside, there is a "Protocol Type" dropdown menu currently set to "GRE". Below this, there is a "GRE" section with a "GRE Destination IP Address" text input field containing the value "172.16.0.1".

Figure 4-2-4-1 VPN

4.2.5 Qos

On this page, include “DSCP Configuration” and “TOS Configuration”, you can change Qos setting by manual.

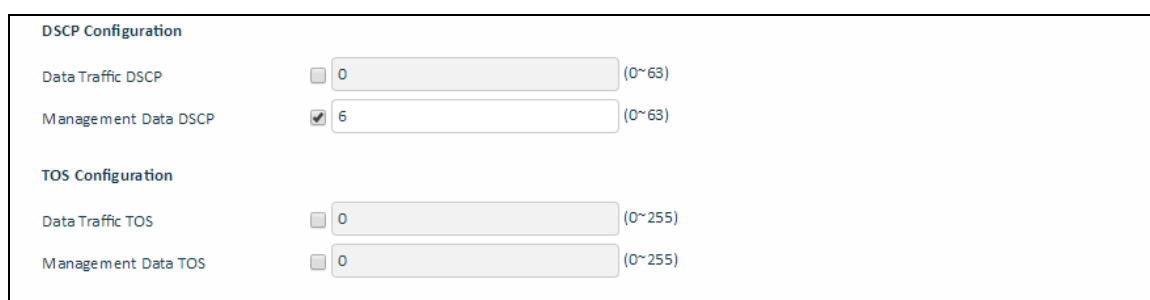


The screenshot shows a configuration window with two sections: "DSCP Configuration" and "TOS Configuration". In the "DSCP Configuration" section, there are two rows: "Data Traffic DSCP" with an unchecked checkbox and a value of 0, and "Management Data DSCP" with a checked checkbox and a value of 6. In the "TOS Configuration" section, there are two rows: "Data Traffic TOS" with an unchecked checkbox and a value of 0, and "Management Data TOS" with an unchecked checkbox and a value of 0. Each row also includes a range indicator in parentheses (e.g., (0~63) for DSCP and (0~255) for TOS).

Figure 4-2-5-1 Qos

- **Data Traffic DSCP:** Default value is 0. The range is 0~63.
- **Management Data DSCP:** Default value is 6. The range is 0~63.
- **Data Traffic TOS:** Default value is 0. The range is 0~63.
- **Management Data TOS:** Default value is 0. The range is 0~63.

4.3 Applications

4.3.1 Port forwarding

Clicking on the “” button, you can configure IP address, port range to achieve the port forwarding purpose.

Index	Rule name	IP address	Protocol	External port	Internal port

Figure 4-3-1-1 Port Forwarding

4.3.2 DMZ

From this page, you can configure a De-militarized Zone (DMZ) to separate internal network and Internet.

DMZ Setting

DMZ Enable ☐ Enable

DMZ Host IP address: 192.168.0.

Exclude Web Server Port ☐ Enable

Exclude Remote Port 443 ☐ Enable

Exclude Ping ☐ Enable

Figure 4-3-2-1 DMZ

- **DMZ Enable:** Default value is Disable
- **DMZ Host IP address:** The IP address of your PC.
- **Exclude Web Server Port:** Default value is Disable
- **Exclude Remote Port 443:** Default value is Disable
- **Exclude Ping:** Default value is Disable

4.3.3 DDNS

The dynamic DNS function is disabled in default, you can choose the dynamic DNS provider to configure the DDNS settings.

DDNS Setting

DDNS Enable ☐ Enable

Figure 4-3-3-1 DDNS

4.4 Management

4.4.1 Device Management

On this page, include “ Allow ping from WAN ”, “Telnet Service”, “ SSH Service”, “ Access Control ”

Device Management

Device Management Control

Allow ping from WAN ☐ Enable

Telnet Service ☐ Enable

SSH Service ☐ Enable

Access Control

Figure 4-4-1-1 Device Management

4.4.2 TR069

On this page, include “TR069 Enable” and “TR069 Configuration”

TR069 Enable

TR069 ☒ Enable

TR069 Configuration

ACS Interface

ACS Port

ACS URL

ACS Username

ACS Password

Re-enter Password

Periodic Inform Enable ☒ Enable

Periodic Inform Interval seconds(90-604800)

Figure 4-4-2-1 TR069

- **TR069:** Default value is Enable
- **ACS Interface:** Default value is “lte0pdn0”
- **ACS Port:** Default value is “7547”
- **ACS URL:** Default “ <http://192.168.100.67:8080/dps/TR069>”
- **ACS Username:** Default value is “acs”
- **ACS Password:** Default value is “acs”
- **Re-enter Password:** Default value is “acs”
- **Periodic Inform Enable:** Default value is Enable
- **Periodic Inform Interval:** Default value is “100”, Range is “ 90-604800”
- **Periodic Inform Time:** Default value is “2001-01-01”~“00-00-00”
- **CPE Username:** Default value is “cwmp”
- **CPE Password:** Default value is “cwmp”

- **Re-enter Password:** Default value is “cwwmp”

4.4.3 SNMP

On this page, include “Snmpd”, “ Snmpd Read Only Community”, “ Snmpd Read Write Community”, you can change setting by manual.

The image shows a web-based configuration interface for SNMP. It has a title "SNMP" in blue. Below the title, there are three rows of configuration options. The first row is "Snmpd" with a checkbox labeled "Enable" that is checked. The second row is "Snmpd Read Only Community" with a text input field containing the value "public". The third row is "Snmpd Read Write Community" with a text input field containing the value "private".

SNMP	
Snmpd	<input checked="" type="checkbox"/> Enable
Snmpd Read Only Community	<input type="text" value="public"/>
Snmpd Read Write Community	<input type="text" value="private"/>


Figure 4-4-3-1 SNMP

- **Snmpd:** Default value is Enable
- **Snmpd Read Only Community:** Default value is “public”
- **Snmpd Read Write Community:** Default value is “public”

4.5 System

4.5.1 Password

The default password is admin, you can enter 1~32 characters for 2 times as your new password. Then you would logout automatically and you should login to the system by the new password.

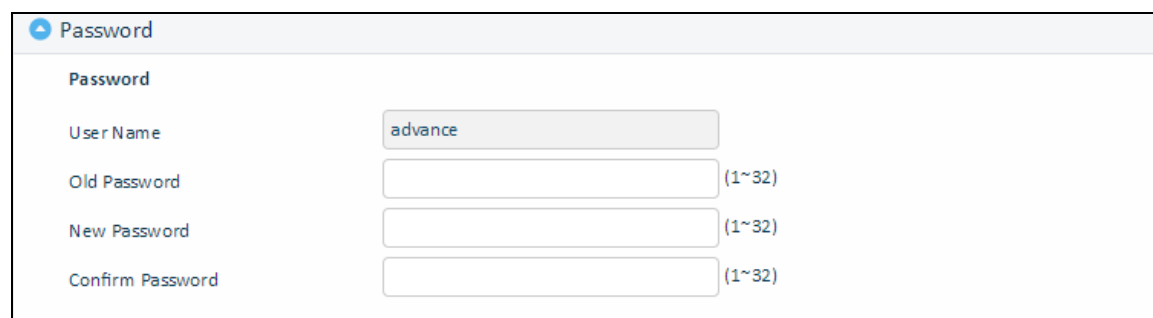The image shows a web-based configuration interface for password settings. It has a title "Password" in blue with a back arrow icon. Below the title, there are four rows of configuration options. The first row is "User Name" with a text input field containing the value "advance". The second row is "Old Password" with a text input field and a label "(1~32)". The third row is "New Password" with a text input field and a label "(1~32)". The fourth row is "Confirm Password" with a text input field and a label "(1~32)".

Password	
User Name	<input type="text" value="advance"/>
Old Password	<input type="text"/> (1~32)
New Password	<input type="text"/> (1~32)
Confirm Password	<input type="text"/> (1~32)

Figure 4-5-1-1 Password

4.5.2 Config Management

Clicking the “Export” button, the current settings will be saved as a data file to the local PC. You can restore the device configuration from the files that you saved.

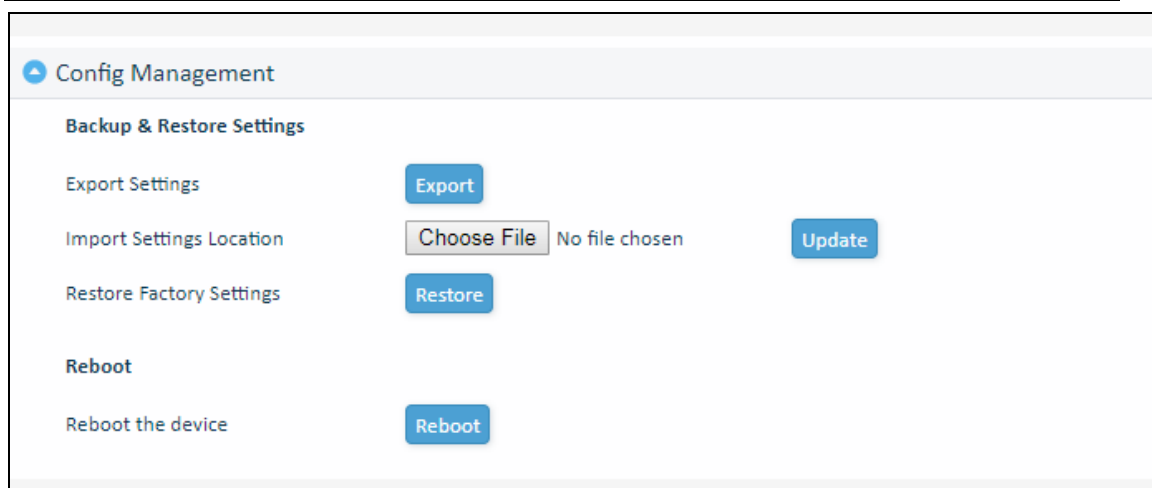


Figure 4-5-2-1 Config Management

4.5.3 Firmware Update

On this page, you can upgrade the current Router version from the local PC. 30s is needed to complete the whole upgrade process, and then the device will reboot automatically.

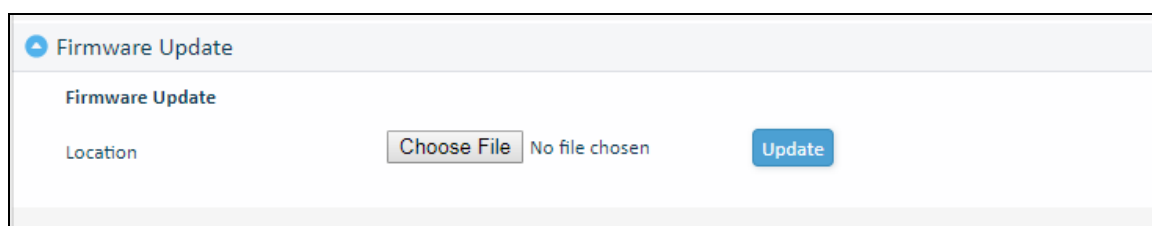


Figure 4-5-3-1 Firmware Update

4.6 Maintenance

4.6.1 Ping

On this page, you can ping IP address by manual.

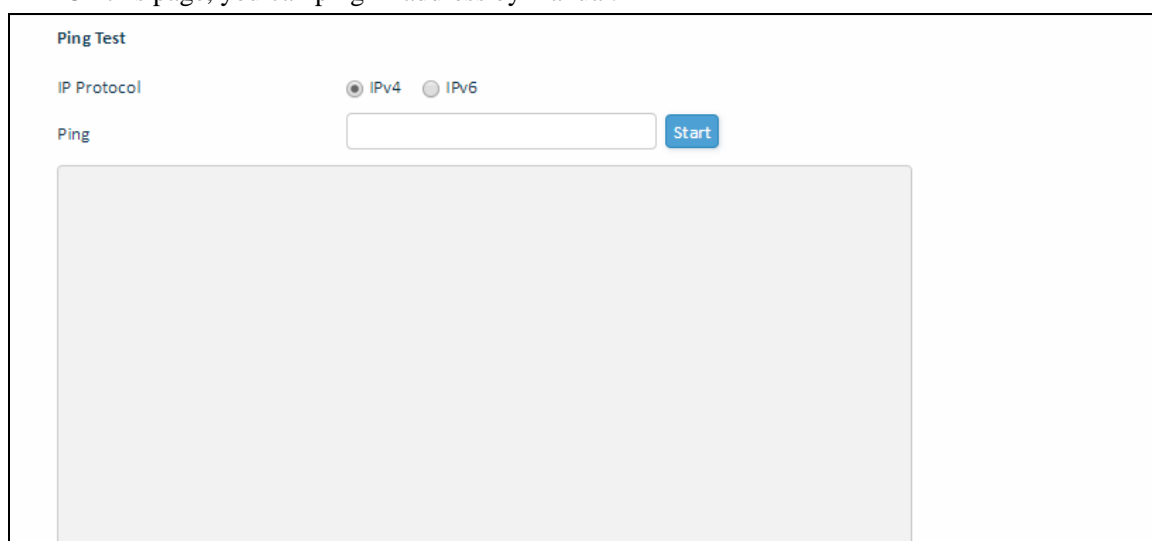


Figure 4-6-1-1 ping

4.6.2 Iperf

On this page, you can use the page of “iperf”, test throughput function.

Status	<input type="button" value="Enable"/> <input type="button" value="Disable"/>	
Server Address	8.8.8.8	
Server Port	5001	(1024~65535)
Management Port	5001	(1024~65535)
Measurement Time	60	Seconds
Protocol Type	TCP	
Window size	256	KB
TCP Client Number	1	(1~10)
Result		
Uplink Speed	- Mbps	
Downlink Speed	- Mbps	

Figure 4-6-2-1 Iperf

- **Status:** Default value is “Enable”
- **Server Address:** Default value is “8.8.8.8”
- **Server Port:** Default value is “5001”, the range is 1024~65535
- **Management Port:** Default value is “5001”, the range is 1024~65535
- **Measurement Time:** Default value is “60”
- **Protocol Type:** TCP/UDP
- **Windows size:** Default value is “256”
- **TCP Client Number:** Default value is “1”, the range is 1~10

4.6.3 Traceroute

On this page, you can Trace IP address by manual.

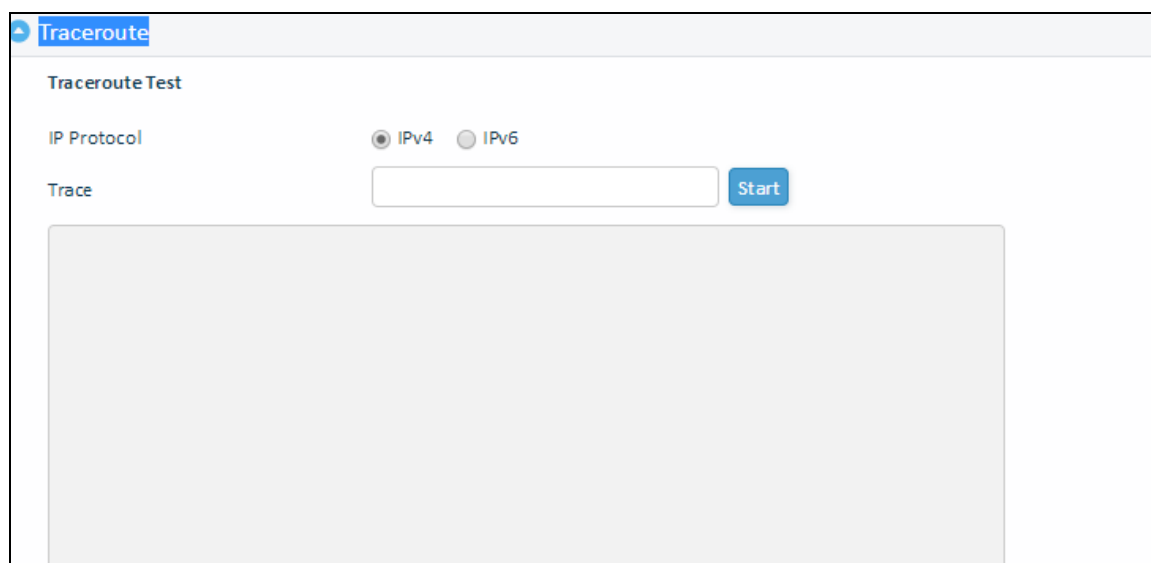


Figure 4-6-3-1 Traceroute

5. Preface

5.1.1 Preface of product highlights and specifications

Item	Description
Size	266mm*266mm*50mm(TBD)
Color	Off-White
CPU	GDM7243A
Memory	1G bites NAND+2G DDR
RJ45 connector	1 (10/100/1000Mbps Base-T)
USIM Interface	1*2FF standard
Debug interface	1
Reset Switch	Support

5.1.2 LTE Specification

Key features	Specification
3GPP Version	Release 12
UE category	Category 12
Bandwidth	5,10,15,20MHz
LTE bands	42/43/48(LTE only)
MIMO	4x2;4*4
UL/DL onfiguration	Configuration 0,1,2,3,4,5,6

Telrad AOL-Y729 User Manual

Special sub frame configuration	0,1,2,3,4,5,6,7,8,9,10
Transfer mode	TM1, TM2, TM3, TM4, TM7,TM8,Tm9
Data Speed	Down load420Mbps, Up load 80Mbps
Carrier Aggregation	Intra-Band; B42/43/48 Inter-Band:B42+B43;
Antenna Gain	13~14dBi

5.1.3 Special Features :

RJ45	1 Ethernet Ports with 12V passive PoE PIN enabled
Reset port	Hardware Reset
USIM interface	One 2FF USIM Interface
Ethernet Protocol	IEEE 802.3/802.3U (100Base-T)
IP Routing	TCP,UDP,ICMP,ARP
General	DHCP,NAT/NATP
Power supply	Power over Ethernet, 12V,1A
Max power consumption	8W
Maxim length of Ethernet cable	100 meters
Water & Dust Protection	IP67
Operating Temperature	-30 to +60 °C
Storage Temperature	-35 to +80 °C
Humidity	5 to 95%

6. Mechanical Chapter

6.1.1 Installation

Installation as below:

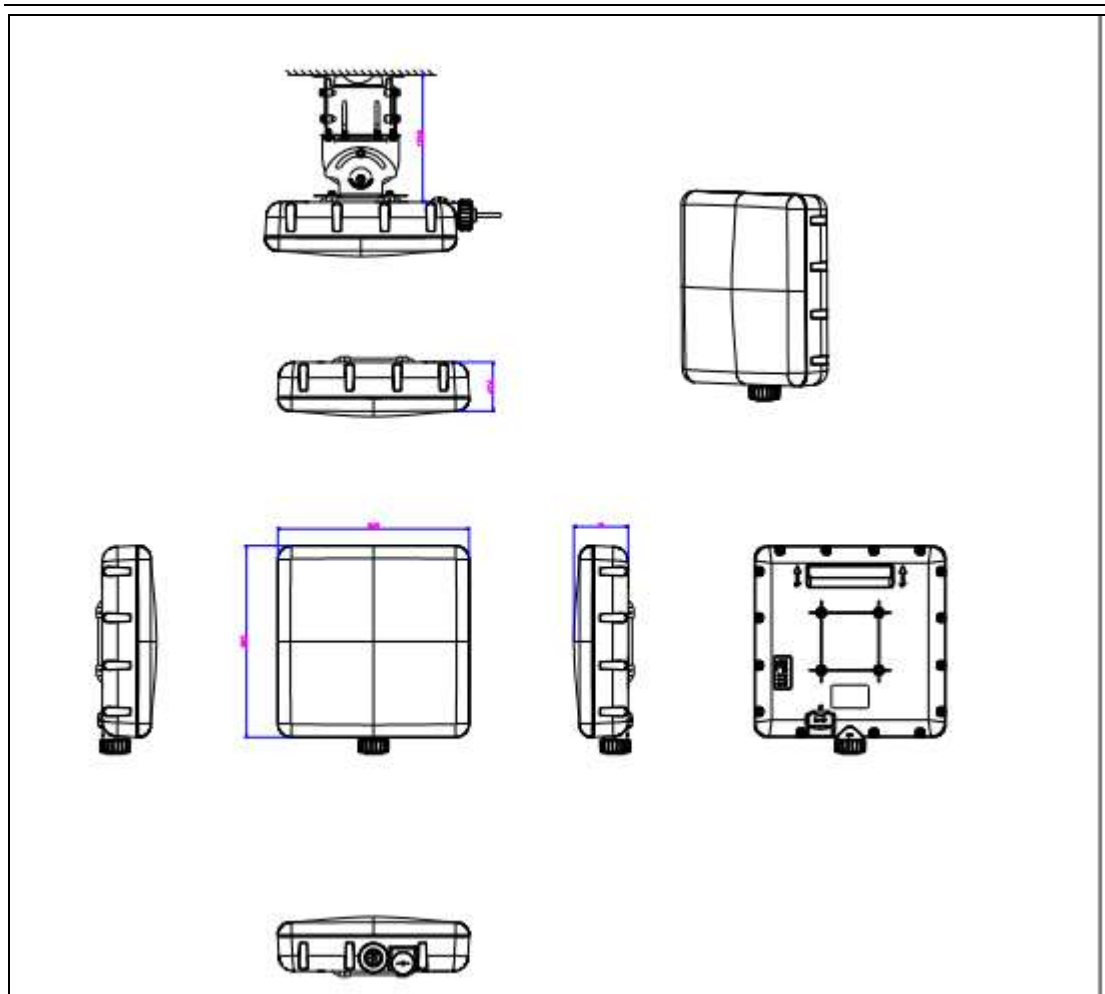


Figure 6-1-1-1 Mechanical

6.1.2 To mount the CPE to wall

To mount the CPE to wall, follow the steps below:

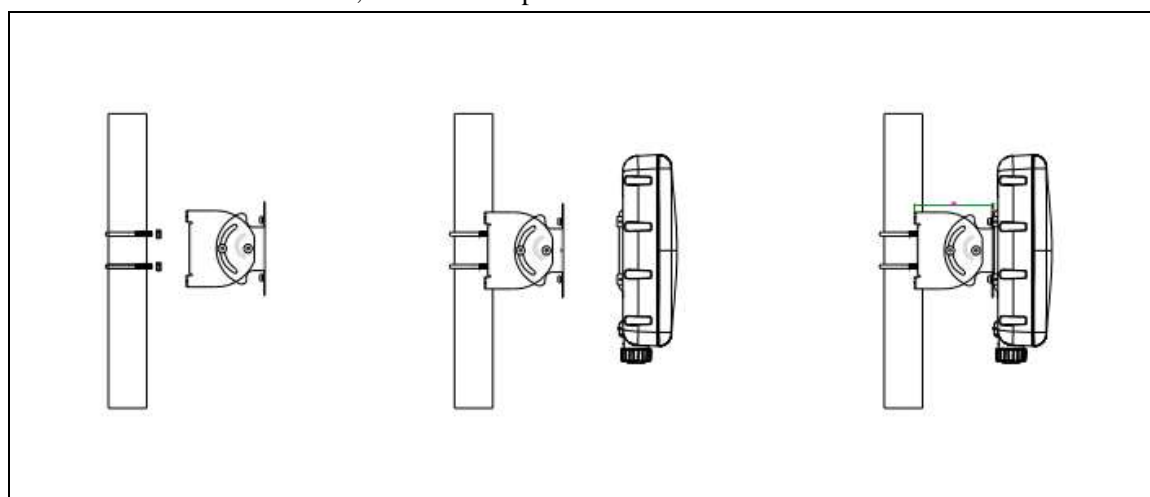


Figure 6-1-2-1 To mount the CPE to wall

6.1.3 Install the USIM card:

This CPE is specially designed for the 4G LTE network. Please check that you have a valid USIM card from the service provider.

1. USIM Card Slot

This slot is for inserting the USIM card.

2. PoE Port

This Port is used for connecting PoE Power Supply using an Ethernet Cable (This cable must have all four pairs connected to the RJ45 connector). Do not use low cost cables that have only two pairs connected.

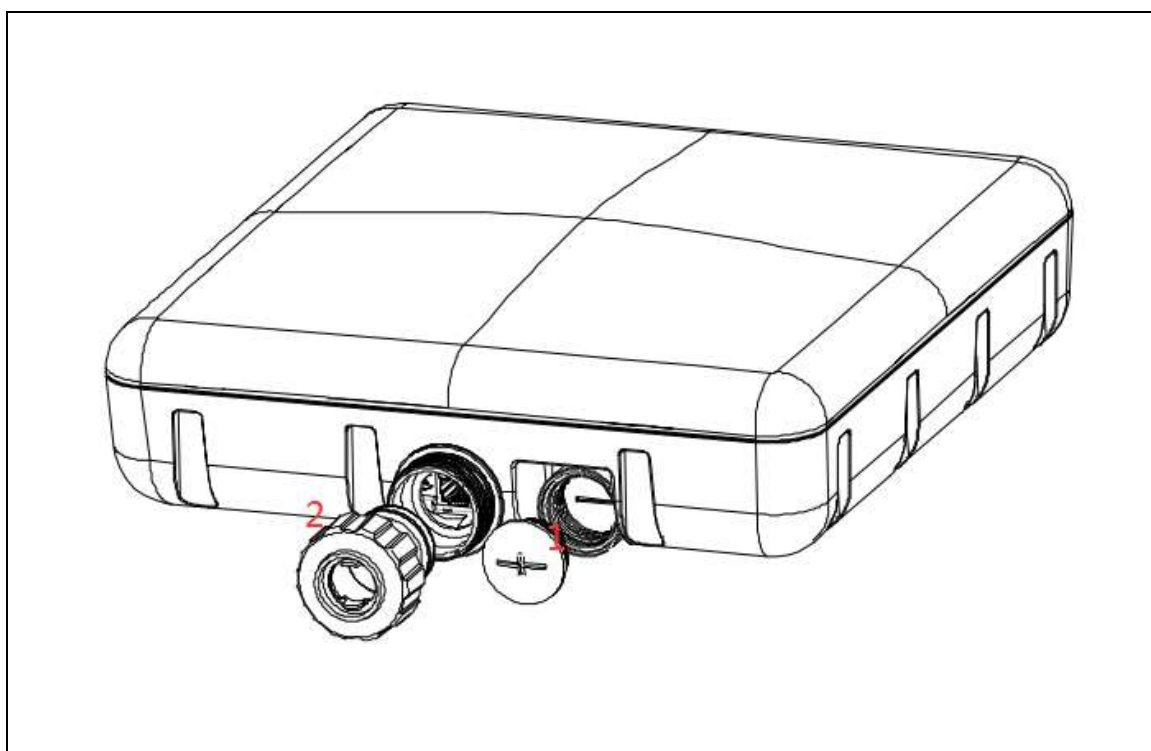


Figure 6-1-3-1 Install the USIM card

6.1.4 Product Shipping Package

1. Main Label

On Main Label, you can see IMEI/MAC/SN on it.

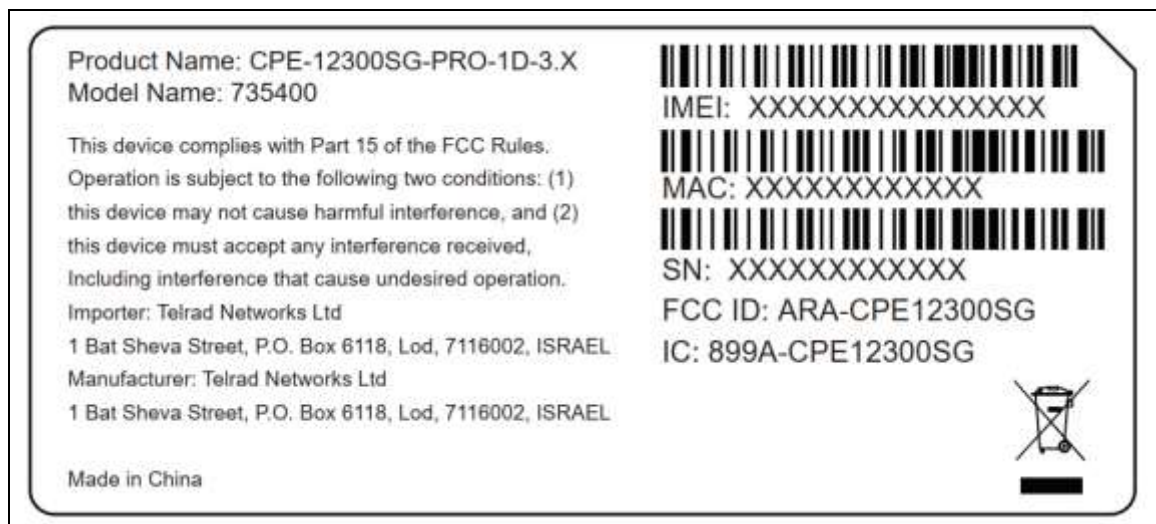


Figure 6-1-4-1 Main Label

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF Exposure Warning Statements:

This device meets the government's requirements for exposure to radio waves.

This device is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

This device complies with FCC radiation exposure limits set forth for an uncontrolled environment. In order to avoid the possibility of exceeding the FCC radio frequency exposure limits, The antenna(s) used for this transmitter must be installed to provide a separation distance of at least 30 cm from all persons during the normal operations.

IC STATEMENT

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

This device complies with the Canadian ICES-003 Class B specifications. CAN ICES-3(B)/NMB-3(B)

This device complies with ISED RSS-102 RF exposure limits set forth for an uncontrolled environment. In order to avoid the possibility of exceeding the IC RSS-102 RF exposure limits,

In order to avoid the possibility of exceeding the IC radio frequency exposure limits, human

proximity to the antenna shall not be less than 30cm (12 inches) during normal operation.

Cet appareil est conforme aux limites d'exposition aux rayonnements de la CNR-102 définies pour un environnement non contrôlé Afin d'éviter la possibilité de dépasser les limites d'exposition aux fréquences radio de la IC CNR102, la proximité humaine à l'antenne ne doit pas être inférieure à 30 cm (12 pouces) pendant le fonctionnement normal.

7. Revision History

Author	Revision	Changes	Date
Fhan	1.0	Create Draft	2020-11-04
Fhan	1.1	Change Main Label	2020-12-09