

4. Reminder module



The watch supports multiple reminder modes, including message reminder, incoming call reminder, walking reminder, drinking reminder, exercise goal reminder, exercise center rate warning reminder, etc.

5.Control center



Control center gives you an easy way to turn on functions such as Do Not Disturb, raise to Wake, set the screen brightness, find my phone, mute your watch, turn your watch into a flashlight.

Weather

What's the weather?
What's the weather tomorrow?
Weather in New York.
What's the temperature outside?

6. How to start sport via Alexa voice assistant?

1. When the watch is in standby, long press the side key of the device to enter the Alexa dialog interface; or click the Alexa icon to enter the Alexa dialog interface.
2. Speak your sport request to the device; after Alexa receives your request, the Start Sport page will be displayed.
3. Examples of voice request for starting sport:
Note: Sport-related key words should be contained in your expressions, which is shown in boldfaced font below.

1.Start sport/exercise:
Start sport
Start exercise
Start sports mode list

2.Start outdoor running/indoor running:
Start outdoor run
Start outdoor Running

3.Start outdoor walk /indoor walk/hiking:
Start outdoor walk
Start outdoor walking
Start indoor walk
Start indoor walking
Start hiking


Alexa Help and Skill

How to use Alexa voice assistant on your device?

Alexa voice assistant can help you to check the weather, set Timer, Alarm or Reminder, start sport monitoring, view sport and health data, set and control your device, or even control other intelligent equipment in your house.This instruction applies to version 2.2.1 or above. If the version is too low, it is recommended to upgrade to the latest APP version.

1. How to install Alexa voice assistant?

1. After connecting the bound watch, click Login Alexa on the device interface;
2. Follow the operation steps and click Next;

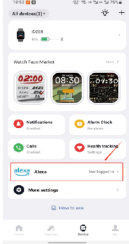


3.Enter the Amazon Alexa login interface, select "copy and continue" and go to log in to the Amazon account



4. Enter the Amazon account and password, select "Sign-In" and login to alexa,If you don't have an Amazon account, you can select "Create a new amazon



7. Wait for the prompt: your registration is completed, click on the upper left corner to return to the App, Alexa login is completed;

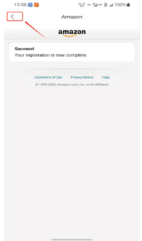














2. How to change the language of Alexa voice assistant?

- 1.Click the icon " " and select the desired language.














3. How to exit Alexa voice assistant?

1. In the "Connected" interface, click "Logout" .
2. The message reading "Are you sure you want to exit Alexa?" will pop up; click "OK" in this window.



3. Click the icons " " at the top of the screen to check the settings of Alarm, Reminder and Timer.



4. Examples of voice request for Alarm, Reminder and Timer:

Alarm

Set an alarm for 8:00 am.

Set a repeating alarm for 8:00 am.



Reminder

Set a timer for 5 minutes

Note: Alarm and Timers set via Alexa are mutually independent from Alarm and Timers set via the local apps " " on the device.

5. How to check the weather via Alexa?

1. When the watch is in standby, long press the side key of the device to enter the Alexa dialog interface; or click the Alexa icon to enter the Alexa dialog interface.
2. Speak your request to the device; after Alexa receives your request, the weather information will be displayed in text. Examples of voice request for checking the weather:

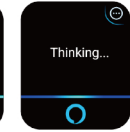

4.Stress/pressure:
Turn on stress monitoring
Turn on stress monitor
Turn on pressure

5.Blood oxygen/SpO2:
What is my blood oxygen

6.Help:
Turn on help

7.Find phone:
Turn on find my phone

8.Workout history/Exercise record/Athletic records:
Turn on workout history
What's my sports record?
Turn on exercise record
Turn on athletic records

9.Breath training/Relax:
Turn on breath training
Turn on relax
Turn onMindfulness

10.Settings/Options:
Turn on settings

11.Flashlight:
Turn on torch
Turn on flashlight

12.Display setting/Brightness:
Turn on display setting
Start display setting
Start display brightness setting

13.Message/Text notifications:
Turn on messages
Turn on text notifications



The device meets the EU ROHS criterion.
Please refer to IEC 62321, EU ROHS
Directive 2011/65/EU and revised directive.

This device complies with Part 15 of the FCC Rules.Operation is subject to the following two conditions:

1. this device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could avoid the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION

- Risk of explosion if the battery is replaced by an incorrect type;
- disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion;
- leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas;
- a battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

Old electrical appliances must not be disposed of together with the residual waste, but have to be disposed of separately. The disposal at the communal collecting point via private persons is for free. The owner of old appliances is responsible to bring the appliances to these collecting points or to similar collection points. With this little personal effort, you contribute to recycle valuable raw materials and the treatment of toxic substances.




If you experience discomfort or skin irritation when wearing your smart watch, then we recommend you try cleaning your device. Sometimes residue or foreign materials build up around your device and may aggravate your skin. It's also possible that you are not wearing the watch correctly. We recommend making sure to clean and adjust your watch regularly for a more comfortable fit.

Caution:

If you experience skin irritation when wearing your watch, please refrain from wearing, and wait two to three days to see if your symptoms ease. If symptoms persist or worsen, please consult a physician.

- If you have eczema, allergies or asthma, you may be more likely to experience a skin irritation or allergy from a wearable device.

10. What to do when Alexa on your device cannot work normally?

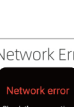Symptom	Solution
 "Alexa Set-up" error	Please refer to the section "How to install Alexa voice assistant?" to finish installation and configuration of Alexa. If Alexa has been installed, please carry out synchronization
 "Connection Lost" error	1. Keep the device close to your mobile phone, and turn on the Bluetooth function on your mobile phone. 2. Launch the verifyfit app on your mobile phone, and synchronize the device with your mobile phone. When Alexa on the device is working, the verifyfit app should be running in the background on your mobile phone (please set the permissions for the verifyfit app on your mobile phone to allow it to run in the background).
 "Network Error" error	1. Please check Wi-Fi or mobile data connection of your mobile phone to ensure Internet accessibility.
Wrong language of the voice assistant	Please refer to the section "How to change the language of Alexa voice assistant?"
The set Alarm and Reminder give no notifications	Please check the battery level of the device; the device will not vibrate in case of low battery.