



I am setting up a CX5000 gateway for automatic download of CX loggers to the InTempConnect® cloud.


- 1 Go to www.intempconnect.com to set up an account or log into your existing account (A).

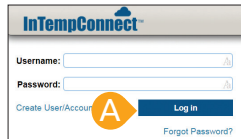


- 2 In InTempConnect, click Settings and then Roles. Click Add Role (A) to create a role for the person who will be setting up the gateway or click an existing role to edit it.

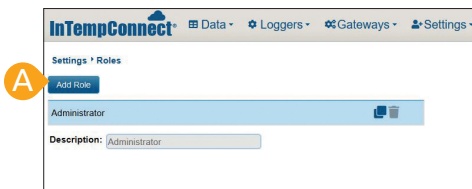

- 3 Type the name of the role (A) for the Description. Select "Login to InTempConnect" plus the gateway-related privileges (Manage Gateways, Manage Logger/Gateway Profiles, Create Shipments, Edit/Delete Shipments, and Gateway Administrator) from the Available Privileges list on the left and click the right arrow button (B) to move them to the Assigned Privileges list on the right. Select a user from the Available Users list on the left and click the right arrow button (C) to move the user to the Assigned Users list on the right. Click Save (D).

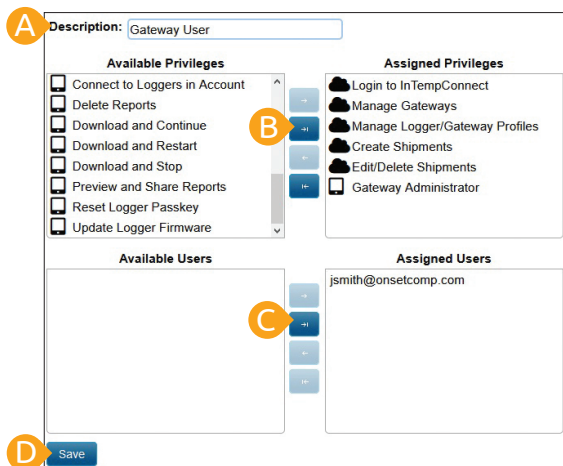

Tip: If you need to add a user, click the Users tab and then Add User, fill in the fields, and assign the user a role with gateway privileges.

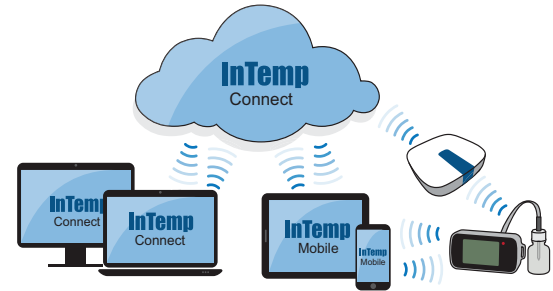


Upload Data from the Logger to the Cloud via the Gateway

- 4 Click Gateways and then Gateway Profiles. Click Add Gateway Profile and type a name (A) for the profile. Select the CX logger type. If the gateway will be used in a storage application (i.e. a clinic or office), enter these settings (B):

- Select Download and Restart for when to connect.
- Select "Immediately connect to a logger with a new sensor alarm."
- DO NOT select "Immediately connect to a logger not seen by this gateway."
- Choose to immediately connect to a logger with a low battery alarm (CX400 and CX450 loggers only).
- Choose to connect to loggers every week.

Click Save (C).

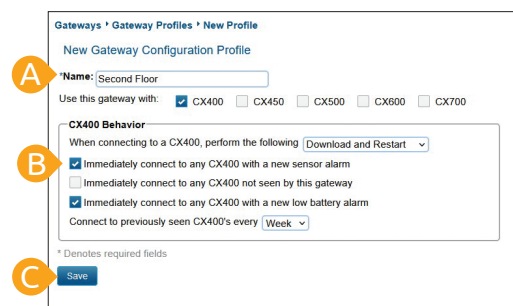


Tip: Refer to the full product manual for details on other configuration settings. Go to www.onsetcomp.com/intemp/resources/cx5000-manual.

- 5 Insert the appropriate plug for your region into the AC adapter. Connect the AC adapter to the gateway and plug it in. Wait a couple of minutes for the gateway to completely power up. The LED on the gateway will be yellow-green while it powers up and then change to deep green once it is ready to set up.




- 6** Set up Wi-Fi network settings. Make sure the device with the InTemp app can connect to the Wi-Fi network. Open the app and log in as an InTempConnect user (A).

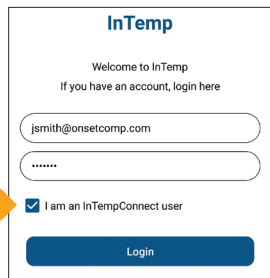

The InTemp login screen shows a welcome message and a login form. The email field contains 'jamith@onsetcomp.com' and the password field has masked characters. A checkbox labeled 'I am an InTempConnect user' is checked. A 'Login' button is at the bottom.


Tip: If the gateway will be using Ethernet with DHCP, plug in the Ethernet cable. Network settings will be configured automatically. To configure network settings for Ethernet with static IP addresses or to set up a gateway for use at another site, refer to the product manual at www.onsetcomp.com/intemp/resources/cx5000-manual.

Tap Devices (B). The gateway appears in the list. Tap the gateway in the list (C) to connect to it.

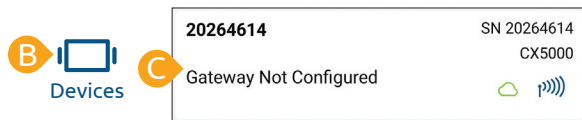

The 'Devices' screen shows a list of devices. A gateway with ID '20264614' and SN '20264614' is listed. It is marked as 'Gateway Not Configured'. A blue arrow points to the 'Devices' tab (B), and another points to the gateway entry (C).

Tap Network Settings (E) and then tap WiFi (F).

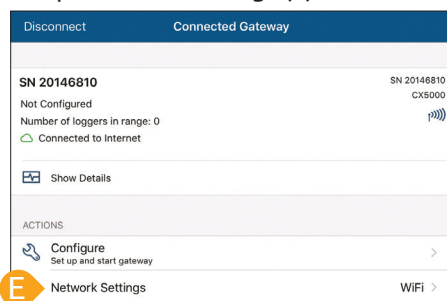


The 'Connected Gateway' screen shows details for SN 20146810. It indicates the gateway is 'Not Configured' and 'Connected to Internet'. A 'Show Details' button is present. At the bottom, 'Network Settings' is highlighted with a blue arrow (E).




The 'Network Type' screen shows 'WiFi' selected. A blue arrow points to the 'WiFi' option (F).

Tap Use Current WiFi Network (G) and tap Save (H).

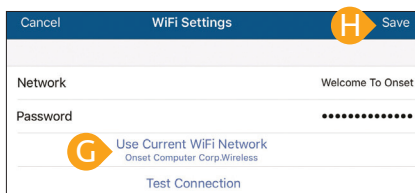

The 'WiFi Settings' screen shows the 'Use Current WiFi Network' option selected, highlighted with a blue arrow (G). A 'Save' button is at the top right, highlighted with a blue arrow (H).


- 7** Connect to the gateway (see step 6) and tap Configure (A).

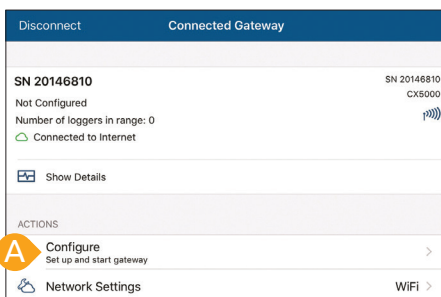

The 'Connected Gateway' screen shows the 'Configure' button highlighted with a blue arrow (A).

- 7** (continued)

Select the gateway profile (B) you created in InTempconnect in step 4 (swipe left and right if there are multiple profiles). Type a name for the gateway (C) and tap Start (D).

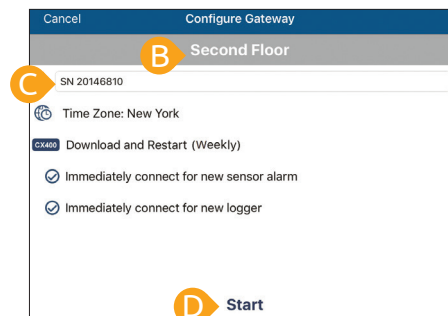

The 'Configure Gateway' screen shows a profile named 'Second Floor' highlighted with a blue arrow (B). A text field for the gateway name contains 'SN 20146810' (C). At the bottom, a 'Start' button is highlighted with a blue arrow (D).

Once a gateway has contacted InTempConnect for the first time, a user is created for the gateway in your account. Click Settings and then the Users tab to see the gateway user name, which is listed as CX5000-<gateway serial number>.

- 8** Deploy the gateway. Some guidelines when selecting a location for the gateway:

- The gateway can support up to 50 loggers within transmission range, which optimally is 30.5 m (100 ft) will full line-of-sight.
- Test the range by positioning your mobile device where you want to deploy the gateway. If the mobile device can connect to the logger with the InTemp app from that location, then the gateway should be able to connect to the logger as well.
- If you plan to use the gateway for loggers in different rooms, be sure to test the connection first.

The gateway is ready for use with loggers. See www.intempconnect.com/help for details on configuring and downloading loggers with the gateway, setting up shipments, and more.

Refer to the CX5000 Gateway manual for full product details, including specifications and mounting instructions. Scan the code or go to www.onsetcomp.com/intemp/resources/cx5000-manual.

