




androidtv

24" SMART HD LED TV

SERIES 9 RT9220

(KALED24RT9220SVA)

COMPONENTS

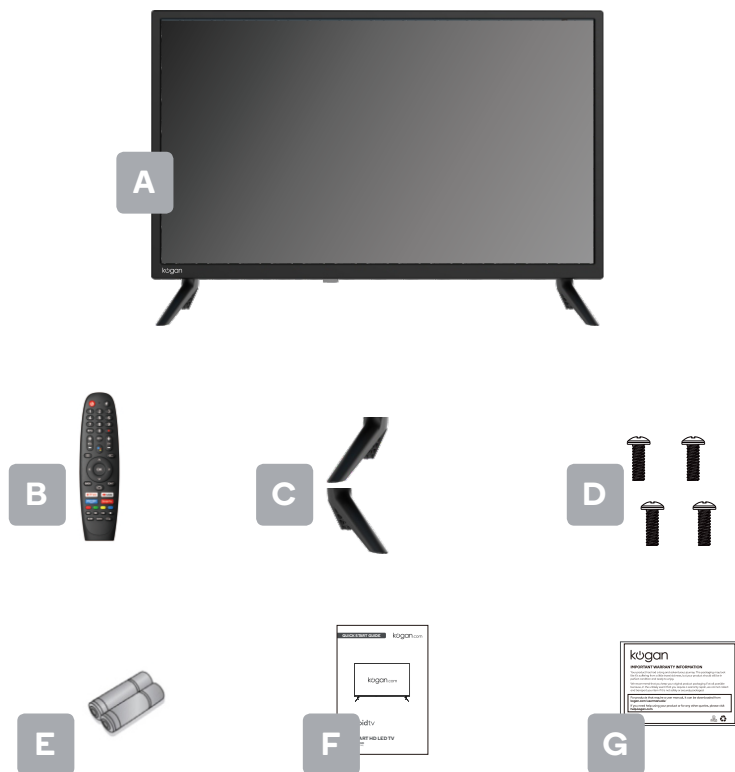

A Kogan 24" SMART HD LED TV

B Remote control

C Stand (x2)

D Ba4 x 18mm screw (x4)

E AAA battery (x2)

F Quick-start guide

G Warranty card

NOT INCLUDED

Phillips head screwdriver, antenna cable, broadband internet connection.

REMOTE CONTROL OVERVIEW



- | | |
|---|---|
| 1  : Switches the TV between on and standby mode | 9 VOL + : Increase the volume |
| 2  : Microphone hole | 10 VOL - : Decrease the volume |
| 3  : Mute or restore TV sound | 11 CH + : Increase the program |
| 4 0~9 : Figures 0-9 are used to directly input channel number | 12 CH - : Decrease the program |
| 5 EPG : Press to display Electronic Program Guide and select the favorite channel | 13  : Displays the OSD(On Screen Display) menu |
| 6  : Press to start recording the program | 14  : Display/Select signal source options |
| 7 INFO : Press to info the source and channel's info | 15  : To confirm the choice with program the highlighted menu item |
| 8  : Google Assistant | |

REMOTE CONTROL OVERVIEW



16 : Press these buttons to select items

17 : Press these buttons to select and adjust items

18 : Go back to the previous step

19 : Press to exit the OSD menu

20 : Displays the home screen

21 : Connects to NETFLIX for viewing online TVshows and films(internet connection required).

22 : Connects to YouTube (internet connection required).

23 : Accesso diretto a Amazon Prime Video

24 : To open app homepage

25 **Colour Buttons** : Press these buttons according to different prompts

26 : Press to fast reverse in USB mode

: Press to fast forward in USB mode

27 : Press to play the video and press again to pause the video

28 : Hold on or off for current page display

29 : SUBT

30 : Press to enter Teletext when play the program

31 : Press to change the language when playing the stream which contains multi-language



ASSEMBLY AND INSTALLATION

BEFORE YOU GET STARTED

Spread cushioning flat to lay the TV on. This will help to prevent damage.




1. Stand assembly

- Attach stands to base of TV.
- Insert two 18 mm screws for each stand, and use Phillips head screwdriver (not supplied) to tighten.

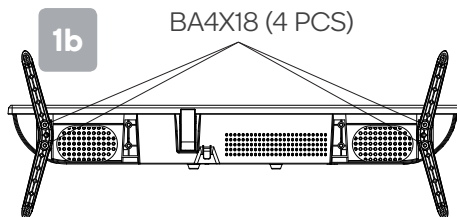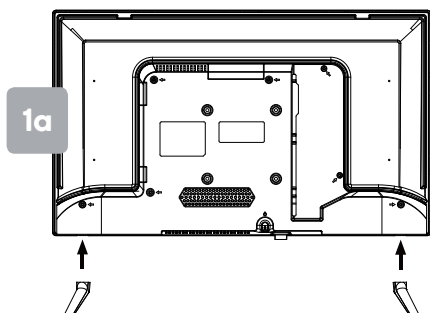

2. Remote control assembly


- Open the battery compartment cover on the back side.
- Insert two 1.5V AAA size batteries, making sure to match the polarity markings (+ / -) of the batteries with the diagram inside the compartment.
- Replace battery compartment cover.

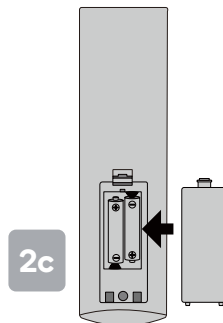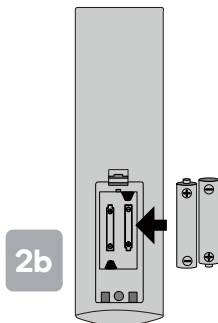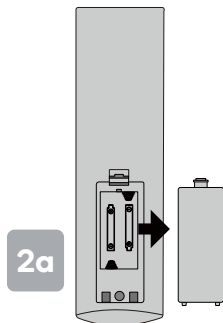

ASSEMBLY AND INSTALLATION

3. Connect to antenna

- a. Connect an antenna cable (not supplied) via the 'ANT' input port at the back of the TV.
- b. Ensure the antenna cable is also connected to a working antenna, either via an antenna wall socket in your home, or directly.

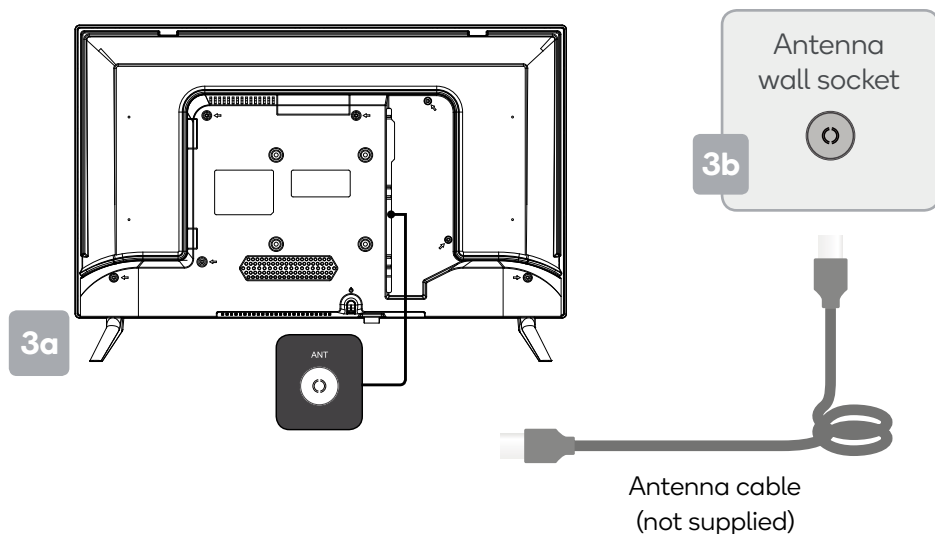

4. Turning TV on

Plug the power cord into a suitable power outlet, then press the POWER (⏻) button on the remote control, making sure to aim it at the sensor at the front of the TV. Alternatively, you can press the power button on the lower side of the back panel on the TV.

TURNING TV OFF

Press the POWER (⏻) button on the remote control to enter standby mode. To power down the TV completely, unplug the power cord from the power outlet.

Do not leave your set in standby mode for long periods of time. If you will not use the TV for a long time, it is recommended to unplug the set from both the power outlet and aerial.

INITIAL INSTALLATION

1. Initial Installation



The first time you switch the TV on, the initial step screen appears which guides you through the initial process. Please according to the Text Tips to finish initial installation.

1.1 Language select

> Press **▲/▼** remote control to select the language option, then click **【OK】** to confirm.

1.2 Quickly set up your TV with your Android phone? (Continue/skip) Steps:

1. On your Android Phone, open the Pre-installed app "Google".
2. Type or say, "Ok Google, set up my device".
3. Tap the model name on the list.

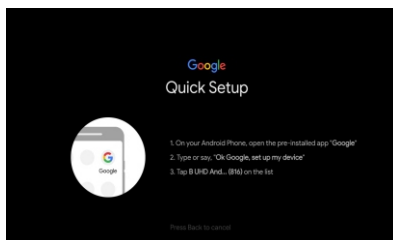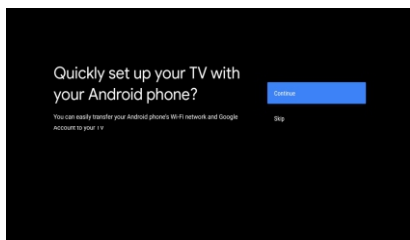


1.3 Configure the network

> Select wired or wireless to connect to internet.

> If you select skip, it could be performed in home page or settings menu.

1.4 Google Account Sign in

Sign in to get new apps, recommendations, movies, the Assistant, and more from Google. Two ways to login Google account:

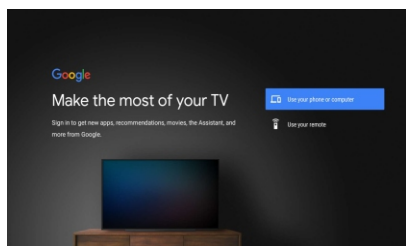


-> Use your phone or computer:

1. Visit androidtv.com/setup on your phone or computer, Make sure your other device is on the same Wi-Fi network as your Android TV™

INITIAL INSTALLATION

2. Enter the display code on your phone or computer

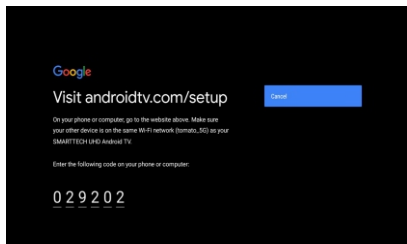

-> Use your remote:

Use the remote to enter your Google account and password to sign in to Google account.


1.5 Google setting

In these steps you will setup the Terms of Service, Location, Help improve Android, Google Assistant and additional Google functions.

1.6 Play Auto Installs

Select install or un-install the recommended apps and Google apps by using this process.

-> Press "Continue" to the next setting page.

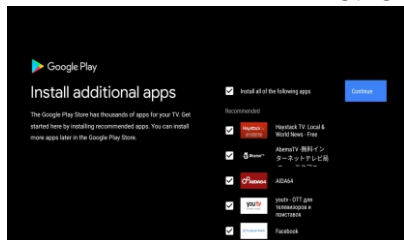


1.7 Pairing Bluetooth Remote

-> Press 'BACK' and 'VOL-' simultaneously on remote control to enter the Bluetooth pairing mode. The Indicator light on remote control will flash when enter the pairing mode.

-> Press 【OK】 to begin pairing.

-> Press on remote control to skip the pairing mode.

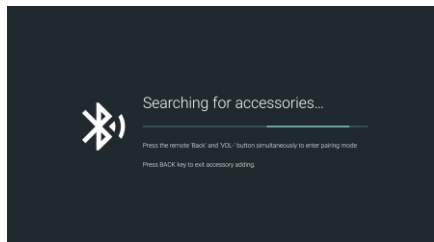

INITIAL INSTALLATION

1.8 Country select

->Press **▲** / **▼** on remote control to select the country option, then click **[OK]** to confirm.

1.9 Set the TV password for Parental Controls, "0000" is invalid.

1.10 Select TV mode (Home/Retail)

Home mode is optimized for efficient energy usage for home use.

Retail mode is optimized to store demo with fixed settings.


1.11 Chromecast built-in™

Select On/Off to make Chromecast built-in available.



1.12 TV Channel Setting

->Select Antenna/Cable/Satellite to scan TV channel.

->If you select skip, the channel scan could be performed in menu.

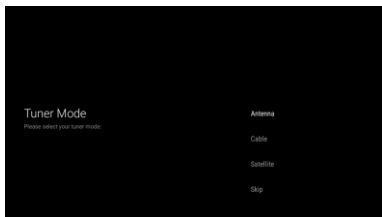

1.13 Setup completed and Disclaimer Terms

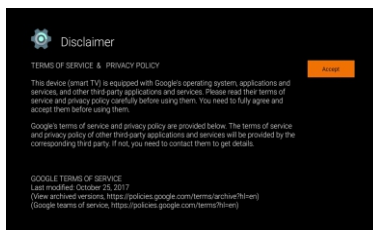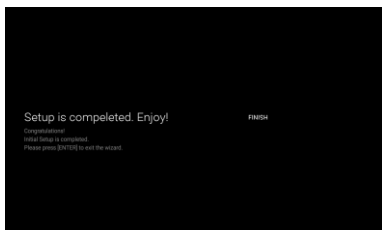


SETTINGS

2. HOME

When initial setup is complete, the TV will enter the homepage by default, or press  on remote control to display the homepage.

-> Press **▲/▼/◀/▶** on remote control to switch between Google Assistant, Apps, Play Next, Netflix, YouTube, and more on the Homepage.

-> Press **[OK]** to enter.

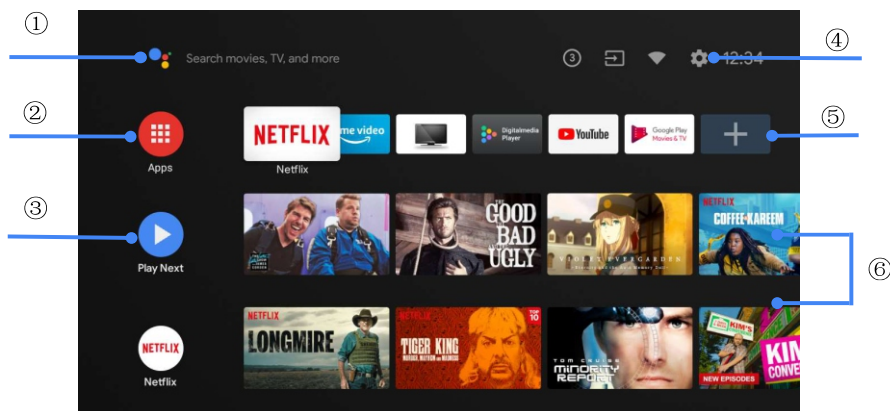

① Google Assistant

Use your voice to jump to shows, control devices, and more—with Google Assistant

② Apps

List of downloaded and pre-loaded apps on your device

③ Play Next

Based on your watch history and includes next episode in a series or unfinished movies

④ Settings

Manage apps and TV controls, change preferences, sounds, and account

⑤ Favorite apps

Quick access to frequently used apps

⑥ Channels


For easy content discovery

CONNECTING TO THE INTERNET

3.Settings

Allows to set various performance of your TV.

- > Press **</>** on remote control to select "Settings" which is in the upper right corner of the screen.
- > Press **▲/▼** on remote control to select the option which you want to adjust in the Settings menu.
- > Press **【OK】** to enter.

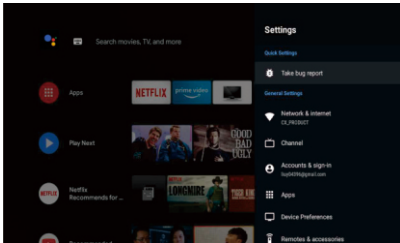


3.1 Network&internet

Adjust all network setting and check connection if you have connection problems.

- > Press **▲/▼** remote control to select "Network&internet" in the settings menu.
- > Press **▲/▼** remote control to select:Wi-Fi/Add new network/Scanning always available/Proxy settings/IP settings.

3.2 Channel

- > Press **▲/▼** on remote control to select "Channel" menu.
- >Press **【OK】** to enter"Parental Controls", then click **▲/▼** or use the number buttons on remote control to enter your PIN(Password for Parental Controls).

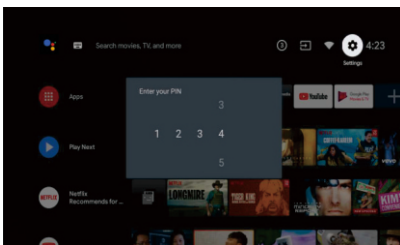


3.3 Device Preferences

- > Press **▲/▼** on remote control to select "Device Preferences".
- > Press **▲/▼** on remote control to select the options of About, Date&time, Timer, Language, Inputs, Picture, Sound, Google Assistant, Reset,etc.

TUNING

-> Press **[OK]** to jump to the corresponding sub-option.

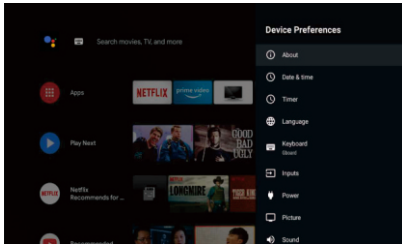


3.3.1 About

-> Press **▲/▼** on remote control to select "About".

-> Press **▲/▼** on remote control to check additional information such as System update, Device name, Restart, Status, and more.

-> Press **⏮** on remote control to return to the previous menu. Press **⏻** on remote control to exit the menu.

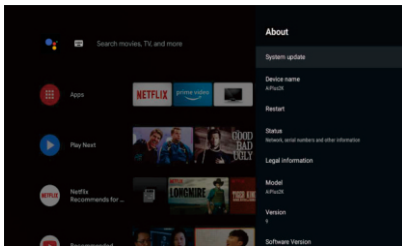

3.3.2 Reset

If select reset, it will erase all data from your device's internal storage, including: your Google account, System and app data and settings, and downloaded apps.


-> Press **▲/▼** on remote control to select "Reset".

-> Press **▲/▼** on remote control to select "Cancel" or "Erase everything".

APP INSTALL/MOVE/UNINSTALL

4 App Install/Move/Uninstall

- > Press $\wedge/\vee$ on remote control to select "Apps" on Homepage, then click **【OK】** to enter.
- > Select "Get more apps" and input app name.
- > Select "search" which is in the upper right corner of the page.

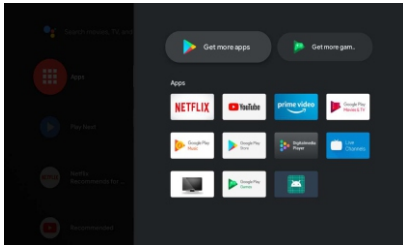

Example for "Facebook"

4.1 Install


- > Input "Facebook", find "Facebook" App will show in the list, then click **【OK】** to select it.
- > Select "Install", when completed select to open or Uninstall.

4.2 Move

- > Select "Facebook", press and hold **【OK】** on remote control, then click $\wedge/\vee$ remote control to select "Move".
- > Press $\wedge/\vee/</>$ on remote control to move, then click **【OK】** to confirm.

4.3 Uninstall

- > Select "Facebook", press and hold **【OK】** on remote control, then click $\wedge/\vee$ on remote control to select "Uninstall".
- > press **【OK】** to uninstall.

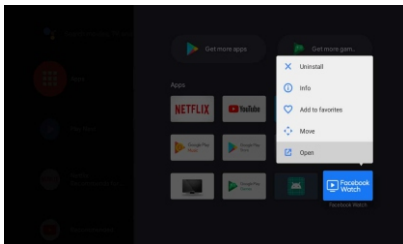


TV SOURCE SETTING

5 TV source setting

The way to enter TV source in Homepage:

->Press  on remote control or Select "Live TV" on Homepage.

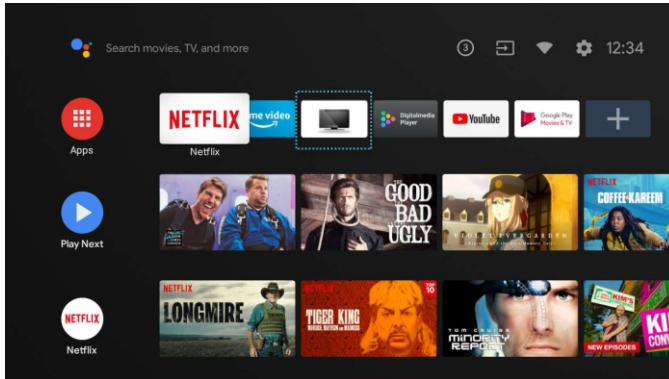


->Press  on remote control.

->Press  on remote control to select "Channels" and select "New Channels Available" to enter.


HOW TO TURN OFF AUTO SLEEP FUNCTION

Menu -> Settings -> Device Preferences -> Power -> Off


Menu

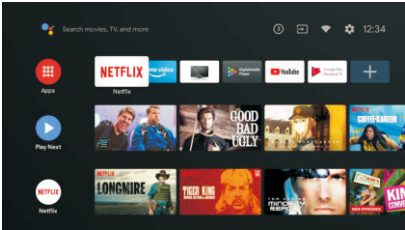


Power

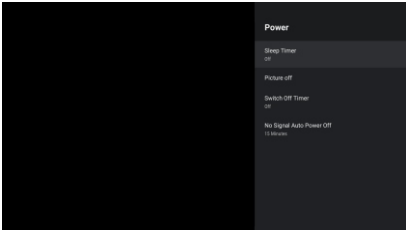


Settings

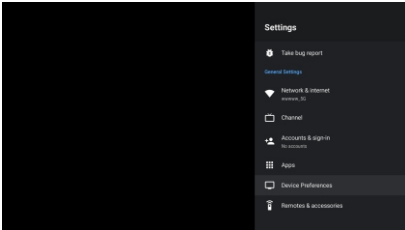

Off

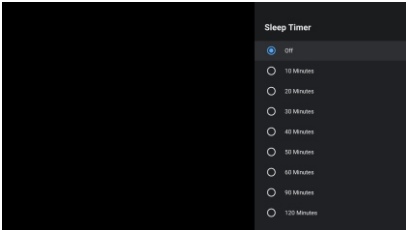

Device Preferences

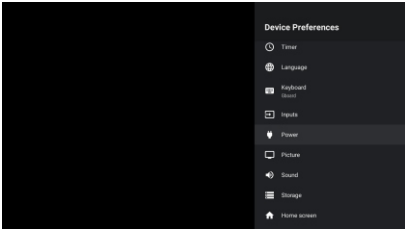

BASIC TROUBLESHOOTING

Poor picture and sound quality

- Try a different channel
- Adjust the antenna
- Check all connections

No picture or sound in TV status

- Try another channel
- Press the TV/AV button
- Make sure TV is plugged in
- Check the antenna connection

No sound or sound is too low at maximum volume

- Check the volume settings on any external speakers connected to your television
- Adjust the TV volume accordingly
- Check another channel or input
- Check that MUTE hasn't been turned on

No colour, wrong colour or tints

- Make sure the program itself is broadcast in colour
- Select the picture menu, then adjust the colour and tint submenus

Picture rolls vertically

- Check all connections

Blurred or snowy picture, distorted sound

- Check direction, location and connections to your antenna
- Issues may be caused by the use of an indoor antenna (poor signal)

Remote control malfunctions

- Replace remote control batteries
- Check battery terminals
- Remote is out of range, move closer to TV
- Remove any obstructions between remote and IR sensor of TV
- Make sure the power cord to your TV is plugged in and turned on

Image is not centred on the screen

- Adjust the horizontal and vertical position

"No Signal" on HDMI source

- Test the device with a different HDMI cable
- Plug the device into another HDMI port
- Try a different device connected to the same cable and port
- Perform a factory reset on your TV

For our full TV troubleshooting guide and extended User Manual for this TV, head online to help.kogan.com

NOTES

This image shows a blank sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

Need more information?

This is a **Quick Start Guide** , and while we hope that this has given you the assistance needed for a simple set-up, a full user guide outlining all of this product's instructions and features can be found online at **help.kogan.com**

kogan.com