



SOSEN Energy APP User Manual

Please read this manual before use and follow its guidance.
Keep this manual for future reference.

CONTENTS

1. Brief Introduction	1
1.1. Purpose	1
1.2. Scope	1
2. Install APP	1
2.1. iPhone	1
2.2. Android	1
3. Account registration	2
3.1 Account registration	2
3.2 Fill in the Information	2
4. Forget password	3
4.1 Enter forgot password	3
4.2 Forgot password	3
5. Create plant	4
5.1. Add device	4
5.2 Enter plant information	5
6. Collector network	6
6.1. Equipment network	6
6.3 Device connection failed	12
7. Plant management	12
7.1. Enter plant overview	12
7.2. Enter device page	13
7.3. Enter event list	14

7.4. Delete plant	14
7.5. Confirm to delete	15
7.6. Edit plant	15
7.7. Share plant	16
8. Inverter management	17
8.1 Enter inverter list	17
9. Gateway management	20
9.1 Collector Details	20
9.2. Unbind collector	20
10. Event information	21
11. Personalization	22
11.1. Language	22
11.2. Preferences	22

1. Brief Introduction

1.1. Purpose

This manual gives a brief introduction to the main functions of "SOSEN Energy" APP account registration, plant creation, Wi-Fi configuration etc. Provide reference and help for users to quickly familiarize themselves with the APP.


1.2. Scope

This manual is suitable for SOSEN users, pattern vendors and device maintenance personnel who use our device.

2. Install APP


2.1. iPhone

Search "SOSEN Energy" in the App Store, Or Scan the QR code below to download.

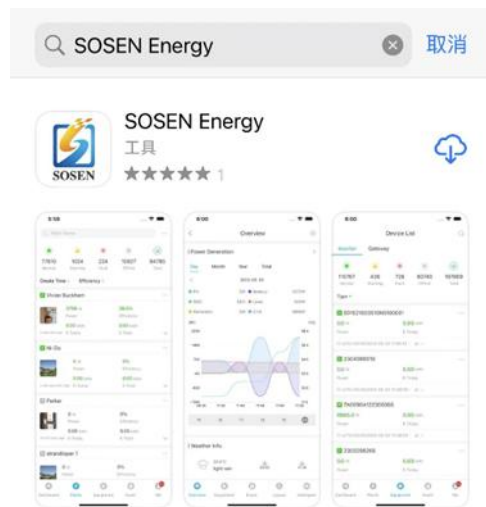

2.2. Android


Search "SOSEN Energy" in the Google Play Store, Or Scan the QR code below to download.

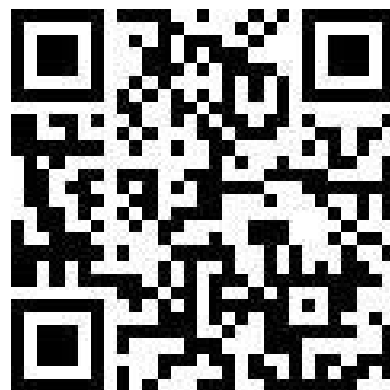

3.Account registration

3.1Account registration


3.1.1 Users who use "SOSEN Energy" for the first time need to register an account, click "Register Account" on [Login Page] to enter the registration page.

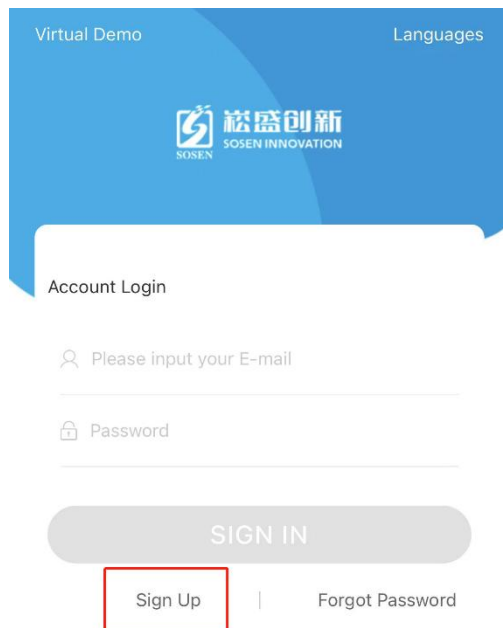


The image shows the SOSEN Energy account registration and login interface. At the top, there's a blue header with "Virtual Demo" on the left and "Languages" on the right. In the center is the SOSEN logo with the Chinese text "松盛创新" and "SOSEN INNOVATION". Below the header is a white box labeled "Account Login". Inside this box, there are two input fields: "Please input your E-mail" and "Password". Below these fields is a large grey button labeled "SIGN IN". Under the "SIGN IN" button, there is a red-bordered button labeled "Sign Up" and a link labeled "Forgot Password".

3.2 Fill in the Information

Enter a valid phone number or email address to receive the verification code. After completing the registration information, check the box in the user agreement to indicate that you have read and agree to the agreement.

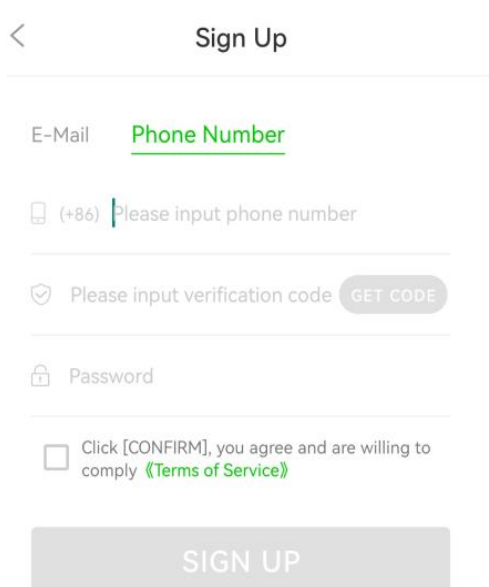

The image shows a "Sign Up" form with a back arrow on the left. The form has two tabs: "E-Mail" and "Phone Number", with "Phone Number" selected and underlined in green. The form contains the following fields: a phone number input field with a dropdown for country code (currently showing "+86") and a label "Please input phone number"; a verification code input field with a label "Please input verification code" and a "GET CODE" button; a password input field with a label "Password"; and a checkbox with the text "Click [CONFIRM], you agree and are willing to comply 《Terms of Service》". At the bottom is a large grey button labeled "SIGN UP".

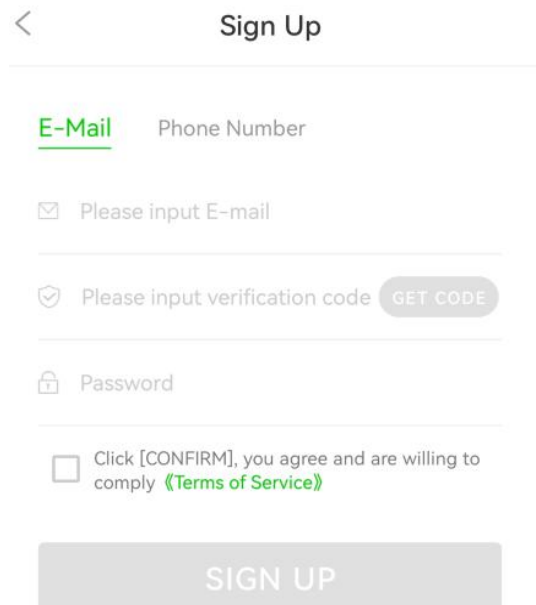


The image shows a "Sign Up" form with a back arrow on the left. The form has two tabs: "E-Mail" and "Phone Number", with "E-Mail" selected and underlined in green. The form contains the following fields: an email input field with a label "Please input E-mail"; a verification code input field with a label "Please input verification code" and a "GET CODE" button; a password input field with a label "Password"; and a checkbox with the text "Click [CONFIRM], you agree and are willing to comply 《Terms of Service》". At the bottom is a large grey button labeled "SIGN UP".

If you do not receive the verification code, check whether the email address is correct, whether the network is abnormal, and whether the verification code has been sent to the spam mailbox.

4.Forget password


4.1Enter forgot password

Click "Forgot Password" at the lower right corner of the login window to enter the [Recover Password] page.

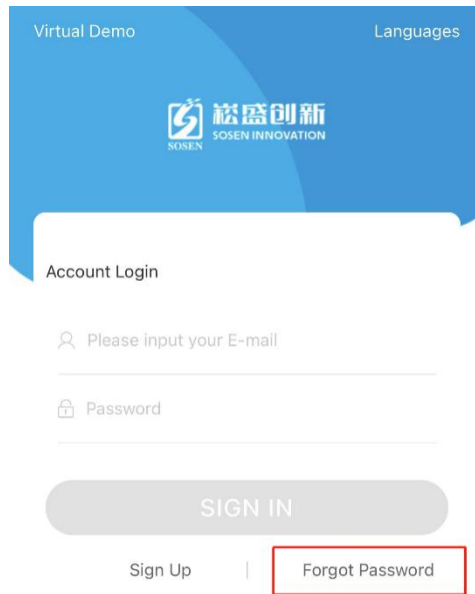

4.2 Forget password

After completing the information on the [Retrieve Password] page, you can reset the new password.

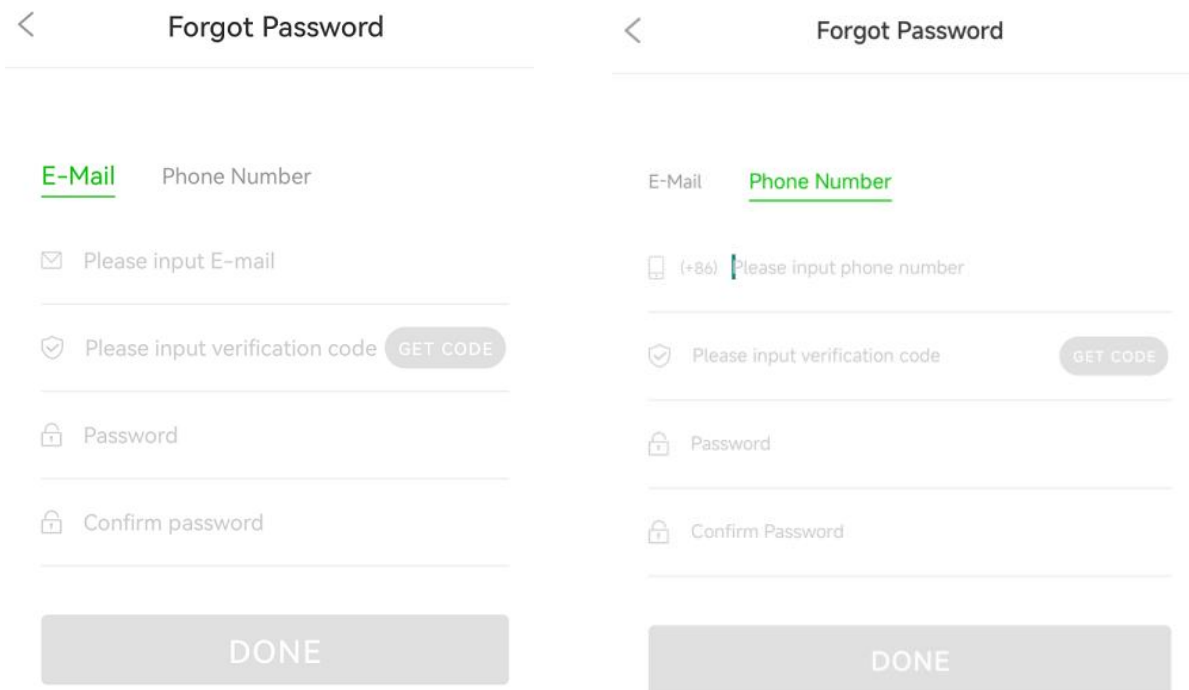


If your mobile phone number or email is disabled or you cannot receive the verification code, please contact.

5. Create plant


After logging in to SOSEN Energy, you can create your own power station and monitor the power station operating status and power generation data in real time.

5.1. Add device

Steps: 1. Go to the [Power Station List] page, click the "Create Power Station" button to enter the [Create Power Station] page.

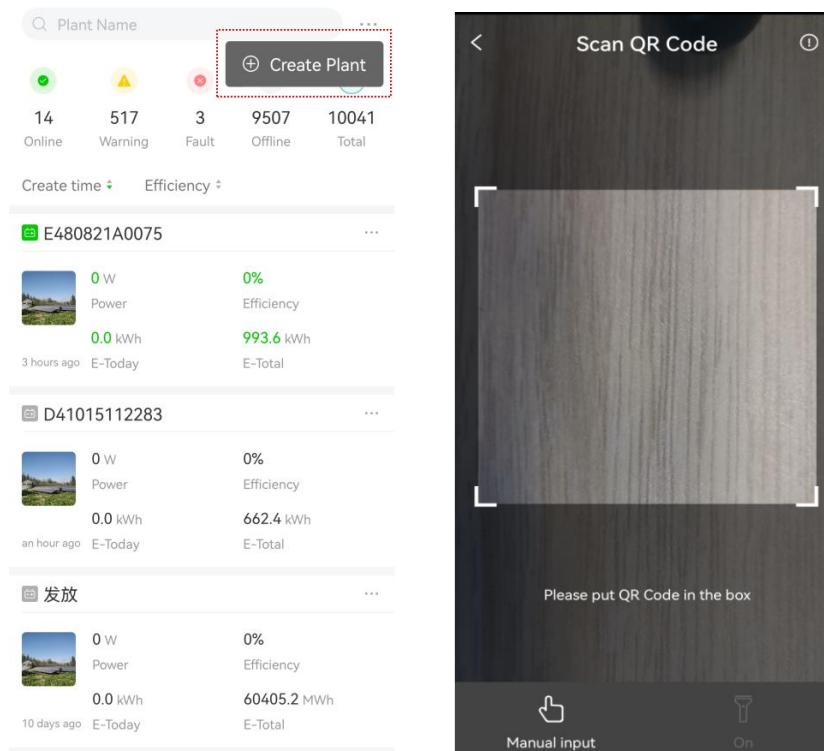

Steps: 2. After entering the scan code interface, you can use "scan QR code" or manually enter the devices "serial number" and "registration code" Aodequipment.

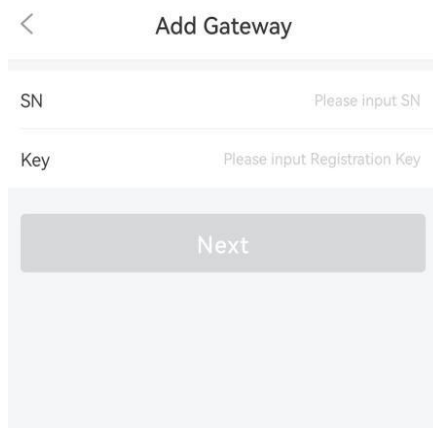

Steps: 3.After entering the "Serial Number"(SN) and"Registration Code" (KEY) on the collector label click Next, and then jump to create Powerstation page.

NOTICE

Please check the serial number and registration code of the device on the product label of the collector.

5.2 Enter plant information

5.2.1.Entering a plant name that complies with the specification.

5.2.2.Enter the correct installed capacity.

5.2.3.Select the correct grid connection date.

5.2.4. When selecting an address, make sure that the power station address is correct (if you need to modify it, please click on the map to select it manually).

5.2.5Confirm the time zone where the power station is located (incorrect time zone may cause abnormal statistics).

5.2.6.Choose the correct currency.

5.2.7.Choose the correct pricing method.

5.2.8.Enter the name of the person in charge of the plant.

5.2.9Enter the correct plant contact phone number.


5.3 After making sure the information is correct, click "Create".

The screenshot displays a two-column form for creating a power station. The left column, titled 'Plant Information', includes fields for Plant Name* (2.1), Plant Photos (with a camera icon), Installed Capacity* (2.2, showing 14736 kWp), Operating Date* (2.3, showing 2022-07-06), Installer (with a 'Please input...' placeholder), Address* (2.4, showing '四川省成都市武侯区石羊街道天府新谷' with a location pin), and Time zone* (2.5, showing '(UTC+08:00)Beijing,Chongqing,Hong Kong,Urumqi'). The right column, titled 'Income Information', includes Currency* (2.6, showing '¥'), Cost of investment (with a 'Please input...' placeholder), Valuation Method* (2.7, showing 'Constant Price (1 ¥)'), and a 'Contacts' section with Manager* (2.8, showing '不'), Phone* (2.9, showing '不'), and E-Mail (with a 'Please input E-mail' placeholder). At the bottom right is a large green 'CREATE' button (3.0).

NOTICE

The location service needs to be turned on, and the app needs to be authorized to use the location permission.

After the creation is completed, the user goes to the personal center and clicks "Toolbox" to configure the network for the collector.

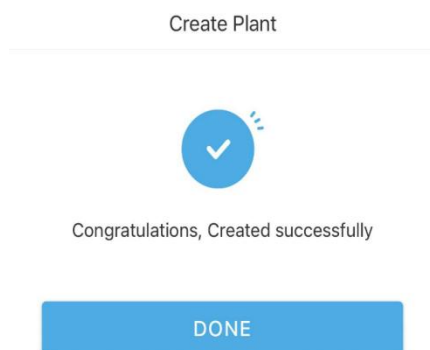

6. Collector network



WHEN YOU NEED TO CONFIGURE YOUR DEVICE FOR A WI-FI NETWORK.

6.1. Equipment network

If you select the method of "Scan the QR code of the device" to connect to the collector, the steps are as follows.



Step:1. Click the "ME" button at the bottom and select Toolbox from the menu.

Step:2. Enter the toolbox interface and select "WiFi network configuration".

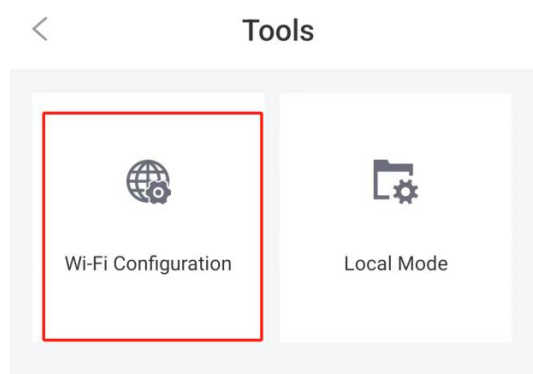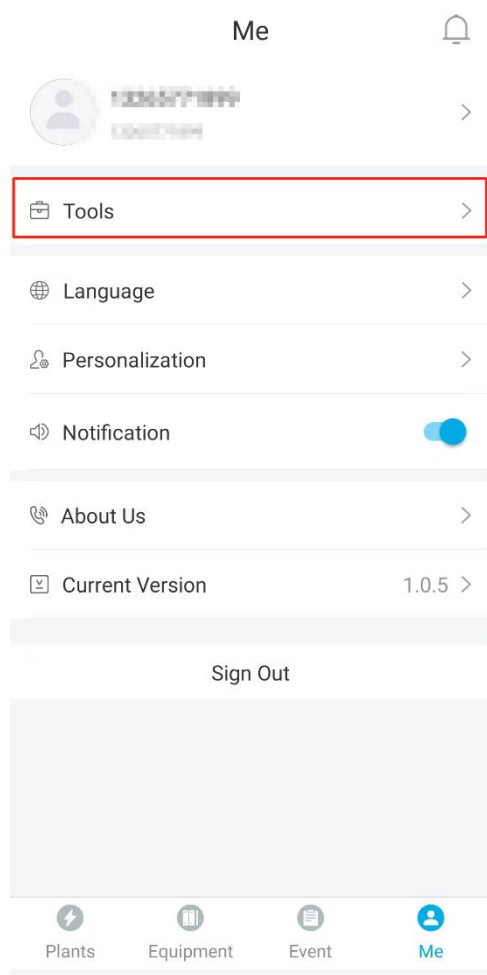

Step:3. Select "Scan Device QR Code".

Step:4. Select the radio box that says "Check the above conditions" and click the "Connect" button.

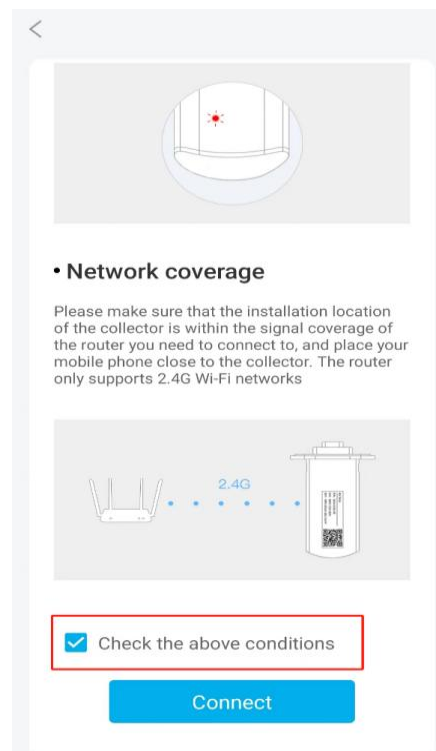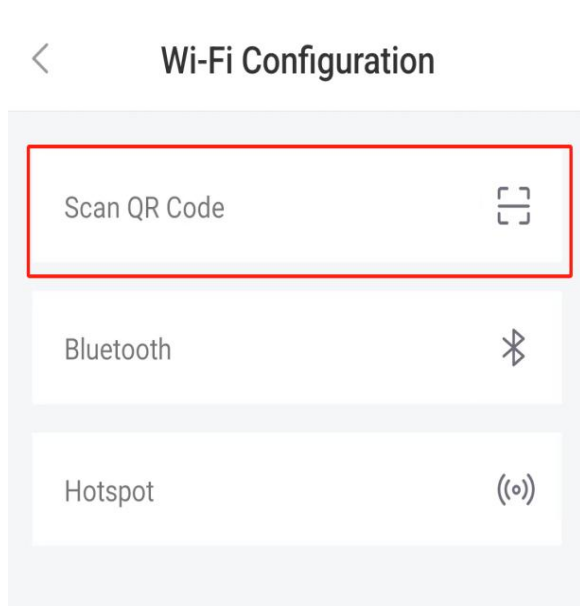

Step:5. Scan the QR code on your device



Step:6. After jumping to this page, Tap to connect Bluetooth starting with "EBP-".

Step:7. If the connection fails,click"Reconnect" later, and it will jump to the "Connect Router" interface after the connection is successful.

Step:8. Click "SSID" to select the network.

Step:9. Connect to a WiFi with normal Internet access..


Step:10. After confirming that the router password is entered correctly, click the "OK" button.

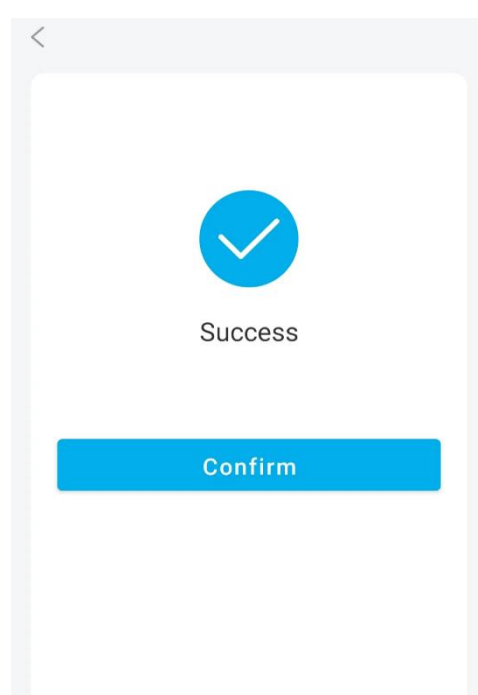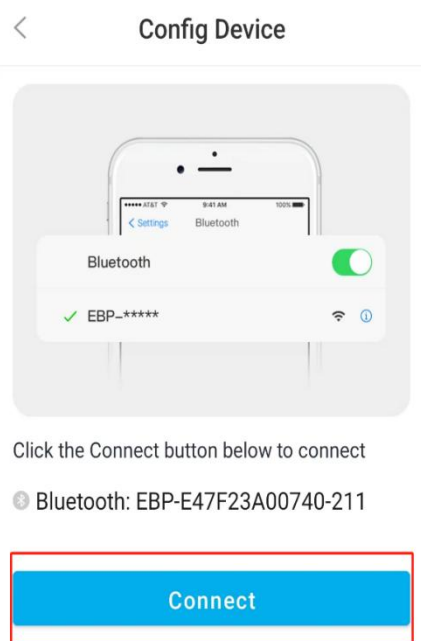

1.2. When selecting "Find Device" to connect the collector, the operation steps are as follows.


Steps:1. Select "Bluetooth".

Steps:2 First check the radio box with the prompt content "Check to confirm that the above conditions are met " and then click the "Connect" button.

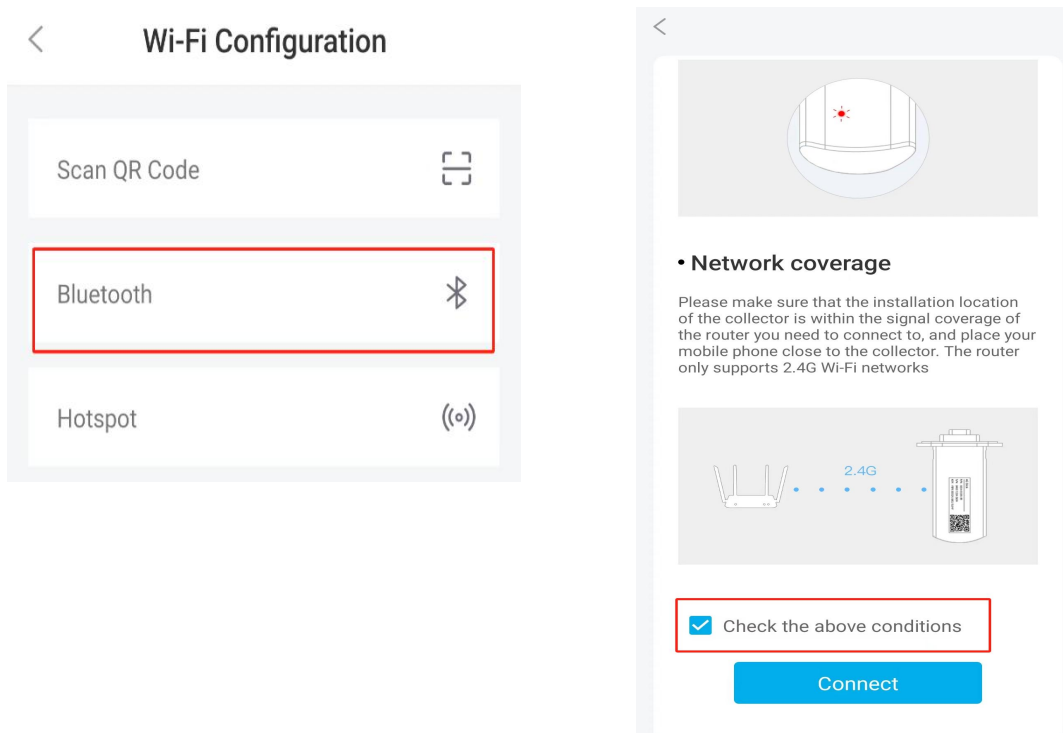



Steps:3. The APP will search for the surrounding configurable Wi-Fi devices and list them as a list. Please select the network that connects to the device serial number starting with "EBP-"

Steps:4.Select the router to connect to the gateway.Enter the router password and click the "OK" button.

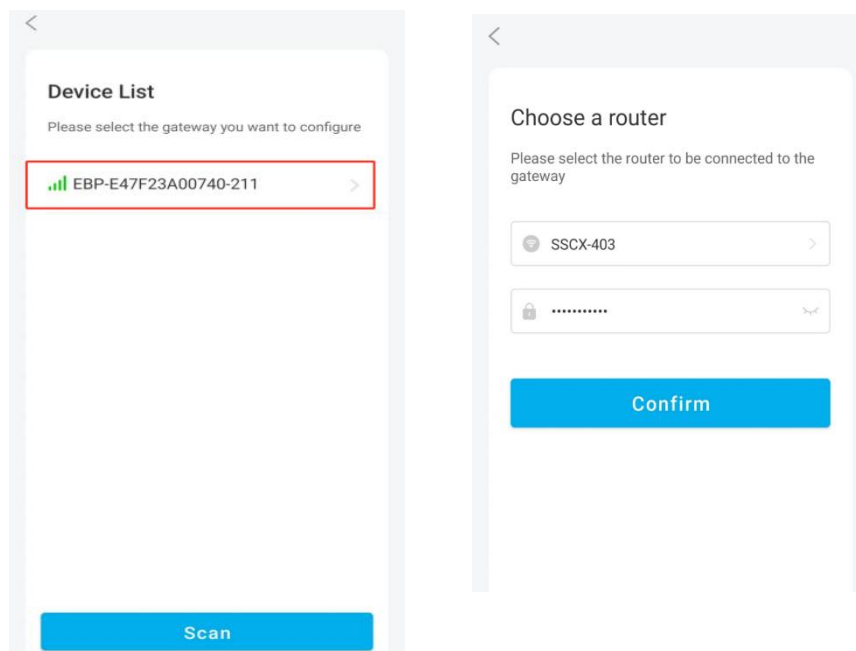

Steps:5.Waiting for connection.

Steps:6.when the page jumps to the connection "Success", click the"Finish" button to return to the home page.

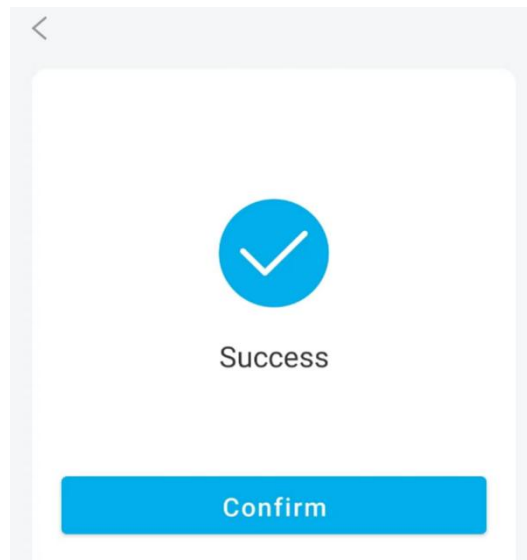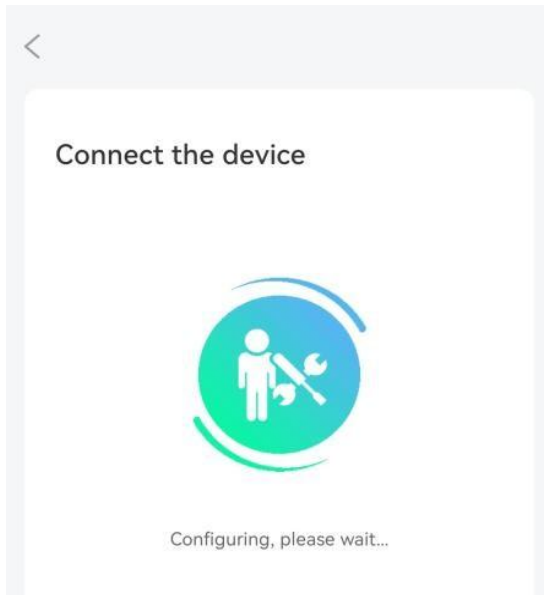



NOTICE

Prerequisites: Wi-Fi and location services must be enabled in advance. Please ensure that the device is powered on. When the device is powered on, the red LED lights around the device must be on

6.2. 1Equipment network (IOS)

Steps:1. Select "Hotspot".

Steps:2 First check the radio box with the prompt content "Check to confirm that the above conditions are met", and then click the "Connect" button.

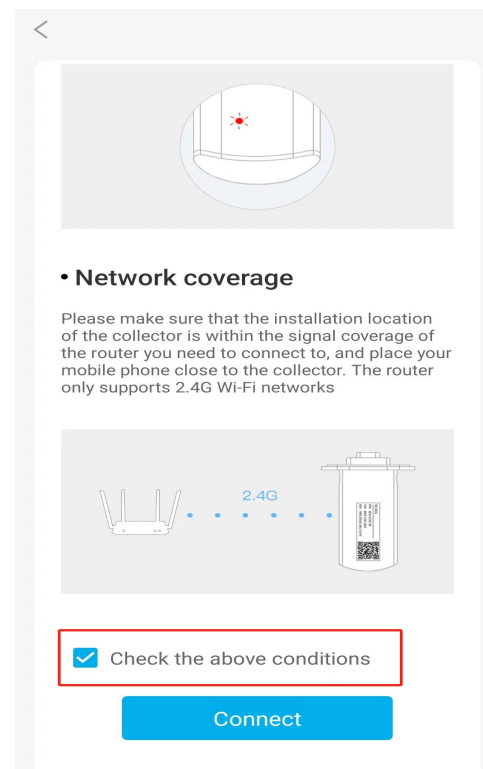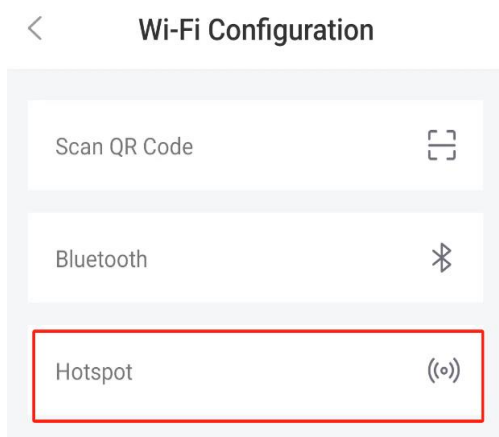


Steps:3.ios needs to go to the system settings to manually connect to the WiFi prefixed with "EBP-".

Steps:4.The APP will search for Wi-Fi devices that can be configured around and list them as list.Please select the network starting with "EBP." and the last 5 digits of the device serial number to jump to the "Select Router" interface.



Steps:5. After confirming that the router password is entered correctly, click the "OK" button.

Steps:6 .when the page jumps to the connection "Success" , click the "Finish" button to return to the home page.

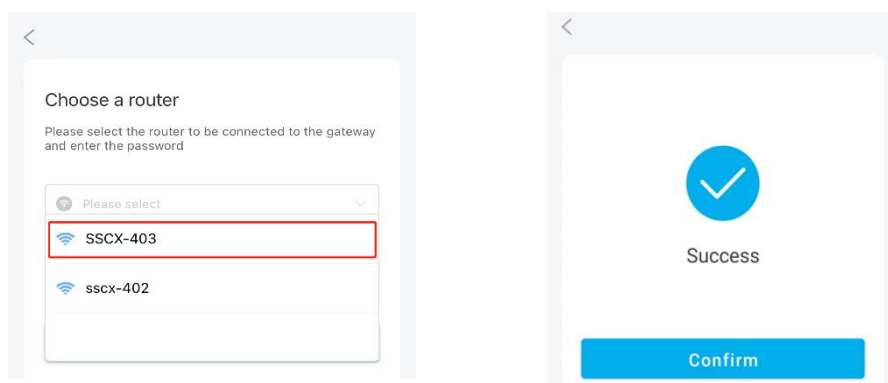


Steps:7. If you can't find WiFi, you need to check whether the local network permission of the mobile phone is enabled.



6.2.2 Equipment network (Android)


Step:1. Select "Hotspot".

Step:2.First check the radio box with the prompt content "Check the above conditions" are met, and then click the "Connect" button.

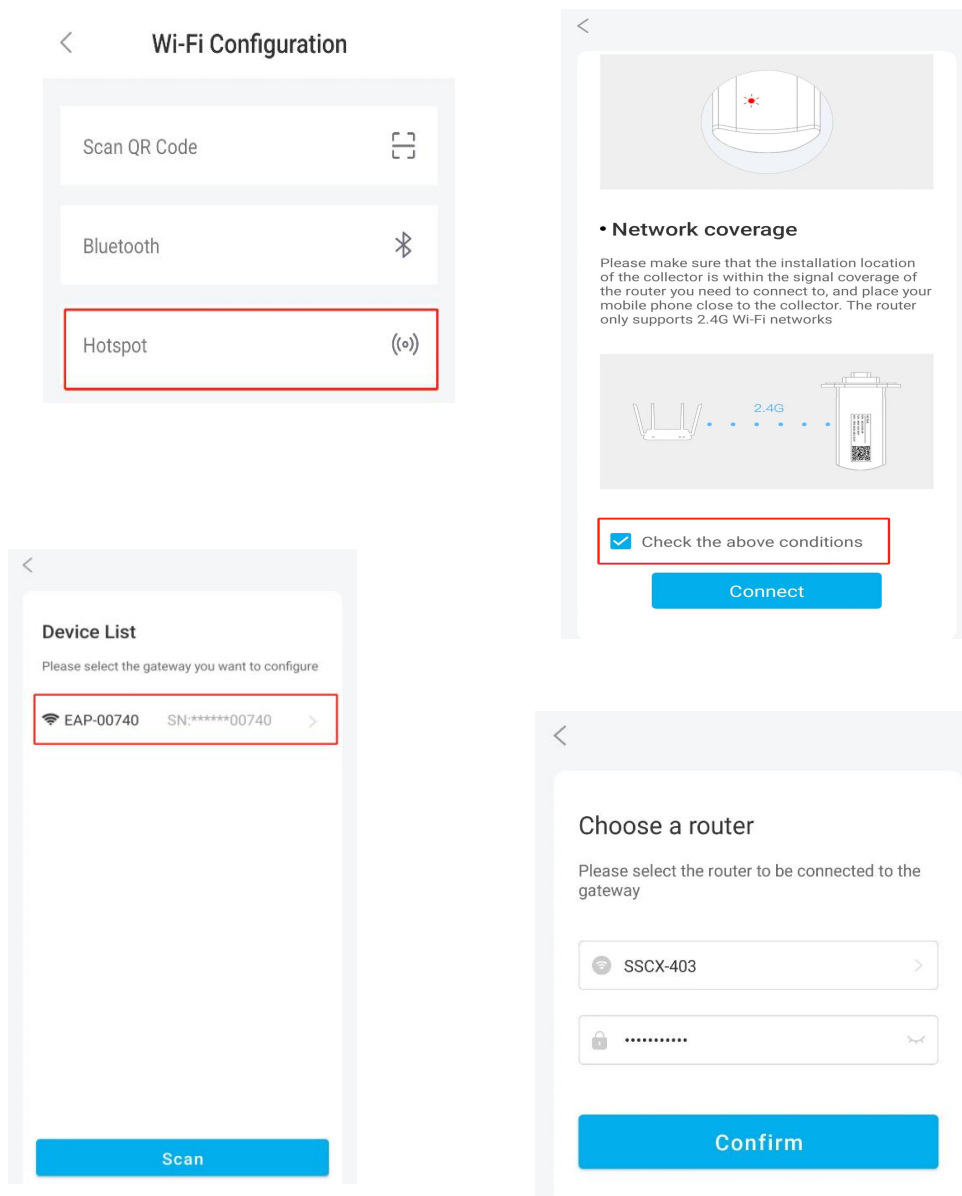

Step:3.The APP will search for Wi-Fi devices that can be configured around and list them as a list, please select a network starting with EBP." and the last 5 digits of the device serial number.



Step:4.Select the router to connect to the gateway. Enter the router password and click the "OK" button.

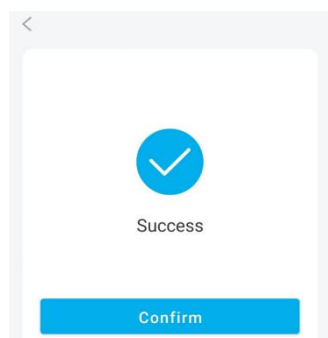

Prerequisites: WiFi and location service must be enabled in advance. Ensure that the device is powered on. When the device is powered on, red LED lights are always on around the device.

6.3 Device connection failed


During the connection process, if the page prompts "connection failed", please check the Wi-Fi password or check whether the gateway is within the signal coverage of the router.

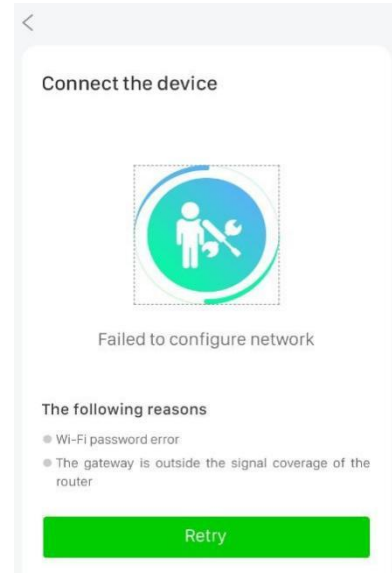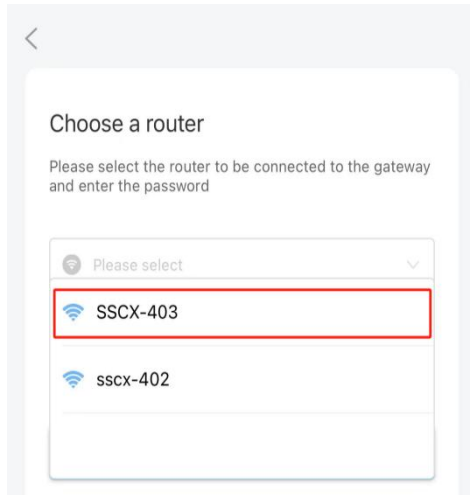

7. Plant management

If you need to check the current status, equipment, and abnormal information of a power station, the specific operations are as follows.

7.1. Enter plant overview

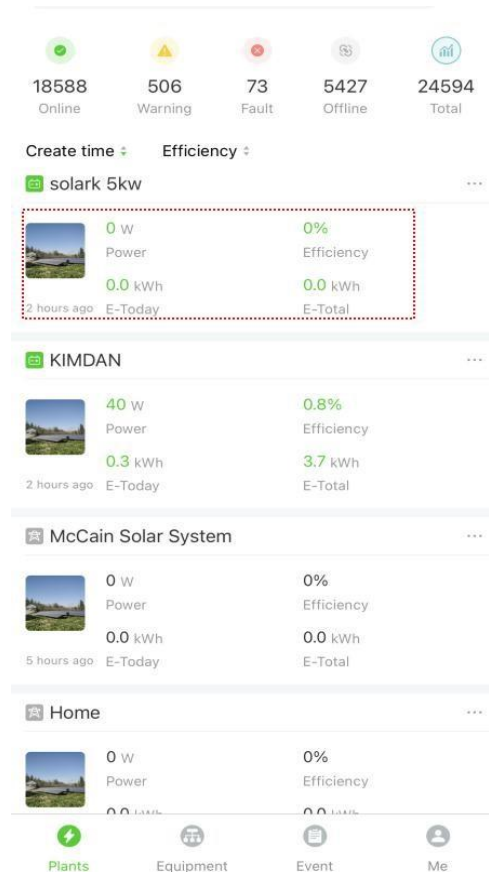

Steps:1. Select the power station you want to view in 【Power Station list】 ,and click the corresponding power station name to enter the power station 【Overview】 page.


"Energy Flow Diagram".

"Use for Power Generation".

" Weather info"


"Investment return rate"

"Energy Conservation"

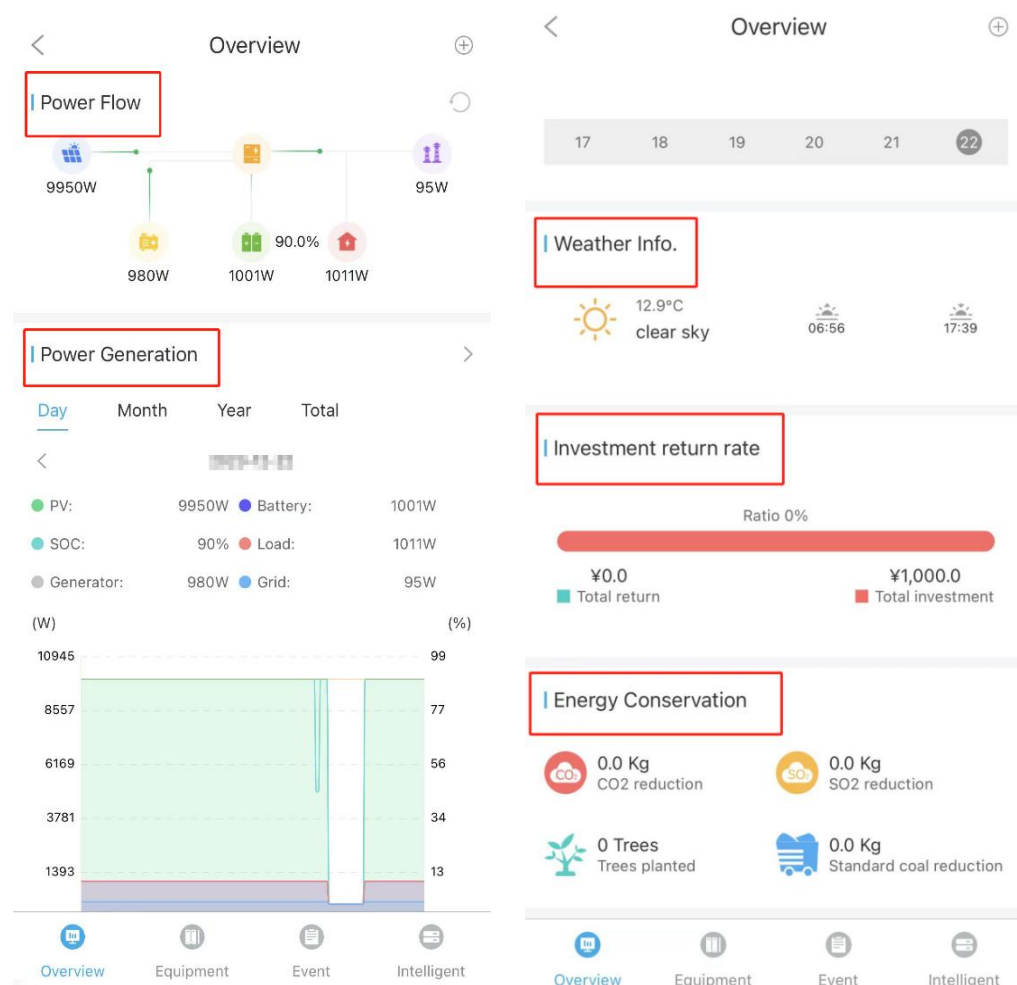


7.2.Enter device page

On the 【Overview】 page of the power plant, click the "Device" menu to switch to the "Device" page, where you can view all the devices in the power plant. In the [Device] page, click the operation "..." button in the upper right corner, you can set an alias for the device, and you can also configure parameters for the inverter. The steps are as follows.

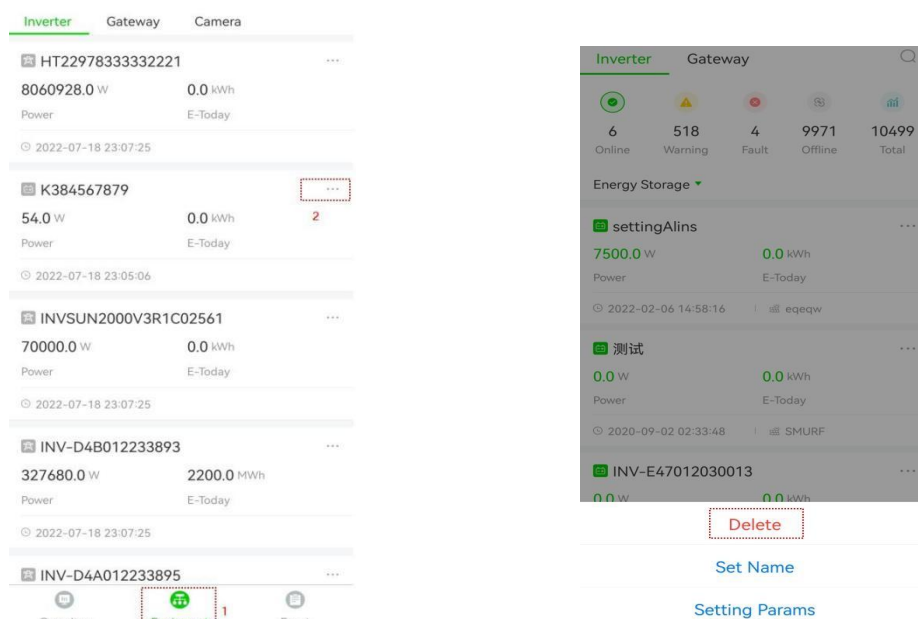

7.3. Enter event list

On the 【Overview】 page of the power station, click the "Event" menu to switch to the [Event] page. Click any "event", and you can view the abnormal information of the current power station on this page.


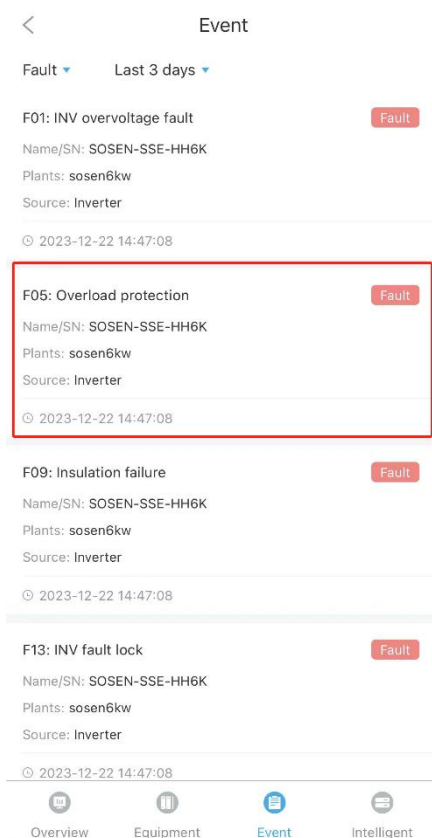


7.4. Delete plant


When you need delete a plant. Operation steps are as follows.

Step1: Click the bottom button "Plant", then click the "." in the upper right corner of the plant to see the options.

Step2: Select the "Delete" option in the red box and follow the prompts to complete the deletion.

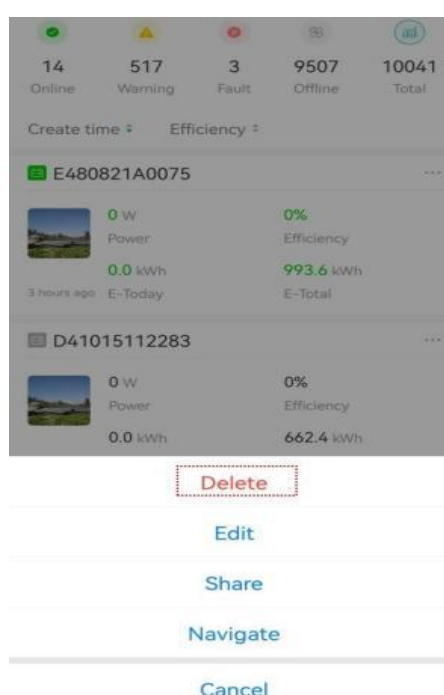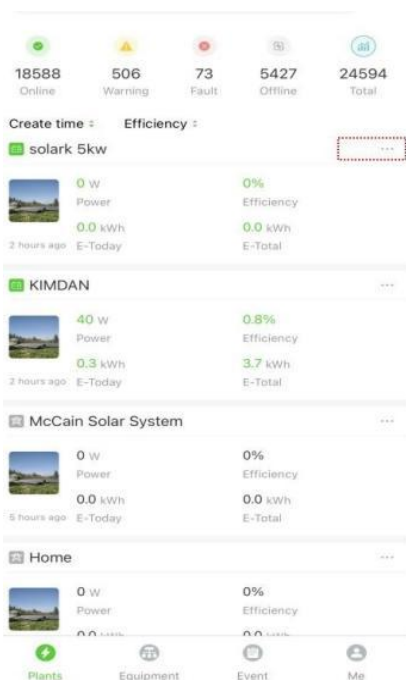

7.5. Confirm to delete

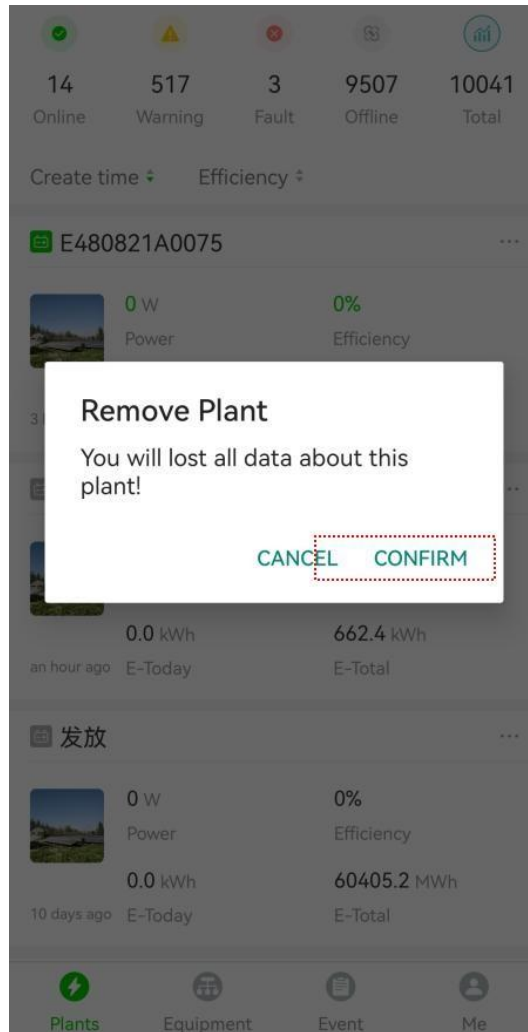

NOTICE

1. Only the operator who has the management authority of the Confirm to deleted plant .
2. The plant cannot be restored after being deleted. Please confirm before deleting!

7.6. Edit plant



When the information of a plant needs to be modified. Operation steps are as follows.

Steps:1 .Click the bottom button "Power Station " and click the "... " button in the upper right corner of the power station to view the operation options.

Steps:2 Click the "Edit" button to enter the [Edit Power Station] page to complete the modification of power station information.

Steps:3 Enter the content that the power station needs to modify, and click the "Save" button after completion.

Steps:4 After the input information is correct, the page prompts "edited successfully".

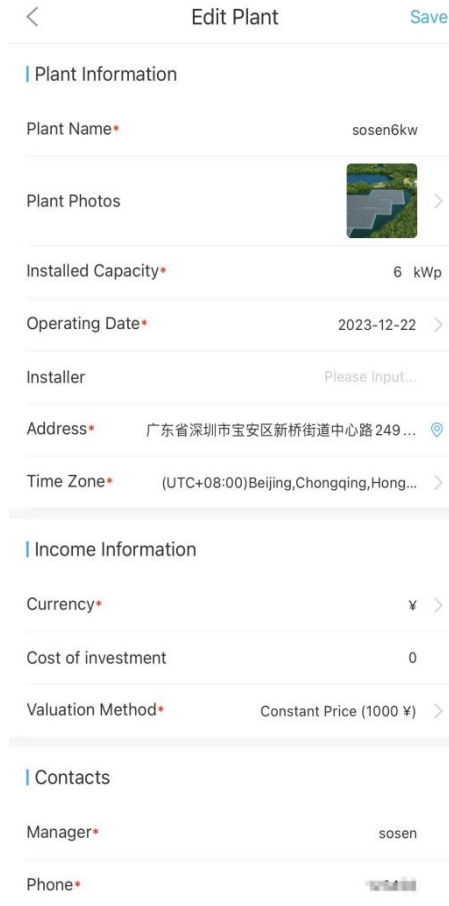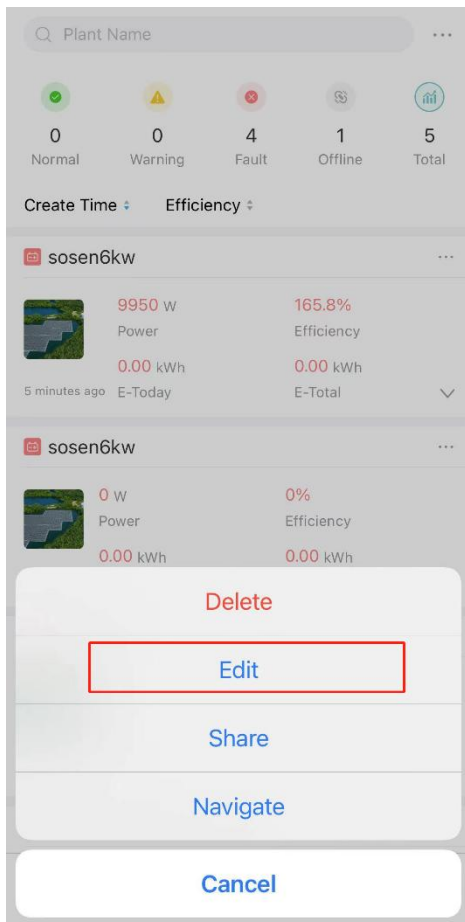

NOTICE

Editing plant function requires management permission for the edited plant.

7.7. Share plant



You can share a plant by "Share Plant" function when you need to share it with others. Operations are as follows.

Steps: 1. Click the bottom button "Power Station", and click the ".."button in the upper right corner of the power station to view the operation options.

2.Select "Share" to enter the [share Station] page.

3.Shared power plants can be shared with other accounts using two permissions.

4.Enter the SOSEN Energy account of the shared person to complete the sharing.

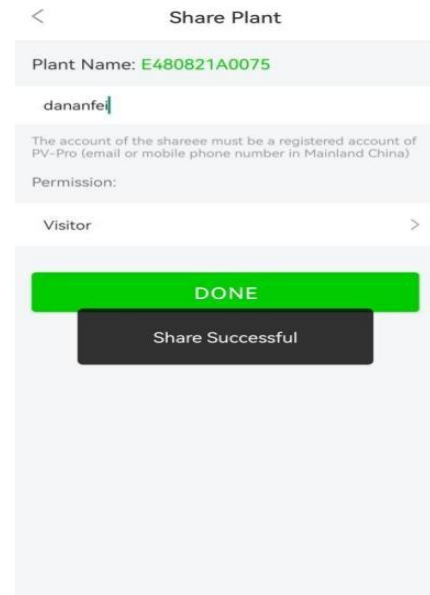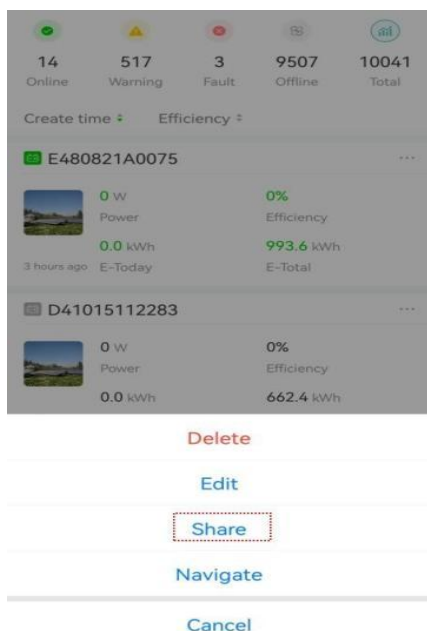


The account of the shared person is the registered account of PV-Pro (email or mobile phone number in mainland China).

8. Inverter management

8.1 Enter inverter list

Click "equipment" at the bottom to enter the inverter list page, click an inverter to view the detailed information and working data of the inverter.

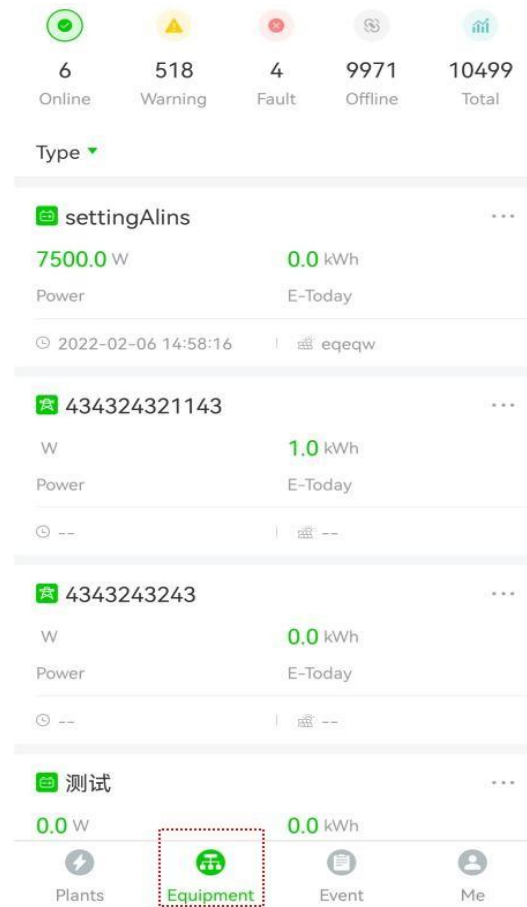


8.2. Parameter settings step:1. Click the "..." button to view the operation options of the inverter.

step:2.Select "Parameter Settings".

step:3.Go to the "Grid Settings" page.

step:4.Enter the parameter information and click the "Save" button in the upper right corner.


step:5.After the device command is issued successfully, the content shown in the figure above will be prompted.

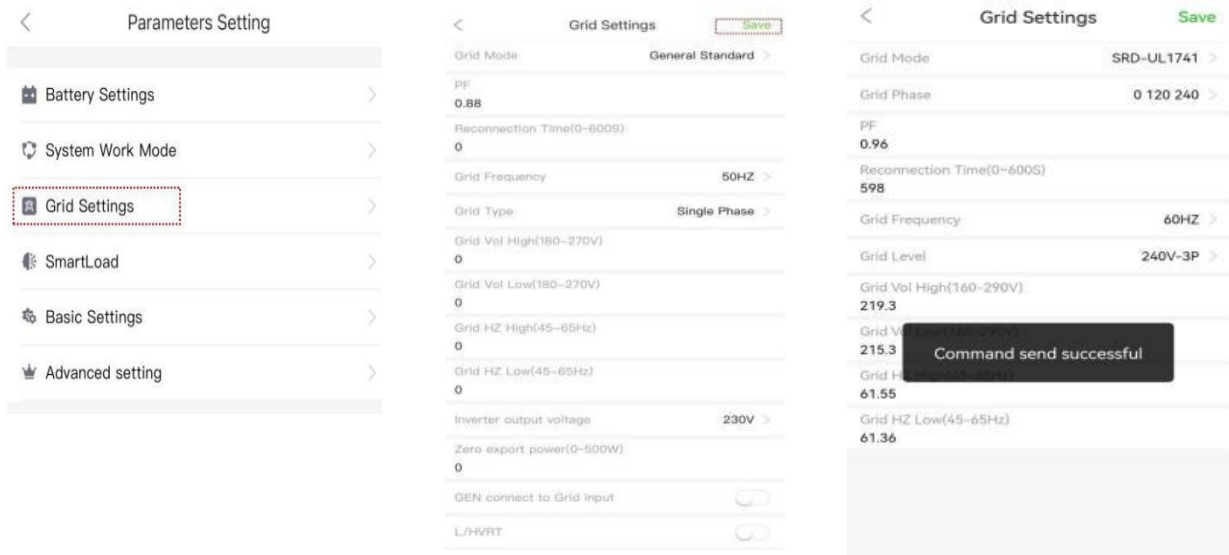

- 1.The remote operation of the inverter requires the corresponding operation authority to operate.
- 2.Functions related to parameter configuration of the inverter can only be operated with the support of the inverter, and the current state of the inverter to be operated is "online" state.

8.3. Delete inverter

Select the inverter to be deleted in the inverter list, click the "-" button in the upper right corner of the inverter, and follow the prompts to complete the deletion.


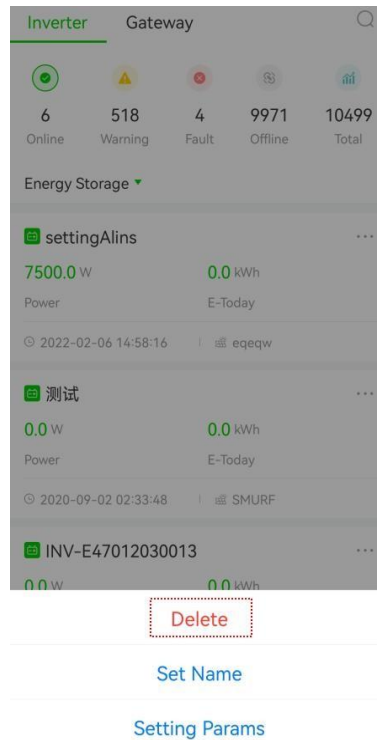


8.4. Inverter details

Inverters are divided into "energy storage", "string", and "micro-inverter". On the inverter list page, you can view the working data information of different types of inverters by selecting the type.

Steps:1. Click the inverter "Type" button and select the "Energy Storage" device.

Steps:2 Click the inverter "Type" button and select the "Energy Storage" device.

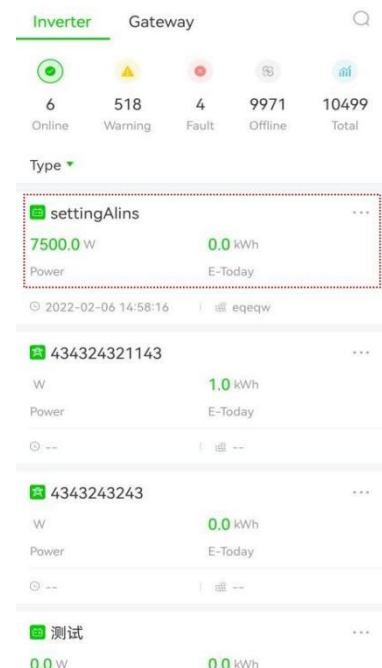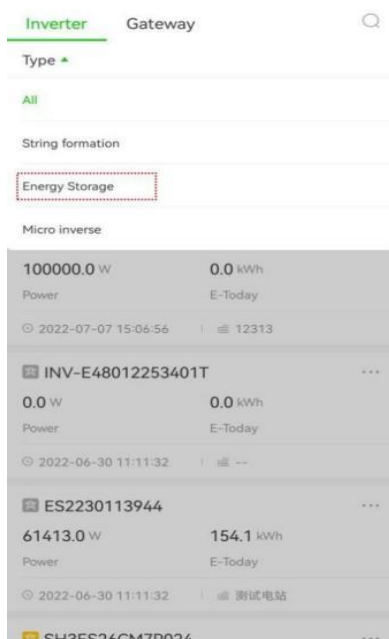

Steps:3 After entering the inverter details page, you can view the related information of the inverter's "Output", "Input", "Battery", "Grid", "Load", "Custom" and "Details". information.



1.2 View devices of type "string".

Inverter Gateway

Type

All

String formation

Energy Storage

Micro inverse

100000.0 W 0.0 kWh
Power E-Today
2022-07-07 15:06:56 12313


INV-E48012253401T

0.0 W 0.0 kWh
Power E-Today
2022-06-30 11:11:32 --

ES2230113944

61413.0 W 154.1 kWh
Power E-Today
2022-06-30 11:11:32 测试电站

SH2524CM7D024

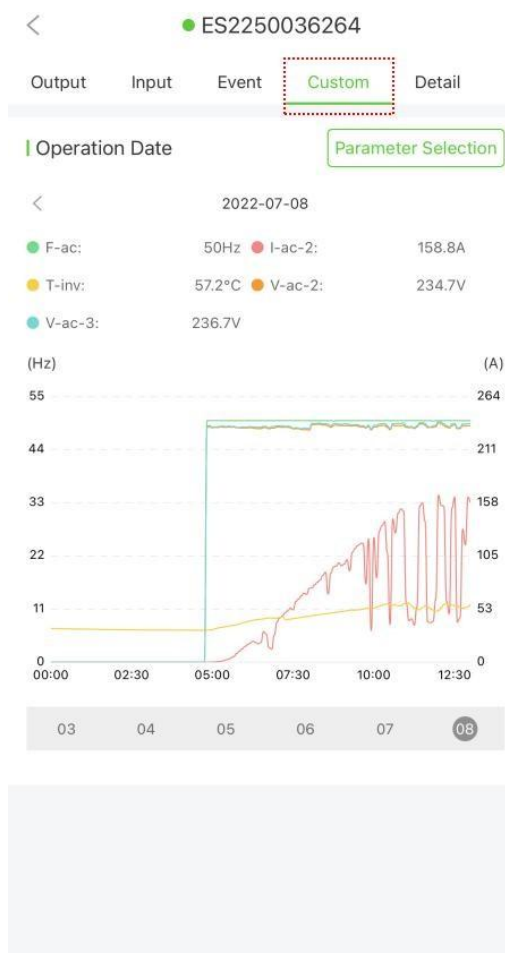


- 1.The remote operation of the inverter requires the corresponding operation authority to operate.
- 2.Functions related to parameter configuration of the inverter can only be operated with the support of the inverter, and the current state of the inverter to be operated is "online" state.

9. Gateway management

9.1 Collector Details

steps: 1 .Click on a collector to go to the details page.

steps: 2. view collector details.

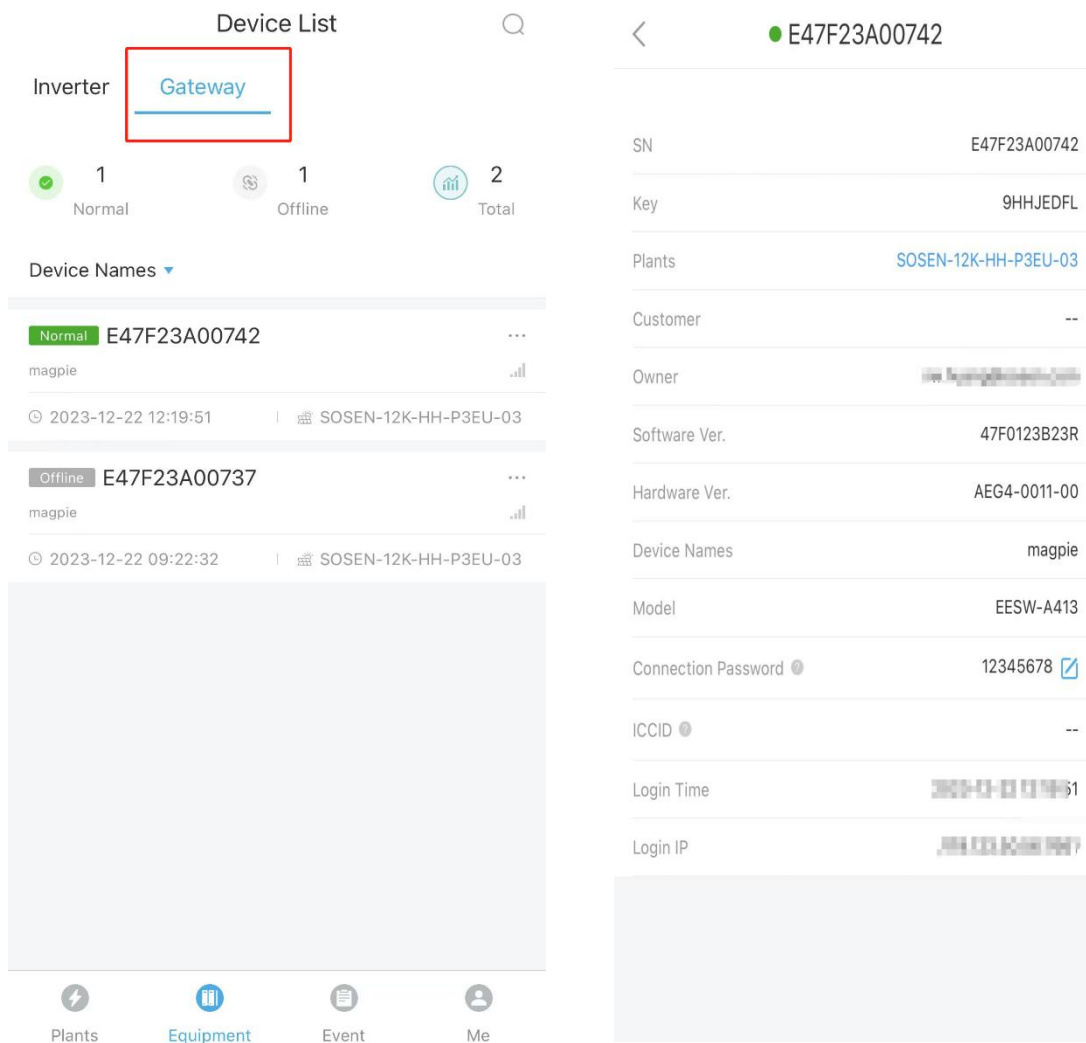

The screenshot displays the 'Gateway management' interface. On the left, the 'Device List' section shows a summary of gateway status: 1 Normal, 1 Offline, and 2 Total. Below this, a table lists individual gateways. The first gateway, E47F23A00742, is in a 'Normal' state and is highlighted with a red box around the 'Gateway' label. The second gateway, E47F23A00737, is in an 'Offline' state. Each entry includes a timestamp and the plant name 'SOSEN-12K-HH-P3EU-03'. On the right, the detailed view for gateway E47F23A00742 is shown, listing various attributes: SN, Key, Plants, Customer, Owner, Software Ver., Hardware Ver., Device Names, Model, Connection Password, ICCID, Login Time, and Login IP.

Device Name	Status	SN	Key	Plants	Customer	Owner	Software Ver.	Hardware Ver.	Device Names	Model	Connection Password	ICCID	Login Time	Login IP
E47F23A00742	Normal	E47F23A00742	9HHJEDFL	SOSEN-12K-HH-P3EU-03	--	magpie	47F0123B23R	AEG4-0011-00	magpie	EESW-A413	12345678	--	2023-12-22 12:19:51	192.168.1.1
E47F23A00737	Offline	E47F23A00737		SOSEN-12K-HH-P3EU-03									2023-12-22 09:22:32	

9.2. Unbind collector

Select the collector to be unbound in the collector list, click the "..." button in the upper right corner of the collector, and follow the prompts to complete the unbinding.




10. Event information

Click "Event" at the bottom to enter the event list page, you can view the device event information, and you can select the event type to view the details according to your customization.

Steps: 1. Click on an event at random to enter the event details page.



Steps:2. view event details.

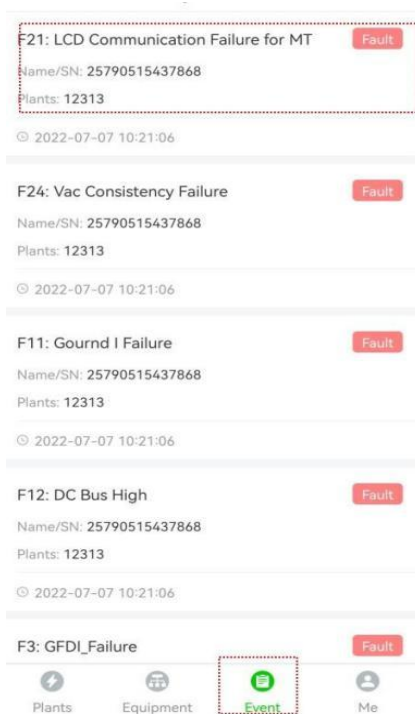

11. Personalization

11.1. Language

- 1.Click the "Personal" button at the bottom, enter the personal center, and choose to switch languages.
- 2. select "Simplified Chinese".

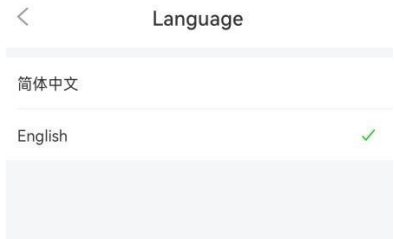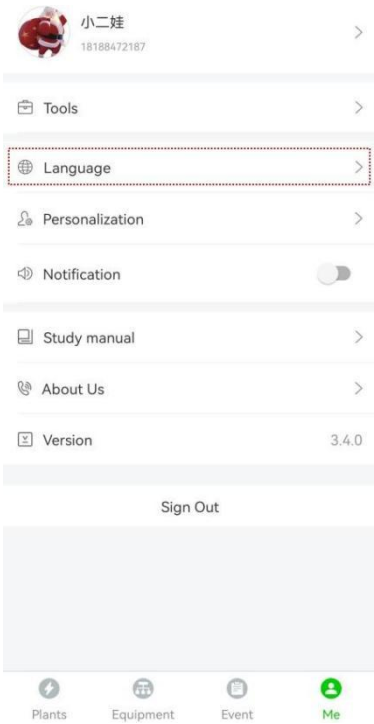

11.2. Preferences

- Click the "Personal" button at the bottom to enter the Personal Center and select Preferences.
- select a temperature unit.

