



CDR7011

**DVD Multimedia Receiver with Bluetooth®
featuring a 7" Touch Screen Display**

INSTALLATION & OWNER'S MANUAL



JENSEN®

JENSEN

CDR7011 INSTALLATION

Safety Notes

Video playback will not operate while the vehicle is moving. This is a safety feature to prevent driver distraction. In-dash video functions will only operate when vehicle is in Park and the parking brake is engaged. It is illegal in most jurisdictions for the driver to view video while the vehicle is in motion.

Copyright Notes

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc.

Other trademarks and trade names are those of their respective owners.

Table of Contents

	Page
Warning Statement	4
Safety Information/Precautions	5
Preparation/Mounting	6
Wiring Diagram	7
Control Locations.	8
General Operation	9-10
AM/FM Tuner Operation	11-12
Media Player Operation	13
Media Compatibility	14-16
DVD Operation	17-18
Bluetooth Operation	19-20
Auxiliary Inputs/Rear Camera Operation.	21
SWC Input Operation	22
Notes	23
Troubleshooting	24
Specifications.	25
Warranty	26
FCC Compliance	27

⚠ WARNING ⚠

Upon installation of this monitor/media player ("unit") into a vehicle, the driver of the vehicle must not operate this unit by watching videos or playing video games while driving. Failure to follow this instruction could lead to driver distraction which could result in serious injury or death to the vehicle's occupants or persons outside the vehicle and/or property damage.

Several states prohibit the installation of monitors/media players if the screen is visible from the driver's seat. If you reside in a jurisdiction which has enacted such a law, this unit must not be installed so that the screen is visible from the driver's seat. When installing this unit in the front console/dashboard, the unit must be positioned so that it is facing the front passenger seat only. Failure to follow this instruction could lead to driver distraction which could result in serious injury or death to the vehicle's occupants or persons outside the vehicle and/or property damage.

This unit is designed so that it may be operated only when the vehicle is in "Park" and the parking brake is fully engaged. To this end, this unit includes a parking brake lock-out feature which prohibits the unit from operating if the vehicle is not in "Park" and/or the parking brake is not fully engaged. When installing this unit, the installer must connect the parking brake detect wire to the parking brake mechanism in order to make the parking brake lock-out feature operable. **DO NOT** simply ground the parking brake detect wire to a metal portion of the vehicle. Failure to properly install the parking brake lock-out feature could lead to driver distraction which could result in serious injury or death to the driver's occupants or persons outside the vehicle and/or property damage.

Once the parking brake lock-out feature is installed, the owner/user must not attempt to disrupt/neutralize the parking brake lock-out feature by (a) partially engaging the parking brake and/or (b) purchasing/using any device or unit designed to send necessary brake signals to the unit. Failure to follow these instructions could lead to driver distraction which could result in serious injury or death to the driver's occupants or persons outside the vehicle and/or property damage.

When operating this unit, keep the unit's volume level low enough so that the vehicle's occupants can hear traffic-related sounds such as police and emergency vehicles. Failure to follow this instruction could lead to driver distraction which could result in serious injury or death to the vehicle's occupants or persons outside the vehicle and/or property damage.

Safety Information

Please read all instructions carefully before attempting to install or operate.

Due to its technical nature, it is highly recommended that your radio is installed by a professional installer or an authorized dealer. This product is only for use in vehicles with 12VDC negative ground only.

To prevent damage or injury:

- Make sure to ground the unit securely to the vehicle chassis ground.
- Do not remove the top or bottom covers of the unit.
- Do not install the unit in a spot exposed to direct sunlight or excessive heat or the possibility of water splashing.
- Do not subject the unit to excessive shock.
- When replacing a fuse, only use a new one with the prescribed rating. Using a fuse with the wrong rating may cause the unit to malfunction.
- To prevent short circuits when replacing a fuse, disconnect the wiring harness first.
- Use only the provided hardware and wire harness.
- You cannot view video while the vehicle is moving. Find a safe place to park and engage the parking brake.
- If you experience problems during installation, consult your nearest Jensen dealer.
- If the unit malfunctions, reset the unit as described on page 10 first. If the problem still persists, consult your nearest Jensen dealer or call tech assistance @ 1-888-921-4088.
- To clean the monitor, wipe only with a dry silicone cloth or soft cloth. Do not use a stiff cloth, or volatile solvents such as paint thinner and alcohol. They can scratch the surface of the panel and/or remove the printing.
- When the temperature of the unit falls (as in winter), the liquid crystal inside the screen will become darker than usual. Normal brightness will return after using the monitor for a while.
- When extending the ignition, battery or ground cables, make sure to use automotive-grade cables or other cables with an area of 0.75mm (AWG 18) or more to prevent voltage drops.
- Do not touch the liquid crystal fluid if the LCD is damaged or broken. The liquid crystal fluid may be hazardous to your health or fatal. If the liquid crystal fluid from the LCD contacts your body or clothing, wash it off with soap immediately.

FCC Compliance

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Preparation


Please read entire manual before installation.

Before You Start

- Disconnect negative battery terminal. Consult a qualified technician for instructions.
- Avoid installing the unit where it would be subject to high temperatures, such as from direct sunlight, or where it would be subject to dust, dirt or excessive vibration.


Getting Started

- Remove trim ring from unit.
- Remove 2 transit screws located on top of the unit.
- Insert the supplied keys into the slots as shown, and slide the unit out of the mounting sleeve.
- Install mounting sleeve into opening, bending tabs to secure.
- Connect wiring harness and antenna. Consult a qualified technician if you are unsure.
- Certain vehicles may require an installation kit and/or wiring harness adapter (sold separately).
- Test for correct operation and secure back into dashboard.
- Snap trim ring into place if needed.

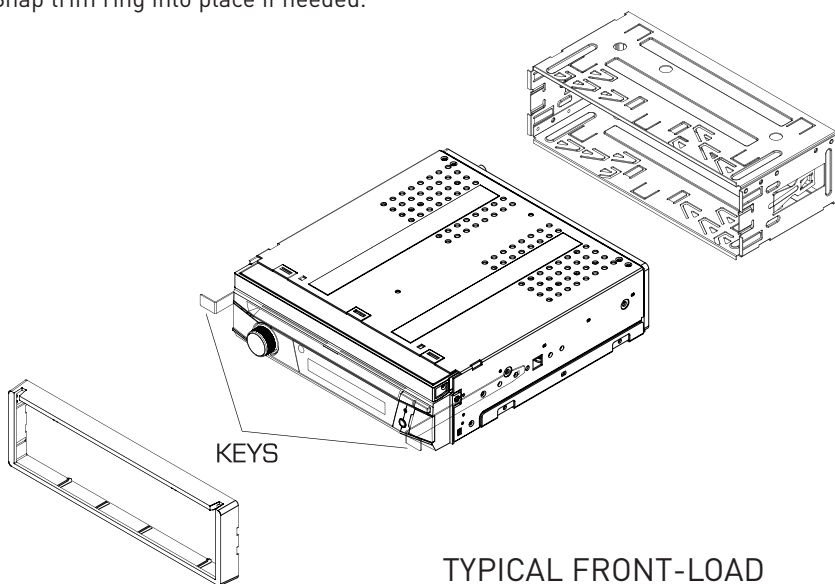

TYPICAL FRONT-LOAD
DIN MOUNTING METHOD

Wiring Diagram

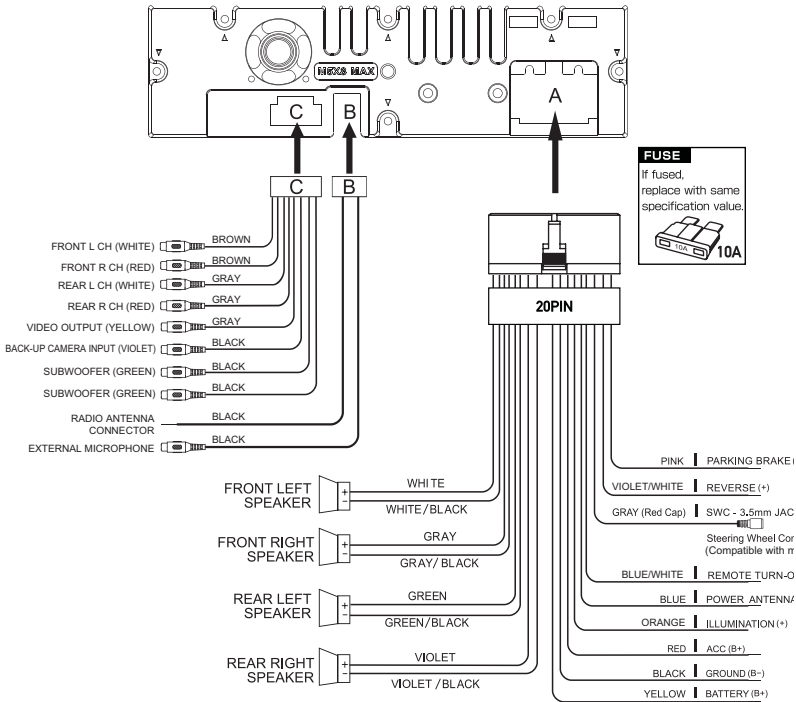

Note:

When replacing a fuse, make sure to use the correct type and amperage. Using an incorrect fuse could cause damage. The unit uses (1) 10 amp blade-type fuse located on the back of the unit.

Wiring Notes:

Subwoofer Output

The subwoofer preamp output (black jacket with green RCA) is active in all audio modes.

Rear camera input





A rear view camera (not included) can be used with the **Camera** input.

Control Locations




- | | | |
|----------------------------|--------------------------|----------------|
| ① Source / Power | ⑤ Tune/Track Down / Call | ⑨ Reset Button |
| ② Mode / Voice Activation | ⑥ Disc Slot | ⑩ Panel Open |
| ③ Volume / Mute | ⑦ Auxiliary Input | ⑪ Eject |
| ④ Tune/Track Up / End Call | ⑧ USB Slot | |

General Operation

Power On/Off	Press  or any other button (except Eject) to turn the unit on. Press and hold  to turn the unit off.
Source	Press SRC to access available input modes: Radio, Disc, USB, Bluetooth Phone, Bluetooth Audio, AUX, Camera and Settings. Disc or USB device must be connected/inserted to appear in the mode selection string.
Volume	Rotate the volume knob to increase or decrease the volume level.
Mute	Momentarily press  to silence the audio. Momentarily press  again to return to the previously selected volume. Rotating the volume knob while the muted will also cancel the mute function.
Auxiliary Input	Connect external audio devices to the 3.5mm auxiliary input on the front panel.
USB Port	Connect a USB device to the USB port on the front panel to play MP3 files or view AVI, MP4 video files or JPG photos.
Main Menu	From any operational mode, press the arrow icon in the top left corner to access the Main Menu screen. Use the right and left arrows in the bottom corners to navigate between the two Main Menu screens, and touch any icon to directly access the corresponding mode.

1. Radio
2. Media Player
3. Bluetooth Phone
4. Disc
5. USB
6. Bluetooth Audio
7. Auxiliary Input
8. Rear Camera
9. Settings

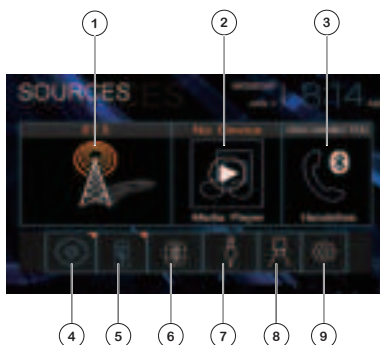

General Operation


Setup Menu

From the Main Menu screen, select **Settings** to access the Setup menu and select from categories displayed on the left side of the screen: General, Clock, Audio, Bluetooth, Display and About. Use the touch screen to navigate and adjust individual options within each category.



Audio Settings:


1. Volume
2. EQ Settings
3. EQ On/Off
4. Loudness On/Off
5. EQ Reset
6. Return to Source
7. EQ Presets / Custom
8. Balance / Fader

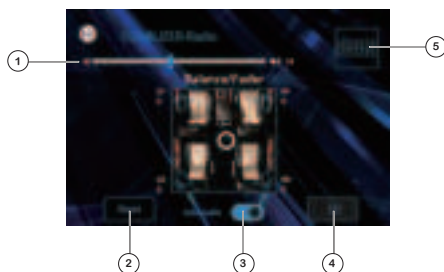

Balance/Fader Settings:

1. Volume
2. Fader Reset
3. Subwoofer On/Off
4. Return to Source
5. Return to EQ Controls

Radio Operation

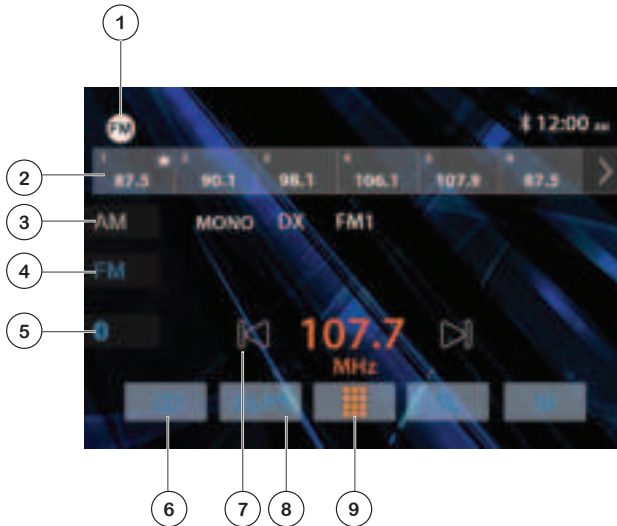

Radio Operation	Select the Radio icon from the Main Menu screen.
Current Mode / Main Menu ①	Displays current mode of operation. Press to return to Main Menu screen.
Tuner Presets ②	Displays the preset stations stored in the current band. To store a preset station, tune unit to desired station, then press and hold the desired preset button to store the current station in that preset spot. Up to 18 FM and 12 AM stations can be stored in memory. Momentarily press any preset station to play it instantly.
AM ③	Press to access AM bands.
FM ④	Press to access FM bands.
Bluetooth ⑤	Press to directly access Bluetooth hands-free mode.
Stereo / Mono ⑥	Press to select Stereo or Mono operation.
Tune Down ⑦	Press to tune down by seeking the next strong station. Press and hold to tune manually and adjust the frequency one step at a time.
AS/PS ⑧	Press and hold to automatically store the six strongest stations in the current band as presets. Press briefly to scan all preset stations in the current band.
Direct Tuning ⑨	Press to directly enter the desired station number and begin playback of that station.

Radio Operation



- | | |
|-------------------------|--|
| Station Number ⑩ | Displays the current station number. |
| Station Search ⑪ | Press to search for a specific station. |
| Tune Up ⑫ | Press to tune down by seeking the next strong station. Press and hold to tune manually and adjust the frequency one step at a time. |
| Audio Settings ⑬ | <p>Press to enter the Audio Settings menu and adjust the following audio options:</p> <ul style="list-style-type: none"> • EQ - Use the touch screen to adjust equalization curves to suit individual listening preferences. The following equalizer frequencies are available for adjustment: 62Hz, 150Hz, 400Hz, 1KHz, 3KHz, 7KHz, 12KHz, 16KHz. An adjustment range of +16dB to -16dB is available for each frequency band. • Fader-Balance - Use the touch screen to adjust the balance of the audio output levels throughout the vehicle (+6dB to -6dB). The fader adjusts levels front to back, and the balance adjust from left to right. • Loudness - Use the touch screen to adjust Loudness (On or Off). • SRC Level - Adjust audio levels for each audio source (Disc, USB, etc.) |
| Band ⑭ | Press to select between 2 AM and 3 FM bands. |

Media Player Operation



Media Player Operation

Current Mode/Main Menu ①

Select the Media Player icon from the Main Menu screen.

Bluetooth Music ②

Shows current mode of operation. Press to return to Main Menu.

USB ③

Press to access Bluetooth music.

Bluetooth Phone ④

Press to access files on USB device.

Random ⑤

Press to access Bluetooth phone.

Tune Down ⑥

Press to enable or disable Random playback.

Repeat ⑦

Press << to tune radio to a lower frequency. Press and hold to tune the unit down one step at a time.

Direct File Entry ⑧

Press to enable or disable Repeat playback.

Play / Pause ⑨

Press to display the keypad and enter the desired file number.

File List ⑩

Press to pause or resume playback.

Tune Up ⑪

Press to display a list of all files on the device.

Audio Settings ⑫

Press >> to tune radio to a higher frequency. Press and hold to tune the unit up one step at a time.

Time Indicator ⑬

Press to access and adjust audio settings.

ID3 Metadata ⑭

Displays elapsed time/remaining time for the current file.

Displays current file information.

Media Compatibility - CD/DVD

File Type				MP3
File System	ISO9660	Level 1, Level 2		✓
		Level 3		X
	ISO9660 Extension	JOLIET	Playback	✓
			Filename	32 bytes
	Other Extensions	ROMEO	Playback	X
			Filename	X
Apple ISO			X	
File Extension	.mp3/.MP3/.Mp3/.mP3			✓
	.rmp/.m4a			X
MPEG Format	MPEG 1			✓
	MPEG 2			✓
	MPEG 2.5			✓
Sampling Frequency	MPEG 1			32/44.1/48kHz
	MPEG 2			12/16/22.05/24kHz
	MPEG 2.5			8/11.025/12kHz
Bitrate	MPEG 1			32 ~ 320kbps
	MPEG 2			8 ~ 160kbps
	MPEG 2.5			8 ~ 160kbps
Other Information	Directory Depth			Unlimited
	File Name Length			32 bytes
	Total File Number			2000 files
	Total Folder Number			200 folders
	File Number via Folder			2000 files
	MP3 ID3 TAG	ver.1.x		✓
ver.2.x		✓		
Title, Artist, Album		✓		

Notes:

- It is not possible to view JPG files on the in-dash monitor while the vehicle is moving. This is a safety feature to prevent driver distraction.
- The JPG image viewer function will only operate when vehicle is in park and the parking brake is engaged.

Media Compatibility - USB

File Type			MP3
File System	FAT	FAT 12	X
		FAT 16/FAT 32	✓
File Extension	.mp3/.MP3/.Mp3/.mP3		✓
	.rmp/.m4a		X
MPEG Format	MPEG 1		✓
	MPEG 2		✓
	MPEG 2.5		✓
Sampling Frequency	MPEG 1		32/44.1/48kHz
	MPEG 2		12/16/22.05/24kHz
	MPEG 2.5		8/11.025/12kHz
Bitrate	MPEG 1		32 ~ 320kbps
	MPEG 2		8 ~ 160kbps
	MPEG 2.5		8 ~ 160kbps
Other Information	Directory Depth		Unlimited
	File Name Length		32 bytes
	Total File Number		2000 files
	Total Folder Number		200 folders
	File Number via Folder		2000 files
	MP3 ID3 TAG	ver.1.x	✓
		ver.2.x	✓
		Title, Artist, Album	✓

Notes:

- For USB mode, it is not possible to view JPG files on the in-dash monitor while the vehicle is moving. This is a safety feature to prevent driver distraction.
- The JPG image viewer function will only operate when vehicle is in park and the parking brake is engaged.
- Due to ongoing technological advancement, some USB flash drives may be incompatible with this unit.

Media Compatibility

Media Compatibility

The following types of discs/files are compatible:

- CD-DA, CD-ROM (ISO), CD-R, CD-RW
- DVD Video, DVD+R/RW, DVD-R/RW

The following types of discs/files are not compatible:

- WMA files that are protected by DRM (Digital Rights Management)
- WMA lossless format
- Discs recorded with Track At Once or packet writing
- MP3 PRO format, MP3 playlists
- RMP format
- WAV format
- WMV format
- AAC, protected AAC, M4A format

Some recordable DVD's and CD's may be incompatible with this unit, depending on media type and recording method.

Playback Order

MP3 playback sequence begins in the root folder of the disc, USB flash drive or SD card. Any empty folders or folders that do not include MP3/JPG files are skipped.

Compatible Recording Formats

ISO9660 standards:


- Maximum nested folder depth is 8 (including the root folder).
- Valid characters for folder/file names are letters A-Z (all caps), numbers 0-9, and "_" (underscore). Some characters may not be displayed correctly, depending on the character type.
- This device can play back discs in Joliet and other standards that conform to ISO9660. MP3 written in the formats other than the above may not play and/or their file names or folder names may not be displayed properly.

Notes

Some files may not play or be displayed correctly, depending on sampling rates and bit rates.

For best results, use the following settings when ripping MP3 files:
128kbps or higher constant bit rate
44.1kHz or higher sampling frequency


DVD Operation

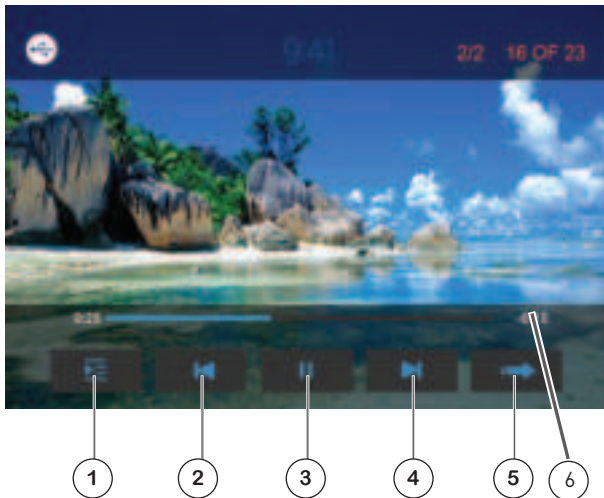

Inserting a Disc

Insert disc into the slot, and playback will begin automatically. Sub-menus may have to be pressed to access the DVD content. Read the directions of your specific DVD disc for other features.

Ejecting the Disc

Press  to eject the disc.

Touchscreen Controls

Press anywhere on the LCD to display touch screen controls.

Disc Menu ①

Press to select disc menu.

Audio Settings ②

Press to adjust audio settings.

Previous Chapter ③

Press to return to the previous chapter.

Play / Pause ④

Press to pause or resume playback.

Next Chapter ⑤

Press to advance to the next chapter.

Next Page ⑥

Press to display the next page of options.

DVD Operation



- | | |
|-----------------------|--|
| Direct Entry ⑦ | Enter a chapter number directly to begin playback. |
| Audio ⑧ | Press to access and adjust audio settings. |
| Repeat ⑨ | Press to repeat current chapter. |
| Random ⑩ | Press to enable or disable random playback. |
| Next Page ⑪ | Press to display the next page of options. |

Bluetooth Operation



Preparation

Before you can use a Bluetooth device, it must be paired and connected. Make sure that Bluetooth is activated on your device before you begin the pairing process.

Microphone

Connect an external microphone to the MIC jack in the back of the unit (no internal microphone is included).

Pairing a New Device

The unit broadcasts the pairing signal constantly when no devices are currently connected. Complete the pairing sequence from your Bluetooth device. Refer to the owner's manual for your device for more details. **The device name is "JENSES CDR7011". The Bluetooth passcode is "0000".** The unit can be in any mode of operation when pairing is performed. On certain phones, pairing may need to be done more than once.

Connecting a Paired Device

Most Bluetooth devices support the auto-connect feature and will connect automatically if the device is in range when the unit is powered-on. If your device was previously paired but does not connect, enter the Bluetooth setup menu and ensure that Auto Connect is On.

Bluetooth Phone

To access the phone, select Bluetooth Phone from the Main Menu or press the phone icon from any operational mode.

Current Mode / Main Menu ①

Displays current mode of operation. Press to return to the Main Menu screen.

Phone Keypad ②

Use the phone keypad to dial the desired phone number. Alternately, numbers can be dialed directly from the phone.

Display Keypad ③

Press to display phone keypad.

Contacts ④

Press to access the contact list.

Backspace ⑤

Press to backspace when typing a phone number.


Recent Calls ⑥

Press to display a list of recent calls.

Devices ⑦

Press to view available devices.

Bluetooth Operation

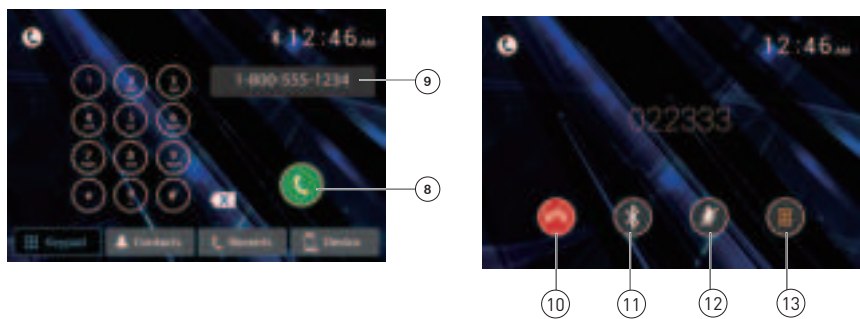

- | | | |
|---------------------|---|--|
| Talk | ⑧ | Press to connect a call. |
| Phone Number | ⑨ | Shows the phone number dialed. |
| End Call | ⑩ | Press to end the current call. |
| Settings | ⑪ | Press to transfer call between the head unit and the mobile phone. |
| Mute | ⑫ | Press to mute call audio. |
| Keypad | ⑬ | Press to display the keypad. |

Front 3.5mm Aux Input

Auxiliary Input

Connect an optional audio source into the 3.5mm (front panel) input.

Select auxiliary input from the Main Menu to listen to audio.

Adjust volume on the external audio source as needed (if connected to the headphone output of the device).

Rear Camera Operation - (Optional)

Using Rear Camera

Connect an optional rear camera to the Camera Input (Black RCA connector). Refer to the wiring diagram for details.

Manual selection - Touch CAMERA icon from the Main Menu or from any operational mode (when enabled) to select camera mode. Touch the top left area on the screen to exit camera mode.


Note: The manual mode is for dedicated cameras that are ALWAYS on while driving, it is not meant for cameras that are connected to the vehicle's reverse light.

Auto Selection

The unit will automatically select camera mode when connected to the reverse lamp circuitry.

Note: The external video output is not active when using the rear camera input.

Voice Assistant

Your receiver is designed with an easy access voice activation button to use Siri® or the Google Assistant™ via your car's Bluetooth. Interact with your smartphone assistant while you drive with only the push of a button! 

Bluetooth should be paired between your smartphone and the receiver. Press the voice activation button, and the receiver will switch into Bluetooth mode. This will activate Siri® or Google Assistant™ on your smartphone. You will need to manually switch back to the previous or desired mode once this operation is terminated.

SWC Input Operation

The built-in SWC Interface is compatible with PAC steering wheel control modules. The PAC SWI-RC is recommended. A third-party adapter must be used in order for the XDVD600 to be compatible with any steering wheel controls. The following controls are available for most vehicles.

1. Volume Up (+)	4. Preset (+)	7. Seek/Track Up (+)	10. BT Talk
2. Volume Down (-)	5. Preset (-)	8. Seek/Track Down (-)	11. BT End
3. Mute	6. Mode	9. Band	

Note: Not all OE steering wheel functions may be supported by the XDVD600.

PAC SWI-RC Installation Hints

1. Set "Radio Select Switch". Set the SWI-RC to position 7 - "Pioneer/Other/Sony".
2. To program, use the Pioneer/Sony/Other radio function mapping order for CDR171 units.
3. When programming the SWI-RC, if a function is not supported (or not desired), then the function MUST be skipped as per the PAC SWI-RC instructions.

Function Order	Function Mapping	SWI-RC (3.3VDC Reference)	
		Center Pin (Ring) Voltage (Function Select)	Tip Pin Voltage
1	Volume +	H 5.0v	2.07
2	Volume -	H 5.0v	2.32
3	Mute	H 5.0v	1.01
4	Preset +	L 0.0V	1.54
5	Preset -	L 0.0V	1.81
6	Source	H 5.0v	0.60
7	Seek + / Track +	H 5.0v	1.54
8	Seek - / Track -	H 5.0v	1.81
9	Band	H 5.0v	2.73
10	BT Talk	L 0.0V	0.60

Notes

Troubleshooting

Problem	Cause	Action
Unit will not turn on (no power)	Yellow wire not connected or incorrect voltage Red wire not connected or incorrect voltage	Check connections for proper voltage (11~16VDC)
	Black wire not connected	Check connection to ground
	Fuse blown	Replace fuse
Unit has power (but no sound)	Speaker wires not connected	Check connections at speakers
	One or more speaker wires touching each other or touching chassis ground	Insulate all bare speaker wires from each other and chassis ground
Unit blows fuses	Yellow or red wire touching chassis ground	Check for pinched wire
	Speaker wires touching chassis ground	Check for pinched wire
	Incorrect fuse rating	Use fuse with correct rating
Excessive skipping	Unit is not mounted correctly or backstrap is not secure	Check mounting sleeve and backstrap support
	Physical defect in media (CD, CD-R or CD-RW)	Check media for scratches
ERR FILE appears on display	Disc read error	Press eject or RESET
	Focus error or disc is in upside down	Press eject or RESET
NO FILE appears on display	No playable MP3files found on the device	Check the device for valid MP3 files
Unit will not accept a disc	CD mechanism position out of alignment	Press EJECT to reset CD mechanism position
	CD transit screws still in place	Remove 2 transit screws located on top of the unit
NO SUPPORT appears on display	An invalid ID3 tag version is present	Version 1.0 to 2.0 ID3 tags are supported.

Specifications

CD Player	Frequency response: 20Hz-20kHz Channel separation @ 1kHz: >60dB D/A converter: 1 Bit
FM Tuner	Tuning range: 87.5MHz-107.9MHz Usable sensitivity: 8.5dBf 50dB quieting sensitivity: 10dBf Stereo separation @ 1kHz: >30dB Frequency response: 30Hz-13kHz
AM Tuner	Tuning range: 530kHz-1710kHz Usable sensitivity: <42dBu Frequency response: 30Hz-2.2kHz
General	USB Charge: 1A Speaker output impedance: 4~8 ohms Line output voltage: 4 Volts RMS Dimensions: 7" x 7" x 2" (178 x 178 x 50 mm)

Design and specifications subject to change without notice.



CEA-2006 Power Standard Specifications (reference: 14.4VDC +/- 0.2V, 20Hz~20kHz)

Power Output: 16 Watts RMS x 4 channels at 4 ohms and $\leq 1\%$ THD+N
Signal to Noise Ratio: 80dBA (reference: 1 watt into 4 ohms)

Limited One Year (Or Two Year*) Warranty

This warranty gives you specific legal rights. You may also have other rights which vary from state to state.

Namsung America Inc warrants this product to the original purchaser to be free from defects in material and workmanship for a period of one year from the date of the original purchase.

Namsung America Inc agrees, at our option, during the warranty period, to repair any defect in material or workmanship or to furnish an equal new, renewed or comparable product (whichever is deemed necessary) in exchange without charges, subject to verification of the defect or malfunction and proof of the date of purchase. Subsequent replacement products are warranted for the balance of the original warranty period.

Who is covered? This warranty is extended to the original retail purchaser for products purchased from an authorized JENSEN dealer and used in the U.S.A.

What is covered? This warranty covers all defects in material and workmanship in this product. The following are not covered: software, installation/removal costs, damage resulting from accident, misuse, abuse, neglect, product modification, improper installation, incorrect line voltage, unauthorized repair or failure to follow instructions supplied with the product, or damage occurring during return shipment of the product. Specific license conditions and copyright notices for the software can be found via www.jensenmobile.com.

Warranty Coverage

Limited 1-year warranty when purchased from an authorized Jensen dealer.

or

*Limited 2-year warranty when purchased from and professionally installed by an authorized Jensen dealer.(Proof of purchase and Installation required)

What to do?

1. Before you call for service, check the troubleshooting guide in your owner's manual. A slight adjustment of any custom controls may save you a service call.
2. If you require service during the warranty period, you must carefully pack the product (preferably in the original package) and ship it by prepaid transportation with a copy of the original receipt from the retailer to an authorized service center.
3. Please describe your problem in writing and include your name, a return UPS shipping address (P.O. Box not acceptable), and a daytime phone number with your shipment.
4. For more information and for the location of the nearest authorized service center please contact us by one of the following methods:
 - Call us toll-free at (888) 921-4088
 - E-mail us at cs@jensenmobile.com

Exclusion of Certain Damages: This warranty is exclusive and in lieu of any and all other warranties, expressed or implied, including without limitation the implied warranties of merchantability and fitness for a particular purpose and any obligation, liability, right, claim or remedy in contract or tort, whether or not arising from the company's negligence, actual or imputed. No person or representative is authorized to assume for the company any other liability in connection with the sale of this product. In no event shall the company be liable for indirect, incidental or consequential damages.

FCC Compliance

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



Customer Support

1-888-921-4088

(Monday-Friday, 9AM-5PM EST)

Visit <https://www.jensenmobile.com>

Designed and Engineered in USA

JENSEN®

Namsung America Inc.
©2021 Namsung America Inc.
All rights reserved.

All rights reserved. No part of this publication may be reproduced, distributed, or transmitted in any form or by any means, including photocopying, recording, or other electronic or mechanical methods, without the prior written permission of NAMSUNG AMERICA INC.

NSC0721-V01



CDR7011

QUICK START GUIDE


DVD Multimedia Receiver with Bluetooth featuring
a 7" digital touch screen TFT LCD and Detachable Face

This Quick Start Guide gives you the basics to
start using your CDR7011. Please visit
www.jensenmobile.com
to download a complete owner's manual or call customer
service at 1-888-921-4088 (Monday-Friday, 9AM-5PM EST).



JENSEN®

Installation

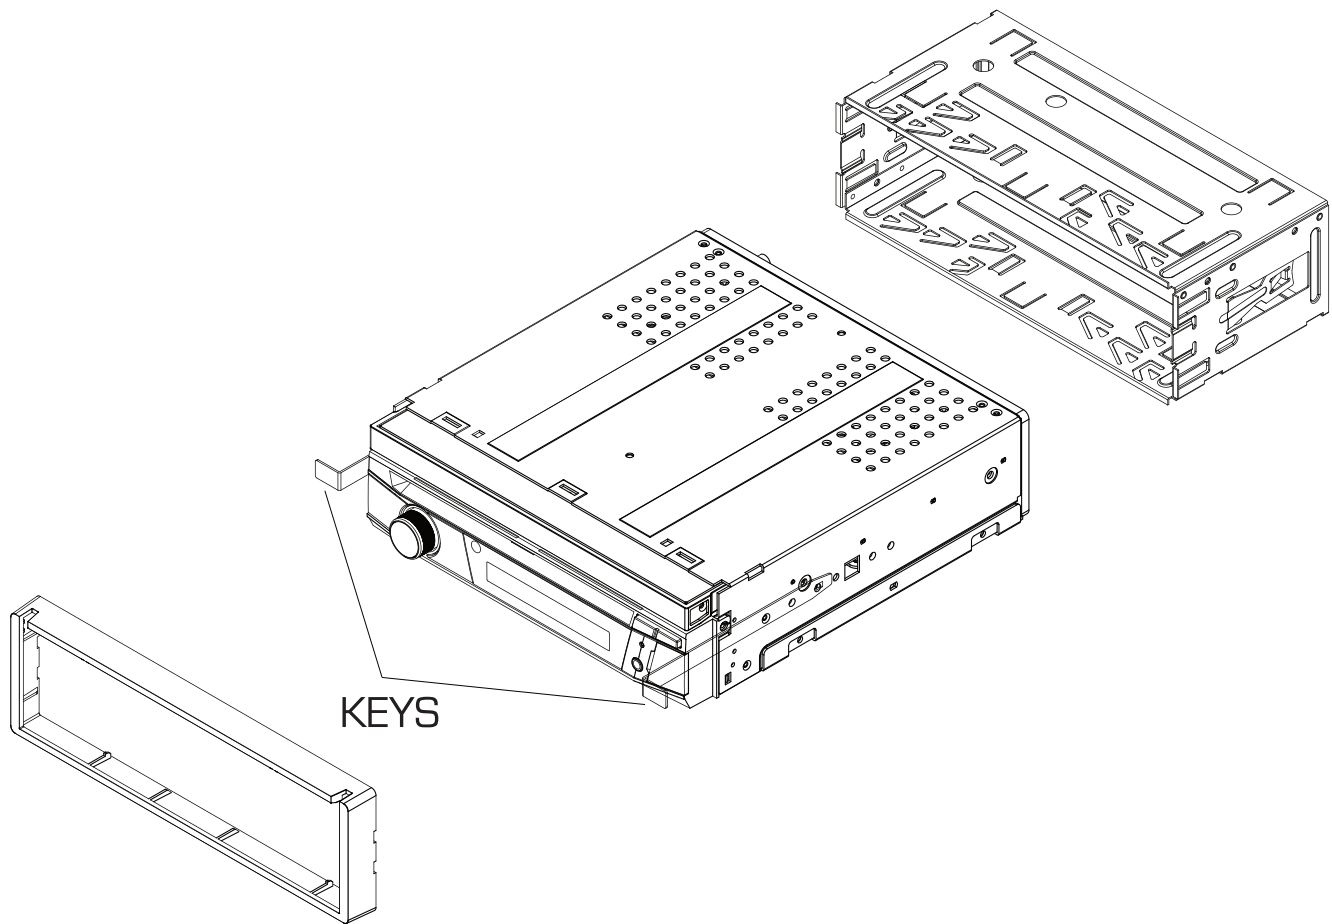

TYPICAL FRONT-LOAD DIN MOUNTING METHOD

Copyright and Trademark Notes

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited. DVD Logo is a trademark of DVD Format/Logo Licensing Corporation registered in the U.S., Japan and other countries.


The *Bluetooth*® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc.

Siri and Apple are registered trademarks owned by Apple Inc.

Google Assistant and Android is a trademark owned by Google LLC.

Other trademarks and trade names are those of their respective owners.

Wiring Diagram - Inputs/Outputs

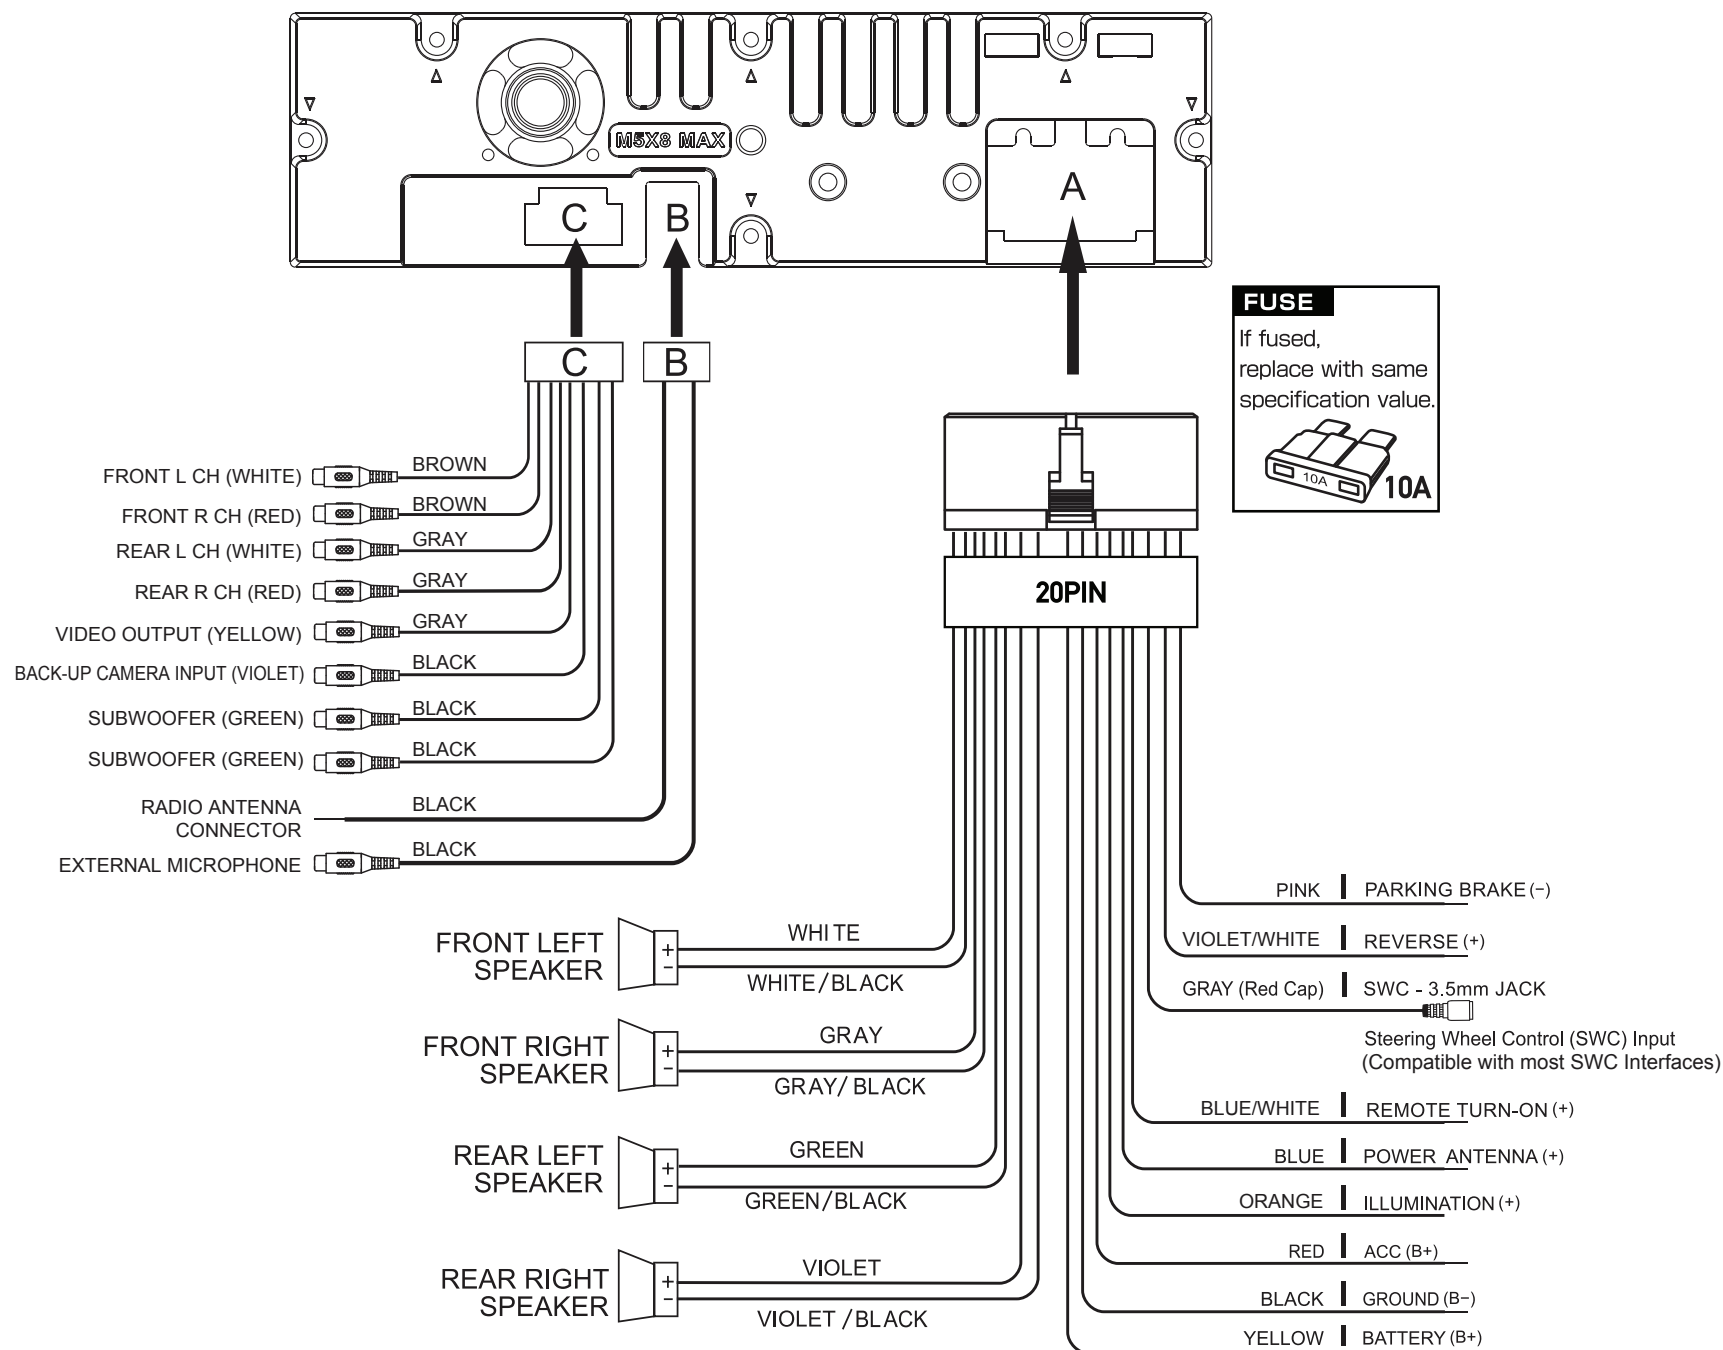

Control Locations



1. Source/Power

2. Press- Mode Change

Press and hold -- Voice Activation

3. Volume Up/Down, Mute

4. Tune/Track Up, Call End

5. Tune/Track Down, Call

6. Disc Slot

7. AUX Input

8. USB Slot

9. Reset Button


10. Panel Open

11. Eject

Main Menu

Press the Top Left Source icon to enter Main Source Menu
In the Menu mode, press the desired icon to enter the desired mode:


- 1. Radio
- 2. Media Player Last Source
- 3. BT Handsfree
- 4. DISC
- 5. USB
- 6. BT Streaming
- 7. AUX In
- 8. Rear view Camera
- 9. Main System Setup Menu

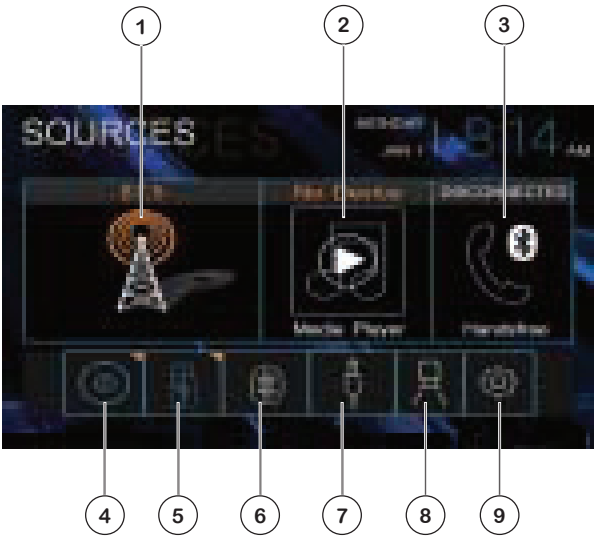

Tuner Operation

Select the Tuner icon from the Main Menu screen


- 1. Current Mode Icon / Main Source Menu
- 2. Tuner Presets - Press and hold to set
- 3. AM Direct
- 4. FM Direct
- 5. Bluetooth Handsfree Direct
- 6. Stereo / Mono
- 7. Previous Station - Press and hold to Manual Tune
- 8. AS/PS - Auto Scan / Preset Scan
- 9. Direct Station Entry
- 10. Station Number
- 11. Station Search
- 12. Next Station - Press and hold to Manual Tune
- 13. EQ Settings
- 14. Quick BAND Select - FM 1-2-3 | AM 1-2

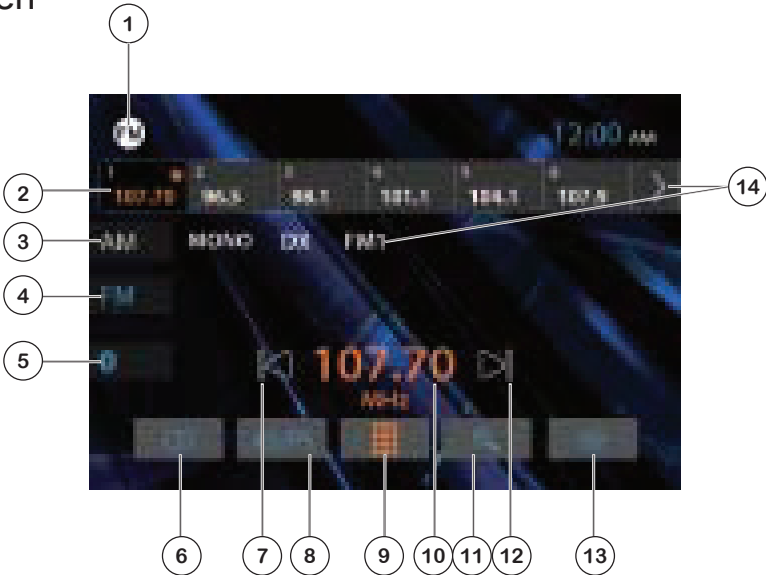

CD/DVD Operation

Insert a CD/DVD in the disc slot for playback



- 1. Direct File Entry
- 2. EQ Setting
- 3. Repeat
- 4. Random
- 5. Next Page

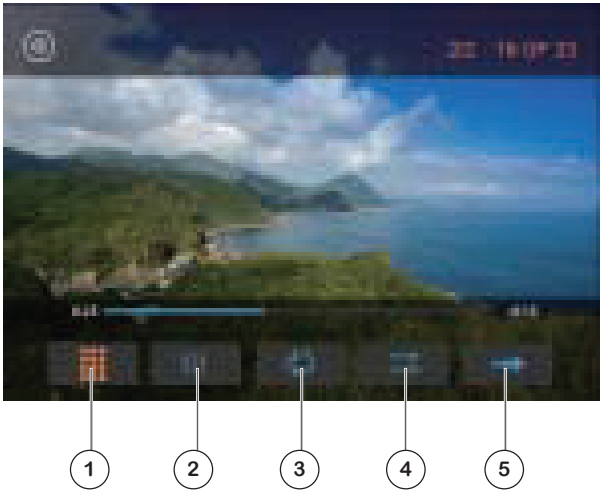

Media Player Operation

USB/BT Music operation will work the same way.

- 1. Current Mode / Main Source Menu
- 2. BT Streaming Music Direct
- 3. USB Media Direct
- 4. Bluetooth Handsfree Direct
- 5. Shuffle On / Off
- 6. Repeat 1 | All | Off
- 7. Direct File Entry
- 8. File List
- 9. EQ Settings
- 10.Track Down
- 11. Play/Pause
- 12. Track Up
- 13. Track Time / Status Bar
- 14. File Playing - ID3 Metadata

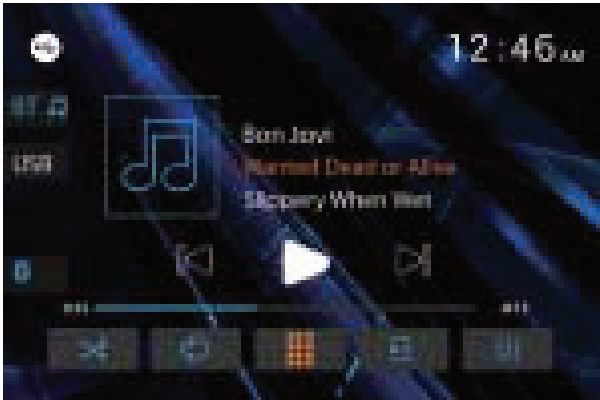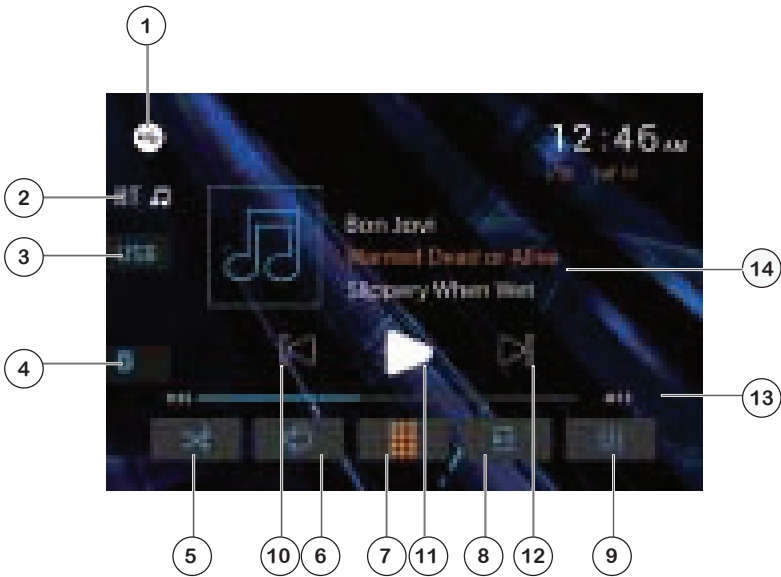


BT Media Player

Audio Operation


Press EQ icon in each Source to select EQ settings

1. Main System Volume
2. EQ Settings
3. EQ On/Off
4. Loudness On/Off
5. EQ Reset
6. Return to Source
7. EQ Presets / Custom
8. Balance / Fader

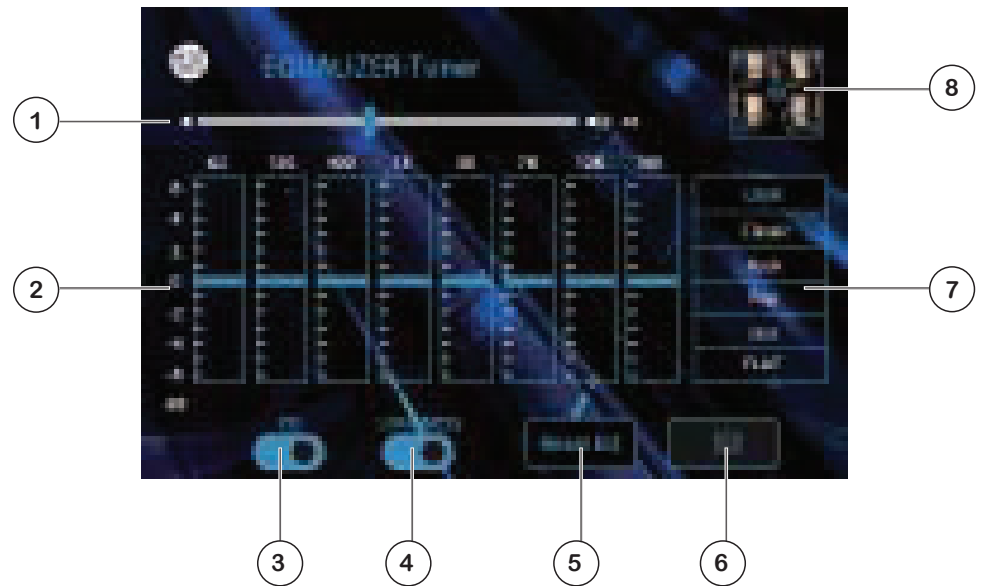

Balance/Fader Subwoofer On/Off

1. Main Volume
2. Fader Reset
3. Subwoofer ON/OFF
4. Return to Source
5. Return to EQ Controls

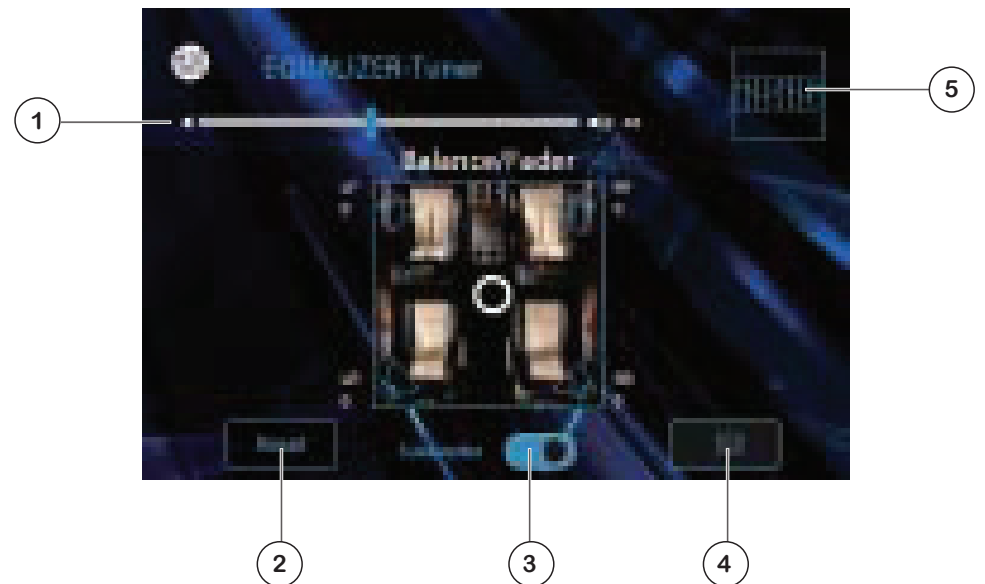

System Settings

1. Back to Main Menu
2. General Setup
3. Clock Settings
4. System Audio
5. Bluetooth
6. Display Adjustment
7. About - Software Version
8. Panel Angle



Handfree Operation

Bluetooth Microphone

An external microphone is included and is designed to mount on a visor or on a pillar inside the vehicle. (No built-in microphone is in the radio).

Pairing and Connecting

Before using Bluetooth functions, you must pair your mobile phone to the CDR7011. The device name is "JENSEN CDR7011". The Bluetooth passcode "0000". To ensure the best reception for pairing and re-connection, please make sure the mobile phone battery is fully charged before you begin.

- Try to perform pairing within a few minutes of the mobile phone being turned on.
- Once the unit has been paired with the mobile phone, the unit's model number, "JENSEN CDR7011", will be displayed on the mobile phone.
- To achieve the best performance, always keep the mobile phone within 10 feet (3 meters) of the unit.
- Always keep a clear path between the mobile phone and the unit. Never place a metal object or any other obstacle between the mobile phone and the unit.
- Some mobile phones may have a "Power Saving Mode" option. PLEASE DO NOT use the power saving mode with the CDR7011.
- Before accepting or making a call, make sure your mobile phone's "Bluetooth function" is turned on.



Dialing a Number


Press keypad to dial a number



Making a Call


Dial number, press to connect a call

1. Current Mode / Main Source Menu
2. Dial Keypad
3. Bluetooth Keypad
4. Contacts - must be manually synced
5. Keypad Backspace
6. Recent Calls
7. Device Manager
8. Call Button
9. Dialing Number

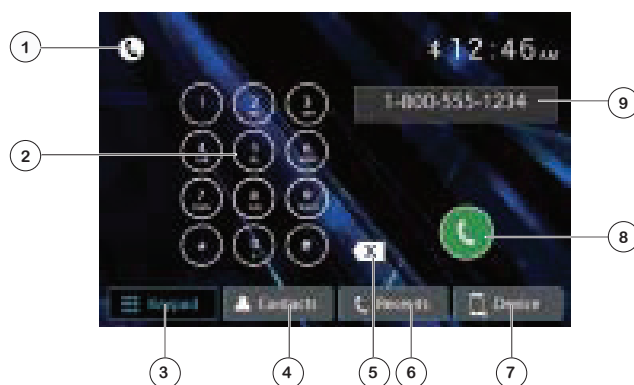

Phone Book


Press  to download the phone numbers or access the call history info.



Transferring Audio

Press to transfer call audio between the headunit and mobile phone.

1. Hang Up
2. Call Transfer
3. MIC Mute
4. Return to Keypad

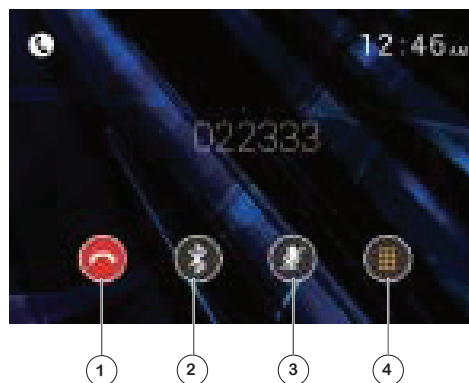

One-Year (or Two-Year*) Limited Warranty

This warranty gives you specific legal rights. You may also have other rights which vary from state to state. Namsung America Inc warrants this product to the original purchaser to be free from defects in material and workmanship for a period of one year (or two years*) from the date of the original purchase. Namsung America Inc agrees, at our option, during the warranty period, to repair any defect in material or workmanship or to furnish an equal new, renewed or comparable product (whichever is deemed necessary) in exchange without charges, subject to verification of the defect or malfunction and proof of the date of purchase. Subsequent replacement products are warranted for the balance of the original warranty period.

Who is covered?

This warranty is extended to the original retail purchaser for products purchased from an authorized JENSEN dealer and used in the U.S.A.

What is covered?

This warranty covers all defects in material and workmanship in this product.

The following are not covered: software, installation/removal costs, damage resulting from accident, misuse, abuse, neglect, product modification, improper installation, incorrect line voltage, unauthorized repair or failure to follow instructions supplied with the product, or damage occurring during return shipment of the product. Specific license conditions and copyright notices for the software can be found via www.jensenmobile.com.

Warranty Coverage

Limited 1-year warranty when purchased from an authorized Jensen dealer.

or

*Limited 2-year warranty when purchased from and professionally installed by an authorized Jensen dealer.
(Proof of purchase and Installation required)

What to do?

1. Before you call for service, check the troubleshooting guide in your owner's manual. A slight adjustment of any custom controls may save you a service call.
2. If you require service during the warranty period, you must carefully pack the product (preferably in the original package) and ship it by prepaid transportation with a copy of the original receipt from the retailer to an authorized service center.
3. Please describe your problem in writing and include your name, a return UPS shipping address (P.O. Box not acceptable), and a daytime phone number with your shipment.
4. For more information and for the location of the nearest authorized service center please contact us by one of the following methods:

- Call us toll-free at 1-888-921-4088
(Monday-Friday, 9:00 a.m. to 5:00 p.m. EST)

- E-mail us at cs@jensenmobile.com

Exclusion of Certain Damages: This warranty is exclusive and in lieu of any and all other warranties, expressed or implied, including without limitation the implied warranties of merchantability and fitness for a particular purpose and any obligation, liability, right, claim or remedy in contract or tort, whether or not arising from the company's negligence, actual or imputed. No person or representative is authorized to assume for the company any other liability in connection with the sale of this product. In no event shall the company be liable for indirect, incidental or consequential damages.

FCC Compliance

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference.

(2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Customer Service Toll Free: 1-888-921-4088

www.jensenmobile.com

©2021 Namsung America Inc.

NSC0121-V01