SKMEI 1583 Operation Manual




FEATURES

- ★ Digits LCD Display,Display Hour ,Minute ,Second ,Month ,Day, Year and Week
- ★ Dual time display (display both local and second time);
- ★ 12/24hr display;
- ★ Daily Alarm and Chime hourly
- ★ 1/100 second Chronograph with split functions
- ★ Countdown function,to:23:59:59;
- **★** Dual time;
- ★ 3 second EL backlight;
- ★ Year setting;(range: 2000~2049)

FUNCTION


Operation Manual

- ★ .At any state ,press A key EL backlight for 3s .
- **★** Press B key function successively:time mode→Daily Alarm→Dual time→Timer→Chronograph;

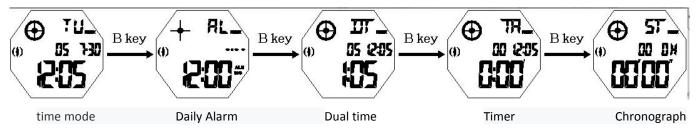

TIME/DATE SETTING


- 1. In the time mode, press and hold C key to time setting state and "Second" flashing
- 2. Press B key to select Settings:second→time→minutes→year→month→day;(note:in any mode of this interface,press A key to convert 12/24 hours)

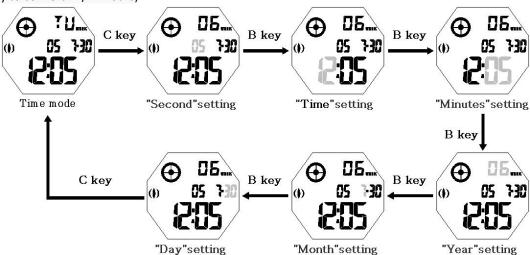


- 3、 Press D key to adjust the setting items, press and hold D key to rapidly adjust;
- 4. After setting, press C key exit setting mode.

Daily Alarm Mode

1. press A key to start: daily alarm \rightarrow hourly chime \rightarrow daily alarm and hourly chime;

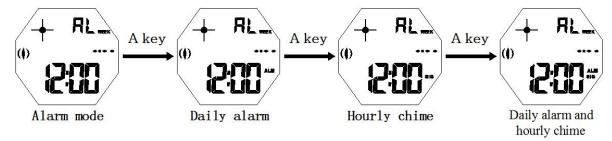

- 2 press C key to enter alarm setting mode, "hour" flashing;
- 3、 Press B key to select the setting items: hour→minute→month→day;



- 4. Press D key to adjust the setting items, press and hold D key to rapidly adjust;
- 5. After setting, press C key exit setting mode.


Note: default to daily alarm! When set month - day, it means the designated date time ring!

The alarm ring

1. When Alarm is ON, the alarm prompt lasts for 10 seconds. Press any key to stop the alarm prompt.

Dual time function and setting

- 1, press C key to enter the second time setting "hour" flashing;
- 2、Press B key to select setting items :hour→minute;

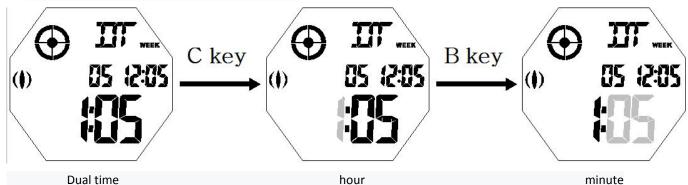


- 3. Press D key to adjust the setting items, press and hold D key to rapidly adjust;
- $4 \sqrt{\ }$ After setting, press C key to exit setting mode.

Timer Mode


The measurement range of this table is 23 hours, 59 minutes and 59 seconds.

- 1、 press C key to enter the setting mode, "hour" flashing;
- 2、 Press B key to select Settings: hour → minute → second;(in the setting interface, press A key to turn on or off AUTO AUTO loop)
- 3. When the AUTO cycle function is turned on, the mode will be set before the automatic cycle after the timer is completed. Enter the timer setting item and press A to close the AUTO; (Press D in timer mode to pause timer and then press C to enter the setting item)

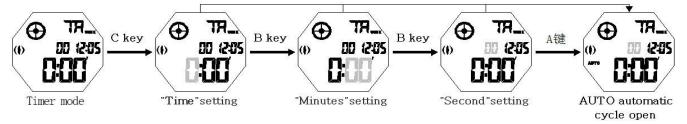

- 4. Press D key to adjust the setting items, press and hold D key to rapidly adjust;
- 5. After setting, press C key to exit setting mode;
- 6. Timer alarm sounds for about 10 seconds ,press any key to stop the alarm;
- 7. When stop the alarm, display the timer setting.
- 8、When the timer is stop midway, press A key to return to the setting.

Chronograph

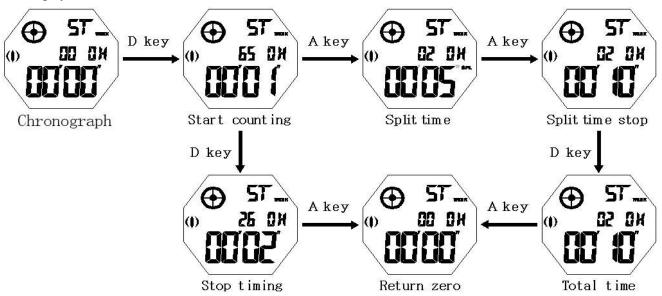

- 1、 press D key to start dual time mode, When stop, press C key to zero.
- 2. During the dual timer, press A key to turn on SPL function, display "SPL" on the screen.press A key to return to the dual timer again.
- 3. When reach the maximum (23 hours, 59 minutes, 59.99 seconds), continue to restart the stopwatch timing from 0; **Note:** ABCD four key to hold down at the same time, will restore factory settings! As shown in the following figure:

