

English


# RGB LED Bottom Lamp Color Clock

(11-color digital display, 9 bottom light colors, 25 music ringtones, 2 sets of alarm clocks, Countdown voice reminder)

Thank you for your purchasing,  
Please read instruction before set up.

Voice Reminder (Displayed in Timer Mode)

Daylight saving time

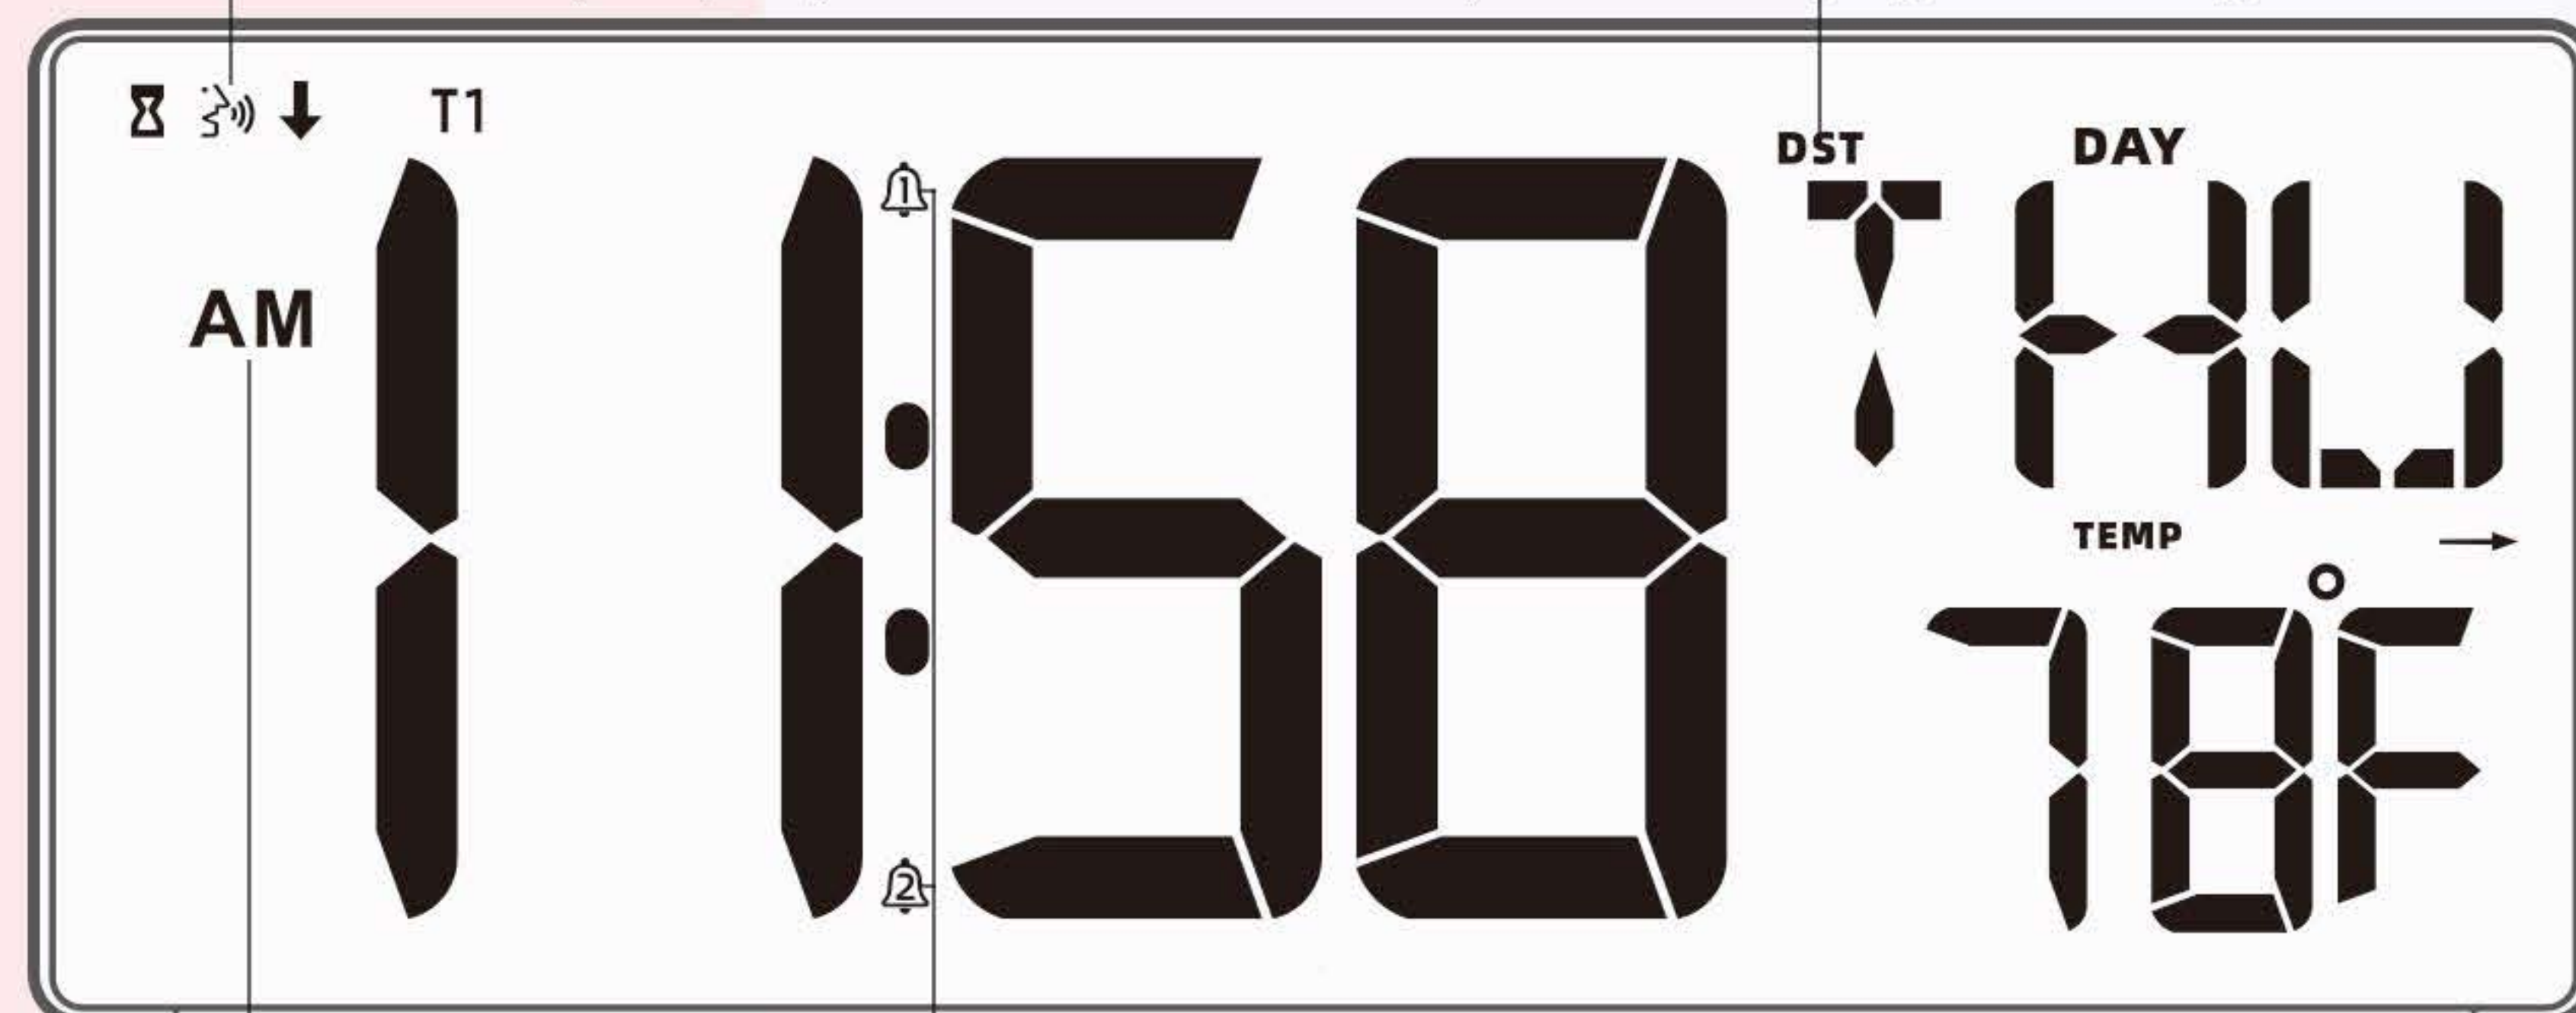

2 sets of alarms  
AM Indicator (display in 12 hour format)

Product size: W330xH130xD30mm

Product weight: 873g (excluding the power adapter)


Alarm sound: 25 Music Ringtones

Bottom light color: 9 kinds of bottom light color

RGB LED light color: 11-color number display

Timer Range: 99 hour59 minutes 59 seconds

## Back button functionality

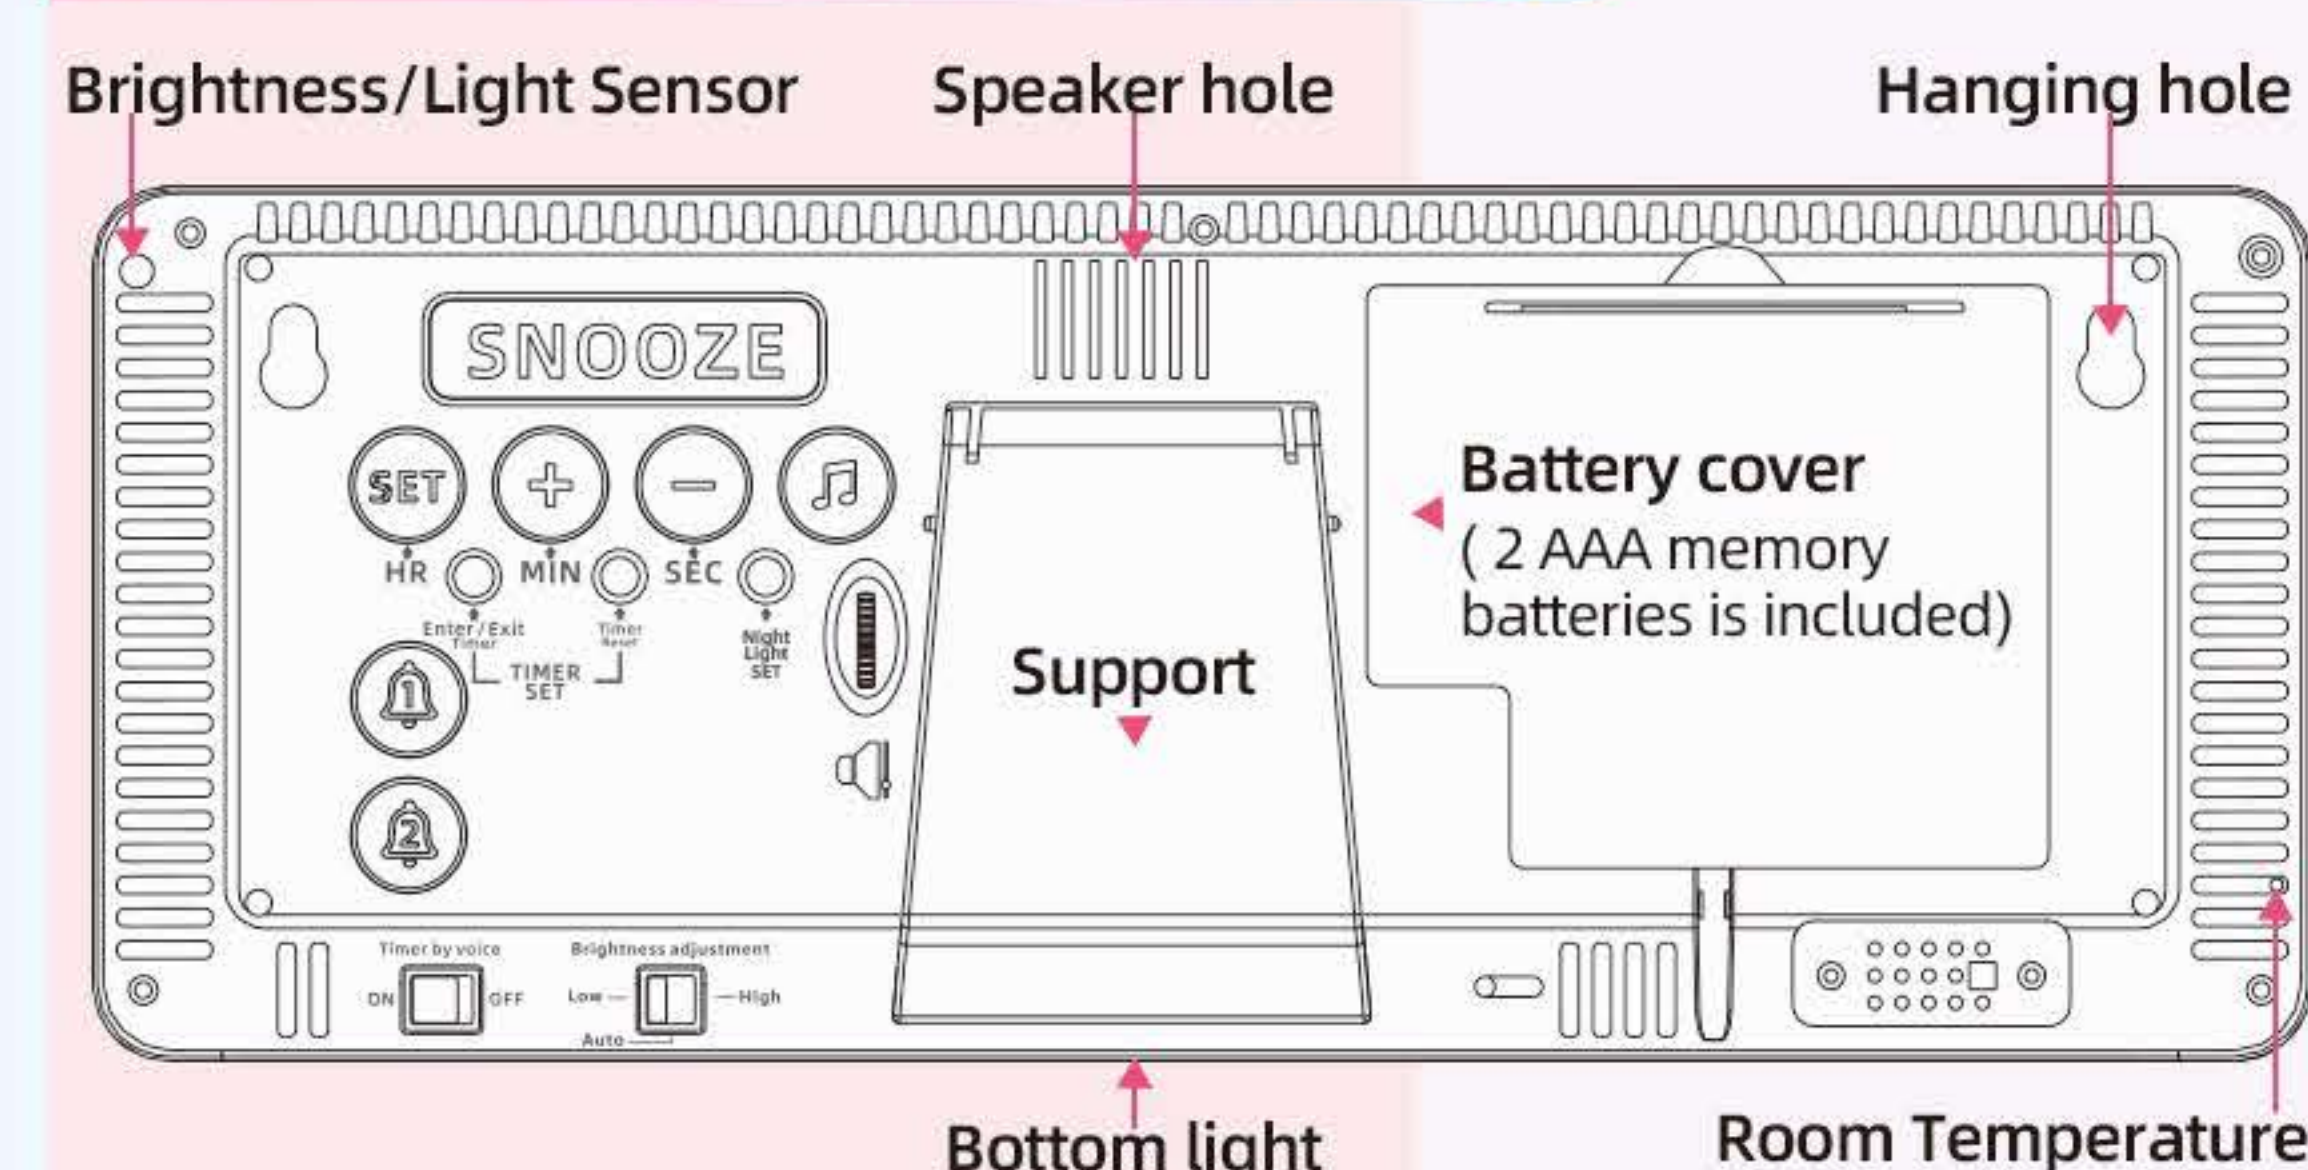

SNOOZE

LED Digital Color Selection  
Alarm ring: snooze function (9 minutes)  
Timer Mode: Start/Pause Timing

SET


Settings: week selection, DST ON/OFF,  
time setting for year, month, day  
Timer mode: Hour setting

Support

Room Temperature Detection Sensor



+ : 12/24 hour format switching  
Timer Mode: Minute Setting

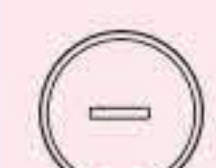

- : °C/°F switching  
Timer Mode: Seconds setting



25 ringtone selection keys



Alarm 1 ON/OFF



Alarm 2 ON/OFF



Enter/Exit Timer




Timer Reset



Hold 2 Sec to turn  
On/Off bottom night  
light, when night  
light is On, click it to  
switch color



Ringtone Volume  
Adjustment

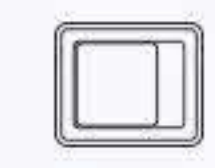

Turn on/off for Timer  
10-second countdown  
voice announcement



3rd gear brightness  
push button

1


## 1. Weekday language, DST, year, date, and time settings.

① Press the "SET" button to enter the settings.



After entering, the screen flashes "ENG", press "+" or "-" to select other language for the week.

② Press "SET" button again, then Turn ON/OFF DST by pressing "+" or "-" button.

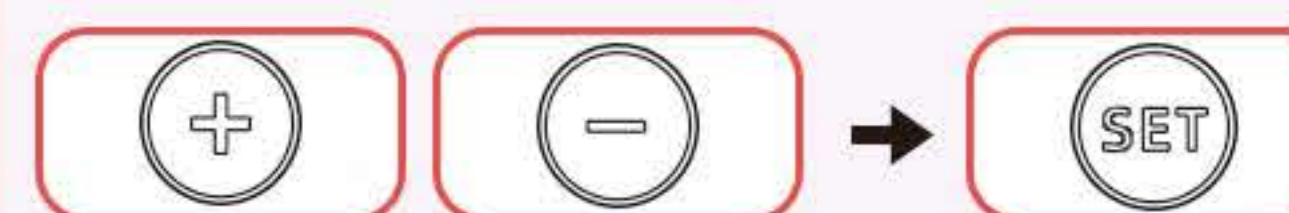


Set the year, date, and time separately by using the "+" "-", and "SET" buttons.

③ Once the setup has completed, treat "SET" button as "Confirm" button.




## 2. Switch display between date and temperature.


① Long press the "+" button for 2 seconds to enter the switch settings.

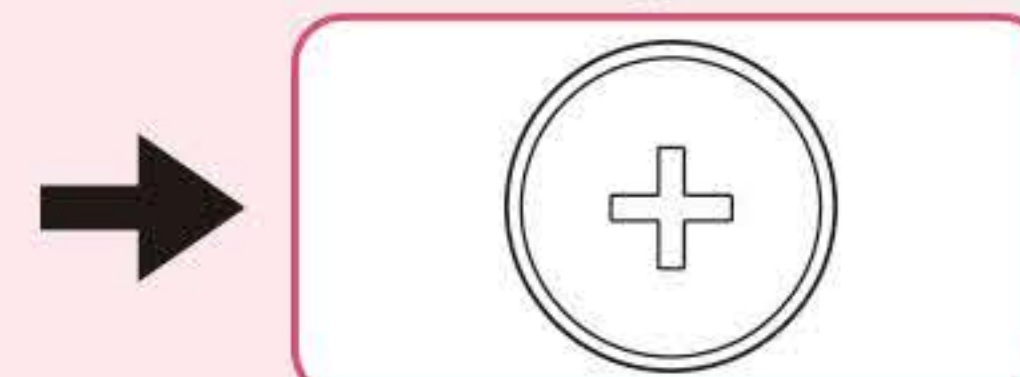

② Press the "+" or "-" keys to select different display modes.

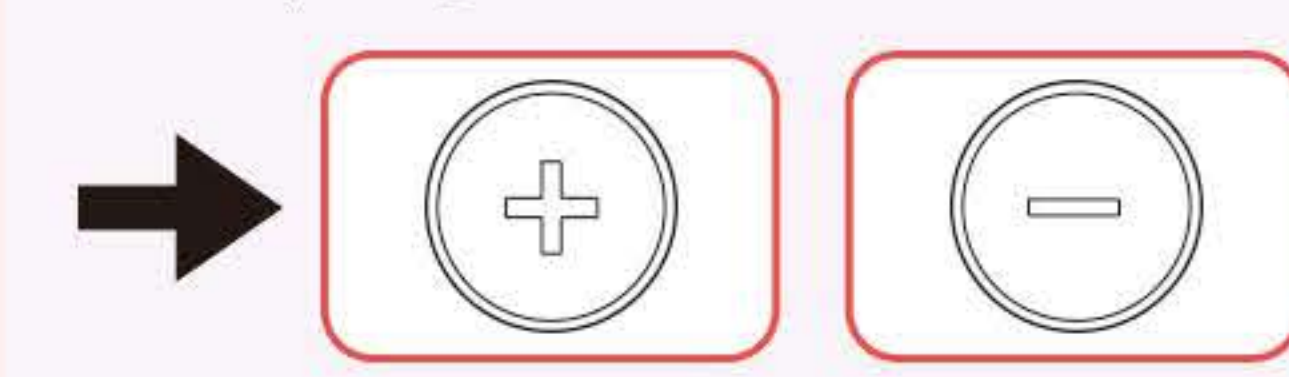


③ After selecting, press "SET" to return to the time display.

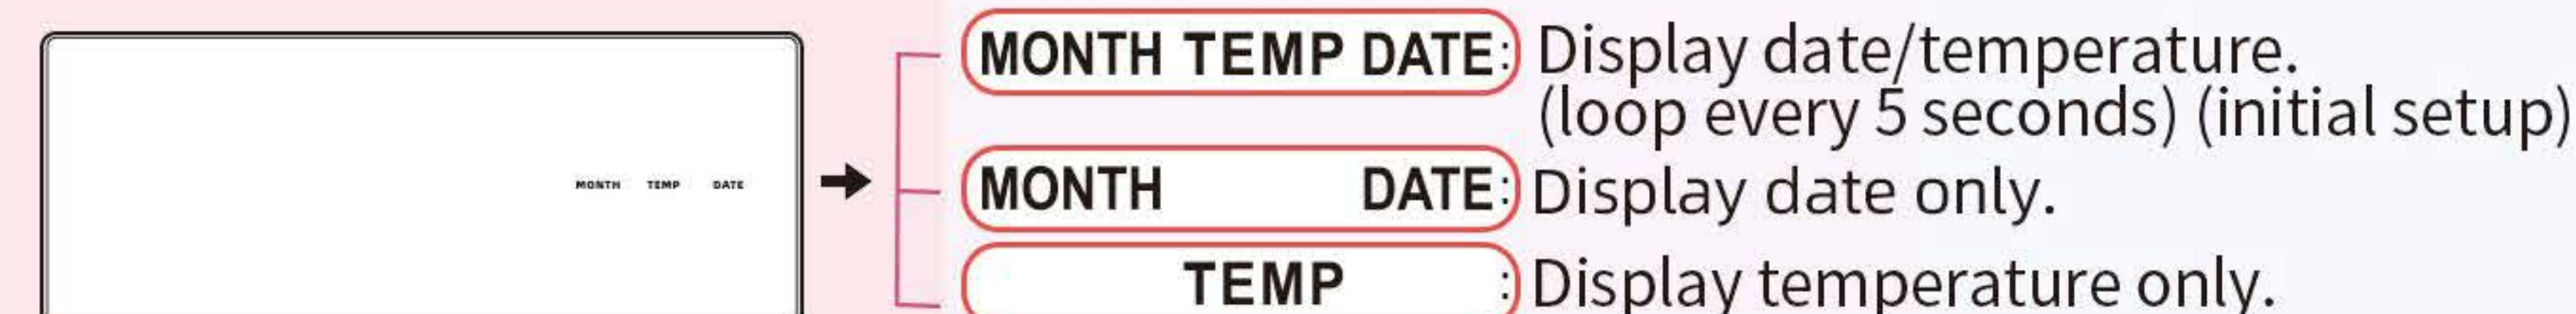

## 3. Setting two alarms.

① Long press the "Alarm 1" or "Alarm 2" button on the back for 2 seconds to enter the setting for "Alarm 1" or "Alarm 2" respectively.

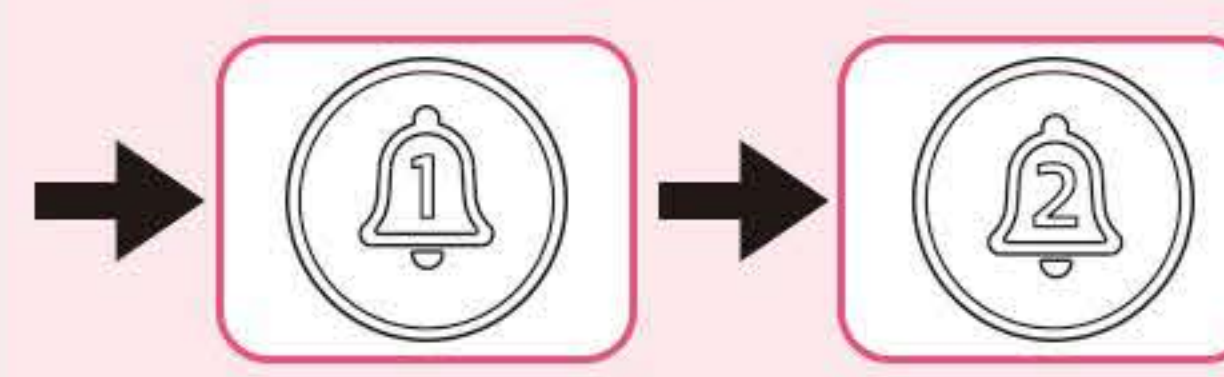


② The "OFF" at the top of the screen is flashing. Press "+" or "-" to turn the alarm ON/OFF, then press "SET" to confirm.



③ Set the alarm time by pressing "+" or "-" and then press "SET" to confirm.

Alarm ON (screen icon displayed)  
Alarm OFF (screen icon not displayed)

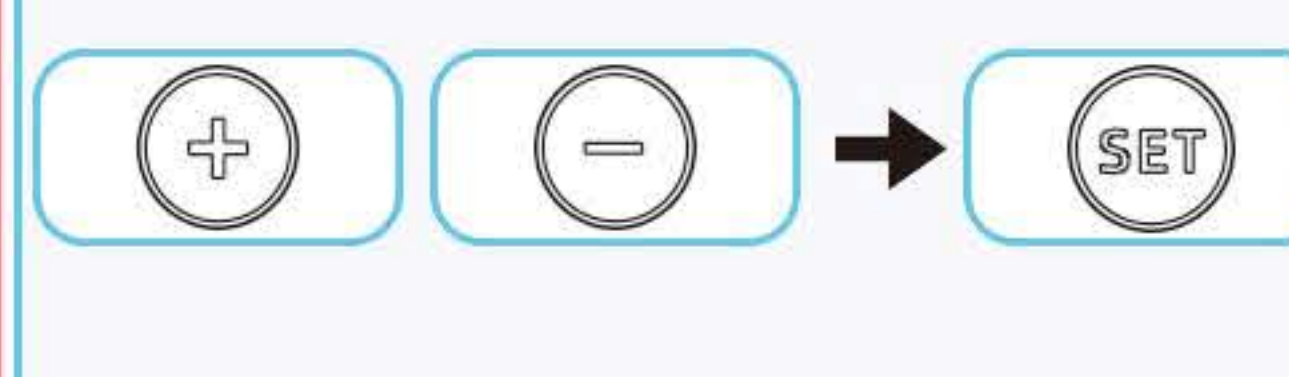


④ Select the alarm working day mode setting by pressing "+" or "-", and then press "SET" to confirm.



1E: Every day.  
2E: Weekdays (Monday to Friday)  
3E: Weekend (Saturday-Sunday)

⑤ Press "+" or "-" to select the alarm ringtone, and then press "SET" to confirm.

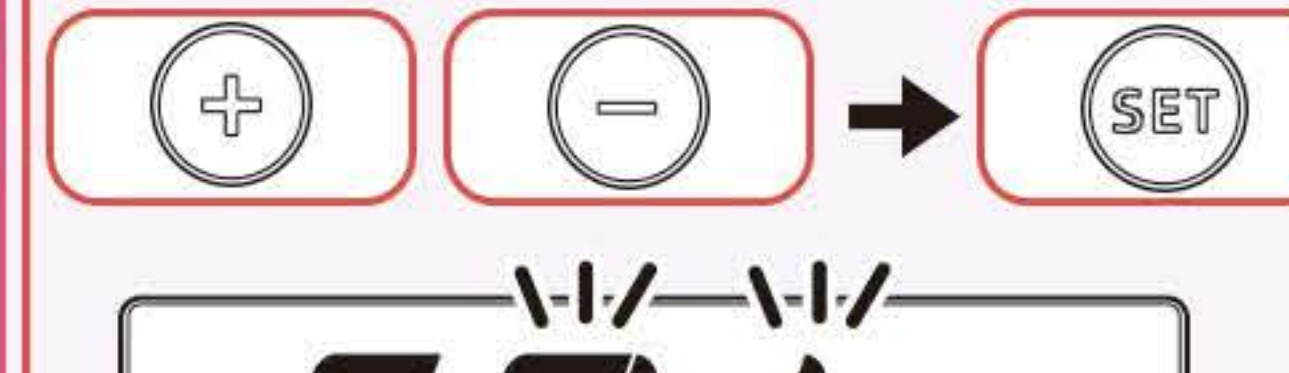


(1-25 ringtone options available)

⑥ After making the selection, press "SET" to return to the time display.



## <Stop the noise with one click>

The alarm clock goes off, and pressing any button except the "snooze" button will stop the alarm. It will ring again at the same time on the next day.

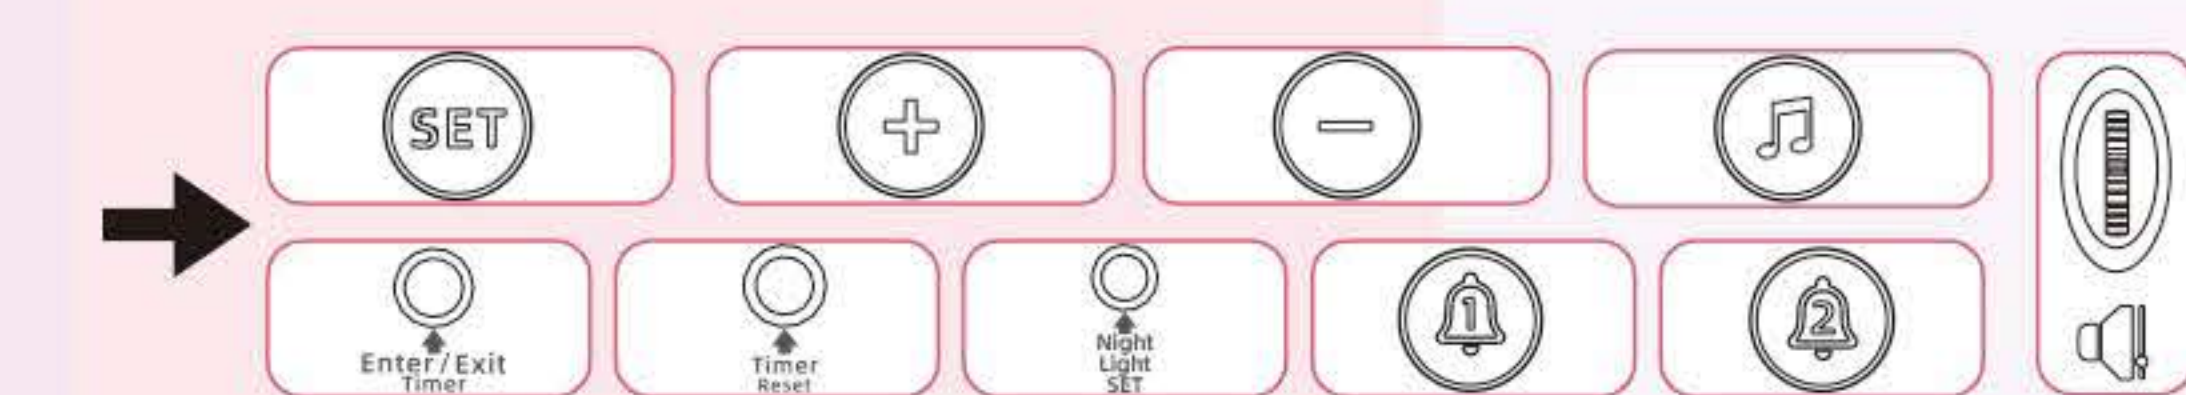

## <Snooze function>

The alarm clock rings, press the "snooze" button, the alarm clock stops, and the snooze function is activated. It will ring again after 9 minutes.

- The alarm clock rang.
- SNOOZE
- It will ring after in 9 minutes.

## 4. Timer Functionality

\*-T1 Timing range: 00:00:00-99:59:59.

\*-Automatically save the last timing when starting up (with a memory battery).

\*-While the timer is working, you can switch between the timer interface and the display time interface. When the timer starts the 10-second countdown voice announcement, the screen will automatically switch to the timer interface! (The 10-second countdown voice announcement function can be turned on and off by the buttons on the back panel.)

### <Count Up setting>

① Press the "Timer" button to enter the timer mode.



② Press the "snooze" button to start/stop.



③ Press the "Timer Reset" button to reset it to zero.



### <Count Down setting>


① Press the "Timer" button to enter the timer mode.



② Press "Timer Reset" to reset to zero.



③ Set a corresponding time unit on each button.

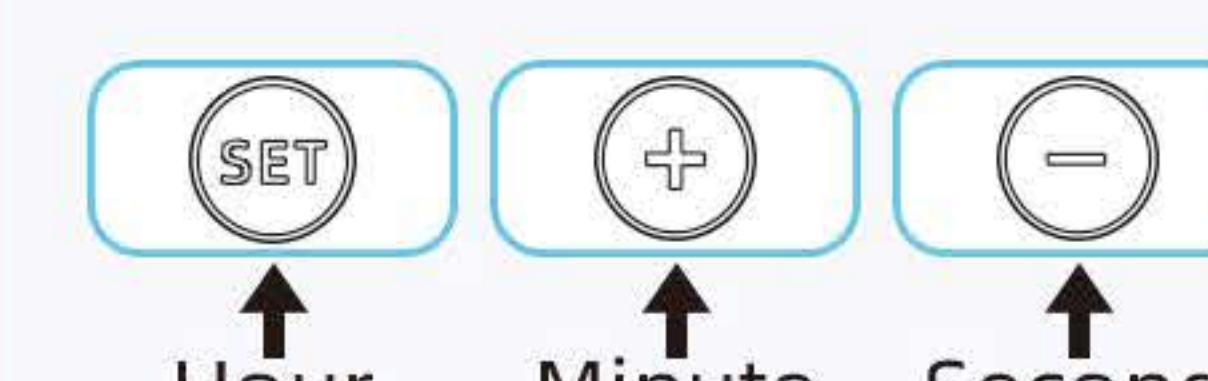

④ Press the "Snooze" button to start/stop.



⑤ Press the "Timer Reset" button to reset it to zero.



⑥ After pressing the "Timer" button, the time display will return.





### <Countdown voice reminder function>

① Press the "Timer" button to enter the timer mode.



② Press the voice ON/OFF button at the bottom of the back of the device, and the countdown screen will display/hide the voice icon in the top left corner.

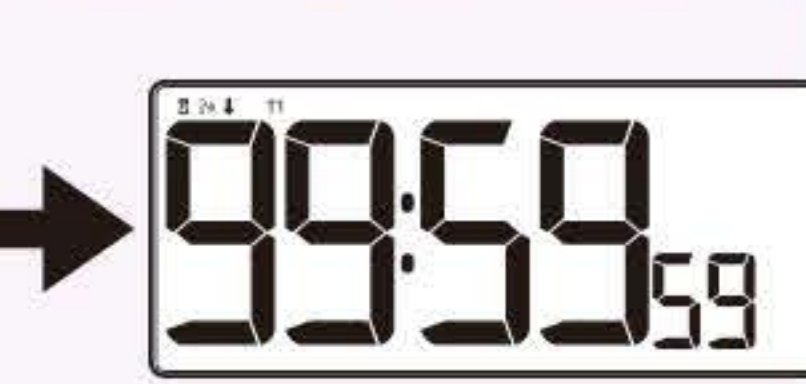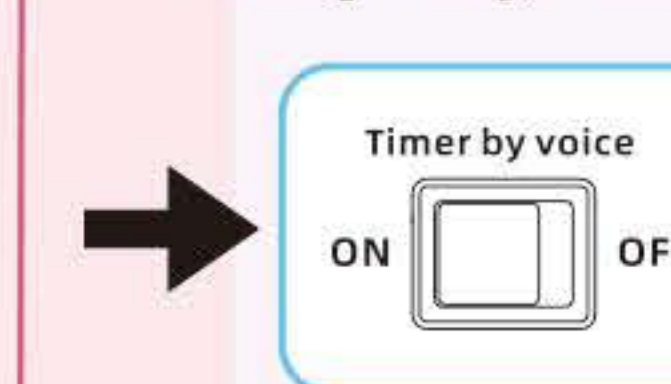

This icon is only displayed in timer mode.

3

2



5. Ringtone Music Settings and Volume Adjustment

- ①Select ringtone music by pressing the "Music" button on the back.



After selecting a ringtone, press the "Music" button to return to the time interface.
- ②To choose a different ringtone music, you need to press the "Music" button on the back again to select the next ringtone music.




(25 ringtone music pieces)
- ③Adjust the volume by sliding the wheel up or down on the "Volume Controller" on the back to adjust the volume to different levels.




↑ Loud volume  
↓ Low volume

6. Switch date display format: month/day format or day/month format


- ①Before installing the memory battery, hold down the "SET" key and insert the power supply to enter the settings.



- ②Select the date display format (month/day or day/month) by pressing "+" or "-".


- ③After completion, turn off the clock's power supply and then turn it back on to perform other settings.

7. Change bottom light color settings


- ① Press and hold the "Night Light SET" button on the back for 2 seconds to turn ON/OFF the bottom light at the bottom.


- ② Press the "Night Light SET" button again to switch to other colors.



[6 fixed colors, 2 gradient colors, and 1 automatic changing color(Automatically change to a different color every day within a week.)]

Large Digital Wall Clock with Remote Control

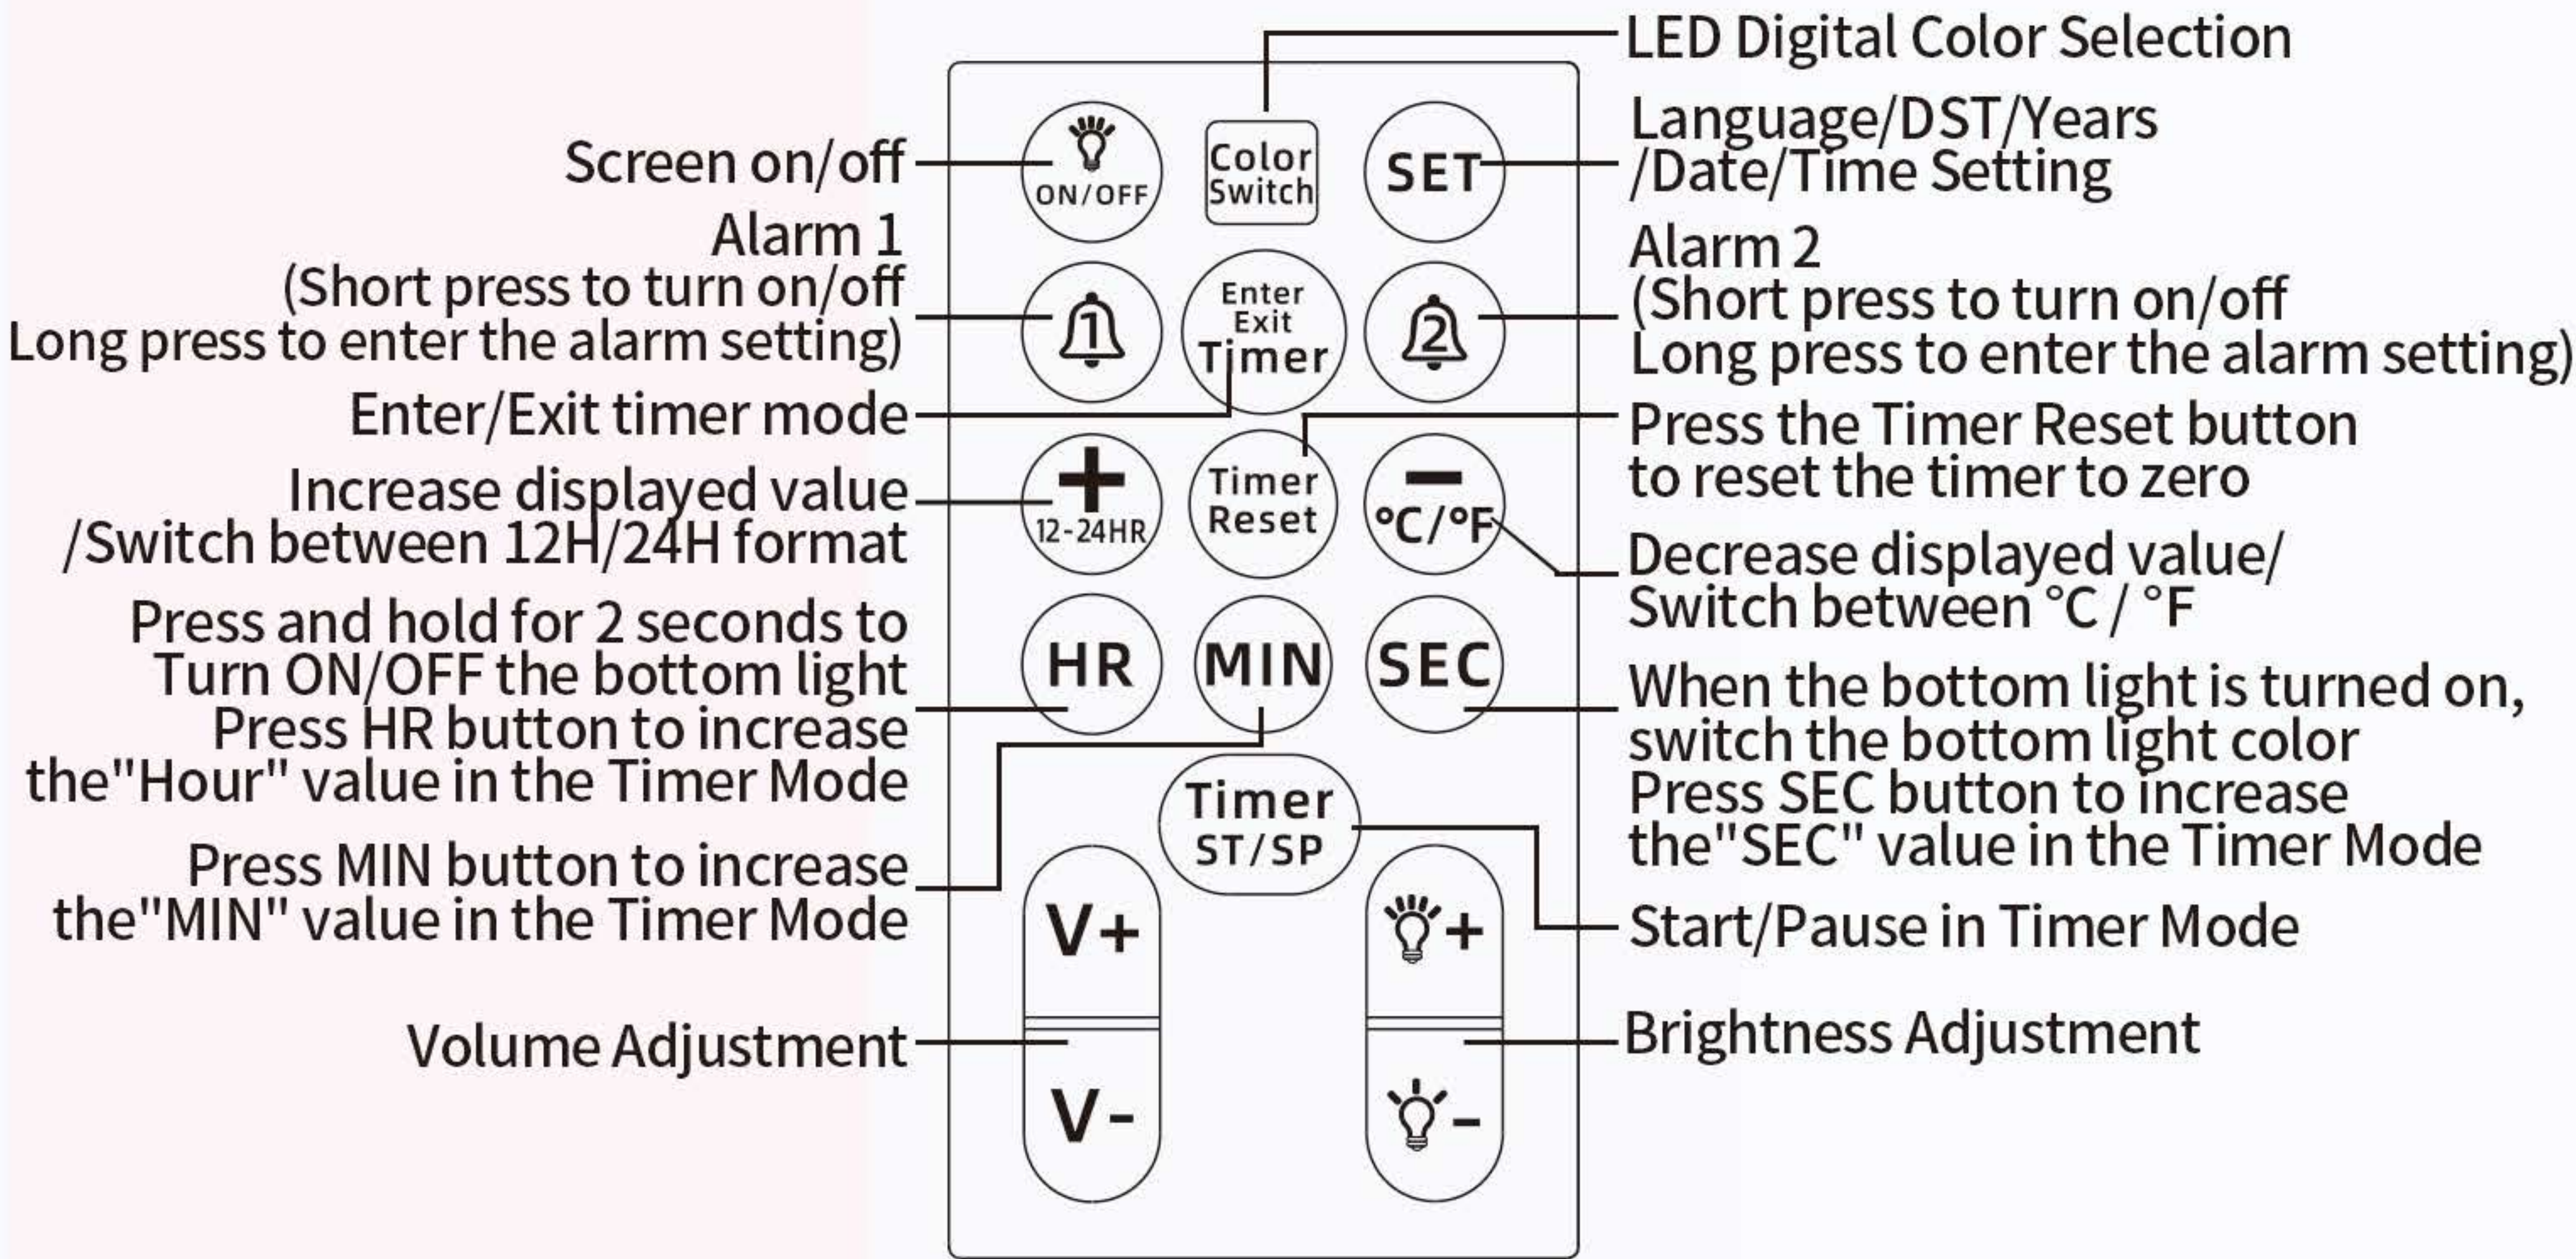

The (Timer ST/SP) button used as "SNOOZE" function in alarm mode; Press any other buttons to stop the alarm.



Please use the attached adapter

RGB LED Wall Clock  
MANUAL

SUITABLE FOR LIVING ROOM/OFFICE/CLASSROOM/HOSPITAL/SUBWAY PLACES

