



# Digital Projector User Manual

AH700ST/AK700ST

V 1.01

# Warranty and Copyright information

## Limited warranty

BenQ warrants this product against any defects in material and workmanship, under normal usage and storage.

Proof of purchase date will be required with any warranty claim. In the event this product is found to be defective within the warranty period, BenQ's only obligation and your exclusive remedy shall be replacement of any defective parts (labor included). To obtain warranty service, immediately notify the dealer from which you purchased the product of any defects.

Important: The above warranty shall be void if the customer fails to operate the product in accordance with BenQ's written instructions, especially the ambient humidity must be in-between 10% and 90%, temperature in-between 0°C and 35°C, altitude lower than 4920 feet, and avoiding to operate the projector in a dusty environment. This warranty gives you specific legal rights, and you may have other rights which vary from country to country.

For other information, please visit [www.BenQ.com](http://www.BenQ.com).

## Copyright

Copyright © 2024 by BenQ Corporation. All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual or otherwise, without the prior written permission of BenQ Corporation.

## Disclaimer

BenQ Corporation makes no representations or warranties, either expressed or implied, with respect to the contents hereof and specifically disclaims any warranties, merchantability or fitness for any particular purpose. Further, BenQ Corporation reserves the right to revise this publication and to make changes from time to time in the contents hereof without obligation to notify any person of such revision or changes.

\*DLP, Digital Micromirror Device and DMD are trademarks of Texas Instruments. Others are copyrights of their respective companies or organizations.

The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.


# Table of Contents

|                                            |           |
|--------------------------------------------|-----------|
| <b>Warranty and Copyright information</b>  | <b>2</b>  |
| <b>Important safety instructions</b>       | <b>4</b>  |
| <b>Introduction</b>                        | <b>8</b>  |
| Shipping contents                          | 8         |
| Projector exterior view                    | 9         |
| Controls and functions                     | 10        |
| <b>Positioning your projector</b>          | <b>13</b> |
| Choosing a location                        | 13        |
| Obtaining a preferred projected image size | 14        |
| Mounting the projector                     | 17        |
| Adjusting the projected image              | 18        |
| <b>Connection</b>                          | <b>23</b> |
| <b>Operation</b>                           | <b>26</b> |
| Starting up the projector                  | 26        |
| Using the menus                            | 27        |
| Securing the projector                     | 28        |
| Switching input signal                     | 29        |
| Shutting down the projector                | 30        |
| <b>Menu operation</b>                      | <b>31</b> |
| Menu System                                | 31        |
| <b>Basic</b> Menu                          | 31        |
| <b>Advanced</b> Menu                       | 32        |
| <b>Maintenance</b>                         | <b>50</b> |
| Care of the projector                      | 50        |
| Light source information                   | 51        |
| <b>Troubleshooting</b>                     | <b>54</b> |
| <b>Specifications</b>                      | <b>56</b> |
| Projector specifications                   | 56        |
| Dimensions                                 | 57        |
| Timing chart                               | 58        |


# Important safety instructions

Your projector is designed and tested to meet the latest standards for safety of information technology equipment. However, to ensure safe use of this product, it is important that you follow the instructions mentioned in this manual and marked on the product.


1. **Please read this manual before you operate your projector.** Save it for future reference.

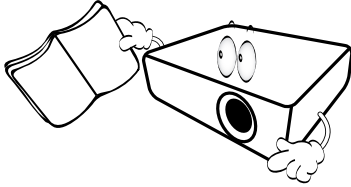


2. **Do not look straight at the projector lens during operation.** The intense light beam may damage your eyes.

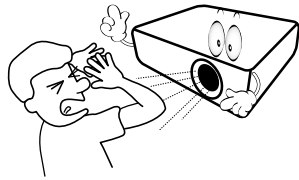


3. **Refer servicing to qualified service personnel.**

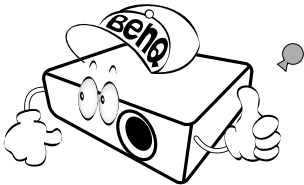


4. **Always open the lens shutter (if any) or remove the lens cap (if any) when the projector light source is on.**
5. The light source becomes extremely hot during operation.

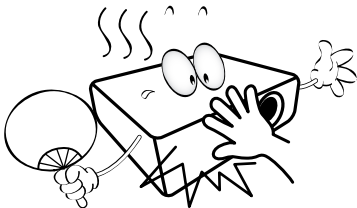


6. In some countries, the line voltage is NOT stable. This projector is designed to operate safely within a mains voltage between 100 to 240 volts AC, but could fail if power cuts or surges of  $\pm 10$  volts occur. **In areas where the mains voltage may fluctuate or cut out, it is recommended that you connect your projector through a power stabilizer, surge protector or uninterruptible power supply (UPS).**

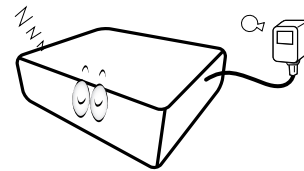


7. Do not block the projection lens with any objects when the projector is under operation as this could cause the objects to become heated and deformed or even cause a fire. To temporarily turn off the light source, use the blank function.

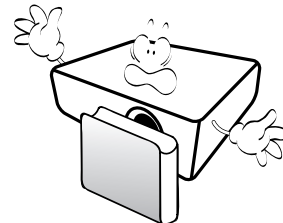

8. Do not operate light sources beyond the rated light source life.

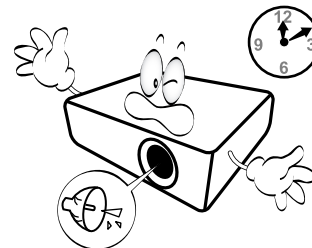


9. Do not place this product on an unstable cart, stand, or table. The product may fall, sustaining serious damage.

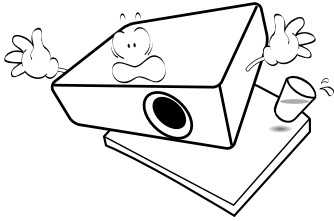


10. Do not attempt to disassemble this projector. There are dangerous high voltages inside which may cause death if you should come into contact with live parts.

Under no circumstances should you ever undo or remove any other covers. Refer servicing only to suitably qualified professional service personnel.

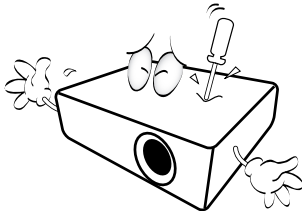

11. Do not block the ventilation holes.


- Do not place this projector on a blanket, bedding or any other soft surface.
- Do not cover this projector with a cloth or any other item.
- Do not place inflammables near the projector.

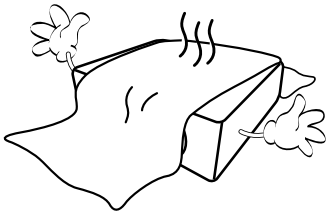


If the ventilation holes are seriously obstructed, overheating inside the projector may result in a fire.

12. Always place the projector on a level, horizontal surface during operation.


- Do not use if tilted at an angle of more than 10 degrees left to right, nor at angle of more than 15 degrees front to back. Using the projector when it is not fully horizontal may cause a malfunction of, or damage to, the light source.

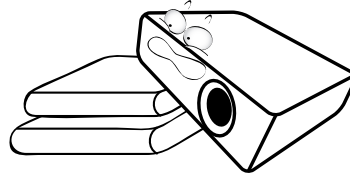

13. Do not stand the projector on end vertically. Doing so may cause the projector to fall over, causing injury or resulting in damage to the projector.

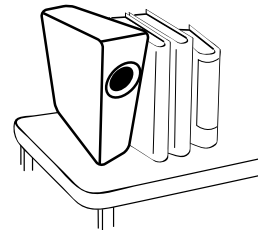


14. Do not step on the projector or place any objects upon it. Besides probable physical damage to the projector, doing so may result in accidents and possible injury.

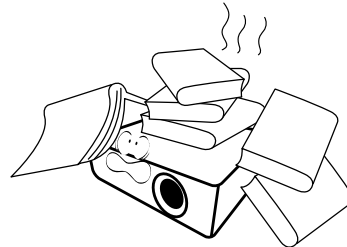


15. When the projector is under operation, you may sense some heated air and odor from its ventilation grill. It is a normal phenomenon and not a product defect.

16. Do not place liquids near or on the projector. Liquids spilled into the projector may cause it to fail. If the projector does become wet, disconnect it from the power supply's power outlet and call BenQ to have the projector serviced.

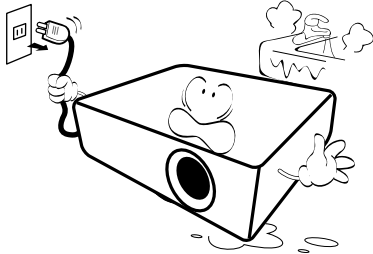


17. This product is capable of displaying inverted images for ceiling/wall mount installation.

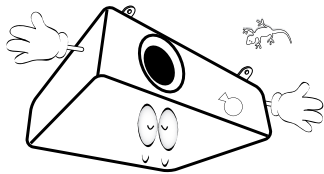


18. This apparatus must be earthed.

19. Do not place this projector in any of the following environments.

- Space that is poorly ventilated or confined. Allow at least 50 cm clearance from walls and free flow of air around the projector.
- Locations where temperatures may become excessively high, such as the inside of a car with all windows rolled up.
- Locations where excessive humidity, dust, or cigarette smoke may contaminate optical components, shorten the projector's life span and darken the image.

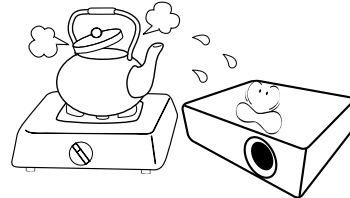

- Locations near fire alarms
- Locations with an ambient temperature above 40°C / 104°F
- Locations where the altitudes are higher than 3000 m (10000 feet).

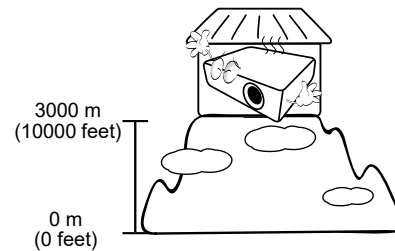

## Risk Group 2

1. According to the classification of photobiological safety of light sources and light source systems, this product is Risk Group 2, IEC 62471-5:2015.
2. Possibly hazardous optical radiation emitted from this product.
3. Do not stare at operating light source. May be harmful to the eyes.
4. As with any bright source, do not stare into the direct beam.



The projector's light source unit uses a laser.

Warning: Avoid eye exposure at a distance of less than 1 m.  
Avertissement : Évitez l'exposition oculaire à une distance inférieure à 1 m.

- Notice is given to supervise children and to never allow them to stare into the projector beam at any distance from the projector.
- Notice is given to use caution when using the remote control for starting the projector while in front of the projection lens.
- Notice is given to the user to avoid the use of optical aids such as binoculars or telescopes inside the beam.

## Laser Caution

This product belongs to CLASS 1 consumer laser product and complies with IEC 60825-1:2014, EN 60825-1:2014/A11:2021 and EN 50689:2021.



Above laser caution are located on the bottom of this apparatus.

Caution – Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.




To avoid damaging the DLP chips, never aim a high-power laser beam into the projection lens.

# Introduction


## Shipping contents

Carefully unpack and verify that you have all of the items shown below. If any of these items are missing, please contact your place of purchase.


### Standard accessories

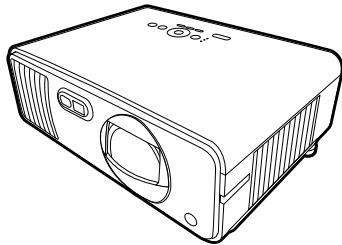


Projector




Remote control with batteries



Power cord



Quick start guide

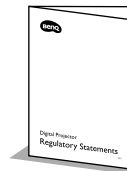

Regulatory statements



Warranty card\*





- The supplied accessories will be suitable for your region, and may differ from those illustrated.
- \*The warranty card is only supplied in some specific regions. Please consult your dealer for detailed information.

### Optional accessories

- Wireless Dongle (EZC-5201BS)


### Replacing the remote control batteries

1. Press and open the battery cover, as illustrated.
2. Remove the old batteries (if applicable) and install two AAA batteries. Make sure that the positive and negative ends are positioned correctly, as illustrated.
3. Replace the battery cover until it clicks into place.

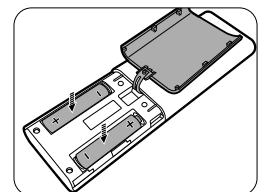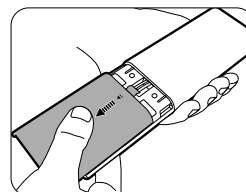


- Avoid leaving the remote control and batteries in an excessive heat or humid environment like the kitchen, bathroom, sauna, sunroom or in a closed car.
- Replace only with the same or equivalent type recommended by the battery manufacturer.
- Dispose of the used batteries according to the manufacturer's instructions and local environment regulations for your region.
- Never throw the batteries into a fire. There may be danger of an explosion.
- If the batteries are dead or if you will not be using the remote control for an extended period of time, remove the batteries to avoid damage to the remote control from possible battery leakage.

## Projector exterior view

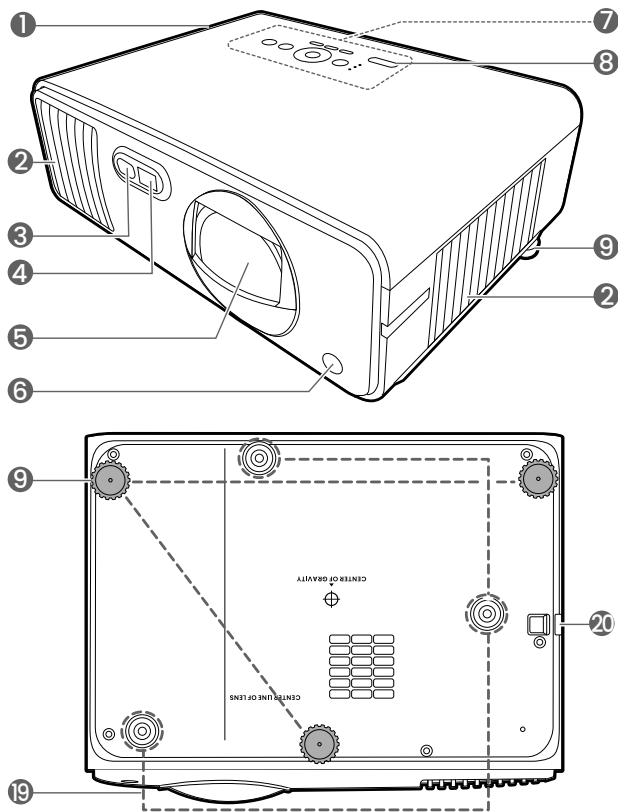

1. Vent (air exhaust)
2. Vent (air inlet)
3. Focus lens
4. Auto keystone lens
5. Projection lens
6. IR remote sensor (front)
7. External control panel  
(See [Controls and functions on page 10.](#))
8. IR remote sensor (top)
9. Adjuster feet
10. Audio output jack

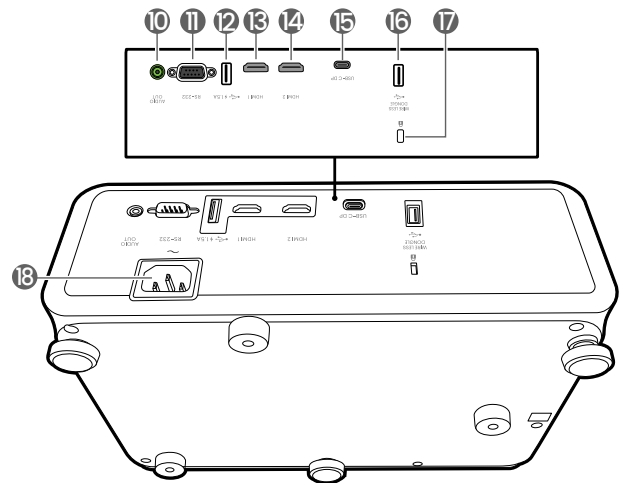



11. RS-232 control port
12. USB Type A port with power charging
13. HDMI 1 input port
14. HDMI 2 input port
15. USB Type C port
16. USB Type A port (for Wireless dongle)
17. Kensington anti-theft lock slot
18. AC power jack
19. Wall mount holes
20. Security bar

# Controls and functions

## Projector & Remote control



All the key presses described in this document are available on the remote control or projector.

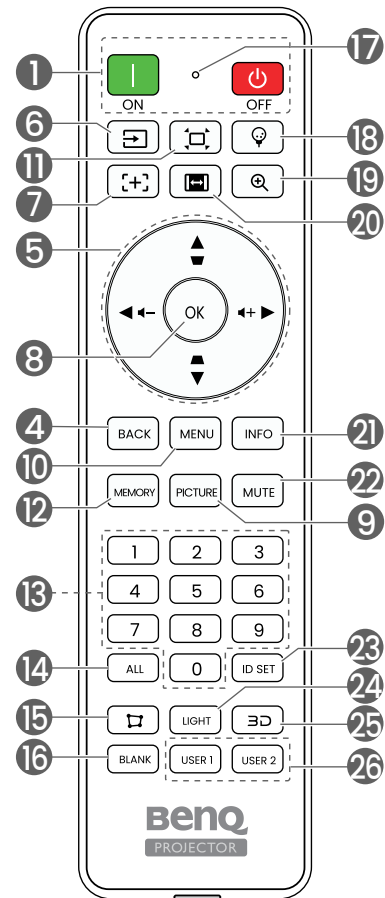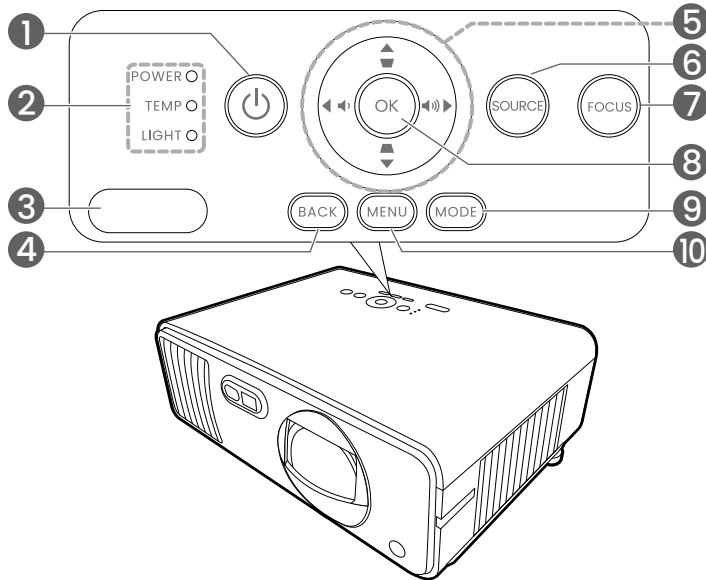

### 1. **POWER**

Toggles the projector between standby mode and on.

 **ON** /  **Off**

Toggles the projector between standby mode and on.

### 2. **POWER indicator light/TEMPerature warning light/LIGHT indicator light** (See [Indicators on page 53.](#))

### 3. IR remote sensor

### 4. **BACK**

Goes back to previous OSD menu, exits and saves menu settings.

### 5. Arrow keys (, , , )

When the On-Screen Display (OSD) menu is activated, these keys are used as directional arrows to select the desired menu items and to make adjustments.

Keystone keys (, )

Displays the keystone correction page.

Volume keys  / )

Decreases or increase the projector volume.

### 6. **SOURCE**

Displays the source selection bar.

## 7. **FOCUS**

Press to focus the image and then displays the adjustment page for manual adjustment.

\*Available on compatible projectors only.

## 8. **OK**

Confirms the selected On-Screen Display (OSD) menu item.

## 9. **MODE/PICTURE**

Displays the **Picture Mode** menu for selecting a picture mode.

## 10. **MENU**

Turns on the On-Screen Display (OSD) menu.

## 11. **AUTO SCREEN FIT**

Press to conduct auto screen fit.

## 12. **MEMORY**

Displays the image memory menu.

## 13. **Numeric buttons**

Enters numbers in network settings or when setting the remote control ID. Numeric buttons 1, 2, 3, 4 cannot be pressed when asked to enter password.

## 14. **ALL**

Press and hold ID SET until the ID setting indicator lights up. Press ALL to clear current ID setting of the remote control. The ID is cleared successfully when you see the ID setting indicator starts flickering and then blackout.

## 15. **GEOMETRY**

Opens the geometry menu for image correction function.

## 16. **BLANK**

Used to hide the screen picture.



Do not block the projection lens from projecting as this could cause the blocking object to become heated and deformed or even cause a fire.

## 17. **ID setting indicator**

## 18. **GOLF SETTING**

Displays the golf setting menu.

## 19. **ZOOM**

Press to display the motor zoom menu.

## 20. **SCREEN FILL**

Displays the aspect ratio selection list.

## 21. **INFO**

Displays the projector information.

## 22. **MUTE**

Toggles projector audio between on and off.

## 23. **ID SET**

Sets the code for this remote control. Press and hold **ID SET** until the ID setting indicator lights up. Enter the ID for the remote control (between 01~99). The remote control ID should be the same as the corresponding projector ID. The ID is saved successfully when you see the ID setting indicator starts flickering and then blackout.

## 24. **LIGHT**

Selects an available **Light Source Mode**.

## 25. **3D**

Displays the **3D** menu.

## 26. **USER 1/USER 2**


Switches to user defined picture mode.

## Remote control effective range


The remote control must be held at an angle within 30 degrees perpendicular to the projector's IR remote control sensor(s) to function correctly. The distance between the remote control and the sensor(s) should not exceed 8 meters (~ 26 feet).

Make sure that there are no obstacles between the remote control and the IR sensor(s) on the projector that might obstruct the infra-red beam.

- Operating the projector from the front

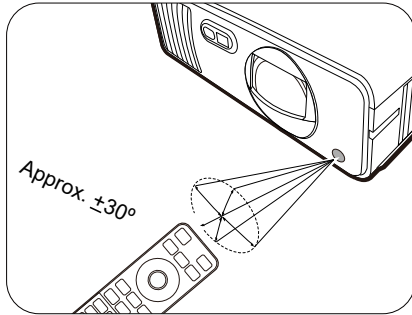

- Operating the projector from the top

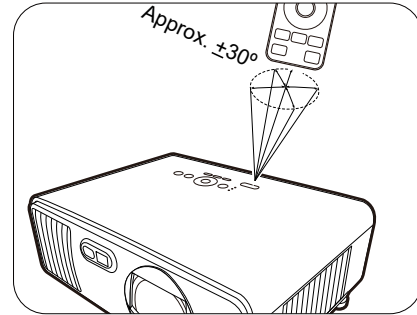

# Positioning your projector

## Choosing a location

Before choosing an installation location for your projector, take the following factors into consideration:


- Size and position of your screen
- Electrical outlet location
- Location and distance between the projector and the rest of your equipment

You can install your projector in the following ways.

---


### 1. Front

Select this location with the projector placed on the table in front of the screen. This is the most common way to position the projector for quick setup and portability.

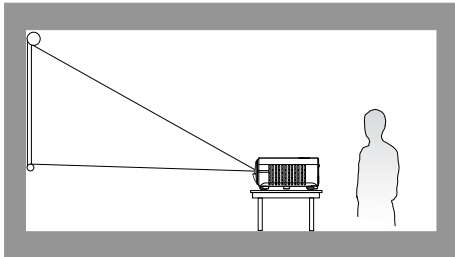


### 2. Rear

Select this location with the projector placed on the table behind the screen. Note that a special rear projection screen is required.

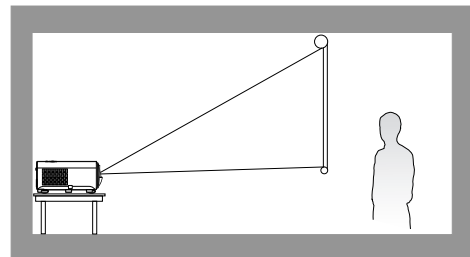


### 3. Front Ceiling

Select this location with the projector suspended upside-down in front of the screen. Purchase the BenQ Projector Ceiling/Wall Mount Kit from your dealer to mount your projector.

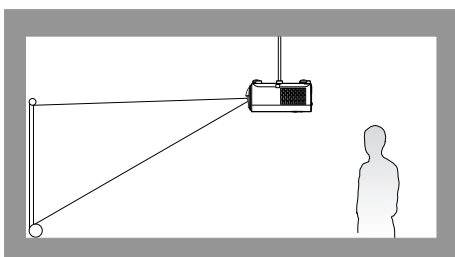

### 4. Rear Ceiling

Select this location with the projector suspended upside-down from behind the screen. Note that a special rear projection screen and the BenQ Projector Ceiling/Wall Mount Kit are required for this installation location.

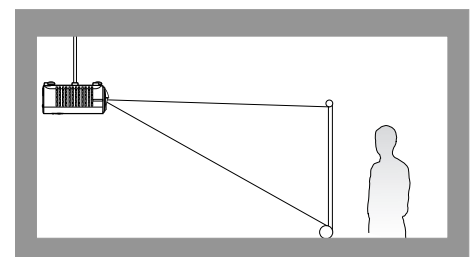

---

After turning on the projector, go to **Advanced Menu - Installation > Projector Position** and press ◀/▶ to select a setting.


# Obtaining a preferred projected image size

The distance from the projector lens to the screen, the zoom setting (if available), and the video format each factors in the projected image size.

## Projection dimensions

### AH700ST

- The screen aspect ratio is 16:9 and the projected picture is in a 16:9 aspect ratio

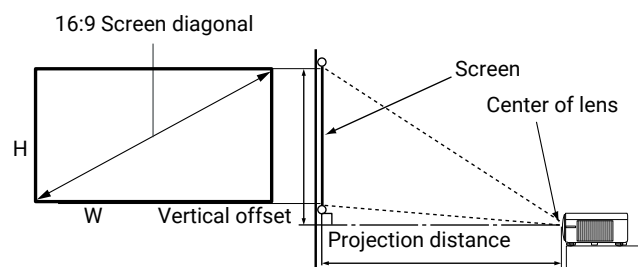

| Screen size |      |        |        | Projection distance (mm) |         |        | Vertical offset (mm) |
|-------------|------|--------|--------|--------------------------|---------|--------|----------------------|
| Diagonal    |      | H (mm) | W (mm) | Min                      | Average | Max    |                      |
| Inch        | mm   |        |        | (Wide)                   |         | (Tele) |                      |
| 30          | 762  | 374    | 664    | 458                      | 505     | 551    | 9                    |
| 40          | 1016 | 498    | 886    | 611                      | 673     | 735    | 12                   |
| 50          | 1270 | 623    | 1107   | 764                      | 841     | 919    | 16                   |
| 60          | 1524 | 747    | 1328   | 917                      | 1009    | 1102   | 19                   |
| 70          | 1778 | 872    | 1550   | 1069                     | 1178    | 1286   | 22                   |
| 80          | 2032 | 996    | 1771   | 1222                     | 1346    | 1470   | 25                   |
| 90          | 2286 | 1121   | 1992   | 1375                     | 1514    | 1654   | 28                   |
| 100         | 2540 | 1245   | 2214   | 1528                     | 1682    | 1837   | 31                   |
| 110         | 2794 | 1370   | 2435   | 1680                     | 1851    | 2021   | 34                   |
| 115         | 2921 | 1432   | 2546   | 1757                     | 1935    | 2113   | 36                   |
| 120         | 3048 | 1494   | 2657   | 1833                     | 2019    | 2205   | 37                   |
| 130         | 3302 | 1619   | 2878   | 1986                     | 2187    | 2389   | 40                   |
| 140         | 3556 | 1743   | 3099   | 2139                     | 2355    | 2572   | 44                   |
| 150         | 3810 | 1868   | 3321   | 2291                     | 2524    | 2756   | 47                   |
| 160         | 4064 | 1992   | 3542   | 2444                     | 2692    | 2940   | 50                   |
| 170         | 4318 | 2117   | 3763   | 2597                     | 2860    | 3124   | 53                   |
| 180         | 4572 | 2241   | 3985   | 2750                     | 3028    | 3307   | 56                   |
| 190         | 4826 | 2366   | 4206   | 2902                     | 3197    | 3491   | 59                   |
| 200         | 5080 | 2491   | 4428   | 3055                     | 3365    | 3675   | 62                   |
| 210         | 5334 | 2615   | 4649   | 3208                     | 3533    | 3859   | 65                   |
| 220         | 5588 | 2740   | 4870   | 3361                     | 3701    | 4042   | 68                   |
| 230         | 5842 | 2864   | 5092   | 3513                     | 3870    | 4226   | 72                   |
| 240         | 6096 | 2989   | 5313   | 3666                     | 4038    | 4410   | 75                   |
| 250         | 6350 | 3113   | 5535   | 3819                     | 4206    | 4594   | 78                   |
| 260         | 6604 | 3238   | 5756   | 3972                     | 4374    | 4777   | 81                   |
| 270         | 6858 | 3362   | 5977   | 4124                     | 4543    | 4961   | 84                   |
| 280         | 7112 | 3487   | 6199   | 4277                     | 4711    | 5145   | 87                   |
| 290         | 7366 | 3611   | 6420   | 4430                     | 4879    | 5329   | 90                   |
| 300         | 7620 | 3736   | 6641   | 4583                     | 5047    | 5512   | 93                   |

For example, if you are using a 100-inch screen, the recommended projection distance is 1682 mm.

If your measured projection distance is 1000 mm, the closest match in the "Projection distance (mm)" column is 1009 mm. Looking across this row shows that a 60" (about 1.5 m) screen is required.


**!** To optimize your projection quality, we suggest doing the projection by referring to the values listed in the non-gray rows.

**!** The values in the gray cells are for reference only.

**✎** All measurements are approximate and may vary from the actual sizes. BenQ recommends that if you intend to permanently install the projector, you should physically test the projection size and distance using the actual projector in situ before you permanently install it, so as to make allowance for this projector's optical characteristics. This will help you determine the exact mounting position so that it best suits your installation location.

## AK700ST

- The screen aspect ratio is 16:9 and the projected picture is in a 16:9 aspect ratio

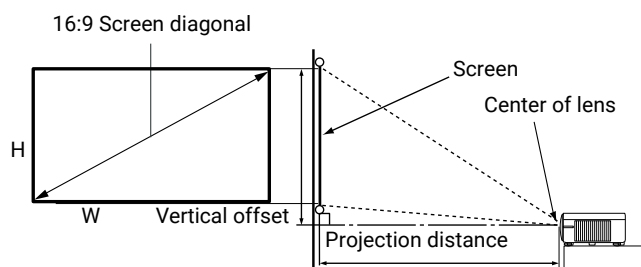

| Screen size |      |        |        | Projection distance (mm) |         |        | Vertical offset (mm) |
|-------------|------|--------|--------|--------------------------|---------|--------|----------------------|
| Diagonal    |      | H (mm) | W (mm) | Min                      | Average | Max    |                      |
| Inch        | mm   |        |        | (Wide)                   |         | (Tele) |                      |
| 30          | 762  | 374    | 664    | 458                      | 505     | 551    | 9                    |
| 40          | 1016 | 498    | 886    | 611                      | 673     | 735    | 12                   |
| 50          | 1270 | 623    | 1107   | 764                      | 841     | 919    | 16                   |
| 60          | 1524 | 747    | 1328   | 917                      | 1009    | 1102   | 19                   |
| 70          | 1778 | 872    | 1550   | 1069                     | 1178    | 1286   | 22                   |
| 80          | 2032 | 996    | 1771   | 1222                     | 1346    | 1470   | 25                   |
| 90          | 2286 | 1121   | 1992   | 1375                     | 1514    | 1654   | 28                   |
| 100         | 2540 | 1245   | 2214   | 1528                     | 1682    | 1837   | 31                   |
| 110         | 2794 | 1370   | 2435   | 1680                     | 1851    | 2021   | 34                   |
| 115         | 2921 | 1432   | 2546   | 1757                     | 1935    | 2113   | 36                   |
| 120         | 3048 | 1494   | 2657   | 1833                     | 2019    | 2205   | 37                   |
| 130         | 3302 | 1619   | 2878   | 1986                     | 2187    | 2389   | 40                   |
| 140         | 3556 | 1743   | 3099   | 2139                     | 2355    | 2572   | 44                   |
| 150         | 3810 | 1868   | 3321   | 2291                     | 2524    | 2756   | 47                   |
| 160         | 4064 | 1992   | 3542   | 2444                     | 2692    | 2940   | 50                   |
| 170         | 4318 | 2117   | 3763   | 2597                     | 2860    | 3124   | 53                   |
| 180         | 4572 | 2241   | 3985   | 2750                     | 3028    | 3307   | 56                   |
| 190         | 4826 | 2366   | 4206   | 2902                     | 3197    | 3491   | 59                   |
| 200         | 5080 | 2491   | 4428   | 3055                     | 3365    | 3675   | 62                   |
| 210         | 5334 | 2615   | 4649   | 3208                     | 3533    | 3859   | 65                   |

|     |      |      |      |      |      |      |    |
|-----|------|------|------|------|------|------|----|
| 220 | 5588 | 2740 | 4870 | 3361 | 3701 | 4042 | 68 |
| 230 | 5842 | 2864 | 5092 | 3513 | 3870 | 4226 | 72 |
| 240 | 6096 | 2989 | 5313 | 3666 | 4038 | 4410 | 75 |
| 250 | 6350 | 3113 | 5535 | 3819 | 4206 | 4594 | 78 |
| 260 | 6604 | 3238 | 5756 | 3972 | 4374 | 4777 | 81 |
| 270 | 6858 | 3362 | 5977 | 4124 | 4543 | 4961 | 84 |
| 280 | 7112 | 3487 | 6199 | 4277 | 4711 | 5145 | 87 |
| 290 | 7366 | 3611 | 6420 | 4430 | 4879 | 5329 | 90 |
| 300 | 7620 | 3736 | 6641 | 4583 | 5047 | 5512 | 93 |

For example, if you are using a 100-inch screen, the recommended projection distance is 1682 mm.

If your measured projection distance is 1000 mm, the closest match in the "[Projection distance \(mm\)](#)" column is 1009 mm. Looking across this row shows that a 60" (about 1.5 m) screen is required.



To optimize your projection quality, we suggest doing the projection by referring to the values listed in the non-gray rows.



The values in the gray cells are for reference only.



All measurements are approximate and may vary from the actual sizes.

BenQ recommends that if you intend to permanently install the projector, you should physically test the projection size and distance using the actual projector in situ before you permanently install it, so as to make allowance for this projector's optical characteristics. This will help you determine the exact mounting position so that it best suits your installation location.

## Mounting the projector

If you intend to mount your projector, we strongly recommend that you use a proper fitting BenQ projector mounting kit and that you ensure it is securely and safely installed.


If you use a non-BenQ brand projector mounting kit, there is a safety risk that the projector may fall down due to an improper attachment through the use of the wrong gauge or length screws.

### Before mounting the projector

- Purchase a BenQ projector mounting kit from the place you purchased your BenQ projector.
- BenQ recommends that you also purchase a separate Kensington lock compatible security cable and attach it securely to both the Kensington lock slot on the projector and the base of the mounting bracket. This will perform the secondary role of restraining the projector should its attachment to the mounting bracket become loose.
- Ask your dealer to install the projector for you. Installing the projector on your own may cause it to fall and result in injury.
- Take necessary procedures to prevent the projector from falling off such as during an earthquake.
- The warranty doesn't cover any product damage caused by mounting the projector with a non-BenQ brand projector mounting kit.
- Consider the surrounding temperature where the projector is ceiling/wall mounted. If a heater is used, the temperature around the ceiling/wall may be higher than expected.
- Read the user manual for the mounting kit about the range of torque. Tightening with torque exceeding the recommended range may cause damage to the projector and subsequently falling off.
- Make sure the power outlet is at an accessible height so that you can easily shut down the projector.

### Ceiling/Wall mount installation diagram

Ceiling/Wall mount screw: M4  
(Max L = 25 mm; Min L = 20 mm)

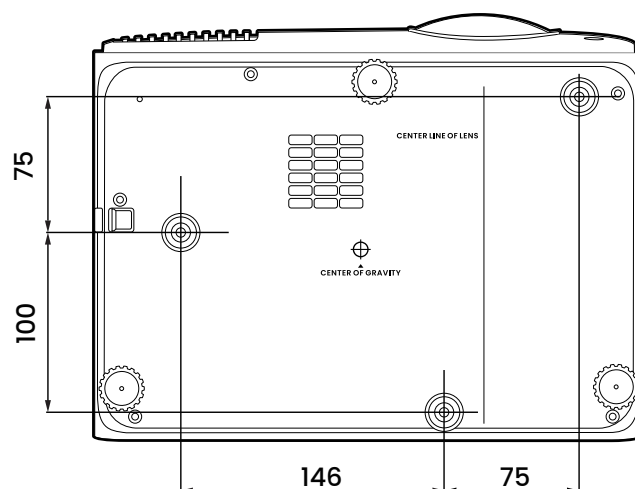


Unit: mm

## Adjusting the projected image

### Adjusting the projection angle

If the projector is not placed on a flat surface or the screen and the projector are not perpendicular to each other, the projected image becomes trapezoidal. You can screw the adjuster feet to fine-tune the horizontal angle.

To retract the feet, screw the adjuster feet in a reverse direction.

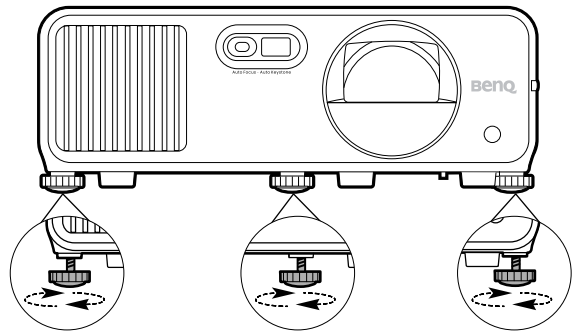

Do not look into the lens while the light source is on. The strong light from the light source may cause damage to your eyes.

## Fine-tuning the image size and clarity

### Adjusting the focus

Adjust the focus of the image in one of the following situations:

- During initial setup
- After moving the projector
- After adjusting zoom
- When image is fuzzy and you wish to obtain a clearer image

To adjust the focus:

1. Press **FOCUS** on the remote control.
2. Press and hold ◀/▶ to adjust the focus.
3. Press **OK** to save and exit.

## Using the Auto Screen Fit function

The **Auto Screen Fit** function automatically adjusts the focus, zoom, and aspect ratio of the projected image to fit the screen.

1. Measure the projection distance. Ensure that the distance between the projector and the screen is slightly longer than the intended projection distance.




When the projection distance is greater than 3 meters, ensure that the screen border is at least 6 cm thick for **Auto Screen Fit** to function properly.




When using the auto screen fit function on a 16:9 or 16:10 screen within 2.2 meters, ensure that the projection angle does not exceed 10 degrees. For 4:3 and 1:1 screens under the same circumstance, ensure that the projection angle does not exceed 20 degrees.


2. Turn on the projector, adjust the blank image until it overflows all four borders of the screen.

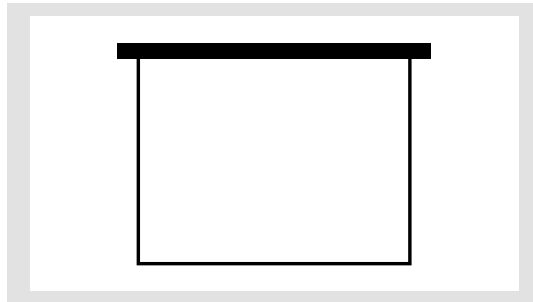

3. Adjust the projection distance, angle, or zoom until the adjustment markers are within the border of the screen.

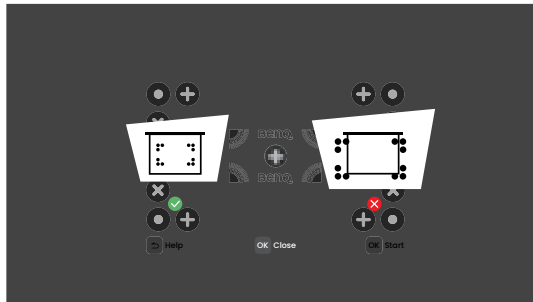

4. Press the **Auto Screen Fit** key on your remote control. The projector detects the size and ratio of the screen, and fits the focused image to the screen. Follow the on-screen instruction to complete the adjustment.

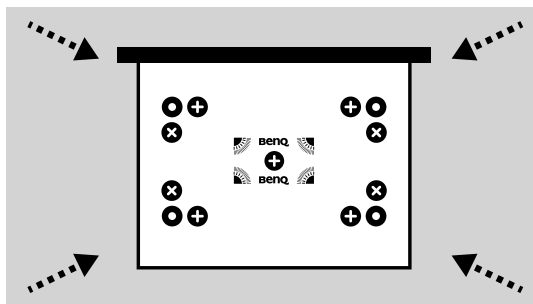

The image pattern shown here is for illustration only. Please refer to your projector for the actual image pattern.



Use the **Focus** function to fine-tune the image after performing **Auto Screen Fit**.


## Correcting keystone

Keystoning refers to the situation where the projected image becomes a trapezoid due to angled projection.

### 2D keystone (AH700ST)

To correct the distorted image:




1. Do one of the following steps to display the keystone correction page.
  - Press **▲** / **▼** on the projector or remote control.
  - Go to **Advanced Menu - Installation > 2D Keystone** and press **OK**.
2. After the **2D Keystone** correction page displays. To correct keystone at the top of the image, use **▼**. To correct keystone at the bottom of the image, use **▲**. To correct keystone at the right side of the image, use **◀**. To correct keystone at the left side of the image, use **▶**.

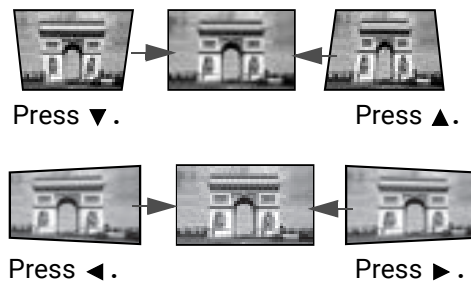

## 3D keystone (AK700ST)

To correct the distorted image:

1. Display the **3D Keystone** correction page from the following menus.
  - The setup wizard during the projector initial setup
  - Press **▲** / **▼** on the projector.
  - Go to the **Basic/Advanced Menu - Installation > 3D Keystone** and press **OK**.
2. After the **3D Keystone** correction page appears:
  - Press **◀** / **▶** to select V, H, or R. Selecting V corrects the vertical sides keystone. Selecting H corrects the horizontal sides keystone. Selecting R rotates the projected image clockwise or counterclockwise.
  - Press **▲** / **▼** to adjust its value.
  - To automatically correct the vertical sides of the distorted image, press **OK** for 2 seconds.
3. When done, press **BACK** to save your changes and exit.

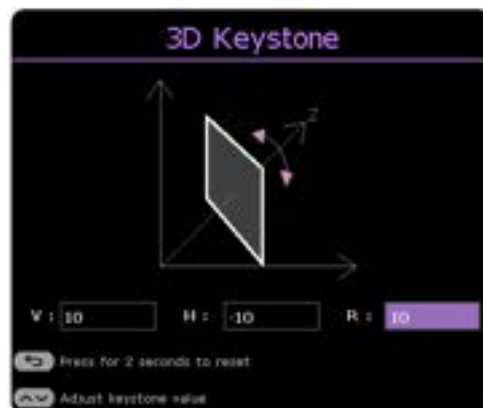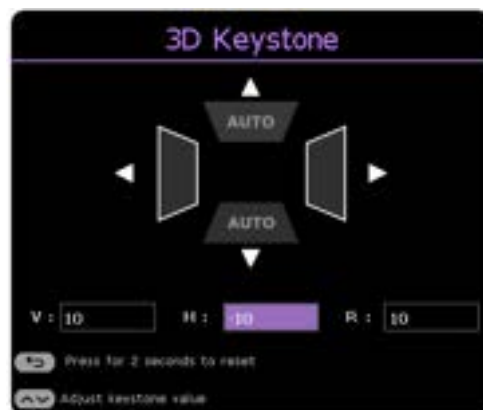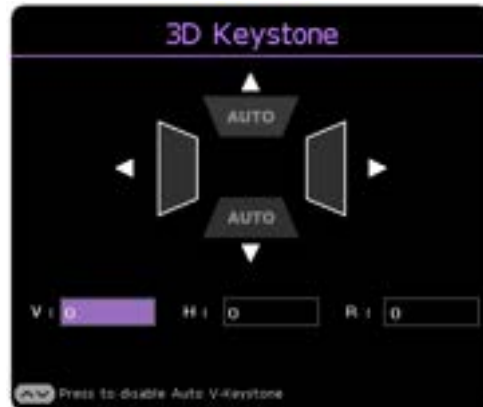


**!** This function is not available when **Warping** is enabled.

## Adjusting Corner Fit

You can manually adjust four corners of the image by setting the horizontal and vertical values.


1. Do one of the following steps to display the keystone correction page.
  - Press **Geometry** key on the remote control.
  - Go to **Advanced** menu - **Installation** > **Geometry** > **Corner Fit** and press **OK**.
2. Press **▲/▼/◀/▶** to select one corner and press **OK**.
3. Press **▲/▼** to adjust vertical values.
4. Press **◀/▶** to adjust horizontal values.

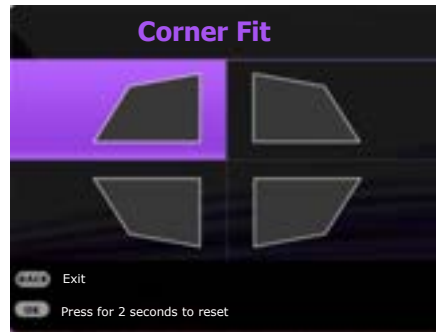

# Connection

When connecting a signal source to the projector, be sure to:

1. Turn all equipment off before making any connections.
2. Use the correct signal cables for each source.
3. Ensure the cables are firmly inserted.

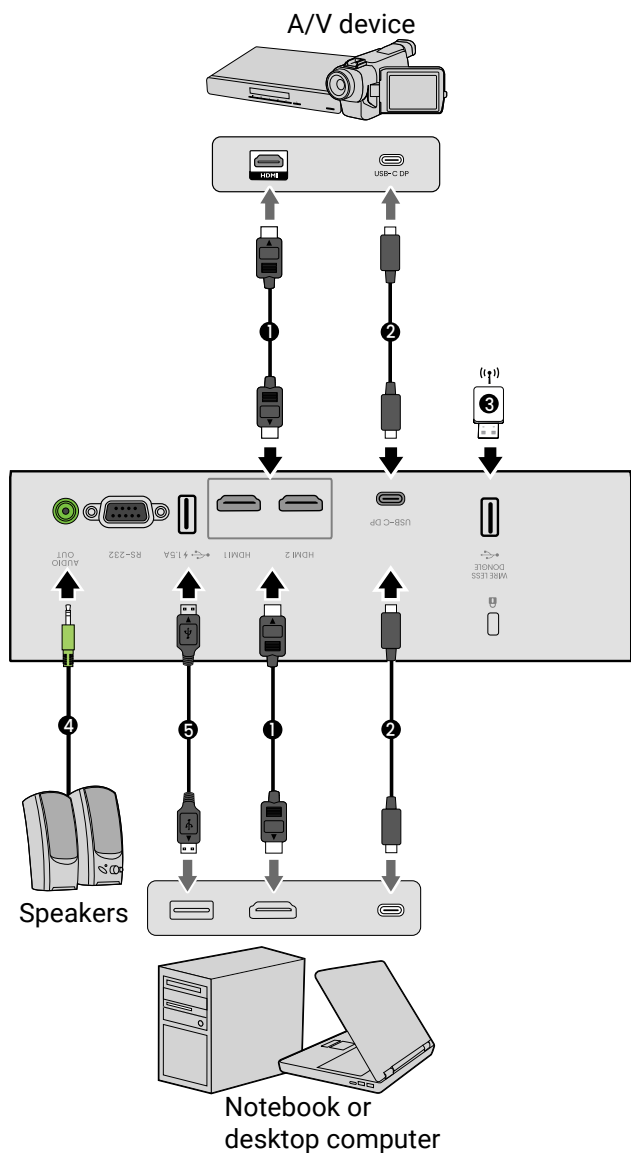

|   |                  |
|---|------------------|
| 1 | HDMI cable       |
| 2 | USB Type-C cable |
| 3 | Wireless dongle  |
| 4 | Audio cable      |
| 5 | USB Type-A cable |



- In the connections above, some cables may not be included with the projector (see [Shipping contents on page 8](#)). They are commercially available from electronics stores.
- The connection illustrations are for reference only. The rear connecting jacks available on the projector vary with each projector model.
- Many notebooks do not turn on their external video ports when connected to a projector. Usually a key combo like FN + function key with a monitor symbol turns the external display on/off. Press FN and the labeled function key simultaneously. Refer to your notebook's documentation to find your notebook's key combination.
- If the selected video image is not displayed after the projector is turned on and the correct video source has been selected, check that the video source device is turned on and operating correctly. Also check that the signal cables have been connected correctly.

## Connecting audio

The projector has built-in mono speaker(s) which are designed to provide basic audio functionality accompanying data presentations for business purposes only. They are not designed for, nor intended for stereo audio reproduction use as might be expected in home theater or home cinema applications. Any stereo audio input (if provided), is mixed into a common mono audio output through the projector speaker(s).

The built-in speaker(s) will be muted when the **AUDIO OUT** jack is connected.



- The projector is only capable of playing mixed mono audio, even if a stereo audio input is connected.
- If the selected video image is not displayed after the projector is turned on and the correct video source has been selected, check that the video source device is turned on and operating correctly. Also check that the signal cables have been connected correctly.

## Connecting the Wireless Dongle

The projector is equipped with a **WIRELESS DONGLE** port for the Wireless Dongle (EZC-5201BS) which supports wireless projection between the projector and the following systems: iOS, macOS, Android, Windows.

After inserting the wireless dongle into the **WIRELESS DONGLE** port, select **Wireless Display** from the source selection bar. You can follow the on-screen instructions to enable wireless projection.



## Performing wireless projection

For different devices, follow the steps below.

- For iOS/macOS devices

1. Select the WiFi network that the projector joined in the WiFi settings on your device.
2. After opening control center, press screen mirroring and choose the projector (BenQ\_xxxxxxx) to start projection.

- For Android devices

After opening the Quick settings panel, press the Screen Mirroring icon and choose the projector (BenQ\_xxxxxxx).

- For Windows OS devices

Press the Windows + P / K and choose the projector (BenQ\_xxxxxxxx).

### **Connecting the projector to the Internet**

1. Select the WiFi SSID (BenQ\_xxxxxxxx) of the projector in the WiFi settings on your device.
2. Enter the password from the projected image.
3. Open your web browser and go to the address of the projector (192.168.203.1).
4. Select a WiFi network that you want to join.
5. Enter the password if asked.

# Operation

## Starting up the projector

1. Plug the power cord. Turn on the power outlet switch (where fitted). The power indicator on the projector lights orange after power has been applied.
2. Press  on the projector or  on the remote control to start the projector. The power indicator flashes green and stays green when the projector is on.


The start up procedure takes about 10 seconds. In the later stage of start up, a startup logo is projected.

(If necessary) Press **Focus** to adjust the image clearness.

3. If the projector is activated for the first time, select your OSD language following the on-screen instructions.
4. If you are prompted for a password, press the arrow keys to enter a 6-digit password. See [Utilizing the password function on page 28](#).
5. Switch all of the connected equipment on.

6. The projector will search for input signals. The current input signal being scanned appears. If the projector does not detect a valid signal, the message "No Signal" will continue displaying until an input signal is found.

You can also press **SOURCE** to select your desired input signal. See [Switching input signal on page 29](#).

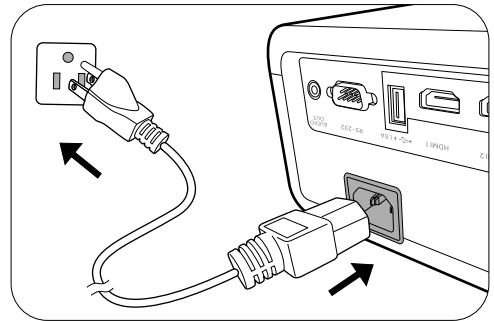

- Please use the original accessories (e.g. power cord) to avoid possible dangers such as electric shock and fire.
- If the projector is still hot from previous activity, it will run the cooling fan for approximately 90 seconds before energizing the light source.



- The Setup Wizard screenshots are for reference only and may differ from the actual design.
- If the frequency/resolution of the input signal exceeds the projector's operating range, you will see the message "Out of Range" displayed on the background screen. Please change to an input signal which is compatible with the projector's resolution or set the input signal to a lower setting. See [Timing chart on page 58](#).
- If no signal is detected for 3 minutes, the projector automatically enters saving mode.

## Using the menus

The projector is equipped with 2 types of On-Screen Display (OSD) menus for making various adjustments and settings.

- **Basic** OSD menu: provides primary menu functions. (See [Basic Menu on page 31](#))
- **Advanced** OSD menu: provides full menu functions. (See [Advanced Menu on page 32](#))

To access the OSD menu, press **MENU** on the projector or remote control.


- Use the arrow keys (▲/▼/◀/▶) on the projector or remote control to move through the menu items.
- Use **OK** on the projector or remote control to confirm the selected menu item.

The first time you use the projector (after finishing the initial setup), press **MENU**, and the **Advanced** OSD menu will be displayed.



The OSD screenshots below are for reference only, and may differ from the actual design.

Below is the overview of the **Basic** OSD menu.

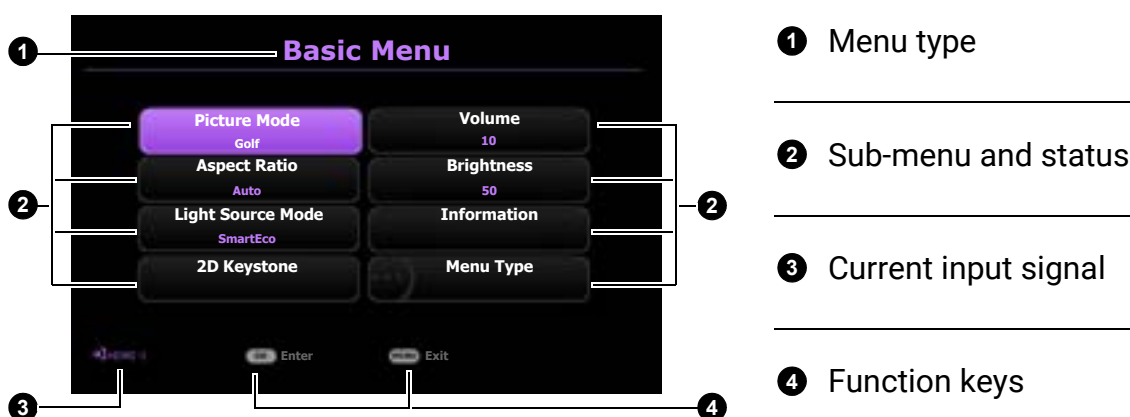

If you intend to switch from the **Basic** OSD menu to the **Advanced** OSD menu, follow the instructions below:

1. Go to **Menu Type** and press **OK**.
2. Press ▲ / ▼ to select **Advanced** and press **OK**. Your projector will switch to **Advanced** OSD menu.

Below is the overview of the **Advanced** OSD menu.



Likewise, when you wish to switch from the **Advanced** OSD menu to the **Basic** OSD menu, follow the instructions below:

1. Go to **System > Menu Settings > Menu Type** and press **OK**.
2. Press **▲ / ▼** to select **Basic**. Your projector will switch to the **Basic** OSD menu.

## Securing the projector

### Using a security cable lock


The projector has to be installed in a safe place to prevent theft. Otherwise, purchase a lock, such as the Kensington lock, to secure the projector. You can locate a Kensington lock slot on the rear side of the projector. See item 17 on [page 9](#).

A Kensington security cable lock is usually a combination of key(s) and the lock. Refer to the lock's documentation for finding out how to use it.

### Utilizing the password function

#### Setting a password

1. Go to **Advanced** menu - **System > Security Settings > Password**. Press **OK**. The **Password** page appears.
2. Highlight **Change Password** and press **OK**.
3. The four arrow keys (**▲**, **▶**, **▼**, **◀**) respectively represent 4 digits (1, 2, 3, 4). According to the password you desire to set, press the arrow keys to enter six digits for the password.
4. Confirm the new password by re-entering the new password.
5. To activate the **Power On Lock** function, press **▲/▼** to highlight **Power On Lock** and press **◀/▶** to select **On**. Input the password again.

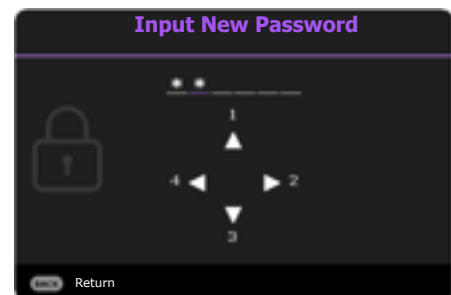


- The digits being input will display as asterisks on-screen. Make a note of your selected password and keep it in a safe place in advance or right after the password is entered so that it is available to you should you ever forget it.
- Once a password has been set and the power on lock is activated, the projector cannot be used unless the correct password is entered every time the projector is started.

#### If you forget the password


If you enter the wrong password, the password error message will appear, and the **Input Password** message follows. If you absolutely do not remember the password, you can use the password recall procedure. See [Entering the password recall procedure on page 29](#).

If you enter an incorrect password 5 times in succession, the projector will automatically shut down in a short time.

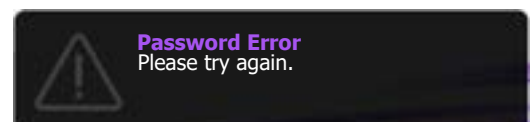

## Entering the password recall procedure

1. Press and hold **OK** for 3 seconds. The projector will display a coded number on the screen.
2. Write down the number and turn off your projector.
3. Seek help from the local BenQ service center to decode the number. You may be required to provide proof of purchase documentation to verify that you are an authorized user of the projector.

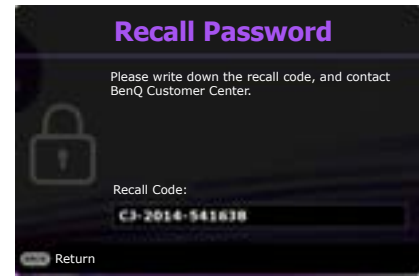

## Changing the password

1. Go to **Advanced** menu - **System** > **Security Settings** > **Password**. Press **OK**. The **Password** page appears.
2. Highlight **Change Password** and press **OK**.
3. Enter the old password.
  - If the password is correct, another message “**Input New Password**” appears.
  - If the password is incorrect, the password error message will appear, and the message “**Input Password**” appears for your retry. You can press **BACK** to cancel the change or try another password.
4. Enter a new password.
5. Confirm the new password by re-entering the new password.

## Disabling the password function

To disable password protection, go to **Advanced** menu - **System** > **Security Settings** > **Password** > **Power On Lock** and press **OK** and **◀/▶** to select **Off**. The message **Input Password** appears. Enter the current password.

- If the password is correct, the OSD menu will disappear. You will not have to enter the password next time turning on the projector.
- If the password is incorrect, the password error message will appear, and the message **Input Current Password** appears for your retry. You can press **BACK** to cancel the change or try another password.



Though the password function is disabled, you need to keep the old password in hand should you ever need to re-activate the password function by entering the old password.

## Switching input signal

The projector can be connected to multiple devices at the same time. However, it can only display one full screen at a time. When starting up, the projector automatically searches for the available signals.

Be sure the **Advanced** menu - **Display** > **Auto Source Search** menu is **On** if you want the projector to automatically search for the signals.

To select the source:

1. Press **SOURCE**. A source selection bar appears.
2. Press **▲/▼** until your desired signal is selected and press **OK**.




Once detected, the selected source information will appear at the corner of the screen for seconds. If there is multiple equipment connected to the projector, repeat steps 1-2 to search for another signal.



- The brightness level of the projected image will change accordingly when you switch between different input signals.
- For best display picture results, you should select and use an input signal which outputs at the projector's native resolution. Any other resolutions will be scaled by the projector depending upon the "aspect ratio" setting, which may cause some image distortion or loss of picture clarity. See [Aspect Ratio on page 39](#).

## Shutting down the projector

1. Press  on the projector or  on the remote control and a confirmation message will appear prompting you. If you don't respond in a few seconds, the message will disappear.
2. Press  or  a second time. The power indicator flashes orange, the projection light source shuts down, and the fans will continue to run for approximately 2 seconds to cool down the projector.
3. Once the cooling process finishes, the power indicator becomes a steady orange and fans stop. Disconnect the power cord from the power outlet.

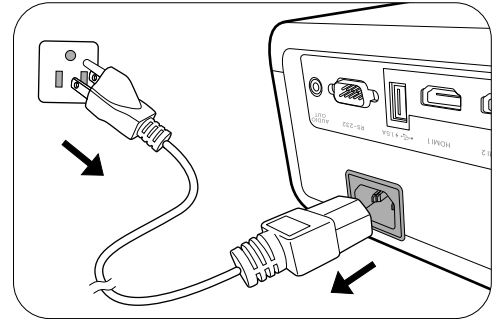

- To protect the light source, the projector will not respond to any commands during the cooling process.

# Menu operation

Please note that the on-screen display (OSD) menus vary according to the signal type selected and the projector model you are using.

The menu items are available when the projector detects at least one valid signal. If there is no equipment connected to the projector or no signal detected, limited menu items are accessible.

## Menu System

### Basic Menu

| Menu (Ref. Page)                | Options                                                     |
|---------------------------------|-------------------------------------------------------------|
| Picture Mode (33)               | Bright/Golf/Cinema/Game/sRGB/(3D)/(HDR10)/(HLG)/User1/User2 |
| Aspect Ratio (39)               | Auto/4:3/16:9/16:10                                         |
| Light Source Mode (52)          | Normal                                                      |
|                                 | ECO                                                         |
|                                 | SmartEco                                                    |
|                                 | Custom                                                      |
| 2D Keystone (20) (AH700ST only) | H: -30~0~30                                                 |
|                                 | V: -30~0~30                                                 |
| 3D Keystone (21) (AK700ST only) | H: -30~0~30                                                 |
|                                 | V: -30~0~30                                                 |
|                                 | R: -30~0~30                                                 |
| Volume (37)                     | 0 – 20                                                      |
| Brightness (34)                 | 0–100                                                       |
| Information (49)                | Native Resolution                                           |
|                                 | Detected Resolution                                         |
|                                 | Source                                                      |
|                                 | Picture Mode                                                |
|                                 | Light Source Mode                                           |
|                                 | 3D Format                                                   |
|                                 | Color System                                                |
|                                 | Dynamic Range                                               |
|                                 | Light Source Usage Time                                     |
|                                 | Projector ID                                                |
|                                 | Firmware Version                                            |
|                                 | Service Code                                                |
| Menu Type (47)                  | Basic/Advanced                                              |

# Advanced Menu

## 1. Main menu: **Picture**

### Structure

| Menu                       |                    | Options                                                     |                                      |
|----------------------------|--------------------|-------------------------------------------------------------|--------------------------------------|
| Picture Mode               |                    | Bright/Golf/Cinema/Game/sRGB/(3D)/(HDR10)/(HLG)/User1/User2 |                                      |
| User Management            | Load Settings From | Golf/Cinema/Game/sRGB                                       |                                      |
|                            | Rename User Mode   |                                                             |                                      |
| Brightness                 |                    | 0–100                                                       |                                      |
| Contrast                   |                    | 0–100                                                       |                                      |
| Sharpness                  |                    | 0–31                                                        |                                      |
| Advanced Color Settings    | Gamma Selection    |                                                             | 1.8/2.0/2.1/2.2/2.3/2.4/2.5/2.6/BenQ |
|                            | Color Management   | R/G/B/C/M/Y                                                 | Hue/Saturation/Gain                  |
|                            |                    | W (White Balance)                                           | R Gain/G Gain/B Gain                 |
|                            |                    | Reset                                                       | Reset/Cancel                         |
|                            | Brilliant Color    |                                                             | Off/On                               |
|                            | Light Source Mode  |                                                             | Normal/ECO/SmartEco/Custom           |
|                            | Custom Brightness  |                                                             | 50%–100%                             |
|                            | HDR Brightness     |                                                             | -2/-1/0/1/2                          |
|                            | Noise Reduction    |                                                             | 0–31                                 |
| Reset Current Picture Mode |                    | Reset/Cancel                                                |                                      |

## Function descriptions

| Menu                | Descriptions                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|---------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Picture Mode</b> | <p>The projector is preset with several predefined picture modes so that you can choose one to suit your operating environment and input signal picture type.</p> <ul style="list-style-type: none"><li>• <b>Bright</b>: Maximizes the brightness of the projected image. This mode is suitable for environments where extra-high brightness is required.</li><li>• <b>Golf</b>: Is designed for golf simulators. This mode optimizes the blue sky and the green grass color.</li><li>• <b>Cinema</b>: This mode is best for watching movies with accurate color and deepest contrast at lower brightness level in rooms with a bit of ambient light, as if in a commercial cinema.</li><li>• <b>Game</b>: Is designed for playing games. This mode enhances the details of images and vivid color performance and details.</li><li>• <b>sRGB</b>: Maximizes the purity of RGB colors to provide true-to-life images regardless of brightness setting. It is most suitable for viewing photos taken with an sRGB compatible and properly calibrated camera, and for viewing PC graphic and drawing applications such as AutoCAD.</li><li>• <b>3D</b>: Is appropriate for playing 3D images and 3D video clips. This mode is only available when 3D function is enabled and 3D content is detected.</li><li>• <b>HDR10</b>: Delivers High Dynamic Range effects with higher contrasts of brightness and colors for HDR Blu-ray movies. <b>Picture Mode</b> will be switched to <b>HDR10</b> automatically while detecting metadata or EOTF info from HDR contents.</li><li>• <b>HLG</b>: Delivers High Dynamic Range effects with higher contrasts of brightness and colors. <b>Picture Mode</b> will be switched to <b>HLG</b> automatically while detecting metadata or EOTF info from HLG streaming contents.</li><li>• <b>User1/User2</b>: Recalls the settings customized based on the current available picture modes. See <a href="#">User Management on page 34</a>.</li></ul> |


|                        |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>User Management</b> | <p>There is one user-definable mode if the current available picture modes are not suitable for your need. You can use one of the picture modes (except the <b>User1/User2</b> mode) as a starting point and customize the settings.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|                        | <p>• <b>Load Settings From</b></p> <ol style="list-style-type: none"> <li>1. Go to <b>Picture &gt; Picture Mode</b>.</li> <li>2. Press <b>◀/▶</b> to select <b>User1</b> or <b>User2</b>.</li> <li>3. Press <b>▼</b> to highlight <b>User Management</b>, and press <b>OK</b>. The <b>User Management</b> page is displayed.</li> <li>4. Select <b>Load Settings From</b> and press <b>OK</b>.</li> <li>5. Press <b>▼/▲</b> to select a picture mode that is closest to your need.</li> <li>6. Press <b>OK</b> and <b>BACK</b> to return to the <b>Picture</b> menu.</li> <li>7. Press <b>▼</b> to select the sub-menu items you want to change and adjust the values with <b>◀/▶</b>. The adjustments define the selected user mode.</li> </ol> <p>• <b>Rename User Mode</b></p> <p>Select to rename the customized picture mode (<b>User1/User2</b>). The new name can be up to 9 characters including English letters (A-Z, a-z), digits (0-9), and space (_).</p> <ol style="list-style-type: none"> <li>1. Go to <b>Picture &gt; Picture Mode</b>.</li> <li>2. Press <b>◀/▶</b> to select <b>User1</b> or <b>User2</b>.</li> <li>3. Press <b>▼</b> to highlight <b>User Management</b>, and press <b>OK</b>. The <b>User Management</b> page is displayed.</li> <li>4. Press <b>▼</b> to highlight <b>Rename User Mode</b> and press <b>OK</b>. The <b>Rename User Mode</b> page is displayed.</li> <li>5. Use <b>▲/▶ / ▼/◀</b>, and <b>OK</b> to set desired characters.</li> <li>6. When done, press <b>BACK, Commit</b> to save the changes and exit.</li> </ol> |
| <b>Brightness</b>      | <p>The higher the value, the brighter the image. Adjust this control so the black areas of the image appear just as black and that detail in the dark areas is visible.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Contrast</b>        | <p>The higher the value, the greater the contrast. Use this to set the peak white level after you have previously adjusted the Brightness setting to suit your selected input and viewing environment.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Sharpness</b>       | <p>The higher the value, the sharper the picture becomes.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |

---

### • Gamma Selection

Gamma refers to the relationship between input source and picture brightness.

- **1.8/2.0/2.1**: Select these values according to your preference.
- **2.2/2.3**: Increases the average brightness of the picture. Best for a lit environment, meeting room or family room.
- **2.4/2.5**: Best for viewing movies in a dark environment.
- **2.6**: Best for viewing movies which are mostly composed of dark scenes.
- **BenQ**: Finely-tuned gamma to optimize details and increase contrast.

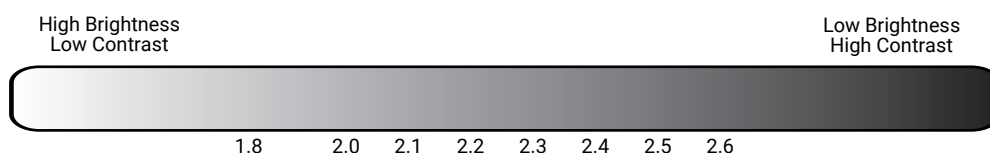

### • Color Management


The Color Management provides six sets (RGBCMY) of colors to be adjusted. When you select each color, you can independently adjust its range and saturation according to your preference.

To make adjustments, press the ▲/▼ arrows to highlight an independent color from among Red (R), Green (G), Blue (B), Cyan (C), Magenta (M), Yellow (Y) or White (W). The following menu items are displayed for your choice.

### Advanced Color Settings

- **Hue**: Increase in the range will include colors consisted of more proportions of its two adjacent colors. Please refer to the illustration for how the colors relate to each other.

For example, if you select Red and set its range at 0, only pure red in the projected picture will be selected. Increasing its range will include red close to yellow and red close to magenta.

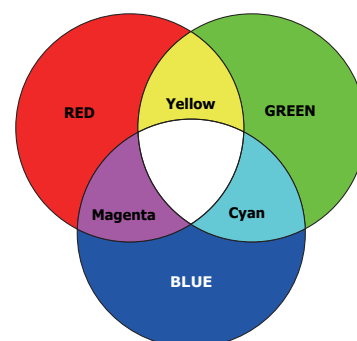

- **Saturation**: Adjusts the values to your preference. Every adjustment made will reflect to the image immediately. For example, if you select Red and set its value at 0, only the saturation of pure red will be affected.
- **Gain**: Adjusts the values to your preference. The contrast level of the primary color you select will be affected. Every adjustment made will reflect to the image immediately.

If you select **W (White Balance)**, you can adjust the contrast levels of Red, Green, Blue, Cyan, Magenta, Yellow and White by selecting **R Gain**, **G Gain**, and **B Gain**.

To return all the settings to the factory default values, highlight **Reset**, and press **OK**.



**Saturation** is the amount of that color in a video picture. Lower settings produce less saturated colors; a setting of "0" removes that color from the image entirely. If the saturation is too high, that color will be overpowering and unrealistic.

- **Brilliant Color**

This feature utilizes a new color-processing algorithm and system level enhancements to enable higher brightness while providing truer, more vibrant colors in picture. It enables a greater than 50% brightness increase in mid-tone images, which are common in video and natural scenes, so the projector reproduces images in realistic and true colors. If you prefer images with that quality, select a desired level.

- **Light Source Mode**

Selects a suitable light source power from among the provided modes. See [Extending light source life on page 52](#).

- **Custom Brightness**

You can adjust the light source brightness. This function is only available when **Light Source Mode** is **Custom**.

- **HDR Brightness**

The projector can automatically adjust the brightness levels of your image according to the input source. You can also manually select a brightness level to display better picture quality. When the value is higher, the image becomes brighter; when the value is lower, the image becomes darker.

- **Noise Reduction**

Reduces electrical image noise caused by different media players

---

Returns all of the adjustments you've made for the selected **Picture Mode** (including the preset mode, **User1** and **User2**) to the factory preset values.

1. Press **OK**. The confirmation message is displayed.
2. Use ◀/▶ to select **Reset** and press **OK**. The current picture mode returns to the factory preset settings.



The following settings will still remain: **Picture Mode**, **Load Settings From**.

---

## Advanced Color Settings (Continued)

## Reset Current Picture Mode

## 2. Main menu: **Audio**

### Structure

| Menu                   | Options                                   |
|------------------------|-------------------------------------------|
| Audio Output           | Internal Speaker/3.5mm Jack/Audio Return+ |
| Mute                   | Off/On                                    |
| Volume                 | 0 – 20                                    |
| Audio Output Format    | Auto/LPCM/RAW/RAW+                        |
| Power On/Off Ring Tone | Off/On                                    |
| Reset Audio            | Reset/Cancel                              |

### Function descriptions



| Menu                   | Descriptions                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Audio Output           | <p>Selects the audio output from internal or external speakers.</p> <p>To enjoy <b>Audio Return+</b> sound effect, make sure to turn on the eARC/ARC function from your soundbar as well.</p> <p><b>Audio Return+</b> supports multi-audio outputs including 2.0, 5.1, 7.1 and Dolby Atmos to external audio systems like soundbars.</p>  <p><b>Audio Return+</b> is only available with <b>HDMI-2</b>.</p> |
| Mute                   | <p>Select <b>On</b> to temporarily turn off the projector's internal speaker or the volume being output from the audio output jack.</p> <p>To restore the audio, select <b>Off</b>.</p>                                                                                                                                                                                                                                                                                                       |
| Volume                 | <p>Adjusts the volume level of the projector's internal speaker or the volume being output from the audio output jack.</p> <p>If the <b>Mute</b> function is activated, adjusting <b>Volume</b> will turn off the <b>Mute</b> function.</p>                                                                                                                                                                                                                                                   |
| Audio Output Format    | <p>The following audio output formats are provided to achieve the audio performance you desire.</p> <ul style="list-style-type: none"><li>• <b>Auto</b>: selects a suitable output format from the audio system.</li><li>• <b>LPCM</b>: supports 2 channel audio output.</li><li>• <b>RAW</b> (Up to 7.1): supports up to 7.1 channel audio output.</li><li>• <b>RAW+</b> (Object-base): supports Dolby Atmos audio output.</li></ul>                                                         |
| Power On/Off Ring Tone | <p>Sets the ring tone for the projector <b>On</b> or <b>Off</b>.</p> <p>The <b>Power On/Off Ring Tone</b> can only be adjusted here. Setting the sound mute or adjusting the sound level do not affect the <b>Power On/Off Ring Tone</b>.</p>                                                                                                                                                                                                                                                 |
| Reset Audio            | <p>Returns all of the adjustments you've done under the <b>Audio</b> menu to the factory preset values.</p>                                                                                                                                                                                                                                                                                                                                                                                   |

### 3. Main menu: **Display**

#### Structure

| Menu                           |                   | Options                                                             |                                                                            |
|--------------------------------|-------------------|---------------------------------------------------------------------|----------------------------------------------------------------------------|
| Aspect Ratio                   |                   | Auto/4:3/16:9/16:10                                                 |                                                                            |
| Auto Source Search             |                   | Off/On                                                              |                                                                            |
| Source Rename                  |                   | HDMI-1/HDMI-2                                                       |                                                                            |
| 3D                             | 3D Mode           | Auto/Top-Bottom/Frame Sequential/<br>Frame Packing/Side By Side/Off |                                                                            |
|                                | 3D Sync Invert    | Disable/Invert                                                      |                                                                            |
|                                | Save 3D Settings  | 3D Settings 1/3D Settings 2/<br>3D Settings 3                       |                                                                            |
|                                | Apply 3D Settings | 3D Settings 1/3D Settings 2/<br>3D Settings 3                       |                                                                            |
| HDMI Settings                  | HDMI Format       | Auto/Limited/Full                                                   |                                                                            |
|                                | HDMI Equalizer    | HDMI-1/HDMI-2                                                       | Auto/1/2/3/4/5                                                             |
|                                | HDMI EDID         | HDMI-1/HDMI-2/<br>Type C                                            | Enhanced/Standard                                                          |
|                                | Power On Link     | Off/From Device                                                     |                                                                            |
|                                | Power Off Link    | Off/From Projector                                                  |                                                                            |
| 4K Upscaling<br>(AK700ST only) |                   | Off/On                                                              |                                                                            |
| Screen Fill                    | (AH700ST)         | Standard                                                            | 16:9 (1920 x 1080)/16:10 (1728 x 1080)/4:3 (1440 x 1080)/1:1 (1080 x 1080) |
|                                |                   | Enhanced                                                            | 16:9 (3840 x 2160)/16:10 (1728 x 1080)/4:3 (1440 x 1080)/1:1 (1080 x 1080) |
|                                | (AK700ST)         | Standard                                                            | 16:9 (1920 x 1080)/16:10 (1728 x 1080)/4:3 (1440 x 1080)/1:1 (1080 x 1080) |
|                                |                   | Enhanced                                                            | 16:9 (3840 x 2160)/16:10 (3200 x 2048)/4:3 (2880 x 2160)/1:1 (2160 x 2160) |
| Reset Display                  |                   | Reset/Cancel                                                        |                                                                            |

## Function descriptions

| Menu               | Descriptions                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|--------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Aspect Ratio       | <p>There are several options to set the image's aspect ratio depending on your input signal source.</p> <ul style="list-style-type: none"> <li>• <b>Auto</b>: Scales an image proportionally to fit the projector's native resolution in its horizontal or vertical width.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|                    |  <p><b>15:9 picture</b></p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|                    | <ul style="list-style-type: none"> <li>• <b>4:3</b>: Scales an image so that it is displayed in the center of the screen with a 4:3 aspect ratio.</li> </ul>  <p><b>4:3 picture</b></p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|                    | <ul style="list-style-type: none"> <li>• <b>16:9</b>: Scales an image so that it is displayed in the center of the screen with a 16:9 aspect ratio.</li> </ul>  <p><b>16:9 picture</b></p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|                    | <ul style="list-style-type: none"> <li>• <b>16:10</b>: Scales an image so that it is displayed in the center of the screen with a 16:10 aspect ratio.</li> </ul>  <p><b>16:10 picture</b></p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| Auto Source Search | Allows the projector to automatically search for a signal.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| Source Rename      | <p>Renames the current input source to your desired name.</p> <p>On the <b>Source Rename</b> page:</p> <ol style="list-style-type: none"> <li>1. Press <b>OK</b> to display the on-screen keyboard.</li> <li>2. Press <b>▲/▼/◀/▶</b> to select each desired digit/letter, and press <b>OK</b> to confirm each input.</li> <li>3. Repeat the step above and when done, press <b>BACK</b> and <b>▼</b> to highlight <b>Commit</b>.</li> <li>4. Press <b>OK</b> and the source name changes.</li> </ol>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|                    |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|                    |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|                    |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| 3D                 | <p>This projector supports playing three-dimensional (3D) content transferred through your 3D-compatible video devices and contents, such as PlayStation consoles (with 3D game discs), 3D Blu-ray players (with 3D Blu-ray discs), and so on. After you have connected the 3D video devices to the projector, wear a pair of 3D glasses and make sure the power is on to view 3D contents.</p> <p>When watching 3D contents:</p> <ul style="list-style-type: none"> <li>• The image may seem misplaced; however, this is not a product malfunction.</li> <li>• Take appropriate breaks when watching 3D contents.</li> <li>• Stop watching 3D contents if you feel fatigue or discomfort.</li> <li>• Keep a distance from the screen of about three times the effective height of the screen.</li> <li>• Children and people with a history of oversensitivity to light, heart problems, or any other existing medical conditions should be refrained from watching 3D contents.</li> </ul> |
|                    |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |

- 
- The image may seem reddish, greenish, or bluish without wearing 3D glasses. However, you will not notice any color bias when watching 3D contents with 3D glasses.
  - The 4K source will not be displayed.

- **3D Mode**

The projector can automatically enable 3D mode via the contents when the source type is HDMI and supports 1.4a. If you want the projector to automatically choose an appropriate 3D format when detecting 3D contents, select **Auto**. If the projector cannot recognize the 3D format, choose a 3D mode from among **Top-Bottom**, **Frame Sequential**, **Frame Packing** and **Side By Side**.

When **3D Mode** is enabled:

- The brightness level of the projected image decreases.
- The **Picture Mode** cannot be adjusted.
- The **2D Keystone** can only be adjusted within limited degrees.

### 3D (Continued)

- **3D Sync Invert**

When your 3D image is distorted, enable this function to switch between the image for the left eye and the right eye for more comfortable 3D viewing experience.

- **Save 3D Settings**

When you have successfully displayed the 3D contents after making the appropriate adjustments, you can enable this function and choose a set of 3D settings to memorize current 3D settings.

- **Apply 3D Settings**

After the 3D settings are saved, you can decide if you would like to apply them by choosing a set of 3D settings that you have saved. Once applied, the projector will automatically play the incoming 3D contents if it matches the 3D settings saved.



Only the set(s) of 3D settings with memorized data is available.

---

## HDMI Settings

### • HDMI Format

Selects a suitable RGB color range to correct the color accuracy.

- **Auto**: Automatically selects a suitable color range for the incoming HDMI signal.
- **Limited**: Utilizes the Limited range RGB 16-235.
- **Full**: Utilizes the Full range RGB 0-255.

### • HDMI Equalizer

Sets a suitable value to maintain the HDMI picture quality in long distance data transmission.

### • HDMI EDID

Switches between **Enhanced** for HDMI 2.0/Type C EDID and **Standard** for HDMI 1.4 EDID. Selecting **Standard** which supports up to 1080p 60Hz may solve abnormal display issues with some old players.

### • Power On Link/Power Off Link

When you connect an HDMI CEC-compatible device to your projector with an HDMI cable, you can set the behavior of powering on/off between the device and the projector.

|                                               |                                                                                |
|-----------------------------------------------|--------------------------------------------------------------------------------|
| <b>Power On Link &gt;<br/>From Device</b>     | When the connected device is turned on, the projector will be activated, too.  |
| <b>Power Off Link &gt;<br/>From Projector</b> | When the projector is turned off, the connected device will be shut down, too. |

## 4K Upscaling (AK700ST only)

Enables or disables "XPR always ON" which upscales all input timings to 4K resolution.

Select the screen aspect ratio. The native resolution changes in accordance with user's selection.

## Screen Fill



When **Screen Fill** is set to 16:10, 4:3, or 1:1, **Aspect Ratio** is set to **Auto** and is not available for adjustment.

## Reset Display

Returns all the settings on the **Display** main menu to the factory default values.

## 4. Main menu: **Installation**

### Structure

| Menu                       |                        | Options                                           |                                                          |
|----------------------------|------------------------|---------------------------------------------------|----------------------------------------------------------|
| Projector Position         |                        | Front/Front Ceiling/Rear/Rear Ceiling             |                                                          |
| 2D Keystone (AH700ST only) |                        | H: -30 – +30                                      |                                                          |
|                            |                        | V: -30 – +30                                      |                                                          |
| 3D Keystone (AK700ST only) |                        | H: -30~0~30                                       |                                                          |
|                            |                        | V: -30~0~30                                       |                                                          |
|                            |                        | R: -30~0~30                                       |                                                          |
| Test Pattern               |                        | On/Off                                            |                                                          |
| High Altitude Mode         |                        | On/Off                                            |                                                          |
| Baud Rate                  |                        | 9600/14400/19200/38400/57600/115200               |                                                          |
| Projector ID Setting       |                        | Off/01/02/.../99                                  |                                                          |
| Geometry                   | Corner Fit             | Top Left/Top Right/Bottom Left/Bottom Right       | H: 0~60 (1080P)/0~340 (4K)<br>V: 0~60 (1080P)/0~600 (4K) |
|                            |                        | Enable                                            | Off/On                                                   |
|                            | Warping (AK700ST only) | Warping Pattern                                   | 5x3/10x5/15x9/24x15                                      |
|                            |                        | Warping Background                                |                                                          |
|                            |                        | Warping Correction                                |                                                          |
|                            |                        | Reset                                             |                                                          |
|                            |                        | On/Off                                            |                                                          |
| Auto Screen Fit            |                        | Reset                                             |                                                          |
| Focus                      |                        | Focus                                             |                                                          |
|                            |                        | Manual Focus                                      |                                                          |
| Image Resizing             | Motor Zoom             | 1.0X – 1.2X                                       |                                                          |
|                            | Digital Shrink & Shift | 0.75X~1.00X                                       |                                                          |
|                            | Blanking               | Modes of Adjustment                               |                                                          |
|                            |                        | Top                                               |                                                          |
|                            |                        | Bottom                                            |                                                          |
|                            |                        | Left                                              |                                                          |
|                            |                        | Right                                             |                                                          |
|                            |                        | Reset All Blanking Settings                       |                                                          |
| Wall Color                 |                        | Off/Light Yellow/Pink/Light Green/Blue/Blackboard |                                                          |
| Image Memory               | Save Image Memory      | Memory-1/Memory-2/Memory-3/Memory-4/Memory-5      |                                                          |
|                            | Apply Image Memory     |                                                   |                                                          |
|                            | Rename                 |                                                   |                                                          |

## Function descriptions

| Menu                              | Descriptions                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|-----------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Projector Position</b>         | The projector can be installed on a ceiling or behind a screen, or with one or more mirrors. See <a href="#">Choosing a location on page 13</a> for details.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>2D Keystone (AH700ST only)</b> | See <a href="#">2D keystone (AH700ST) on page 20</a> for details.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>3D Keystone (AK700ST only)</b> | See <a href="#">3D keystone (AK700ST) on page 21</a> for details.<br>This image adjustment might impact latency. We suggest setting the <b>3D Keystone</b> values to 0 to enjoy low latency gaming.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Test Pattern</b>               | Adjusts the image size and focus and check that the projected image is free from distortion. <div data-bbox="1077 577 1428 824" data-label="Image"> </div>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>High Altitude Mode</b>         | <p>We recommend you use the <b>High Altitude Mode</b> when your environment is between 1501 m–3000 m above sea level, and ambient temperature is between 0°C–30°C.</p> <p>Operation under “<b>High Altitude Mode</b>” may cause a higher decibel operating noise level because of increased fan speed necessary to improve overall system cooling and performance.</p> <p>If you use this projector under other extreme conditions excluding the above, it may display auto shut-down symptoms, which is designed to protect your projector from over-heating. In cases like this, you should switch to High Altitude mode to solve these symptoms. However, this is not to state that this projector can operate under any and all harsh or extreme conditions.</p> <div data-bbox="443 1348 513 1415" data-label="Image"> </div> <p>Do not use the <b>High Altitude Mode</b> if your altitude is between 0 m and 1500 m and ambient temperature is between 0°C and 35°C. The projector will be over cooled, if you turn the mode on under such a condition.</p> |
| <b>Baud Rate</b>                  | Selects a baud rate that is identical with your computer’s so that you can connect the projector using a suitable RS-232 cable. This function is intended for qualified service personnel.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Projector ID Setting</b>       | Set an ID for projector to match with corresponding remote control.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |

|                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|-----------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Geometry</b> | <ul style="list-style-type: none"> <li>• <b>Corner Fit</b><br/>See <a href="#">Adjusting Corner Fit on page 22</a> for details.</li> <li>• <b>Warping (AK700ST only)</b><br/>This function aims at correcting the geometric distortion of the projector's images when they are projected onto an uneven surface such as a cylinder, a spherical shape, etc. <ul style="list-style-type: none"> <li>• <b>Enable</b><br/>When this function is enabled, the following functions are not available: <b>3D Keystone, Aspect Ratio, Corner Fit, Digital Shrink &amp; Shift, Blanking.</b></li> <li>• <b>Warping Pattern</b><br/>After the warping function is enabled, select a pattern.</li> <li>• <b>Warping Background</b><br/>Choose <b>Yes</b> if you want to set the warping data with your projected image. If not, a black screen will be displayed.</li> <li>• <b>Warping Correction</b><br/>If you have never set the warping data under the selected warping pattern, a grid pattern is displayed. <ol style="list-style-type: none"> <li>1. Press <b>▲/▼/◀/▶</b> to move the cursor to an adjustment point.</li> <li>2. Press <b>OK</b>.</li> <li>3. Press <b>▲/▼/◀/▶</b> to move the adjustment point up/down/left/right. Short press on the directional arrow moves 1 pixel, while long press moves 30 pixel.</li> </ol> </li> <li>• <b>Reset</b><br/>If you want to set a new warping data for the selected pattern, reset its data first by choosing <b>Reset</b>.</li> </ul> </li> </ul> |
|                 | <p><b>Auto Screen Fit</b></p> <p>Automatically captures and calculates the screen size, and then switches the projection image into the correct EDID. It then continues with optical correction using motor zoom and digital correction (corner fit) functions to fill the full image to the screen.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Focus</b>    | <ul style="list-style-type: none"> <li>• <b>Focus</b><br/>Press <b>FOCUS</b> on the remote control to adjust the focus of the image. After focus is complete, an adjustment page is displayed to allow user to manually fine-tune the focus by pressing <b>◀/▶</b> on the remote control.</li> <li>• <b>Manual Focus</b><br/>Manually adjust the focus by pressing <b>◀/▶</b> on the remote control.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |

---

### • **Motor Zoom**

Magnifies or reduces the projected image size.

1. After the adjustment bar displays, press ▲/▼ on the projector repeatedly to reduce or magnify the image to a desired size.
2. Press **OK** to enter panning mode.
3. Press the directional arrows (▲, ▼, ◀, ▶) on the projector or remote control to navigate the picture.



The picture can only be navigated after it is magnified. You can further magnify the picture while searching for details.

### • **Digital Shrink & Shift**

Shrinks and/or shifts the projected image.

1. After the adjustment bar displays, press ◀/▶ repeatedly to shrink or magnify the picture to a desired size.
2. Press **OK** to activate digital shift function.
3. After digital shift function is activated, press the directional arrows (▲, ▼, ◀, ▶) to shift the image.



The picture can only be shifted after it shrank.

### • **Blanking**

Blanks some parts of the projected image.

1. Select the **Modes of Adjustment** first by pressing ◀/▶.
2. Press ▲/▼ to highlight the area you want to adjust and press ◀/▶ to adjust its range.



Enacting the **Reset All Blanking Settings** function will return all items in the **Blanking** menu to the factory preset values. Pressing **OK** clears the values of selected item.

## Image Resizing

## Wall Color

Corrects the projected picture's color when the projection surface such as a painted wall which may not be white, the Wall Color feature can help correct the projected picture's colors to prevent possible color difference between the source and projected pictures. There are several precalibrated colors to choose from: **Light Yellow, Pink, Light Green, Blue, and Blackboard**.

---

## Image Memory

- **Save Image Memory:** Allows you to save and apply several sets of image settings for regularly used circumstances, including the following settings: **Projector Position, Aspect Ratio, Picture Mode, Source, Resolution, Light Source Mode, Digital Shrink & Shift, Blanking, Corner Fit, 2D Keystone, 3D Keystone, ZOOM, Screen Fill, Warping.** You can choose one set of memory to save the current settings.
- **Apply Image Memory:** After the image memories are saved, you can decide if you would like to apply it by choosing a set of memory that you have saved.
- **Rename:** Renames the image memories.

## 5. Main menu: **System**

### Structure

| Menu                             |                         | Options                                                                                                                                                                                                                                   |                                                  |
|----------------------------------|-------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------|
| Language                         |                         | English/Français/Deutsch/Italiano/Español/Русский/繁體中文/简体中文/日本語/한국어 / Svenska / Nederlands/Türkçe/Ceština/Português/ไทย/Polски/Magyar/Hrvatski/Română/Norsk/Dansk/Български / Suomi/Bhs Ind / Ελληνικά/العربية/हिंदी / فارسی / Tiếng Việt |                                                  |
| Background Settings              | Background Color        | Black/Blue/Purple                                                                                                                                                                                                                         |                                                  |
|                                  | Splash Screen           | BenQ/Black/Blue                                                                                                                                                                                                                           |                                                  |
| Menu Settings                    | Menu Type               | Basic/Advanced                                                                                                                                                                                                                            |                                                  |
|                                  | Menu Display Time       | 5 sec/10 sec/20 sec/30 sec/Always                                                                                                                                                                                                         |                                                  |
|                                  | Menu Position           | Center/Top-Left/Top-Right/Bottom-Right/Bottom-Left                                                                                                                                                                                        |                                                  |
|                                  | Reminder Message        | Off/On                                                                                                                                                                                                                                    |                                                  |
| Light Source Information         | Light Source Usage Time |                                                                                                                                                                                                                                           |                                                  |
|                                  | Normal Mode             |                                                                                                                                                                                                                                           |                                                  |
|                                  | ECO Mode                |                                                                                                                                                                                                                                           |                                                  |
|                                  | SmartEco Mode           |                                                                                                                                                                                                                                           |                                                  |
|                                  | Custom Mode             |                                                                                                                                                                                                                                           |                                                  |
|                                  | Equivalent Light Hours  |                                                                                                                                                                                                                                           |                                                  |
| Refer to UM for detailed formula |                         |                                                                                                                                                                                                                                           |                                                  |
| Standby Settings                 | Standby Mode            |                                                                                                                                                                                                                                           | Eco/Normal                                       |
|                                  | Audio Pass Through      |                                                                                                                                                                                                                                           | Off/HDMI-1/HDMI-2                                |
| Operation Settings               | LED Indicator           |                                                                                                                                                                                                                                           | Off/On                                           |
|                                  | Power On/Off Settings   | Direct Power On                                                                                                                                                                                                                           | Off/On                                           |
|                                  |                         | Signal Power On                                                                                                                                                                                                                           | HDMI-1/HDMI-2/Type C                             |
|                                  |                         | Auto Power Off                                                                                                                                                                                                                            | Disable/3 min/10 min/15 min/20 min/25 min/30 min |
| Security Settings                | Panel Key Lock          | Off/On                                                                                                                                                                                                                                    | Yes/No                                           |
|                                  | Password                | Change Password                                                                                                                                                                                                                           |                                                  |
|                                  |                         | Power On Lock                                                                                                                                                                                                                             |                                                  |
| Factory Default                  |                         |                                                                                                                                                                                                                                           | Reset/Cancel                                     |

## Function descriptions

| Menu                            | Descriptions                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Language</b>                 | Sets the language for the On-Screen Display (OSD) menus.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Background Settings</b>      | <ul style="list-style-type: none"> <li>• <b>Background Color</b></li> </ul> <p>Sets the background color for the projector.</p> <ul style="list-style-type: none"> <li>• <b>Splash Screen</b></li> </ul> <p>Allows you to select which logo screen will be displayed during projector start-up.</p>                                                                                                                                                                                                                                                                                                                                                                |
| <b>Menu Settings</b>            | <ul style="list-style-type: none"> <li>• <b>Menu Type</b></li> </ul> <p>Sets the OSD menu type according to your needs.</p> <ul style="list-style-type: none"> <li>• <b>Menu Display Time</b></li> </ul> <p>Sets the length of time the OSD will remain active after your last key press.</p> <ul style="list-style-type: none"> <li>• <b>Menu Position</b></li> </ul> <p>Sets the On-Screen Display (OSD) menu position.</p> <ul style="list-style-type: none"> <li>• <b>Reminder Message</b></li> </ul> <p>Sets the reminder messages on or off.</p>                                                                                                             |
| <b>Light Source Information</b> | <p>This menu page displays the following information:</p> <ul style="list-style-type: none"> <li>• <b>Light Source Usage Time</b></li> </ul> <ul style="list-style-type: none"> <li>• Light hours used under <b>Normal Mode, ECO Mode, SmartEco Mode, Custom Mode</b>.</li> </ul> <ul style="list-style-type: none"> <li>• <b>Equivalent Light Hours</b></li> </ul> <ul style="list-style-type: none"> <li>• <b>Refer to UM for detailed formula:</b> refer to <a href="#">Getting to know the light hour on page 51</a> for light source usage formula.</li> </ul>                                                                                                |
| <b>Standby Settings</b>         | <ul style="list-style-type: none"> <li>• <b>Standby Mode</b> <ul style="list-style-type: none"> <li>• <b>Eco:</b> The projector maintains at normal standby mode with less than 0.5W power consumption.</li> <li>• <b>Normal:</b> Allows the projector to provide network, monitor out and audio pass through functions in standby mode.</li> </ul> </li> <li>• <b>Audio Pass Through</b></li> </ul> <p>The projector can play sound when it is in standby mode and the corresponding jacks are correctly connected to devices. Press ◀/▶ to choose the source that you wish to use. See <a href="#">Connection on page 23</a> for how to make the connection.</p> |

|                       |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|-----------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Operation<br>Settings | <ul style="list-style-type: none"> <li>• <b>LED Indicator</b></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|                       | <p>You can turn off the LED warning lights. This is to avoid any light disturbance when viewing images in a dark room.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| Security Settings     | <ul style="list-style-type: none"> <li>• <b>Power On/Off Settings</b></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|                       | <ul style="list-style-type: none"> <li>• <b>Direct Power On:</b> Allows the projector to turn on automatically once the power is fed through the power cord.</li> <li>• <b>Signal Power On:</b> Sets whether to turn the projector directly on without pressing  <b>POWER</b> or  <b>ON</b> when the projector is in standby mode and detects a HDMI or Type C signal.</li> <li>• <b>Auto Power Off:</b> Allows the projector to turn off automatically if no input signal is detected after a set period of time to prevent unnecessary waste of light source life.</li> </ul> |
| Security Settings     | <ul style="list-style-type: none"> <li>• <b>Panel Key Lock</b></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|                       | <p>With the control keys on the projector and remote control locked, you can prevent your projector settings from being changed accidentally (by children, for example). When the <b>Panel Key Lock</b> is on, no control keys on the projector and remote control will operate except  <b>POWER</b>.</p> <p>To release panel key lock, press and hold  (the right key) on the projector or remote control for 3 seconds.</p>                                                                                                                                               |
| Factory Default       |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|                       | <p>If you turn off the projector without disabling panel key lock, the projector will still be in locked status the next time it is turned on.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| Reset System          | <ul style="list-style-type: none"> <li>• <b>Password/Power On Lock</b></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|                       | <p>See <a href="#">Utilizing the password function on page 28</a>.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| Factory Default       | <p>Returns all settings to the factory preset values.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|                       |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| Reset System          | <p>The following settings will still remain: <b>2D Keystone, Digital Shrink &amp; Shift, Blanking, Corner Fit, Projector Position, Light Usage Time, Security Settings, Baud Rate, High Altitude Mode, HDMI Equalizer.</b></p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|                       | <p>Returns all the settings on the <b>System</b> main menu to the factory default values.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| Reset System          |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|                       | <p>The following settings will still remain: <b>Light Source Information, Security Settings.</b></p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |

## 6. Main menu: **Information**

### Structure

| Menu                    |
|-------------------------|
| Native Resolution       |
| Detected Resolution     |
| Source                  |
| Picture Mode            |
| Light Source Mode       |
| 3D Format               |
| Color System            |
| Dynamic Range           |
| Light Source Usage Time |
| Projector ID            |
| Firmware Version        |
| Service Code            |

### Function descriptions

| Menu                    | Descriptions                                                                                                                                  |
|-------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------|
| Native Resolution       | Shows the native resolution of the projector.                                                                                                 |
| Detected Resolution     | Shows the native resolution of the input signal.                                                                                              |
| Source                  | Shows the current signal source.                                                                                                              |
| Picture Mode            | Shows the selected mode on the <b>Picture</b> menu.                                                                                           |
| Light Source Mode       | Shows the used light source mode.                                                                                                             |
|                         | Displays the current 3D mode.                                                                                                                 |
| 3D Format               | <br><b>3D Format</b> is only available when 3D is enabled. |
| Color System            | Shows the input system format.                                                                                                                |
| Dynamic Range           | Shows the dynamic range of the input source.                                                                                                  |
| Light Source Usage Time | Shows the number of hours the light has been used.                                                                                            |
| Projector ID            | Shows the projector ID.                                                                                                                       |
| Firmware Version        | Shows the firmware version of your projector.                                                                                                 |
| Service Code            | Shows the projector's serial number.                                                                                                          |

# Maintenance

## Care of the projector

### Cleaning the lens

Clean the lens whenever you notice dirt or dust on the surface. Please be sure to turn off the projector and let it cool down completely before cleaning the lens.

- Use a canister of compressed air to remove dust.
- If there is dirt or smears, use lens-cleaning paper or moisten a soft cloth with lens cleaner and gently wipe the lens surface.
- Never use any type of abrasive pad, alkaline/acid cleaner, scouring powder, or volatile solvent, such as alcohol, benzene, thinner or insecticide. Using such materials or maintaining prolonged contact with rubber or vinyl materials may result in damage to the projector surface and cabinet material.

### Cleaning the projector case

Before you clean the case, turn the projector off using the proper shutdown procedure as described in [Shutting down the projector on page 30](#) and unplug the power cord.

- To remove dirt or dust, wipe the case with a soft, lint-free cloth.
- To remove stubborn dirt or stains, moisten a soft cloth with water and a neutral pH detergent. Then wipe the case.



Never use wax, alcohol, benzene, thinner or other chemical detergents. These can damage the case.

### Storing the projector

If you need to store the projector for an extended time, please follow the instructions below:

- Make sure the temperature and humidity of the storage area are within the recommended range for the projector. Please refer to [Specifications on page 56](#) or consult your dealer about the range.
- Retract the adjuster feet.
- Remove the battery from the remote control.
- Pack the projector in its original packing or equivalent.

### Transporting the projector

It is recommended that you ship the projector with its original packing or equivalent.

# Light source information

## Getting to know the light hour

When the projector is in operation, the duration (in hours) of light source usage is automatically calculated by the built-in timer. The method of calculating the equivalent light hour is as follows:

1. Light Usage Time = (x+y+z) hours, if  
Time used in **Normal Mode** = x hours  
Time used in **ECO Mode** = y hours  
Time used in **SmartEco Mode** = z hours  
Time used in **Custom Mode** = a hours

2. Equivalent Light Hour =  $\alpha$  hours

$$\alpha = \frac{A'}{X} \times x + \frac{A'}{Y} \times y + \frac{A'}{Z} \times z + \frac{A'}{A} \times a, \text{ if}$$

X= light source life spec of **Normal Mode**

Y= light source life spec of **ECO Mode**

Z= light source life spec of **SmartEco Mode**

A= light source life spec of **Custom Mode**

A' is the longest light life spec among X, Y, Z, A



For time used in each light source mode shown in OSD menu:

- Time used is accumulated and rounded down to an integer in **hours**.
- When time used is less than 1 hour, it shows 0 hours.



When you calculate **Equivalent Light Hours** manually, it will probably have deviation from the value shown in OSD menu since projector system calculates time used for each light source mode in "Minutes" then rounds down to an integer in hours shown in OSD.

To obtain the light source hour information:

1. Go to **Advanced** menu - **System** > **Light Source Information** and press **OK**.
2. The **Light Source Usage Time** information is displayed.

You can also get the light source hour information on the **Information** menu.

## Extending light source life

- Setting the **Light Source Mode**

Go to **Advanced** menu - **Picture** > **Advanced Color Settings** > **Light Source Mode** and select a suitable light source power from among the provided modes.

Setting the projector in **ECO**, **SmartEco** or **Custom** mode extends light source life.

| Light mode           | Description                                                                                                             |
|----------------------|-------------------------------------------------------------------------------------------------------------------------|
| <b>Normal Mode</b>   | Provides full light source brightness                                                                                   |
| <b>ECO Mode</b>      | Lowers brightness to extend the light source life and decreases the fan noise                                           |
| <b>SmartEco Mode</b> | Adjusts the light source power automatically depending on the content brightness level while optimizing display quality |
| <b>Custom Mode</b>   | Enables the light source brightness adjustment bar so that you can adjust the setting to your liking                    |



Some of the above light mode(s) may not be available under certain circumstances.

- Setting **Auto Power Off**

This function allows the projector to turn off automatically if no input signal is detected after a set period of time to prevent unnecessary waste of light source life.

To set **Auto Power Off**, go to **Advanced** menu - **System** > **Operation Settings** > **Power On/Off Settings** > **Auto Power Off** and press ◀/▶.

## Indicators

| Light                                                                               |                                                                                     |                                                                                     | Status & Description                                            |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-----------------------------------------------------------------|
| POWER ○                                                                             | TEMP ○                                                                              | LIGHT ○                                                                             |                                                                 |
| Power events                                                                        |                                                                                     |                                                                                     |                                                                 |
|    |    |    | Stand-by mode                                                   |
|    |    |    | Powering up                                                     |
|    |    |    | Normal operation                                                |
|    |    |    | Normal power-down cooling                                       |
|    |    |    | Download                                                        |
|    |    |    | Color wheel start/spin fail                                     |
|    |    |    | Phosphor wheel start/spin fail                                  |
| Burn-in events                                                                      |                                                                                     |                                                                                     |                                                                 |
|    |    |    | Burn-in on                                                      |
|    |    |    | Burn-in off                                                     |
| Light events                                                                        |                                                                                     |                                                                                     |                                                                 |
|   |   |   | Light source life exhausted                                     |
|  |  |  | Light error in normal operation                                 |
| Thermal events                                                                      |                                                                                     |                                                                                     |                                                                 |
|  |  |  | Fan 1 error (the actual fan speed is outside the desired speed) |
|  |  |  | Fan 2 error (the actual fan speed is outside the desired speed) |
|  |  |  | Fan 3 error (the actual fan speed is outside the desired speed) |
|  |  |  | Fan 4 error (the actual fan speed is outside the desired speed) |
|  |  |  | Temperature 1 error (over limited temperature)                  |

|                                                                                     |                                                                                           |                                                                                                                                                                                                          |                                                                                                                                                                                                        |                                                                                                                                                                                                        |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  |  : Off |  : Orange On<br> : Orange Flashing |  : Green On<br> : Green Flashing |  : Red On<br> : Red Flashing |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

# Troubleshooting

## ? The projector does not turn on.

| Cause                                                                 | Remedy                                                                                                                                                                          |
|-----------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| There is no power from the power cord.                                | Plug the power cord into the AC power jack on the projector, and plug the power cord into the power outlet. If the power outlet has a switch, make sure that it is switched on. |
| Attempting to turn the projector on again during the cooling process. | Wait until the cooling down process has completed.                                                                                                                              |

## ? No picture

| Cause                                                                | Remedy                                                                           |
|----------------------------------------------------------------------|----------------------------------------------------------------------------------|
| The video source is not turned on or connected correctly.            | Turn the video source on and check that the signal cable is connected correctly. |
| The projector is not correctly connected to the input signal device. | Check the connection.                                                            |
| The input signal has not been correctly selected.                    | Select the correct input signal with the <b>SOURCE</b> key.                      |

## ? Blurred image

| Cause                                                  | Remedy                                                                                         |
|--------------------------------------------------------|------------------------------------------------------------------------------------------------|
| The projection lens is not correctly focused.          | Adjust the focus.                                                                              |
| The projector and the screen are not aligned properly. | Adjust the projection angle and direction as well as the height of the projector if necessary. |

## ? Abnormal image

| Cause                  | Remedy                                                                                                                                                                                                         |
|------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The image is abnormal. | <ul style="list-style-type: none"><li>• Ensure the video source cable is connected properly, and that the video source is turned on.</li><li>• Ensure that the air intake or exhaust is not blocked.</li></ul> |

## ? Auto Screen Fit does not function properly

| Cause                                                                            | Remedy                                                                                                                                                                                                  |
|----------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The adjustment markers are outside of or on the border of the screen.            | Adjust the distance between the projector and the screen.                                                                                                                                               |
| Screen ratio is incorrect.                                                       | <ul style="list-style-type: none"><li>• Adjust the projection angle, ensure that the projector aims directly at the screen.</li><li>• Use the <b>Corner Fit</b> function to fill the corners.</li></ul> |
| The adjustment markers are within the screen, but the screen ratio is incorrect. | Adjust the projection angle, ensure that the projector aims directly at the screen.                                                                                                                     |

|                                       |                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|---------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The projector cannot detect a screen. | <ul style="list-style-type: none"> <li>• Dim the ambient light to ensure screen detection.</li> <li>• Clean the focus lens, ensure that it is clean and not obstructed.</li> <li>• Ensure that the screen shape is a right rectangle.</li> <li>• Ensure that the screen border is 6 cm in width.</li> <li>• Ensure that the color of the screen border is matted black or matted dark gray to provide a sharp contrast against the light color of the screen.</li> </ul> |
|---------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

### Remote control does not work

| Cause                                                              | Remedy                                            |
|--------------------------------------------------------------------|---------------------------------------------------|
| The batteries are out of power.                                    | Replace both of the batteries with new ones.      |
| There is an obstacle between the remote control and the projector. | Remove the obstacle.                              |
| You are too far away from the projector.                           | Stand within 8 meters (26 feet) of the projector. |

### The password is incorrect.

| Cause                             | Remedy                                                                  |
|-----------------------------------|-------------------------------------------------------------------------|
| You do not remember the password. | See <a href="#">Entering the password recall procedure on page 29</a> . |

# Specifications

## Projector specifications



All specifications are subject to change without notice.

### Optical

#### Resolution

**AH700ST:** 1920 x 1080 1080p

**AK700ST:** 3840 x 2160 4K

#### Display system

1-CHIP DMD

#### Lens

F = 2.53 ~ 2.73, f = 10.2 ~ 12.24 mm

#### Light source

Laser and LED

### Electrical

#### Power supply

AC100–240V, 3.6 A, 50–60 Hz (Automatic)

#### Power consumption

320 W (Max); < 0.5 W (Standby)

### Mechanical

#### Weight

3.3 Kg  $\pm$  100 g (7.28 lbs  $\pm$  0.22 lbs)

### Output terminals

#### Speaker

10 watt x1

#### Audio signal output

PC audio jack x 1

### Control

#### RS-232 serial control

9 pin x 1

#### IR receiver x 2

### Input terminals

#### Video signal input

SD/HDTV signal input

Digital - HDMI x 2

#### USB

Type-A power supply 5V /1.5 A x 1

Type-A power supply 5V /1 A x 1 for wireless dongle

#### USB Type C input

USB Type C Input DP (Display) ALT Mode and DC 5V/1A Out x 1

### Environmental Requirements

#### Operating temperature

0°C–40°C at sea level

#### Operating relative humidity

10%–90% (without condensation)

#### Operating altitude

0–1500 m at 0°C–35°C

1501–3000 m at 0°C–30°C (with High Altitude Mode on)

#### Storage temperature

-20°C–60°C at sea level

#### Storage humidity

10%–90% RH (without condensation)

#### Storage altitude

30°C@ 0~12,200m above sea level

### Transporting

Original packing or equivalent is recommended


### Repairing

Please visit below website and choose your country to find your service contact window.

<http://www.benq.com/welcome>

# Dimensions

303.5 mm (W) x 234.5 mm (D) x 112.4 mm (H)

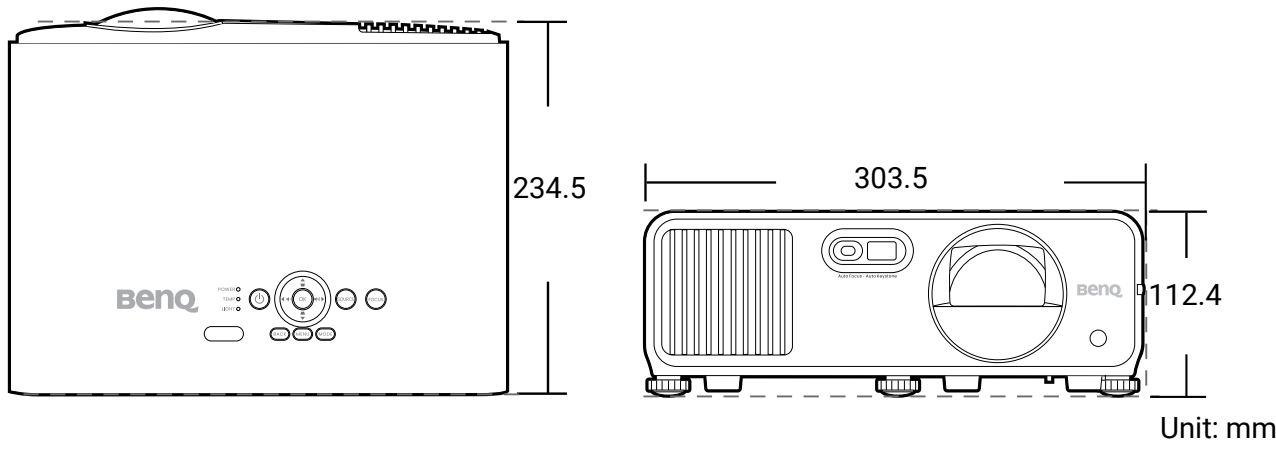

# Timing chart

## Supported timing for HDMI (HDCP) input

### • PC timings

| Resolution        | Mode                              | Vertical Frequency (Hz) | Horizontal Frequency (kHz) | Pixel Frequency (MHz) | Supported 3D format |            |              |
|-------------------|-----------------------------------|-------------------------|----------------------------|-----------------------|---------------------|------------|--------------|
|                   |                                   |                         |                            |                       | Frame Sequential    | Top-Bottom | Side By Side |
| 640 x 480         | VGA_60                            | 59.940                  | 31.469                     | 25.175                | v                   | v          | v            |
|                   | VGA_72                            | 72.809                  | 37.861                     | 31.500                |                     |            |              |
|                   | VGA_75                            | 75.000                  | 37.500                     | 31.500                |                     |            |              |
|                   | VGA_85                            | 85.008                  | 43.269                     | 36.000                |                     |            |              |
| 720 x 400         | 720 x 400_70                      | 70.087                  | 31.469                     | 28.3221               |                     |            |              |
| 800 x 600         | SVGA_60                           | 60.317                  | 37.879                     | 40.000                | v                   | v          | v            |
|                   | SVGA_72                           | 72.188                  | 48.077                     | 50.000                |                     |            |              |
|                   | SVGA_75                           | 75.000                  | 46.875                     | 49.500                |                     |            |              |
|                   | SVGA_85                           | 85.061                  | 53.674                     | 56.250                |                     |            |              |
| 1024 x 768        | SVGA_120 (Reduce Blanking)        | 119.854                 | 77.425                     | 83.000                | v                   |            |              |
|                   | XGA_60                            | 60.004                  | 48.363                     | 65.000                | v                   | v          | v            |
|                   | XGA_70                            | 70.069                  | 56.476                     | 75.000                |                     |            |              |
|                   | XGA_75                            | 75.029                  | 60.023                     | 78.750                |                     |            |              |
| 1024 x 768        | XGA_85                            | 84.997                  | 68.667                     | 94.500                |                     |            |              |
|                   | XGA_120 (Reduce Blanking)         | 119.989                 | 97.551                     | 115.500               | v                   |            |              |
| 1152 x 864        | 1152 x 864_75                     | 75.00                   | 67.500                     | 108.000               |                     |            |              |
| 1024 x 576        | BenQ Notebook Timing              | 60.00                   | 35.820                     | 46.996                |                     |            |              |
| 1024 x 600        | BenQ Notebook Timing              | 64.995                  | 41.467                     | 51.419                |                     |            |              |
| 1280 x 720        | 1280 x 720_60                     | 60                      | 45.000                     | 74.250                | v                   | ▲          | ▲            |
| 1280 x 768        | 1280 x 768_60                     | 59.870                  | 47.776                     | 79.5                  | v                   | v          | v            |
| 1280 x 800        | WXGA_60                           | 59.810                  | 49.702                     | 83.500                | v                   | v          | v            |
|                   | WXGA_75                           | 74.934                  | 62.795                     | 106.500               |                     |            |              |
|                   | WXGA_85                           | 84.880                  | 71.554                     | 122.500               |                     |            |              |
|                   | WXGA_120 (Reduce Blanking)        | 119.909                 | 101.563                    | 146.25                | v                   |            |              |
| 1280 x 1024       | SXGA_60                           | 60.020                  | 63.981                     | 108.000               |                     | v          | v            |
|                   | SXGA_75                           | 75.025                  | 79.976                     | 135.000               |                     |            |              |
|                   | SXGA_85                           | 85.024                  | 91.146                     | 157.500               |                     |            |              |
| 1280 x 960        | 1280 x 960_60                     | 60.000                  | 60.000                     | 108                   |                     | v          | v            |
|                   | 1280 x 960_85                     | 85.002                  | 85.938                     | 148.500               |                     |            |              |
| 1360 x 768        | 1360 x 768_60                     | 60.015                  | 47.712                     | 85.500                |                     | v          | v            |
| 1440 x 900        | WXGA+_60                          | 59.887                  | 55.935                     | 106.500               |                     | v          | v            |
| 1400 x 1050       | SXGA+_60                          | 59.978                  | 65.317                     | 121.750               |                     | v          | v            |
| 1600 x 1200       | UXGA                              | 60.000                  | 75.000                     | 162.000               |                     | v          |              |
| 1680 x 1050       | 1680 x 1050_60                    | 59.954                  | 65.290                     | 146.250               |                     | v          | v            |
| 640 x 480@67Hz    | MAC13                             | 66.667                  | 35.000                     | 30.240                |                     |            |              |
| 832 x 624@75Hz    | MAC16                             | 74.546                  | 49.722                     | 57.280                |                     |            |              |
| 1024 x 768@75Hz   | MAC19                             | 75.020                  | 60.241                     | 80.000                |                     |            |              |
| 1152 x 870@75Hz   | MAC21                             | 75.06                   | 68.68                      | 100.00                |                     |            |              |
| 1920 x 1080@60Hz  | 1920 x 1080_60 (CEA-861)          | 60                      | 67.5                       | 148.5                 | v                   | ▲          | ▲            |
| 1920 x 1200@60Hz  | 1920 x 1200_60 (Reduce Blanking)  | 59.95                   | 74.038                     | 154                   | v                   | v          | v            |
| 1920 x 1080@120Hz | 1920 x 1080_120                   | 120.000                 | 135.000                    | 297                   |                     |            |              |
| 1920 x 1200@120Hz | 1920 x 1200_120 (Reduce Blanking) | 119.909                 | 152.404                    | 317.00                |                     |            |              |
| 3840 x 2160*      | 3840 x 2160_30 For 4K2K model     | 30                      | 67.5                       | 297                   |                     |            |              |
| 3840 x 2160*      | 3840 x 2160_60 For 4K2K model     | 60                      | 135                        | 594                   |                     |            |              |

\*For **AK700ST** only.



- ▲: Supports auto-detecting and manually setting 3D format.
- v: Supports manually setting 3D format.
- The timings showing above may not be supported due to EDID file and VGA graphics card limitations. It is possible that some timings cannot be chosen.

• Video timings

| Timing    | Resolution       | Horizontal Frequency (kHz) | Vertical Frequency (Hz) | Pixel Frequency (MHz) | Supported 3D format |               |            |              |
|-----------|------------------|----------------------------|-------------------------|-----------------------|---------------------|---------------|------------|--------------|
|           |                  |                            |                         |                       | Frame Sequential    | Frame Packing | Top-Bottom | Side By Side |
| 480i      | 720 (1440) x 480 | 15.73                      | 59.94                   | 27                    | v                   |               |            |              |
| 480p      | 720 x 480        | 31.47                      | 59.94                   | 27                    | v                   |               |            |              |
| 576i      | 720 (1440) x 576 | 15.63                      | 50                      | 27                    |                     |               |            |              |
| 576p      | 720 x 576        | 31.25                      | 50                      | 27                    |                     |               |            |              |
| 720/50p   | 1280 x 720       | 37.5                       | 50                      | 74.25                 |                     | ▲             | ▲          | ▲            |
| 720/60p   | 1280 x 720       | 45.00                      | 60                      | 74.25                 | v                   | ▲             | ▲          | ▲            |
| 1080/24P  | 1920 x 1080      | 27                         | 24                      | 74.25                 |                     | ▲             | ▲          | ▲            |
| 1080/25P  | 1920 x 1080      | 28.13                      | 25                      | 74.25                 |                     |               |            |              |
| 1080/30P  | 1920 x 1080      | 33.75                      | 30                      | 74.25                 |                     |               |            |              |
| 1080/50i  | 1920 x 1080      | 28.13                      | 50                      | 74.25                 |                     |               |            | ▲            |
| 1080/60i  | 1920 x 1080      | 33.75                      | 60                      | 74.25                 |                     |               |            | ▲            |
| 1080/50P  | 1920 x 1080      | 56.25                      | 50                      | 148.5                 |                     |               | ▲          | ▲            |
| 1080/60P  | 1920 x 1080      | 67.5                       | 60                      | 148.5                 | v                   |               | ▲          | ▲            |
| 1080/120P | 1920 x 1080      | 135                        | 120                     | 297                   | v                   |               |            |              |



- ▲: Supports auto-detecting and manually setting 3D format.
- v: Supports manually setting 3D format.

• Supported detail timings for sampling and color depth

| Display format (refresh rate) | Chroma subsampling | 8 Bit | 10 Bit | 12 Bit |
|-------------------------------|--------------------|-------|--------|--------|
| 4K/60p (60 Hz)                | 4:4:4              | v     |        |        |
|                               | 4:2:2              | v     | v      |        |
|                               | 4:2:0              | v     | v      | v      |
| 4K/60p (50 Hz)                | 4:4:4              | v     |        |        |
|                               | 4:2:2              | v     | v      |        |
|                               | 4:2:0              | v     | v      | v      |
| 4K/30p (30 Hz)                | 4:4:4              | v     | v      | v      |
|                               | 4:2:2              | v     | v      | v      |
|                               | 4:2:0              |       |        |        |
| 4K/24p (24 Hz)                | 4:4:4              | v     | v      | v      |
|                               | 4:2:2              | v     | v      | v      |
|                               | 4:2:0              |       |        |        |
| 1080P/60P (60 Hz)             | 4:4:4              | v     | v      | v      |
|                               | 4:2:2              | v     | v      | v      |
|                               | 4:2:0              |       |        |        |
| 1080P/50P (50 Hz)             | 4:4:4              | v     | v      | v      |
|                               | 4:2:2              | v     | v      | v      |
|                               | 4:2:0              |       |        |        |
| 1080P/30P (30 Hz)             | 4:4:4              | v     | v      | v      |
|                               | 4:2:2              | v     | v      | v      |
|                               | 4:2:0              |       |        |        |
| 1080P/24P (24 Hz)             | 4:4:4              | v     | v      | v      |
|                               | 4:2:2              | v     | v      | v      |
|                               | 4:2:0              |       |        |        |

## Supported timing for USB-C input

### • PC timings

| Resolution         | Mode                             | Vertical Frequency (Hz) | Horizontal Frequency (kHz) | Pixel Frequency (MHz) | Supported 3D format |            |              |
|--------------------|----------------------------------|-------------------------|----------------------------|-----------------------|---------------------|------------|--------------|
|                    |                                  |                         |                            |                       | Frame Sequential    | Top-Bottom | Side By Side |
| 640 x 480          | VGA_60                           | 59.940                  | 31.469                     | 25.175                | v                   | v          | v            |
|                    | VGA_72                           | 72.809                  | 37.861                     | 31.500                |                     |            |              |
|                    | VGA_75                           | 75.000                  | 37.500                     | 31.500                |                     |            |              |
|                    | VGA_85                           | 85.008                  | 43.269                     | 36.000                |                     |            |              |
| 720 x 400          | 720 x 400_70                     | 70.087                  | 31.469                     | 28.3221               |                     |            |              |
| 800 x 600          | SVGA_60                          | 60.317                  | 37.879                     | 40.000                | v                   | v          | v            |
|                    | SVGA_72                          | 72.188                  | 48.077                     | 50.000                |                     |            |              |
|                    | SVGA_75                          | 75.000                  | 46.875                     | 49.500                |                     |            |              |
|                    | SVGA_85                          | 85.061                  | 53.674                     | 56.250                |                     |            |              |
|                    | SVGA_120 (Reduce Blanking)       | 119.854                 | 77.425                     | 83.000                | v                   |            |              |
| 1024 x 768         | XGA_60                           | 60.004                  | 48.363                     | 65.000                | v                   | v          | v            |
|                    | XGA_70                           | 70.069                  | 56.476                     | 75.000                |                     |            |              |
|                    | XGA_75                           | 75.029                  | 60.023                     | 78.750                |                     |            |              |
|                    | XGA_85                           | 84.997                  | 68.667                     | 94.500                |                     |            |              |
|                    | XGA_120 (Reduce Blanking)        | 119.989                 | 97.551                     | 115.500               | v                   |            |              |
| 1152 x 864         | 1152 x 864_75                    | 75.00                   | 67.500                     | 108.000               |                     |            |              |
| 1280 x 720         | 1280 x 720_60                    | 60                      | 45.000                     | 74.250                | v                   | v          | v            |
|                    | 1280 x 720_120                   | 120                     | 90.000                     | 148.500               | v                   |            |              |
| 1280 x 768         | 1280 x 768_60 (Reduce Blanking)  | 60                      | 47.396                     | 68.25                 | v                   | v          | v            |
|                    | 1280 x 768_60                    | 59.870                  | 47.776                     | 79.5                  | v                   | v          | v            |
| 1280 x 800         | WXGA_60                          | 59.810                  | 49.702                     | 83.500                | v                   | v          | v            |
|                    | WXGA_75                          | 74.934                  | 62.795                     | 106.500               |                     |            |              |
|                    | WXGA_85                          | 84.880                  | 71.554                     | 122.500               |                     |            |              |
|                    | WXGA_120 (Reduce Blanking)       | 119.909                 | 101.563                    | 146.25                | v                   |            |              |
| 1280 x 1024        | SXGA_60                          | 60.020                  | 63.981                     | 108.000               |                     | v          | v            |
|                    | SXGA_75                          | 75.025                  | 79.976                     | 135.000               |                     |            |              |
|                    | SXGA_85                          | 85.024                  | 91.146                     | 157.500               |                     |            |              |
| 1280 x 960         | 1280 x 960_60                    | 60.000                  | 60.000                     | 108                   |                     | v          | v            |
|                    | 1280 x 960_85                    | 85.002                  | 85.938                     | 148.500               |                     |            |              |
| 1366 x 768         | 1366 x 768_60                    | 60.015                  | 47.712                     | 85.500                |                     | v          | v            |
| 1440 x 900         | WXGA+_60 (Reduce Blanking)       | 60                      | 55.469                     | 88.75                 |                     | v          | v            |
|                    | WXGA+_60                         | 59.887                  | 55.935                     | 106.500               |                     | v          | v            |
| 1400 x 1050        | SXGA+_60                         | 59.978                  | 65.317                     | 121.750               |                     | v          | v            |
| 1600 x 1200        | UXGA                             | 60.000                  | 75.000                     | 162.000               |                     |            |              |
| 1680 x 1050        | 1680 x 1050_60 (Reduce Blanking) | 59.883                  | 64.674                     | 119.000               |                     | v          | v            |
|                    | 1680 x 1050_60                   | 59.954                  | 65.290                     | 146.250               |                     | v          | v            |
| 1920 x 1200        | 1920 x 1200_60 (Reduce Blanking) | 59.950                  | 74.038                     | 154.000               | v                   |            |              |
| 640 x 480@67Hz     | MAC13                            | 66.667                  | 35.000                     | 30.240                |                     |            |              |
| 832 x 624@75Hz     | MAC16                            | 74.546                  | 49.722                     | 57.280                |                     |            |              |
| 1024 x 768@75Hz    | MAC19                            | 75.020                  | 60.241                     | 80.000                |                     |            |              |
| 1152 x 870@75Hz    | MAC21                            | 75.06                   | 68.68                      | 100.00                |                     |            |              |
| 1920 x 1080 (VESA) | 1920 x 1080_60                   | 60                      | 67.5                       | 148.5                 | v                   | v          | v            |
| 1920 x 1080        | 1920 x 1080_120                  | 120.000                 | 135.000                    | 297.000               | v                   |            |              |
| 3840 x 2160        | 3840 x 2160_30                   | 30                      | 67.5                       | 297                   |                     |            |              |
| 3840 x 2160        | 3840 x 2160_60                   | 60                      | 135                        | 594                   |                     |            |              |



The timings showing above may not be supported due to EDID file and VGA graphics card limitations. It is possible that some timings cannot be chosen.

• Video timings

| Timing   | Resolution  | Horizontal Frequency (kHz) | Vertical Frequency (Hz) | Pixel Frequency (MHz) |
|----------|-------------|----------------------------|-------------------------|-----------------------|
| 480p     | 720 x 480   | 31.47                      | 59.94                   | 27                    |
| 576p     | 720 x 576   | 31.25                      | 50                      | 27                    |
| 720/50p  | 1280 x 720  | 37.5                       | 50                      | 74.25                 |
| 720/60p  | 1280 x 720  | 45.00                      | 60                      | 74.25                 |
| 1080/50i | 1920 x 1080 | 28.13                      | 50                      | 74.25                 |
| 1080/60i | 1920 x 1080 | 33.75                      | 60                      | 74.25                 |
| 1080/24P | 1920 x 1080 | 27                         | 24                      | 74.25                 |
| 1080/50P | 1920 x 1080 | 56.25                      | 50                      | 148.5                 |
| 1080/60P | 1920 x 1080 | 67.5                       | 60                      | 148.5                 |
| 2160/24P | 3840 x 2160 | 54                         | 24                      | 297                   |
| 2160/25P | 3840 x 2160 | 56.25                      | 25                      | 297                   |
| 2160/30P | 3840 x 2160 | 67.5                       | 30                      | 297                   |
| 2160/50P | 3840 x 2160 | 112.5                      | 50                      | 594                   |
| 2160/60P | 3840 x 2160 | 135                        | 60                      | 594                   |