

CHEFMAN®

FREE COOKBOOK!



Scan for a digital cookbook of
delicious recipes created just for your
Multifunctional Air Fryer+.



CHEFMAN.COM | @MYCHEFMAN

©CHEFMAN 2024


RJ38-10-RDO-V2-NR_QSG_FINAL_OTP_032724

CHEFMAN®

Multifunctional AIR FRYER+

QUICK START GUIDE

- Features and Accessories
- Before First Use
- Cleaning and Maintenance
- How to Use the Air Fryer

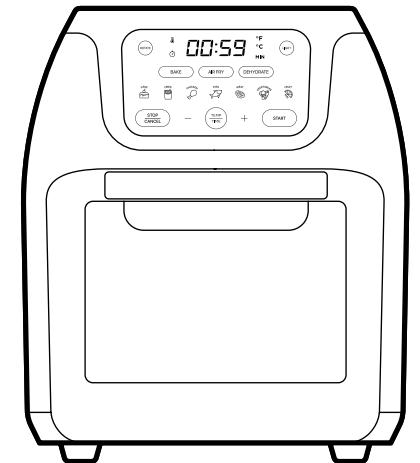

RJ38-10-RDO-V2-NR




CHEFMAN®

FRY USING THE
POWER OF AIR



FEATURES AND ACCESSORIES

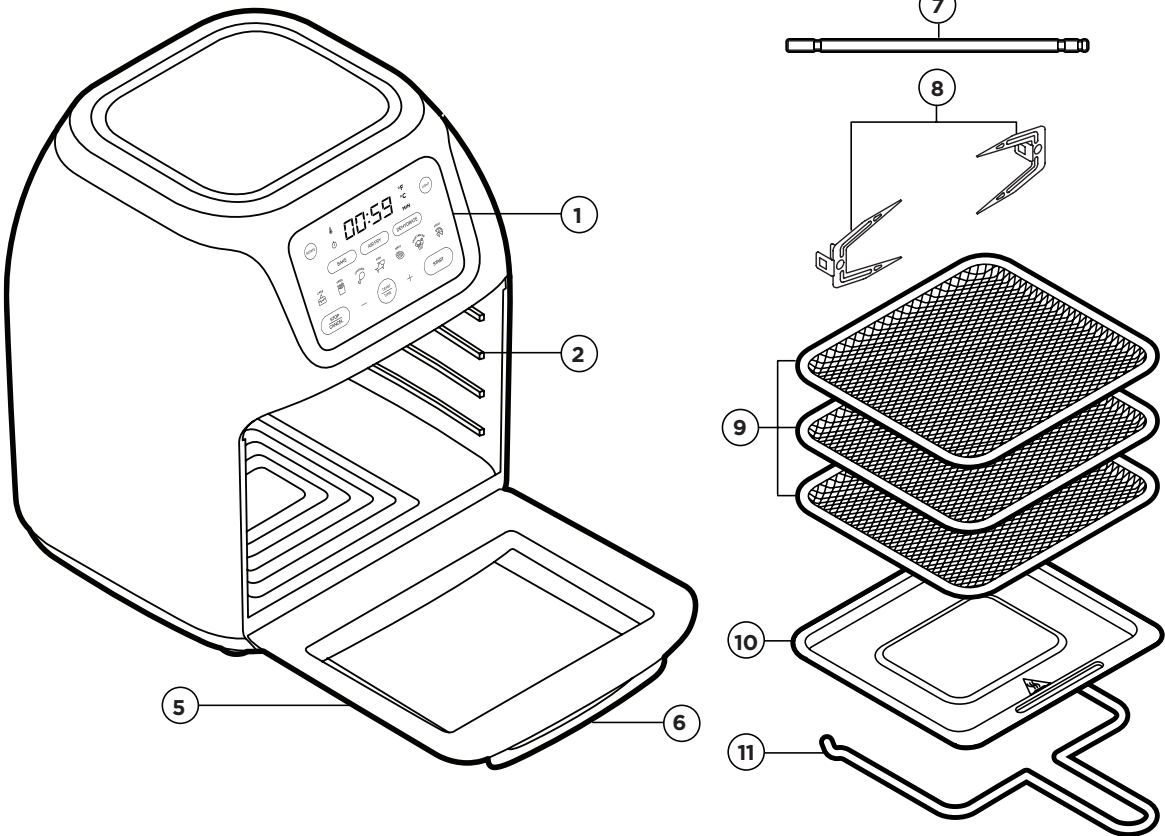

- 1. Capacitive touch control panel
- 2. Rack holders
- 3. Rotisserie gear (not shown)
- 4. Rotisserie holder (not shown)
- 5. Door with viewing window
- 6. Cool-touch handle
- 7. Rotisserie spit
- 8. Spit forks and screws (2 of each)
- 9. Wire cooking racks (3)
- 10. Removable drip tray/baking pan
- 11. Fetch tool

BEFORE FIRST USE

1. Remove all packaging materials, read and remove all stickers (except for the rating label, which should remain on the unit), and check that all parts and accessories are accounted for.
2. Wipe the interior and exterior with a damp cloth and dry thoroughly before use.
3. Wash accessories with warm, soapy water and dry thoroughly. All accessories are top-rack dishwasher safe.
4. Read instructions and safety information in the User Guide.

NOTE: On first use, the unit may emit a slight odor, which is normal and will dissipate with use.

CLEANING AND MAINTENANCE

1. Unplug the unit and allow it to cool completely before cleaning.
2. Gently wipe down the exterior and interior with a damp cloth or paper towel. Never immerse the air fryer or its plug in water or any other liquid. The housing of the air fryer is not dishwasher safe.
3. Using mild liquid soap and a damp cloth or sponge, wipe glass on door. Do not use a spray glass cleaner. The door can also be removed for easier cleaning. To remove, open the door slightly and gently lift it upwards until it releases from the notches in the hinges. To replace, hold the door upright, line up the hinges, and gently push it down until it locks into place.
4. Wash accessories with a sponge and warm, soapy water. Do not use abrasive cleaning agents or scouring pads. Accessories are also top-rack dishwasher safe.
5. Dry the unit and accessories thoroughly and store in a cool, dry place.




HOW TO USE THE AIR FRYER

STEP 1

Place seasoned food on rack(s), baking pan, or spit.

Ensure the drip tray is in the bottom of the unit (if not baking on it).

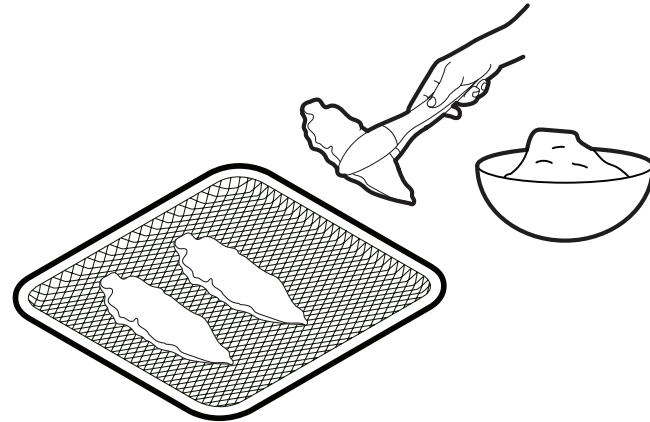


STEP 3

Select the cooking function: BAKE, AIR FRY, or DEHYDRATE.

To use cooking presets, press the icon that best matches what you want to cook. Otherwise, adjust the time and temperature as desired using the TEMP/TIME button and plus (+) and minus (-) signs.


Press the START button.

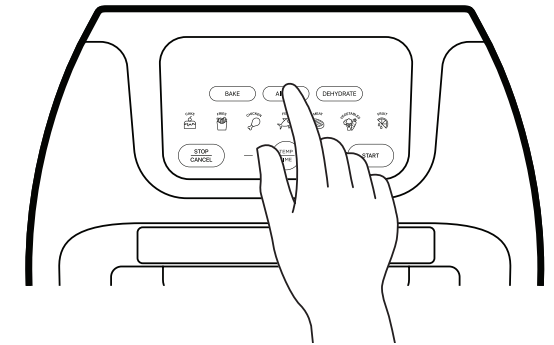

(If cooking with the spit, press the ROTATE button after START.)

STEP 2

Put food in the air fryer and close the door.

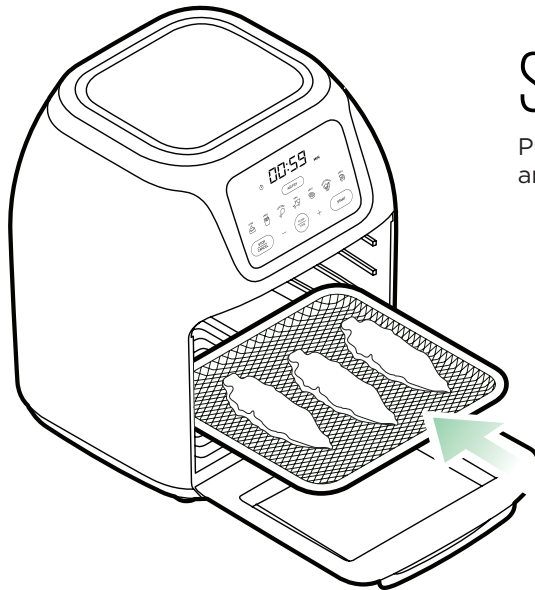

STEP 4

When the timer ends, carefully remove the food, check for doneness, serve, and enjoy!

CAUTION: The unit and accessories get hot during cooking. Use oven mitts and the fetch tool to avoid injury, and place hot items on a heat-resistant surface.

