

# UG10207

## Bidirectional Resonant DC-DC Reference Solution

Rev. 1.0 — 10 February 2025

Application note

### Document information

Information	Content
Keywords	UG10207, bidirectional, resonant, DC-DC reference solution, DC-DC
Abstract	This document details the steps to set up and test the bidirectional DC-DC reference platform.



## 1 Introduction

The bidirectional DC-DC reference platform is designed as an evaluation prototype providing a hardware reference design and a system enablement software.

This document details the steps to set up and test this platform.

## 2 Getting started

This section lists the [kit contents](#), [other hardware](#), and [software](#).

### 2.1 Kit contents

The hardware kits consist of the bidirectional DC-DC power board and HVP-56F83783 expansion card. The HVP-56F83783 expansion card is plugged into the expansion card socket on the power board. The DSC MC56F83783 on the HVP-56F83783 is used as the main controller for the digital power system. The board schematic and layout are available on the bidirectional DC-DC reference design webpage.

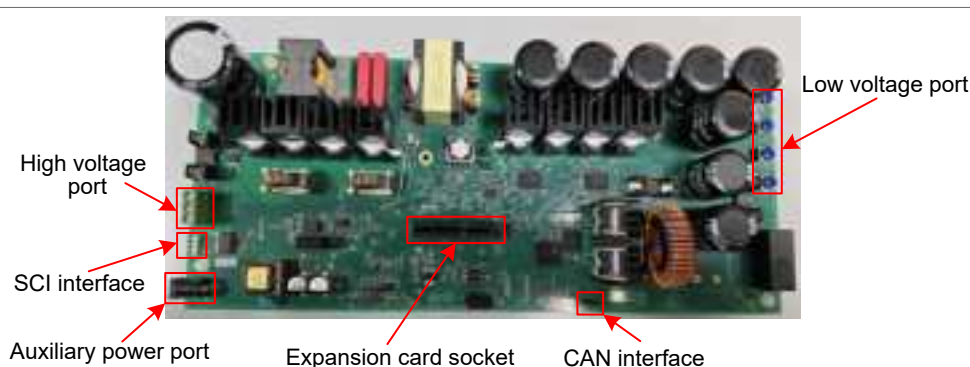


Figure 1. Bidirectional DC-DC power board

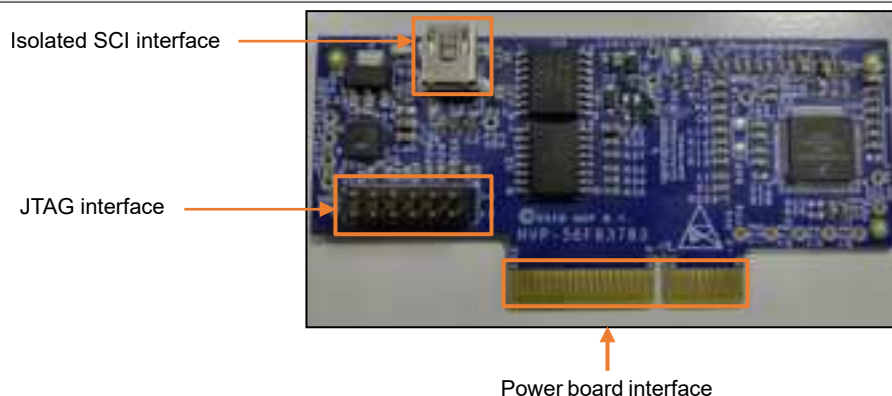


Figure 2. MCU control expansion card (HVP-56F83783)

### 2.2 Other hardware

In addition to the kit contents, the following hardware is necessary or is beneficial when working with this platform.

1. Power supply: DC source up to 400 V/3 A for battery charge mode, DC source up to 60 V/30 A for battery discharge mode.

2. Load: DC electronic load up to 400 V/3 A for battery discharge mode, DC electronic load up to 60 V/30 A for battery charge mode
3. Cable assembly: double row wire cable.
4. A PC to run the provided graphical user interface (FreeMASTER) and USB-Mini-B connector for FreeMASTER connection.
5. A [Universal Multilink](#) or [DSC Multilink](#) to program the controller.

## 2.3 Software

Installing software is recommended to work with this platform.

1. [CodeWarrior IDE v11.2](#), for editing, compiling, and debugging of source code designs.  
**Note:** SP1 for CodeWarrior v11.2 is required. Download (via the above link) CodeWarrior for MCU 11.2 SP1, the installation instructions are available at: [How to install CodeWarrior service pack for DSC guide](#).
2. [MCUXpresso Config Tools v15](#), for graphical display of pin, clock, and peripheral configurations to facilitate modification.
3. [Software Development Kit](#) (SDK\_2\_13\_1\_MC56F83783), is complimentary and includes full source code under a permissive open source license for all hardware abstraction and peripheral driver software.
4. [FreeMASTER 3.2](#), for measurement visualization and runtime configuration and tuning of the embedded software.  
**Note:** To use the CP210x USB to UART bridge virtual COM port communication on HVP-56F83783, download and install the [CP210x drivers](#).

## 3 Platform assembly and operation

As a bidirectional DC-DC converter, electric energy could be transferred from high-voltage port to low-voltage port (Battery charge mode, BCM), or from low-voltage port to high-voltage port (Battery discharge mode, BDM). The hardware configurations and parameter configurations are different for different operating modes.

The following section describes how to run the converter in all working modes.

### 3.1 Battery charge mode (BCM)

#### • Hardware connections

1. Plug HVP-56F83783 into the expansion card socket on the power board.
2. To supply DC voltage, connect the DC source on the high-voltage port.
3. Connect the load on the low voltage port.
4. Connect isolated SCI interface J2 on HVP-56F83783 to the PC through a USB-Mini-B cable.

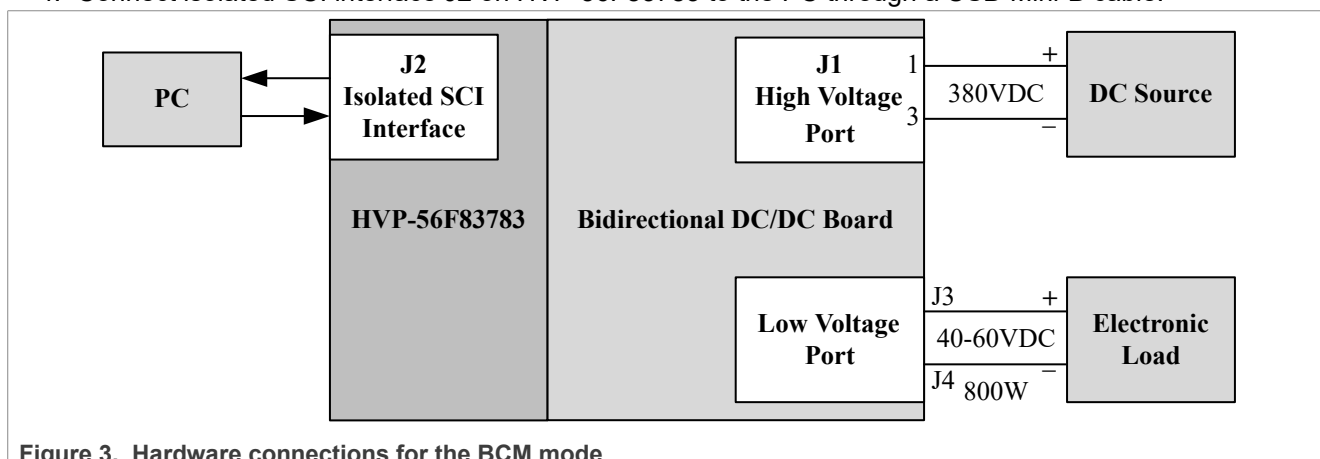


Figure 3. Hardware connections for the BCM mode

- **Powering the boards:** Power the platform by powering up the DC source.
- **Control and monitor the system with FreeMASTER:**
  1. Open the FreeMASTER project (Bidir\_DCDC\_MC56F83783.pmpx) with FreeMASTER. [Figure 4](#) illustrates the FreeMASTER window.

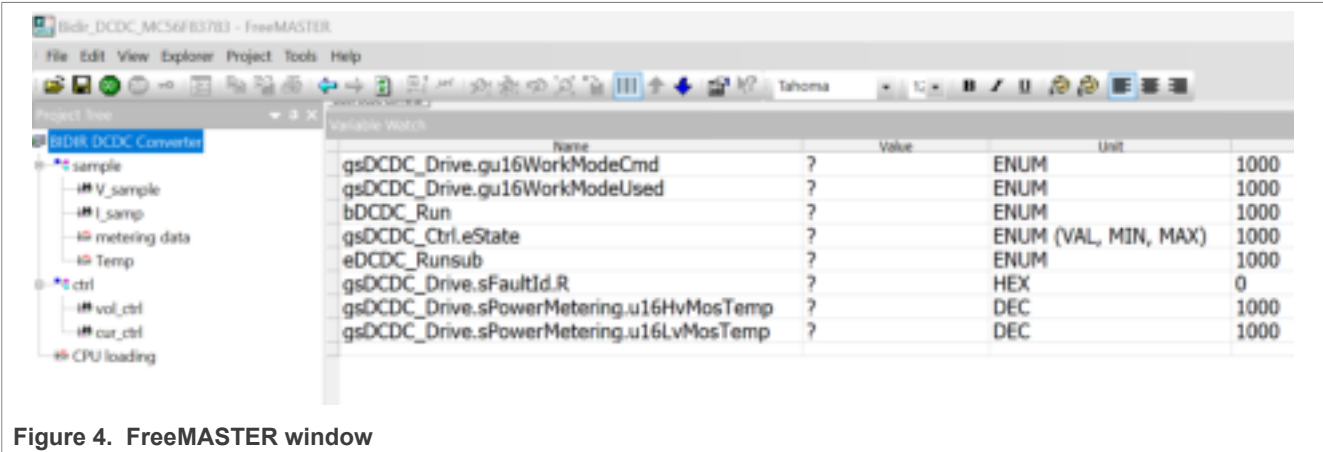


Figure 4. FreeMASTER window

2. Enable the communication between the PC and HVP-56F83783.
3. To set up the communication parameters, select **Project > Options**, under the **Comm** tab.
4. Select the port used by CP210x and set the baud rate as 115200.

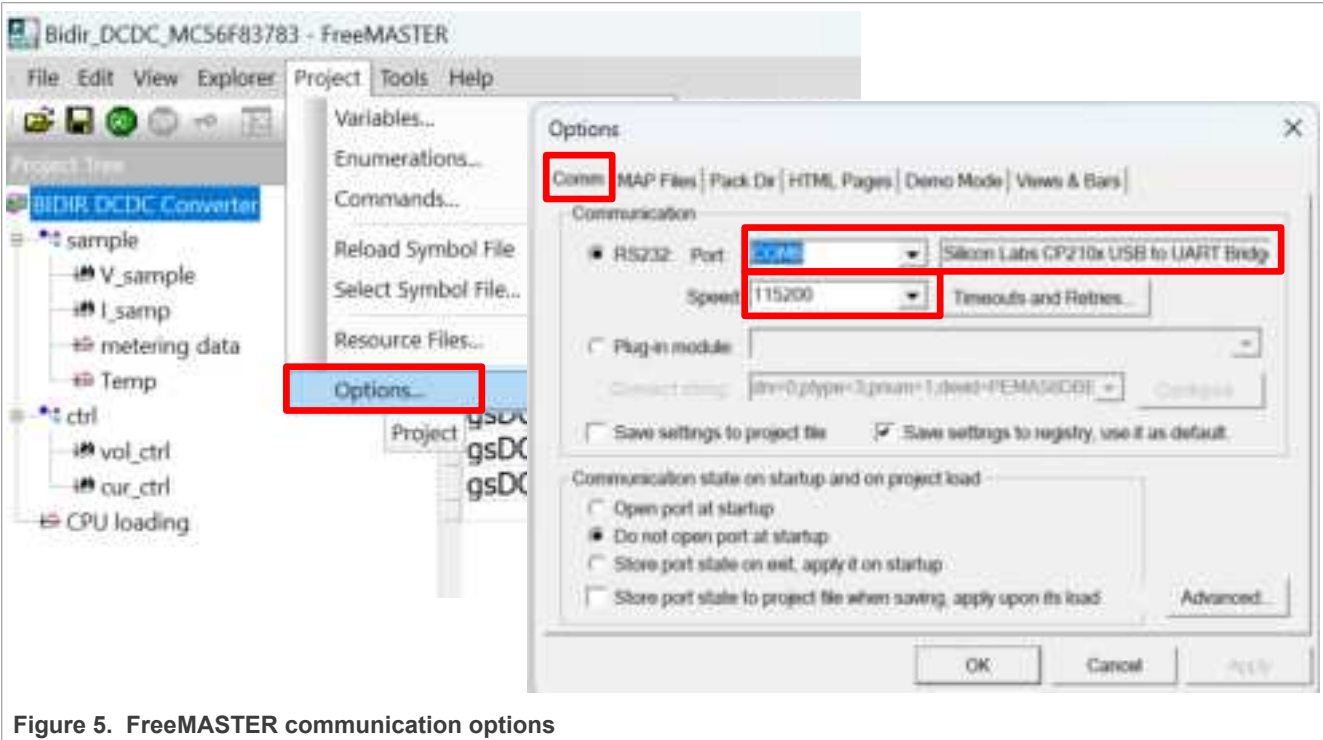


Figure 5. FreeMASTER communication options

5. To select the correct symbol files, click the ... button under the **MAP Files** tab.

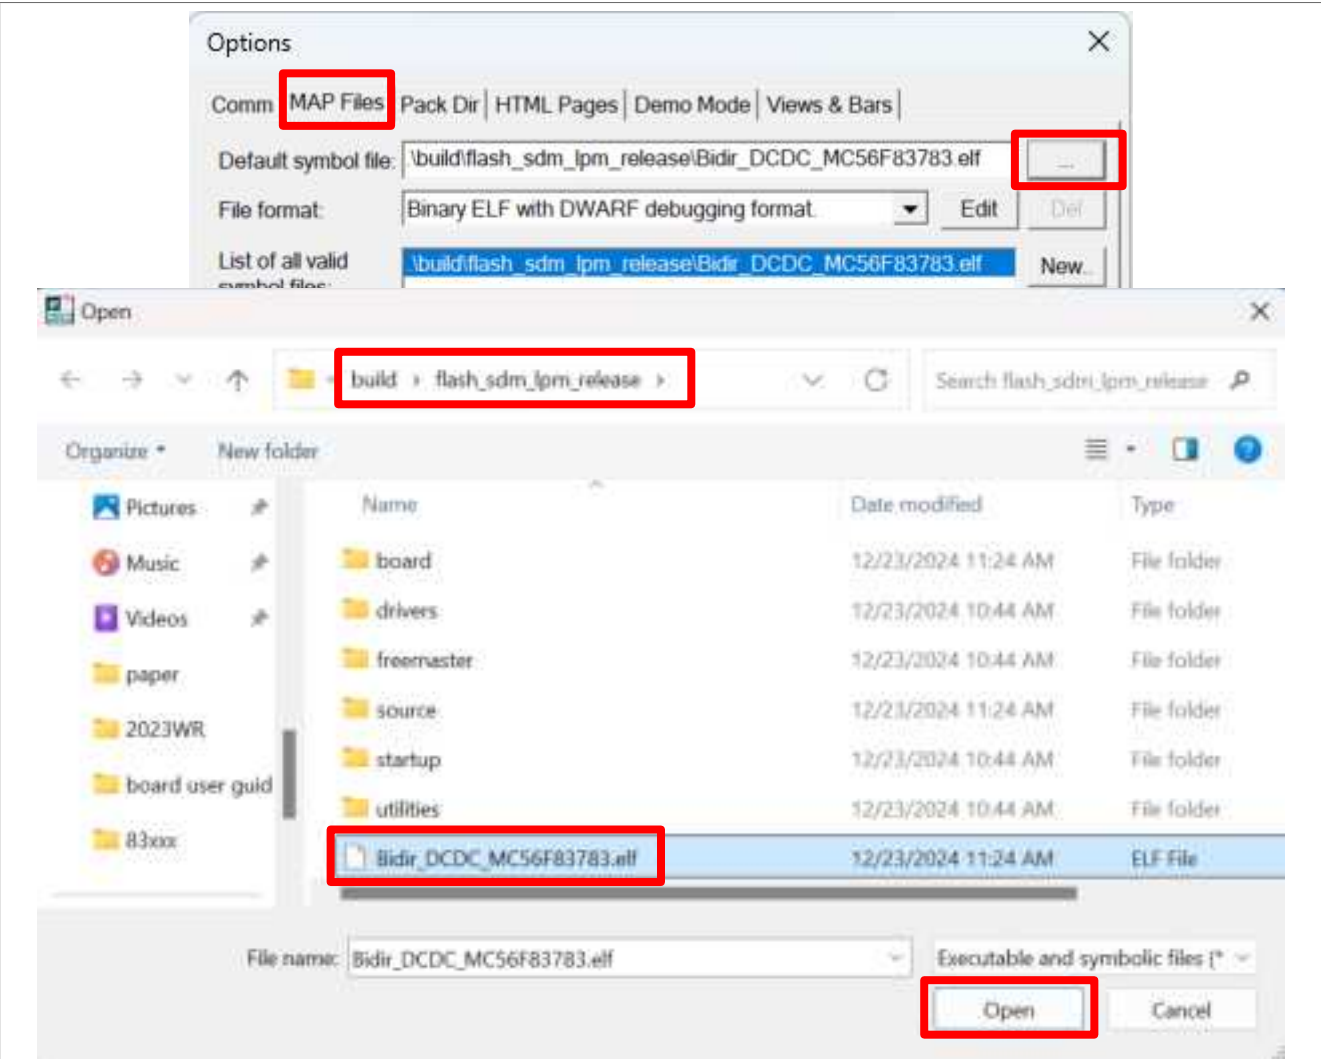


Figure 6. FreeMASTER symbol files options

- 6. Click **OK** and save the configuration.

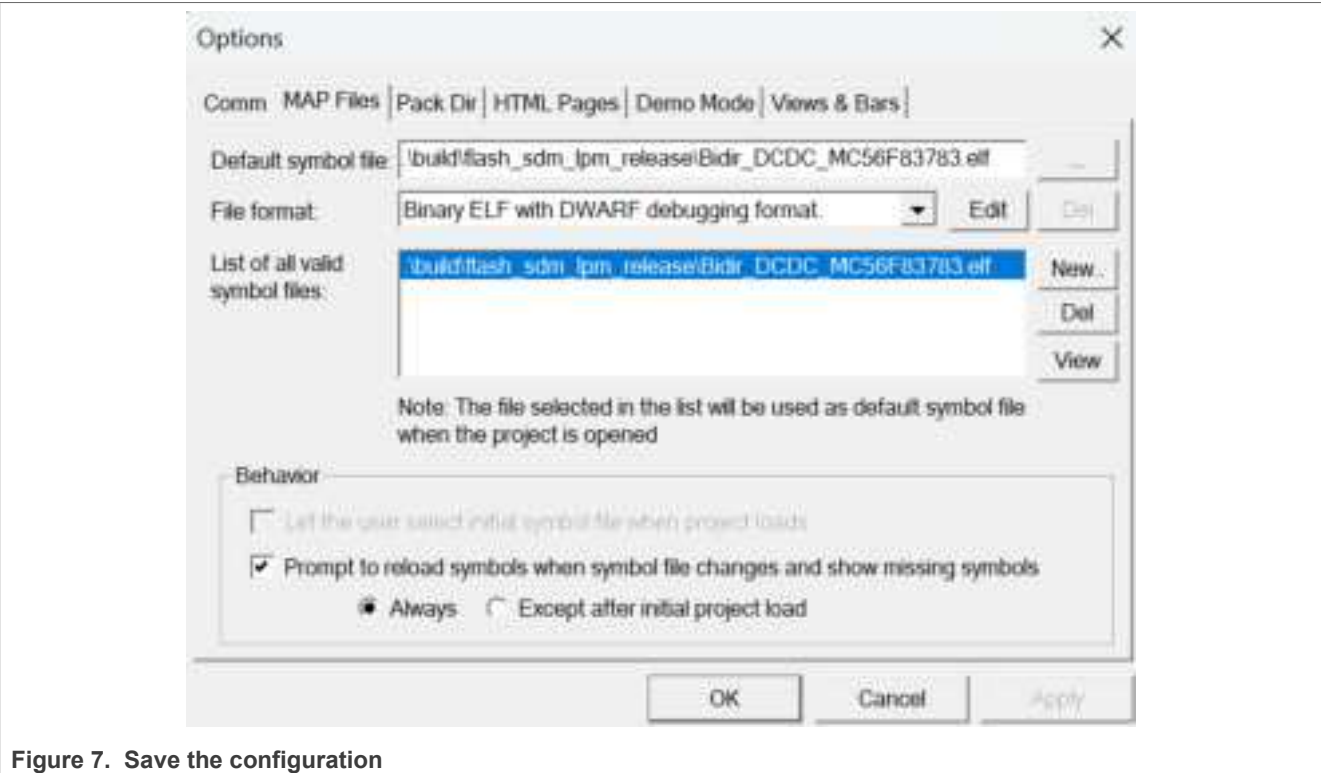


Figure 7. Save the configuration

7. Click the **Go** icon and start the communication. Once the communication is established, click the **Stop** icon to close the communication port.


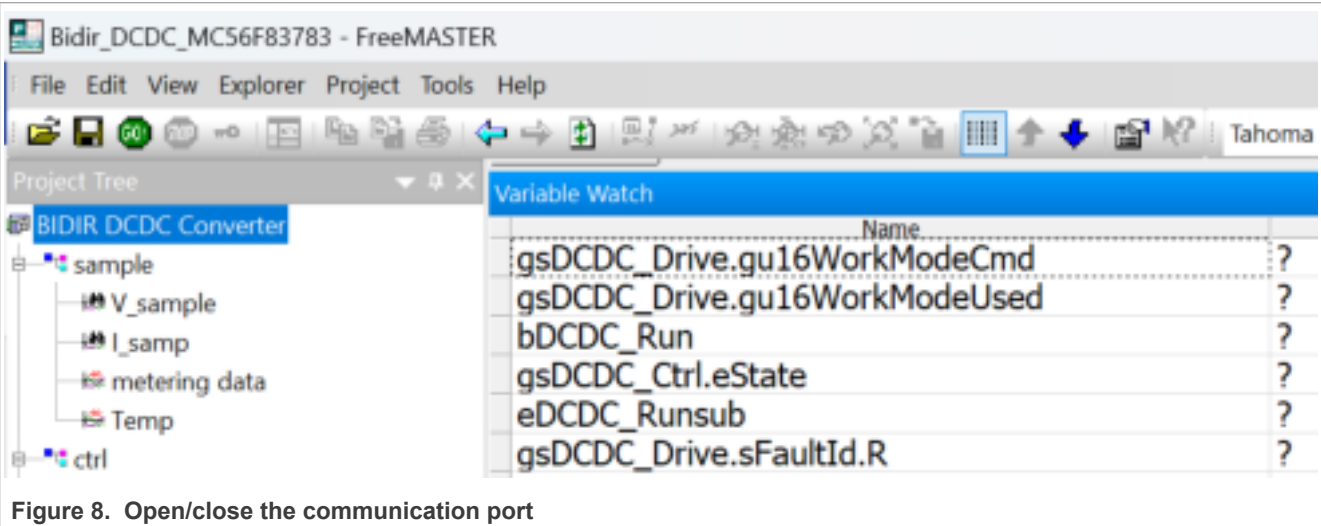



Figure 8. Open/close the communication port

8. After the FreeMASTER communication is established, click the drop-down menu of the `gsDCDC_Drive.gu16WorkModeCmd` command and select BCM.




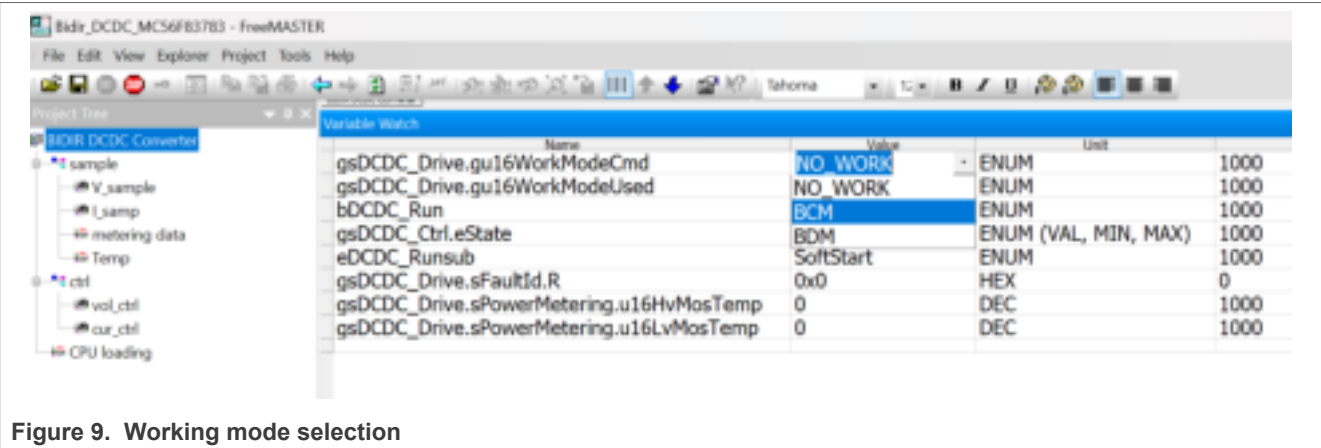

9. Click the drop-down menu of the bDCDC\_Run command and start/stop the converter.

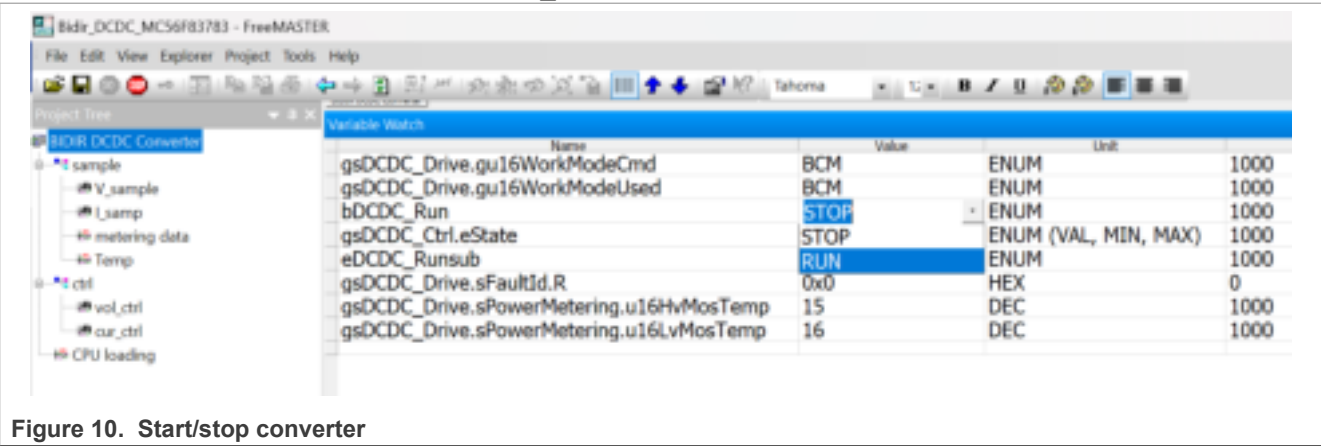


10. The low voltage port voltage ranges from 40 V to 60 V. You could change the low voltage port voltage by changing the macro: **VLV\_BCM\_REF** (Bidir\_DCDC\_MC56F83783 > source > bidir\_dcdc\_ctrl.h). The default low voltage port voltage is 56 V.

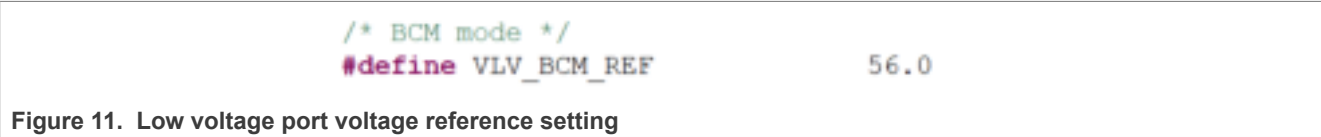


### 3.2 Battery discharge mode (BDM)


- **Hardware connections**
  1. Plug HVP-56F83783 into the expansion card socket on the power board.
  2. To supply DC voltage, connect the DC source on the low-voltage port.
  3. Connect the load on the high-voltage port.
  4. Connect the isolated SCI interface J2 on HVP-56F83783 to the PC through a USB-Mini-B cable.

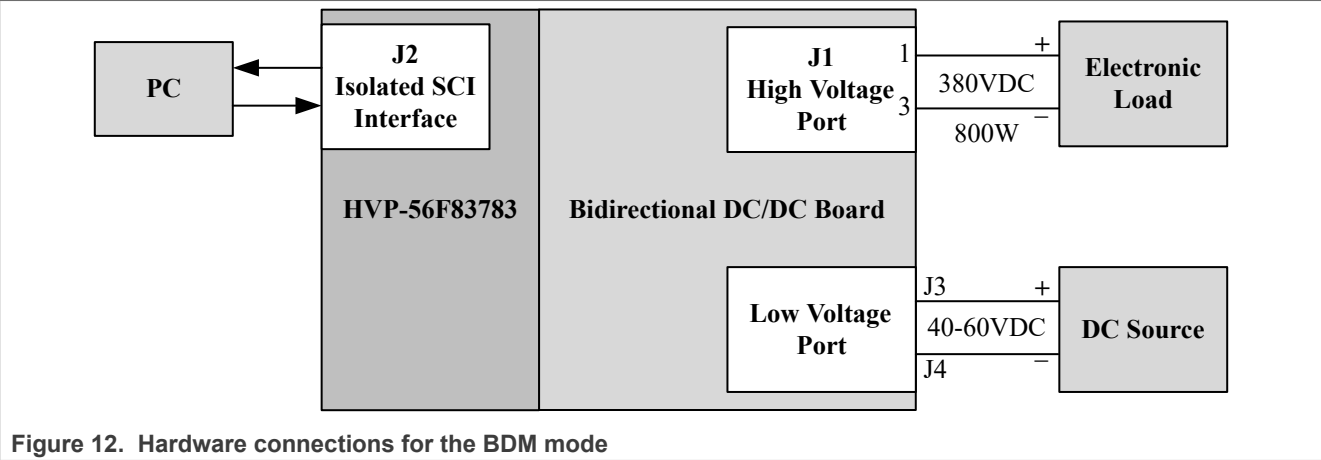

- **Powering the boards:** Power the platform by powering up the DC source.
- **Control and monitor the system with FreeMASTER:**
  1. Open the FreeMASTER project (`Bidir_DCDC_MC56F83783.pmpx`) with latest FreeMASTER and enable the communication between the PC and HVP-56F83783.
  2. After the communication is established, click the drop-down menu of the `gsDCDC_Drive.gu16WorkModeCmd` command and select BDM.

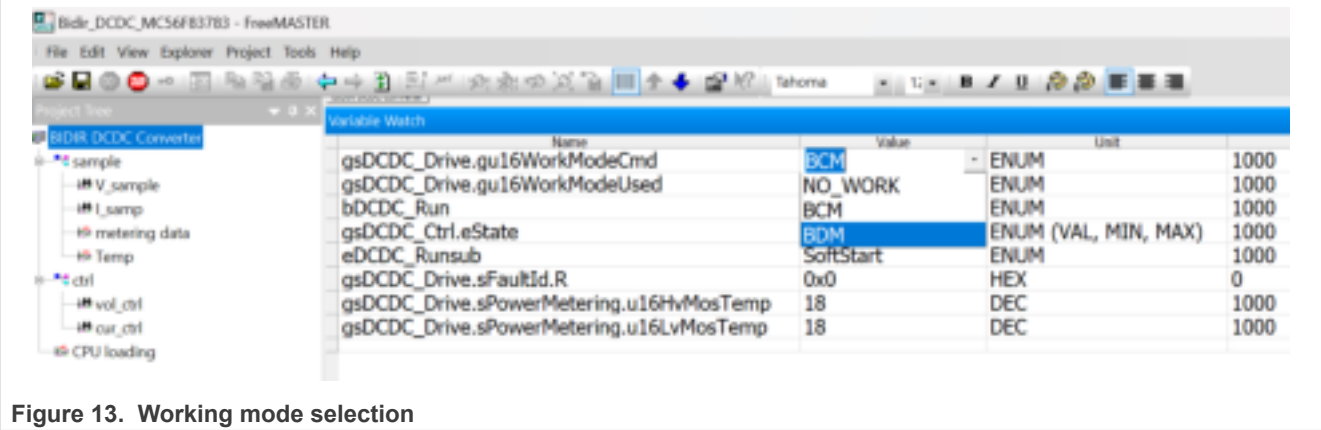

3. Click the drop-down menu of the `bDCDC_Run` command and start/stop the converter.

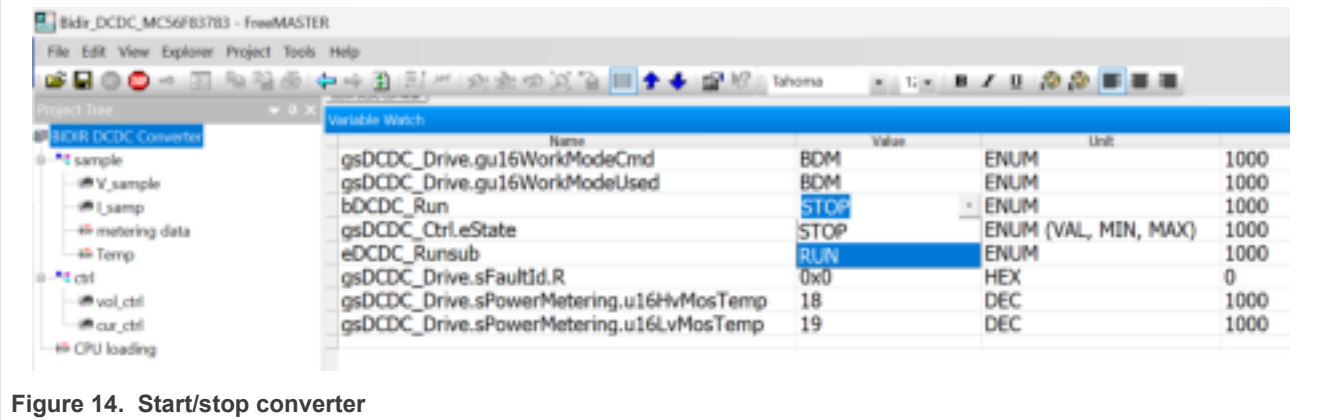



4 References

For more information on the DC-DC converter design using MC56F83783, refer to the following documents:

- Bidirectional Resonant DC-DC Converter Design using MC56F83783 (document [AN14333](#))
- Getting started with the Bidirectional DC-DC converter.

5 Revision history

[Table 1](#) lists the revisions to this document.

Table 1. Revision history

Document ID	Release date	Description
UG10207 v.1.0	10 February 2025	Initial public release

## Legal information

### Definitions

**Draft** — A draft status on a document indicates that the content is still under internal review and subject to formal approval, which may result in modifications or additions. NXP Semiconductors does not give any representations or warranties as to the accuracy or completeness of information included in a draft version of a document and shall have no liability for the consequences of use of such information.

### Disclaimers

**Limited warranty and liability** — Information in this document is believed to be accurate and reliable. However, NXP Semiconductors does not give any representations or warranties, expressed or implied, as to the accuracy or completeness of such information and shall have no liability for the consequences of use of such information. NXP Semiconductors takes no responsibility for the content in this document if provided by an information source outside of NXP Semiconductors.

In no event shall NXP Semiconductors be liable for any indirect, incidental, punitive, special or consequential damages (including - without limitation - lost profits, lost savings, business interruption, costs related to the removal or replacement of any products or rework charges) whether or not such damages are based on tort (including negligence), warranty, breach of contract or any other legal theory.

Notwithstanding any damages that customer might incur for any reason whatsoever, NXP Semiconductors' aggregate and cumulative liability towards customer for the products described herein shall be limited in accordance with the Terms and conditions of commercial sale of NXP Semiconductors.

**Right to make changes** — NXP Semiconductors reserves the right to make changes to information published in this document, including without limitation specifications and product descriptions, at any time and without notice. This document supersedes and replaces all information supplied prior to the publication hereof.

**Suitability for use** — NXP Semiconductors products are not designed, authorized or warranted to be suitable for use in life support, life-critical or safety-critical systems or equipment, nor in applications where failure or malfunction of an NXP Semiconductors product can reasonably be expected to result in personal injury, death or severe property or environmental damage. NXP Semiconductors and its suppliers accept no liability for inclusion and/or use of NXP Semiconductors products in such equipment or applications and therefore such inclusion and/or use is at the customer's own risk.

**Applications** — Applications that are described herein for any of these products are for illustrative purposes only. NXP Semiconductors makes no representation or warranty that such applications will be suitable for the specified use without further testing or modification.

Customers are responsible for the design and operation of their applications and products using NXP Semiconductors products, and NXP Semiconductors accepts no liability for any assistance with applications or customer product design. It is customer's sole responsibility to determine whether the NXP Semiconductors product is suitable and fit for the customer's applications and products planned, as well as for the planned application and use of customer's third party customer(s). Customers should provide appropriate design and operating safeguards to minimize the risks associated with their applications and products.

NXP Semiconductors does not accept any liability related to any default, damage, costs or problem which is based on any weakness or default in the customer's applications or products, or the application or use by customer's third party customer(s). Customer is responsible for doing all necessary testing for the customer's applications and products using NXP Semiconductors products in order to avoid a default of the applications and the products or of the application or use by customer's third party customer(s). NXP does not accept any liability in this respect.

**Terms and conditions of commercial sale** — NXP Semiconductors products are sold subject to the general terms and conditions of commercial sale, as published at <https://www.nxp.com/profile/terms>, unless otherwise agreed in a valid written individual agreement. In case an individual agreement is concluded only the terms and conditions of the respective agreement shall apply. NXP Semiconductors hereby expressly objects to applying the customer's general terms and conditions with regard to the purchase of NXP Semiconductors products by customer.

**Export control** — This document as well as the item(s) described herein may be subject to export control regulations. Export might require a prior authorization from competent authorities.

**Suitability for use in non-automotive qualified products** — Unless this document expressly states that this specific NXP Semiconductors product is automotive qualified, the product is not suitable for automotive use. It is neither qualified nor tested in accordance with automotive testing or application requirements. NXP Semiconductors accepts no liability for inclusion and/or use of non-automotive qualified products in automotive equipment or applications.

In the event that customer uses the product for design-in and use in automotive applications to automotive specifications and standards, customer (a) shall use the product without NXP Semiconductors' warranty of the product for such automotive applications, use and specifications, and (b) whenever customer uses the product for automotive applications beyond NXP Semiconductors' specifications such use shall be solely at customer's own risk, and (c) customer fully indemnifies NXP Semiconductors for any liability, damages or failed product claims resulting from customer design and use of the product for automotive applications beyond NXP Semiconductors' standard warranty and NXP Semiconductors' product specifications.

**HTML publications** — An HTML version, if available, of this document is provided as a courtesy. Definitive information is contained in the applicable document in PDF format. If there is a discrepancy between the HTML document and the PDF document, the PDF document has priority.

**Translations** — A non-English (translated) version of a document, including the legal information in that document, is for reference only. The English version shall prevail in case of any discrepancy between the translated and English versions.

**Security** — Customer understands that all NXP products may be subject to unidentified vulnerabilities or may support established security standards or specifications with known limitations. Customer is responsible for the design and operation of its applications and products throughout their lifecycles to reduce the effect of these vulnerabilities on customer's applications and products. Customer's responsibility also extends to other open and/or proprietary technologies supported by NXP products for use in customer's applications. NXP accepts no liability for any vulnerability. Customer should regularly check security updates from NXP and follow up appropriately. Customer shall select products with security features that best meet rules, regulations, and standards of the intended application and make the ultimate design decisions regarding its products and is solely responsible for compliance with all legal, regulatory, and security related requirements concerning its products, regardless of any information or support that may be provided by NXP.

NXP has a Product Security Incident Response Team (PSIRT) (reachable at [PSIRT@nxp.com](mailto:PSIRT@nxp.com)) that manages the investigation, reporting, and solution release to security vulnerabilities of NXP products.

**NXP B.V.** — NXP B.V. is not an operating company and it does not distribute or sell products.

### Trademarks

Notice: All referenced brands, product names, service names, and trademarks are the property of their respective owners.

**NXP** — wordmark and logo are trademarks of NXP B.V.

Tables

Tab. 1. Revision history .....9

Figures

Fig. 1.	Bidirectional DC-DC power board ..... 2	Fig. 8.	Open/close the communication port .....6
Fig. 2.	MCU control expansion card (HVP-56F83783) ..... 2	Fig. 9.	Working mode selection .....7
Fig. 3.	Hardware connections for the BCM mode .....3	Fig. 10.	Start/stop converter ..... 7
Fig. 4.	FreeMASTER window .....4	Fig. 11.	Low voltage port voltage reference setting ..... 7
Fig. 5.	FreeMASTER communication options ..... 4	Fig. 12.	Hardware connections for the BDM mode .....8
Fig. 6.	FreeMASTER symbol files options .....5	Fig. 13.	Working mode selection .....8
Fig. 7.	Save the configuration ..... 6	Fig. 14.	Start/stop converter .....8

Contents

1 Introduction .....2

2 Getting started .....2

2.1 Kit contents .....2

2.2 Other hardware .....2

2.3 Software .....3

3 Platform assembly and operation .....3

3.1 Battery charge mode (BCM) .....3

3.2 Battery discharge mode (BDM) .....7

4 References .....9

5 Revision history .....9

Legal information .....10

Please be aware that important notices concerning this document and the product(s) described herein, have been included in section 'Legal information'.