


CONFIGURATION GUIDE

Our Smart Config System for MPS 080

Take advantage of the maximum flexibility of Stäubli's modular product concept.
Configure your perfect tool changing system in just a few steps.

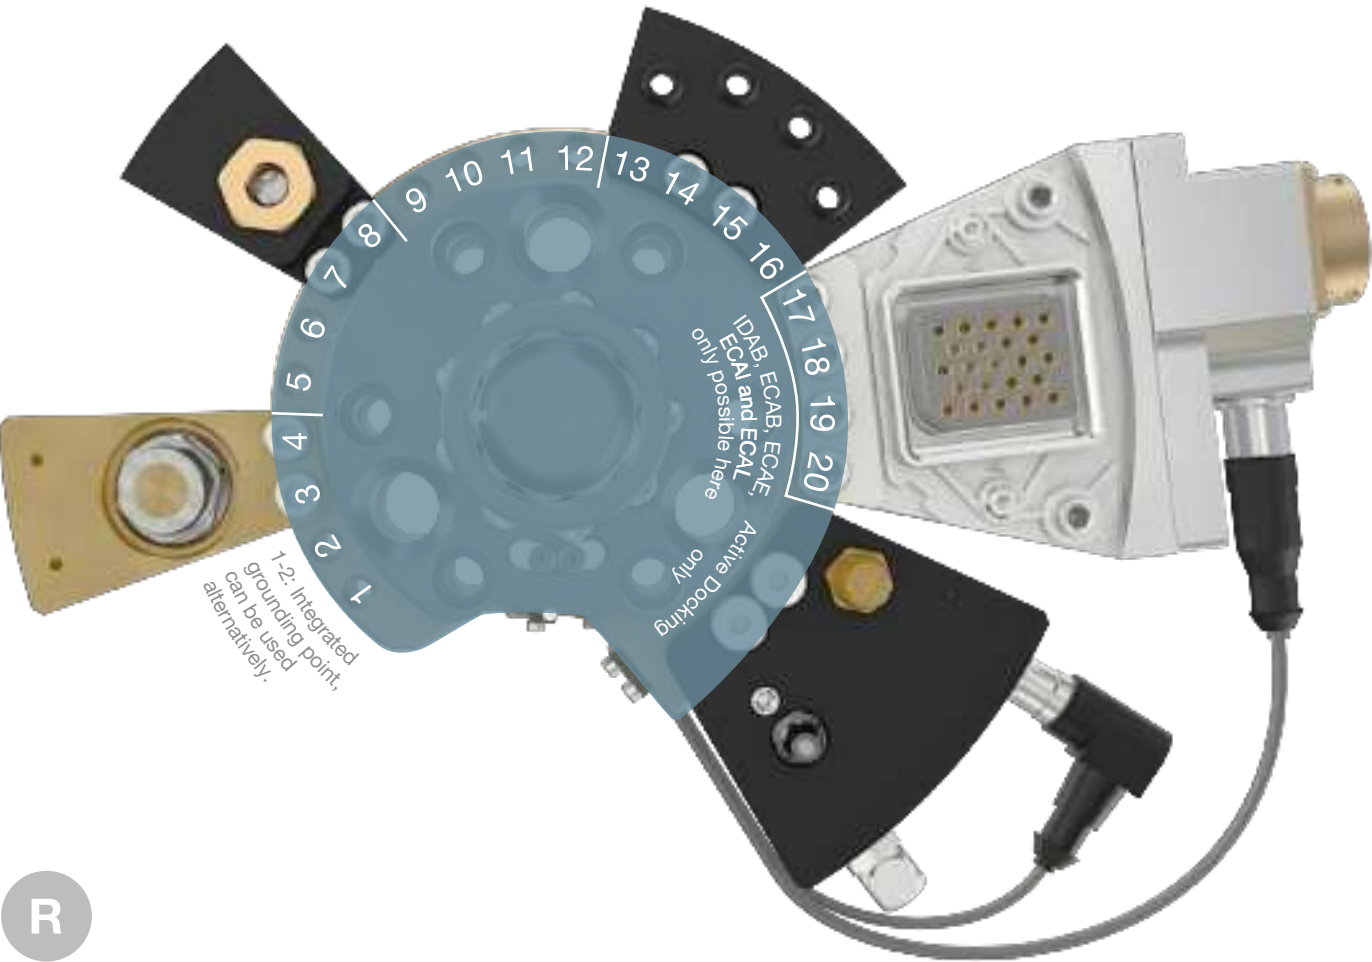

R

1

Choose your **base unit** and note the module order code.


ON PAGE 20

2

Place the required **transfer modules** in mounting holes 1 to 20 by entering the module code. Only IDAB, ECAB, ECAE, ECAI and ECAL are possible in holes 17 to 20.

MODULE OVERVIEW ON PAGE 38

M P S 0 8 0 R D - 0 0 W A - 0 0 W B - 0 0 0 0 - P 4 W P - E C A B

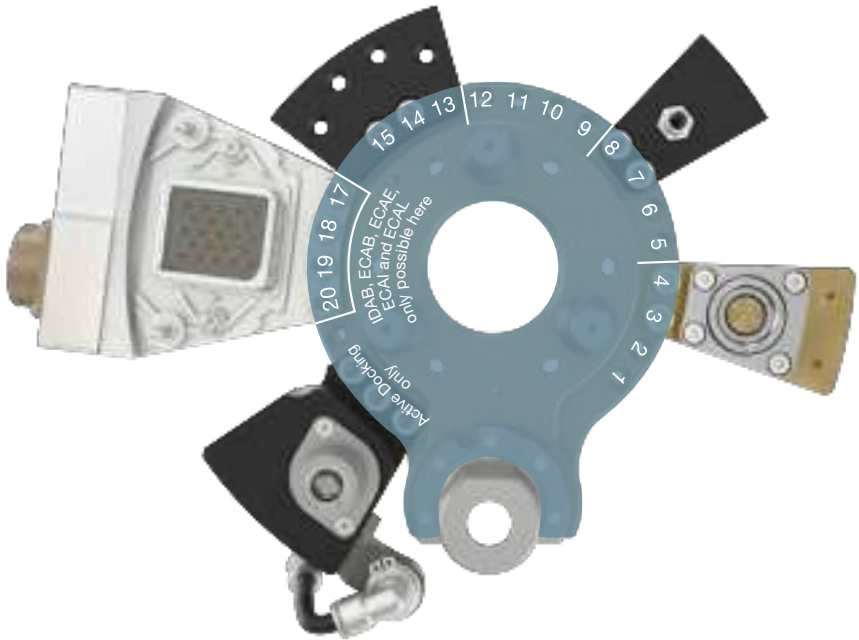

T

3

Select the appropriate **base unit** for your tool side.

Transfer the module order codes of the **transfer modules** corresponding to the robot side.

ON PAGE 22

M P S 0 8 0 T C - 0 0 W A - 0 0 W B - 0 0 0 0 - P 4 W P - E C A B

T

4

Reduce your investment by varying your tool sides: Remove the transfer modules that are not required on the respective tool side (replace module code with 00 or 0000).

M P S 0 8 0 T C - 0 0 0 0 - 0 0 W B - 0 0 0 0 - 0 0 0 0 - E C A B