

User Manual of Product 1:

Swan 20L Nordic Digital LED Microwave, 6 Power Levels, Wood Effect Handle, Soft Touch Housing and Matte Finish, 800W, Green, SM22036LGREN

User Manual of Product 2:

Swan Nordic 2 Slice Toaster, Green, 900W, Soft Touch and Matte Finish, 6 Browning Levels, ST14610GREN



Swan



Digital Microwave

Model: SM22036 (all colours)

Help line: 0333 220 6050 v1.0





IMPORTANT SAFEGUARDS

- The following basic precautions should always be followed when using electrical appliance:
- Read all instructions before using.
- Make sure the voltage in your area corresponds to the one shown on the rating label of the appliance and the wall socket is properly earthed.
- **To reduce the risk of fire in the oven cavity:**
 - a. Do not overcook the food.
 - b. Remove wire twist ties from paper or plastic bags before placing bags in the oven.
 - c. Do not heat oil or fat for deep frying as the temperature of oil cannot be controlled
 - d. After use, wipe the waveguide cover with a damp cloth, followed by dry cloth to remove any food splashes and grease.
 - e. Built-up grease may overheat and begin to cause smoke or catch fire.
 - f. If materials inside the oven should smoke or ignite, keep oven door closed, turn oven off and disconnect the power supply.
 - g. When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition.



IMPORTANT SAFEGUARDS

- **WARNING: Liquids and other foods must not be heated in sealed container since they are liable to explode:**
 - a. Baby bottles fitted with a screw cap or teat are considered to be sealed containers.
 - b. Use the wide-mouthed containers to cook liquid, and the cooked liquid should be allowed to stand for at least a minute before removing.
 - c. Potatoes, sausage and chestnut should be peeled or pierced before cooking. Eggs in their shell, whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended.
 - d. The contents of feeding bottles and baby food jars are to be stirred or shaken and the temperature is to be checked before consumption, in order to avoid burns.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a qualified technician in order to avoid a shock hazard.
- After cooking, the container is very hot. Use gloves to take out the food and avoid steam burns by directing steam away from the face and hands.
- Slowly lift the furthest edge of dish covers and microwave plastic wrap.



IMPORTANT SAFEGUARDS

- **To prevent the turntable from breaking:**
 - a. Let the turntable cool down before cleaning.
 - b. Do not place hot foods or utensils on the cold turntable.
 - c. Do not place frozen foods or utensils on the hot turntable.
- Make sure the utensils do not touch the interior walls during cooking.
- Only use utensils that are suitable for use in microwave ovens.
- Do not store food or any other things inside the oven.
- Do not operate the oven without any liquid or food inside the oven. This would do damage to the oven.
- When the appliance is operated in the combination mode, children should only use the oven under adult supervision due to the temperatures generated.
- Any accessories not recommended by the manufacturer may cause injuries to persons.
- Do not use outdoors.
- Save these instructions.
- **WARNING: If the door or door seals are damaged or the oven is malfunctioning, it must not be operated until it has been repaired by a competent person.**
- **WARNING: It is hazardous for anyone other than a competent person to carry out**



IMPORTANT SAFEGUARDS

any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.

- If smoke is emitted, switch off or unplug the appliance and keep the door closed in order to stifle any flames
- Microwave heating of beverages can result in delayed eruptive boiling; therefore care must be taken when handling the container;
- Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.
- The lamp of microwave oven is not intended for other purposes.
- The appliance is not intended to be operated by means of an external timer or separate remote -control system.
- This appliance is intended to be used in household and similar applications, such as:
 - a. Staff kitchen areas in shops, offices and other working environments;
 - b. Farm houses;
 - c. By clients in hotels, motels and other residential environments;
 - d. Bed and breakfast type environments.
- The microwave oven is intended for heating food and beverages. Drying of food or clothing and heating of warming pads, slippers, sponges, damp cloth and similar may



IMPORTANT SAFEGUARDS

lead to risk of injury, ignition or fire.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children less than 8 years.
- Do not use a steam cleaner to clean any part of this appliance
- The door or the outer surface may get hot when the appliance is operating.
- **WARNING:** Accessible parts may become hot during use. Young children should be kept away.

Household use only


We do not recommend the use of microwave popcorn in bags. Many of these produce PFOA chemicals, which have been identified as a potential carcinogen. Instead we recommend using a microwave-approved bowl and lid.



GET TO KNOW YOUR MICROWAVE

UTENSILS GUIDELINE

Only use containers which are suitable and safe for microwave cooking. Generally speaking, the containers which are made of heat-resistant ceramic, glass or plastic are suitable for microwave cooking. **Never use metal containers** for microwave cooking.

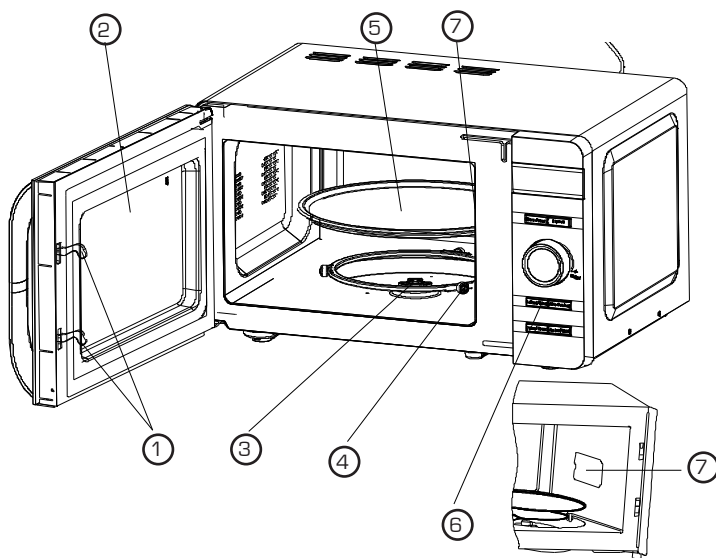

1. **Door** Microwave oven door must be properly closed in order for it to operate
2. **Viewing window** Allow user to see the cooking status
3. **Rotating axis** The glass turntable sits on the axis; the motor underneath it drives the turntable to rotate
4. **Rotating ring** The glass turntable sits on its wheels; it supports the turntable and helps it to balance when rotating
5. **Turntable** The food sits on the turntable, its rotation during operation helps to cook food evenly. Place the rotating ring first. Fit the turntable onto the rotating axis and make sure that it is geared in properly
6. **Control panel** See below for more information
7. Wave guide cover


WARNING

- Do not remove the Waveguide cover during cleaning
- Make sure the Waveguide cover is properly in place during cooking



HOW TO USE YOUR MICROWAVE

CONTROL PANEL

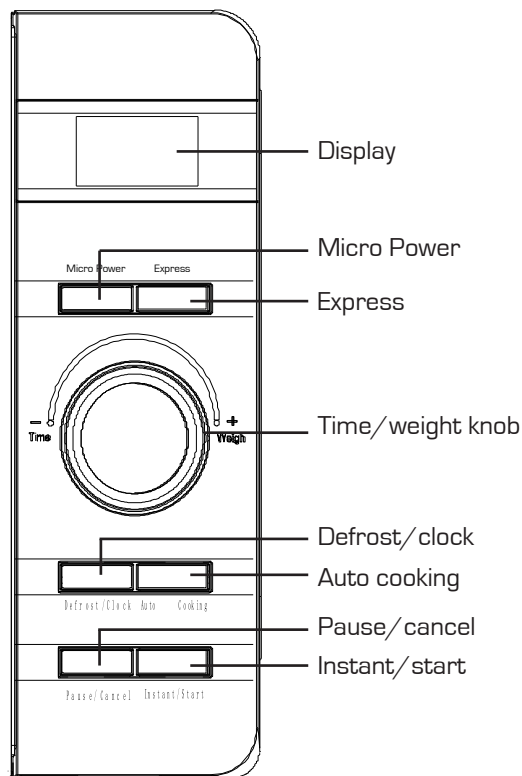

BEFORE COOKING

The LED flashes 3 times when plugged in the power supply. Then it flashes ":", prompting you to input the cooking menu and time.

TIME/WEIGHT KNOB

You can increase or decrease cooking time, weight during operation by turning the knob. This knob is also used to increase/decrease input values e.g. when setting the clock

PAUSE/CANCEL

At the initial or input stage: press once to cancel input programs and resume initial stage.

During cooking: press once to stop oven operation, press twice to cancel cooking programs.

AUTO REMINDER

When your preset cooking procedure has finished, the LED Display will show End and three beeps will be heard to prompt you to take out food. If you do not press Pause/Cancel button once or open the door, the beep will be sounded at an interval of 3 minutes.

INSTANT COOKING

On the standby status, press Instant/Start button, the oven will start cooking with high power; system default cooking time is 1 minute. You can increase or decrease cooking time by turning the knob.

CLOCK SETTING

Clock button allows you to input current or preset time when ":" flashes on the LED display after plugging in.



HOW TO USE YOUR MICROWAVE

Setting the clock

Example: to set 12:30		
	Steps	Display
1	After power-up, the colon flashes	1:00
2	Press and hold Defrost/ Clock button for 3 seconds	1:00
3	Turn Time/Weight knob to set exact hours.	12:00
4	Press Defrost/ Clock button once again.	12:00
5	Turn Time/Weight knob to set exact minutes.	12:30
6	Press Defrost/ Clock button once again or wait for 60 seconds, and the numbers will go steadily.	

- At the maximum microwave power, the oven will automatically lower the power after a certain time of cooking to lengthen the service life of the oven.
- If you turn the food during operation, press the Instant/Start button once and the preset cooking procedure will continue.
- If you intend to remove the food before the preset time, you must press Pause/Cancel button once to clear the preset procedure to avoid unintended operation on next time use.

Microwave cooking

High power	100% microwave power. Applicable for quick and thorough cooking
Medium High power	80% microwave power. Applicable for medium express cooking
Medium power	60% microwave power. Applicable for steaming food
Medium Low power	40% microwave power. Applicable for defrosting food
Low power	20% microwave power. Applicable for keeping warm

This function is for cooking and heating food. Press Micro Power button, LED will cycle to show 100P—80P—60P — 40P—20P. Max time is 60 mins. Never operate the oven empty



HOW TO USE YOUR MICROWAVE

Example: To cook at P80 for 10 minutes.

	Steps	Display
1	After power-up, the colon flashes	1:00
2	Select the desired microwave power by pressing Micro Power button consecutively	80P
3	Set cooking time by turning Time/Weight knob	10:00
4	Press Instant/Start button to start and LED will count down to show running time.	

EXPRESS

Press Express button LED display will cycle to show 0:30, 1:00, 1:30. This function will allow you to heat a cup of water or beverage conveniently, omitting the steps of setting time. Choose the proper time depending on the beverage capacity.

1	After power-up, the colon flashes	1:00
2	Press Express button consecutively to select desired menu	1:00
3.	Start cooking by pressing Instant/Start button	

DEFROST

This function use for defrost food. Press the Defrost/Clock button and the LED display will cycle to show d.1-d.2-d.3.

d.1	For defrosting meat, the weight range from 0.1 to 2.0 kg.
d.2	For defrosting poultry, the weight range from 0.2 to 3.0kg.
d.3	For defrosting seafood, the weight range from 0.1 to 0.9kg.

- It is necessary to turn over the food during operation to obtain uniform effect.
- Usually defrosting will need longer time than that of cooking the food.
- If the food can be cut by knife, the defrosting process can be considered completed.
- Microwave energy penetrates around 4cm into most food
- Defrosted food should be consumed as soon as possible, it is not advised to put back to fridge and freeze again.



HOW TO USE YOUR MICROWAVE

Example: To defrost 0.4kg poultry		
	Steps	Display
1	After power-up, the colon flashes	1:00
2	Press Defrost/ Clock button once to set the food kind.	d.2
3	Turn Time/ Weight knob to set the defrost weight	0.4
4	Start cooking by pressing Instant/Start	
5	During defrosting, beep sounds will be heard two times to prompt you turn over the food. Open the door and turn over the food. Then close the door. Press Instant/Start button again to continue defrosting	

AUTO COOKING

The oven has default cooking menu for simple operation. When the LED flashes colon, turn the Auto Cooking knob and LED will cycle to show A.1, A.2 A.8. Choose the appropriate menu according to the food type and weight and strictly observe the directions in table on right, otherwise the cooking effect will be largely influenced.

Display	Kind	Method
A.1	Popcorn	Suitable for popping 100g corn. Use microwave-safe bowl with loose lid
A.2	Reheat	Reheat food weighted 0.2-1.0kg.
A.3	Beverage	Heating 1-3 cup of liquid. The liquid temperature is about 5-10A . Use a big mouth cup and do not seal
A.4	Pizza	Warm 1-2 pieces of chilled pizza.
A.5	Potato	Cooking the potato strips, cut into 5mm width and height, length. Total weight is about 0.45 or 0.65kg. Place the strips on a large dish and cover the dish with a thin film to prevent water loss.
A.6	Vegetable	All together there are five choices (0.1, 0.2-----0.5Kg)
A.7	Meat	All together there are six choices (0.1, 0.2-----0.5Kg)
A.8	Fish	All together there are six choices (0.1, 0.2-----0.5Kg)



Example: Now it is 12:30 clock, if you hope that the microwave oven will automatically start cooking with 100P microwave power for 9 minutes and 30 seconds at 14:20

	Steps	Display
1	After power-up, the colon flashes	1:00
1.1	Press and hold Defrost/Clock button for 3 seconds	1:00
1.2	Set hours by turning Time/ Weight knob	12:00
1.3	Press Defrost/Clock button again to confirm hours	12:00
1.4	Set minutes by turning Time/ Weight knob	12:30
1.5	Press Defrost/Clock button once to start (or automatic to exist after 10 seconds)	12:30
2	Set the cooking menu and time	
2.1	Select cooking power by pressing Micro Power button	100P
2.2	Turn Time/ Weight knob to set cooking time	9:30
2.3	Press and hold Defrost/Clock button for 3 seconds to return to current clock.	
3	Set the time you expect to start. Repeat the steps of 1.2, 1.3, 1.4	
4	Press Defrost/Clock button to confirm the delayed menu. Now the program has been activated. And the menu will be started at 14:20.	
5	You may check the preset starting time by pressing Defrost/Clock button.	

MULTI SEQUENCE COOKING

Example: You want cook food with 100P microwave for 3 minutes then 20P for 9 minutes. This is 2 sequence setting.

	Steps	Display
1	100P microwave for 3min	
1.1	Press Micro Power button to select power level.	100P
1.2	Turn Time/ Weight knob to set cooking time.	3:00
2	20P for 9min	
2.1	Press Micro Power button to select desired menu	20P
2.2	Turn Time/ Weight knob to set cooking time.	9:00
3	Start cooking by pressing Instant/Start	

CHILD LOCK FUNCTION

Use this feature to lock the control panel when you are cleaning or so that children can not use the oven unsupervised. All the buttons are rendered inoperable in this mode.

- Set lock: Hold Pause/Cancel button about 3 seconds.
- Cancel lock: Hold Pause/Cancel button about 3 seconds.

IS IT MICROWAVE SAFE?

It is very important to only use microwave safe materials. These days many vessels have a small icon underneath to say if it is suitable for microwaves or not.

Patterned plates or bowls may contain metal in the glaze, which can cause damage to your microwave.

Do not use metal or foil of any kind.

When using plastic or paper wrapping, check on the manufacturer's packaging whether it is safe to use in a microwave or not.

Popping, smoking or sparking is a sure indicator that your microwave doesn't like the material in the oven cavity. Whenever this happens, switch off the microwave and remove the oven contents after they have cooled.



HOW TO USE YOUR MICROWAVE

Cooking Tips

The following factors may affect the cooking result:

Food arrangement

Place thicker areas towards outside of dish, the thinner part towards the Centre and spread it evenly. Do not overlap if possible.

Cooking time length

Start cooking with a short time setting, evaluate it after it times out and extend it according to the actual need. Over cooking may result in smoke and burns.

Cooking food evenly

Food such as chicken, hamburger or steak should be turned once during cooking. Depending on the type of food, if applicable, stir it from outside to centre of dish once or twice during cooking

Allow standing time

After cooking time ends, leave the food in the oven for an adequate length of time, this allows it to complete its cooking cycle and cools it down in a gradual manner

Whether the food is done. Colour and hardness of food help to determine if it is done, these include:

- Steam coming out from all parts of food, not just the edge
- Joints of poultry can be moved easily
- Pork or poultry shows no signs of blood
- Fish is opaque and can be sliced easily with a fork



HOW TO USE YOUR MICROWAVE

Browning dish

When using a browning dish or self-heating container, always place a heat-resistant insulator such as a porcelain plate under it to prevent damage to the turntable and rotating ring.

Microwave safe plastic wrap

When cooking food with high fat content, do not allow the plastic wrap come into contact with food as it may melt

Microwave safe plastic cookware

Some microwave safe plastic cookware might not be suitable for cooking foods with high fat and sugar content. Also, the preheating time specified in the dish instruction manual must not be exceeded



SPECIFICATIONS

Output: 700-800 Watts

Input voltage: 220-240V ~ 50Hz

Input power: 1150-1280 Watts

Microwave frequency: 2450MHz



WARNING

HOT SURFACES



CLEANING & MAINTENANCE

The oven should be cleaned regularly and any food deposits removed.

CAUTION

1. It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy
2. Remove the power cord from the wall outlet before cleaning. Don't immerse the appliance in water or other fluids when cleaning.
3. Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation
4. The oven should be cleaned regularly and any food deposits removed
5. Details for cleaning door seals, cavities and adjacent parts.
6. Never use hard detergent, gasoline, abrasive powder or metal brush to clean any part of the appliance
7. Do not remove the waveguide cover
8. When the microwave oven has been used for a long time, there may be some strange odors exist in oven, Following 3 methods can get rid of them: a. Place several lemon slices in a cup, then heat with high power for 2-3 min. b. Place a cup of red tea in oven, then heat with high power. c. Put some orange peel into oven, and then heat them with high power for 1 minute.

Wipe exterior parts with a dampened soft cloth

Wipe clean the interior surfaces with a dampened soft cloth

Wipe clean the waveguide cover to remove any food splashed on it

Turntable / Rotation ring / Rotation axis:

Wash with mild soapy water. Rinse with clean water and allow drying thoroughly. Glass turntable is OK to put in the dishwasher



SERVICING

Please check the following before calling for service:

- Place one cup of water (approx. 150ml) in a glass measure in the oven and close the door securely. Oven lamp should go off if the door is closed properly. Let the oven work for 1 min.
- Does the oven lamp light?
- Does the cooling fan work? (Put your hand over the rear ventilation openings.)
- Does the turntable rotate? (The turntable can rotate Clockwise or counter Clockwise. This is quite normal.)
- Is the water inside the oven hot?

If "NO" is the answer to any of the above questions, please check your wall socket and the fuse in your meter box.

If both the wall socket and the fuse are functioning properly, CONTACT SERVICE using number on front of this manual

WARNING

If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person; It is hazardous for anyone, other than a qualified service technician, to carry out any service for repairing operation which involves removal of any cover which gives protection against exposure to microwave energy.

Liquids or other foods must not be heated in sealed containers since they are liable to explode.

SPARES

The following spares are available for this microwave via our web site at: www.swan-brand.co.uk:

SM22030N001 - glass turntable

SM22030N002 - plastic rotating ring



SERVICING SAFEGUARDS

WARNING

MICROWAVE RADIATION!

It is hazardous for anyone, other than a qualified service technician, to carry out any service for repairing operation which involves removal of any cover which gives protection against exposure to microwave energy. The temperature of accessible surfaces may be high when the appliance is operating

The high voltage capacitor remains charge after disconnection; short the negative terminal of H. V capacitor to the oven chassis (use a screwdriver) to discharge before touching.

During servicing below listed parts are liable to be removed and give access to potentials above 250V to earth.

1. Magnetron
2. High voltage transformer
3. High voltage capacitor
4. High voltage diode
5. High voltage fuse

The following conditions may cause undue microwave exposure during servicing. Improper fitting of magnetron; Improper matching of door interlock, door hinge and door; Improper fitting of switch support; If the door, door seal or enclosure has been damaged.

CAUTION

1. If LED displays ErrO during working, it indicates that sensor has been short circuited and you need replace it at the nearest service centre. Call our help line for details
2. If LED displays Err1 during working, it indicates that sensor is open circuit and you need replace it at the nearest service centre. Call our help line for details.



WEEE Directive



Disposal of Unit

Disposal instructions for Swan items in accordance with the WEEE directive. Appliances bearing the symbol shown here may not be disposed of in domestic rubbish. You are required to dispose of old electrical and electronic appliances like this separately. Please visit www.recyclenow.co.uk, or www.recyclenow.co.uk for access to information about the recycling of electrical items. The WEEE directive, introduced in August 2006, states that all electrical items must be recycled, rather than taken to landfill. Please arrange to take this appliance to your local Civic Amenity site for recycling, once it has reached the end of its life.



Warranty

This product is guaranteed for 2 years from the date of original purchase. If any defect arises due to faulty materials or workmanship the faulty products must be returned to the place of purchase. Refunds or replacement is at the discretion of the store.

The following conditions apply:

The product must be returned to the retailer with proof of purchase. The product must be installed and used in accordance with the instructions contained in this instruction guide. It must be used only for domestic purposes. It does not cover wear and tear, damage, misuse or consumable parts. Swan Products Ltd has limited liability for incidental or consequential loss or damage. This guarantee is valid in the UK and Eire Only.



BS Plug Wiring

The wires in the mains lead are coloured in accordance with the following code:

BLUE	NEUTRAL
BROWN	LIVE
GREEN/YELLOW	EARTH

As the colours of the wire in the mains lead of this appliance may not correspond with the colour markings identifying the terminals on your plug, proceed as follows:

The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N or coloured black. The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L or coloured red. The wire which is coloured GREEN/YELLOW must be connected to the terminal which is marked with the letter E or (earth symbol) and is coloured GREEN or GREEN/YELLOW.

WARNING: THIS APPLIANCE MUST BE EARTHED



NOTES



www.swan-brand.co.uk



Scan this QR code
to hear about
our story



We love
what we do



we're proud
of our quality



Find us on Facebook

Copyright © 2018

Swan Products Ltd. PO Box 3117, Stoke-on-Trent ST4 9GD



Swan
designed for life



Nordic Toaster

Models: ST14610 (2 slice), ST14620 (4 slice)

All colours

Help line

0333 220 6050

v1.0





IMPORTANT INFORMATION - RETAIN FOR FUTURE USE

When using any electrical appliance, basic safety precautions should always be followed including the following:

- Always ensure that the voltage on the rating label corresponds to the mains voltage in your home
- Incorrect operation and improper use can damage the appliance and cause injury to the user.
- The bread may burn, therefore do not use the toaster near or below combustible material, such as curtains;
- Pull the mains plug out of the mains power supply socket and allow the unit to cool down completely before you clean the unit.
- Only use a slightly damp cloth to clean the outside of the unit. Do not use abrasive or aggressive cleaners. Click to pre-open the crumb tray, then pull it out, remove any crumbs of bread and put the tray back in.
- This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years. Check the power cord and plug regularly for any damage. If the cord or the plug is damaged, it must be replaced by the manufacturer or qualified person in order to avoid an electrical hazard.
- Do not use the appliance if it has been dropped or damaged in any way. In case of damage, take the unit in for examination and/or repair by an authorised service agent.
- Never immerse the unit in water or any other liquid for





IMPORTANT INFORMATION - RETAIN FOR FUTURE USE

cleaning purposes.

- Remove the plug from the socket by gripping the plug. Do not pull on the cord to disconnect the appliance from the mains. Always unplug the unit when not in use, before cleaning or when adding or removing parts.
- The use of accessory attachments that are not recommended or supplied by the manufacturer may result in injuries, fire or electric shock.
- Do not let the cord hang over the edge of a table or counter. Ensure that the cord is not in a position where it can be pulled on inadvertently.
- Do not allow the cord to touch hot surfaces and do not place on or near a hot gas or electric burner or in a heated oven.
- Do not use the appliance on a gas or electric cooking top or over or near an open flame.
- Use of an extension cord with this appliance is not recommended. However, if it is necessary to use an extension lead, ensure that the lead is suited to the power consumption of the appliance to avoid overheating of extension cord, appliance or plug point. Do not place the extension cord in a position where it can be pulled on by children or animals or tripped over.
- This appliance is not suitable for outdoor use. Do not use the appliance for anything other than its intended use.
- Do not carry the appliance by the power cord.
- Do not leave the appliance unattended during use. Always unplug the unit when not in use or before cleaning.
- Always operate the appliance on a smooth, even, stable surface. Do not place the unit on a hot surface.
- Ensure that the unit is switched off after use.





IMPORTANT INFORMATION - RETAIN FOR FUTURE USE

- The manufacturer does not accept responsibility for any damage or injury caused by improper or incorrect use, or for repairs carried out by unauthorised personnel.
- In case of technical problems, switch off the product and do not attempt to repair it yourself. Return the appliance to an authorised service facility for examination, adjustment or repair. Always insist on the use of original spare parts. Failure to comply with the above mentions precautions and instructions, could affect the safe operation of this product.
- Your appliance must never be switched on through an external timer or any kind of separate remote control system
- **CLEAN THE TOASTER AFTER EACH USE. NOT DOING SO POSES A FIRE RISK**
- This appliance is intended to be used in household and similar applications such as: staff kitchen areas, in shops, offices and other working environments; farm houses; by clients in hotels, motels and other residential type environments; bed and breakfast type environments.



TECHNICAL DATA

Two Slice Toaster

Model: ST14610 (all colours)

Input Voltage: 220-240V

Frequency: 50Hz

Power consumption: 900 Watts

Four Slice Toaster

Model: ST14620 (all colours)

Input Voltage: 220-240V

Frequency: 50Hz

Power consumption: 1500 Watts



CAUTION: SURFACES BECOME HOT DURING USE

Swan

4





HOW TO USE

Before first use, unpack the toaster and remove all packaging materials etc

- Place the toaster on a suitable, level surface. Set the browning dial to 3 or 4.
- Place one or two slices of bread into the toaster slots
- Connect the product to the mains supply and press down the carriage lever. NOTE: The carriage lever will only stay down if the product is connected to the mains supply. You can press the cancel button at any time to cancel the toasting process. The toast will pop up when it is ready

THINGS TO NOTE:

On first use, you may notice a slight odour. This is caused by the evaporation of light oils used in manufacture. This only occurs on the first use and does not affect the taste of your toast.

OTHER FUNCTIONS:

The **DEFROST bread setting** is perfect for defrosting and toasting frozen bread. To use this function, press the carriage lever down then press the Frozen Bread button.

The **REHEAT setting** is good for reheating toast that may have gone cold. Press the carriage lever down then press the Reheat button

EXTRA LIFT feature assists in removing toast that may be a little shorter than the depth of the carriage. Simply lift the carriage lever upward.

FOUR SLICE MODELS.

Operation is the same as above, except there are two independent carriages, controls and crumb trays

NEVER PUT METAL IMPLEMENTS IN THE TOASTER TO REMOVE STUCK BREAD. DOING SO POSES A SHOCK OR FIRE RISK





CLEANING & MAINTENANCE

- UNPLUG AND ALLOW TO COOL FULLY BEFORE CLEANING
- Empty the crumb tray and ensure the carriage is clear of bread pieces after each use.
- For cleaning external surfaces, a soft cloth moistened with a mild detergent solution is all that is required.
- DO NOT USE ABRASIVE OR STRONG CHEMICAL CLEANERS DO NOT IMMERSE ANY PART OF THE PRODUCT IN WATER



WARRANTY

This product is guaranteed for 2 years from the date of original purchase. If any defect arises due to faulty materials of workmanship the faulty products must be returned to the place of purchase. Refunds or replacement is at the discretion of the store.

The following conditions apply:

- The product must be returned to the retailer with proof of purchase.
- The product must be installed and used in accordance with the instructions contained in this instruction guide.
- It must be used only for domestic purposes.
- It does not cover wear and tear, damage, misuse or consumable parts.
- Swan Products Ltd has limited liability for incidental or consequential loss or damage.
- This guarantee is valid in the UK and Eire Only.



BS PLUG

The wires in the mains lead are coloured in accordance with the following code:

BLUE	NEUTRAL
BROWN	LIVE
GREEN/YELLOW	EARTH

As the colours of the wire in the mains lead of this appliance may not correspond with the colour markings identifying the terminals on your plug, proceed as follows:

The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N or coloured black. The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L or coloured red. The wire which is coloured GREEN/YELLOW must be connected to the terminal which is marked with the letter E or (earth symbol) and is coloured GREEN or GREEN/YELLOW.

WARNING: THIS APPLIANCE MUST BE EARTHED





DISPOSAL OF UNIT



Appliances bearing the symbol shown here may not be disposed of in domestic rubbish. You are required to dispose of old electrical and electronic appliances like this separately. Please visit www.recycle-more.co.uk or www.recyclenow.co.uk for access to information about the recycling of electrical items. Please visit www.weeeireland.ie for access to information about the recycling of electrical items purchased in Ireland. The WEEE directive, introduced in August 2006, states that all electrical items must be recycled, rather than taken to landfill. Please arrange to take this appliance to your local Civic Amenity site for recycling, once it has reached the end of its life.



SWAN BRAND HERITAGE



Did you know...

In 1933 Swan were the first to develop an electric heating element that could be immersed in water. This led to the Swan kettle range that could boil up to six pints of water in just over nine minutes - pretty hot for the time! These days it takes about two minutes for a Swan kettle to boil.





www.swan-brand.co.uk



Scan this QR code
to hear about
our story



We love
what we do



we're proud
of our quality



Find us on Facebook

* on selected products

Copyright © Swan Products Ltd.
PO Box 3117, Stoke-on-Trent ST4 9GD

