



*passion*  
*for coffee*

GB User manual



## WELCOME TO THE NIVONA FAMILY!

We are delighted at the confidence you have shown in us by choosing a quality product from NIVONA.

We would like to express our sincere **THANKS**.

To ensure maximum enjoyment of your NIVONA machine, please read through this document carefully and pay attention to the safety instructions before using the machine for the first time.

Please keep this document in a safe place. Then you can use it as a reference or pass it on to any subsequent owner.

We hope you enjoy your NIVONA product and, with it, a good, flavourful cup of coffee.

Best wishes to you from the NIVONA team!



## SYMBOLS USED

The following symbols are used in these instructions:



### CAUTION

This symbol draws your attention to possible dangers.



### NOTE

This symbol draws your attention to special information.



### TIP

This symbol indicates helpful advice on how to use the machine.

## CONTENTS

|                                                         |           |                                                     |           |
|---------------------------------------------------------|-----------|-----------------------------------------------------|-----------|
| <b>1. SAFETY INSTRUCTIONS.....</b>                      | <b>4</b>  | <b>7. BASIC SETTINGS.....</b>                       | <b>15</b> |
| 1.1. Correct use.....                                   | 4         | 7.1. General settings.....                          | 15        |
| 1.2. General instructions for the user.....             | 4         | 7.2. Set grind fineness.....                        | 16        |
| 1.3. Limits to the range of users.....                  | 5         | 7.3. Aroma Balance System.....                      | 16        |
| <b>2. CONTROL ELEMENTS.....</b>                         | <b>6</b>  | 7.4. NIVONA App.....                                | 17        |
| <b>3. OPERATION OF THE MACHINE.....</b>                 | <b>7</b>  | <b>8. CLEANING &amp; MAINTENANCE.....</b>           | <b>17</b> |
| 3.1. Function switches.....                             | 7         | 8.1. Rinse frother.....                             | 18        |
| 3.2. Operation with the rotary dial.....                | 7         | 8.2. Clean frother.....                             | 19        |
| 3.3. Symbol functions.....                              | 8         | 8.3. Rinse system.....                              | 19        |
| <b>4. INITIAL STARTUP.....</b>                          | <b>8</b>  | 8.4. Clean system.....                              | 20        |
| 4.1. Preparation.....                                   | 8         | 8.5. Descale system.....                            | 21        |
| 4.2. Initial Start menu.....                            | 9         | 8.6. Remove & clean brewing unit.....               | 22        |
| <b>5. MENU NAVIGATION.....</b>                          | <b>11</b> | 8.7. Clean regularly by hand.....                   | 22        |
| <b>6. PREPARE SPECIALITY COFFEES.....</b>               | <b>11</b> | 8.8. Disassemble and clean frother.....             | 23        |
| 6.1. Draw speciality coffee.....                        | 11        | 8.9. Change filter.....                             | 24        |
| 6.2. Recipe menu.....                                   | 12        | 8.10. Status of maintenance.....                    | 24        |
| 6.3. 2-cup function.....                                | 13        | <b>9. SOLVING PROBLEMS YOURSELF.....</b>            | <b>25</b> |
| 6.4. Cappuccino-Connaisseur.....                        | 13        | <b>10. ACCESSORIES &amp; COFFEE ASSORTMENT.....</b> | <b>28</b> |
| 6.5. Flavour profiles.....                              | 13        | <b>11. CUSTOMER SERVICE &amp; WARRANTY.....</b>     | <b>28</b> |
| 6.6. MY COFFEE (for individual speciality coffees)..... | 13        | <b>12. PACKAGING &amp; DISPOSAL.....</b>            | <b>28</b> |
| 6.7. Prepare ground coffee.....                         | 14        | <b>13. TECHNICAL DATA.....</b>                      | <b>29</b> |

## 1. SAFETY INSTRUCTIONS

### CAUTION

Repairs to electrical appliances must be carried out only by specialised technicians! Improper repairs can expose the user to considerable dangers! If the machine is used other than for its intended purpose or is operated or maintained improperly, we cannot accept liability for any resulting damage!

### CAUTION

Actuating the on/off switch during the brewing process can damage the machine! Switch the machine off only when it is idle!

### CAUTION

Danger of burns! Hot water might spray out of the outlet at first when steam or hot water is drawn. Touch the outlet only when cold.

### 1.1. Correct use

- The machine may only be used for its designated purpose (use only in private households) and is not intended for commercial use, which would void the warranty (see accompanying warranty terms).

### 1.2. General instructions for the user

- Set the machine on a dry, level and stable surface, and use it only indoors. Never place this machine on a hot surface, near other appliances which become very hot when in use (e.g. stove, deep fryer), or near open flames.
- The machine must not be used in cupboards or other closed pieces of furniture.
- The mains supply voltage must always match the working voltage of the machine. Please refer to the type plate on the machine.
- The machine must not be used at altitudes over 2000 m above sea level.
- Do not operate the machine if the mains supply cable or the casing is damaged. Never let the mains supply cable touch hot parts.
- If the mains supply cable of the machine is damaged, it must be replaced by the manufacturer, its customer service representative, or a similarly qualified technician to avoid hazards.
- Never immerse the machine in water.
- Always keep the mains supply plug dry and keep it away from moisture.
- Do not pull on the mains supply cable to disconnect the plug from the mains socket.

- If a fault occurs, disconnect the mains plug immediately (never by pulling on the mains supply cable or the machine itself).
- Before carrying out maintenance or cleaning, check that the machine is switched off and that the mains plug is disconnected.
- No liability for damage is accepted in case of incorrect operation, improper use, or incorrect repairs. The warranty is void in these cases.
- Always follow the instructions for cleaning and descaling! Failure to comply voids the warranty.
- Never clean the machine or individual parts in the dishwasher. Failure to comply voids the warranty.
- Do not leave the machine switched on unnecessarily.
- If you will be away for several days, always unplug the mains cable.
- Please use the integrated coffee grinder only to grind roasted and untreated coffee beans, not for other food items! Always make sure that there are no foreign objects mixed in with the coffee beans, which voids the warranty.

- If repair of the machine is required (including replacement of the mains cable!), please first contact the NIVONA service telephone or the dealer from which the machine was purchased, and, after consultation with us and observing the section “How to make your machine ready for shipment” in Chapter 11 of this document, send it to **NIVONA Central Customer Service, Südwestpark 49, D-90449 Nuremberg, Germany.**

### 1.3. Limits to the range of users

- This machine can be used by children 8 and older and by persons with physical, sensory, or mental impairments or who are lacking in experience and knowledge, provided they are acting under supervision or have been instructed on how to use the machine safely and are aware of the possible dangers. Children must not play with the machine. Cleaning and maintenance of this machine must not be carried out by children unless they are age 8 or over and are acting under supervision. The machine and its connection line must be kept away from children younger than 8.

DE

GB


FR

NL

PL


RU

## 2. CONTROL ELEMENTS

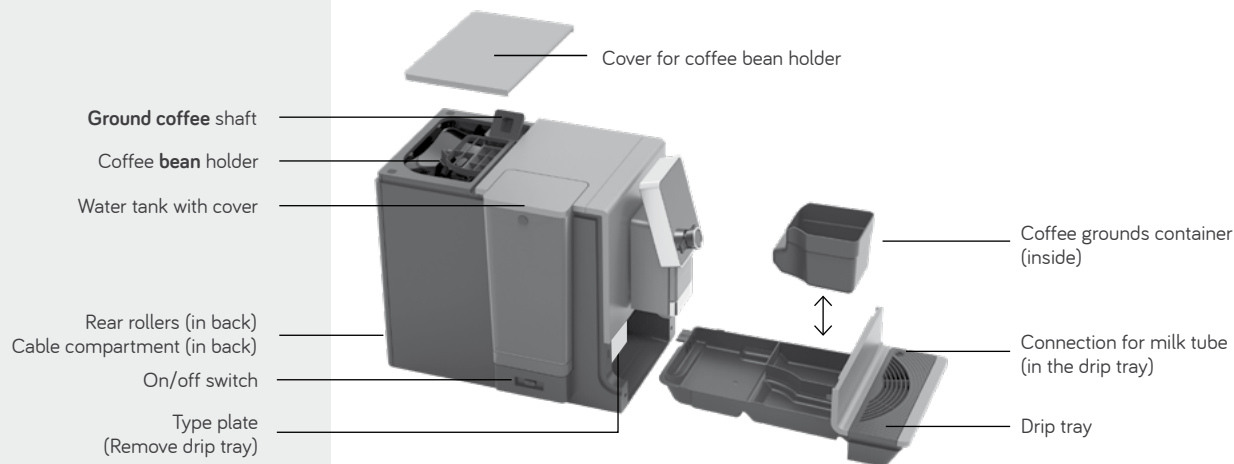

### WELCOME PACK (included with machine)

- CLARIS fresh water filter
- User manual
- Warranty terms
- Measuring spoon
- 2 Cleaning tablets
- Test strips  
(for measuring water hardness)
- Connection tube for milk

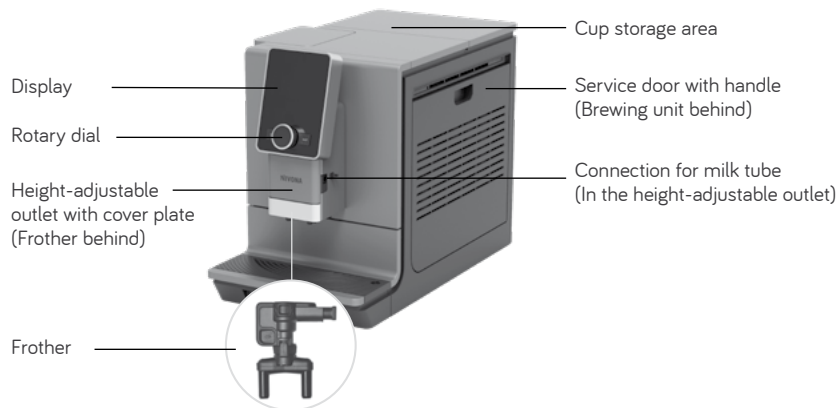

### 3. OPERATION OF THE MACHINE

#### 3.1. Function switches

The NIVONA machine can be operated with the following switches:



>

Switch between the main menus



**Rotary dial**

navigate / select / change / confirm by turning and pressing



**exit**

back / cancel / leave menu

#### 3.2. Operation with the rotary dial

##### Turning

To select / navigate within the main menus **Speciality Coffees**, **Settings** and **Maintenance**, and to change the setting options in the submenus and recipe menu.

##### Short press

To start / confirm the currently marked function.

In the Recipe menu, the first press selects the setting parameters and the next press confirms the change.

A short press when the beverage is drawn cancels the procedure.

##### Long press

In the **Speciality Coffees** menu, a long press switches to the Recipe menu to change the settings there.



Turning



Pressing

### 3.3. Symbol functions

|                                                                                   |                                                                                                       |                                                                                     |                                                                                                                                  |
|-----------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------|
|  | Currently marked symbol within the menu is underlined. Symbol description is displayed below the menu |  | <b>Cancellation</b> of a beverage draw or <b>deletion</b> of a stored MY COFFEE speciality in the menu <b>Speciality Coffees</b> |
|  | Flashing <i>rotary dial</i> symbol requires confirmation                                              |  | <b>Start</b> of a beverage draw in the menu <b>Speciality Coffees</b>                                                            |
|  | Process progress in the menu <b>Maintenance</b>                                                       |  | <b>Store</b> changes                                                                                                             |

Even **during** a coffee draw that has already started, various parameters can be changed by turning the *dial* **as long as they are optically marked**.

A beverage draw can be cancelled either with **exit** or with . If the draw is cancelled while the parameters are still flashing, the symbol  must be pressed 2x.

## 4.

### 4. INITIAL STARTUP

#### 4.1. Preparation

-  Remove the machine and other supplied parts from the packaging
-  Place the machine on a level, dry surface  
(Ventilation slots must not be covered)
-  Connect the mains supply cable to a power socket which has been correctly installed  
(Any unnecessary length of cable remains inside the cable compartment)



- Connect milk tube to the height-adjustable outlet and drip tray
- Switch on machine

If the machine is switched on **after the initial startup**, it first heats up. If the automatic switch-on rinse is activated, the display shows **System rinsing** and the rinse procedure starts automatically. If the automatic switch-on rinse is deactivated, the display shows **Please rinse system**, and the rinse procedure must be started by pressing the *rotary dial*.

## 4.2. Initial Start menu

The instructions on the display lead you through the Initial Start menu conveniently and step-by-step.

### Set language

- Select the language with the *rotary dial* and confirm

### Set filter

- Select filter setting with the *rotary dial*

#### Operation with filter

- Set the menu to **Yes**
- Using the mounting aid at the end of the measuring spoon, screw the filter into the water tank and confirm using the *rotary dial*.

#### Operation without filter (factory setting)

- Set the menu to **No** and confirm with the *rotary dial*

When using the machine without a filter, the water hardness must be entered in the next step.



Milk tube – connected to drip tray

#### **i** NOTE

Details on **Operation of the Machine** are contained in Chapter 3, starting at page 7.



SCAN ME!



#### CAUTION

Insert filter **straight** and do not overturn!

#### **i** NOTE

If used with a filter, the machine does not need to be descaled as often.



**Screw** filter into water tank

| Test strips    | Degree of hardness | Water hardness display        |
|----------------|--------------------|-------------------------------|
| ≤ 1 red point  | 0 - 9°             | DEGREE 1                      |
| 2 red points   | 10 - 14°           | DEGREE 2                      |
| 3 red points   | 15 - 19°           | DEGREE 3<br>(Factory setting) |
| ≥ 4 red points | ≥ 20°              | DEGREE 4                      |



Fill water tank



Fill coffee beans

### **i** NOTE

At initial startup, the grind chamber is still empty. After the first grinding, it is possible that **Please fill coffee beans** is displayed and the machine does not make coffee.

➤ Press the *rotary dial* again for an additional draw; the process is then repeated



Fill/rinse system

## Set water hardness\*

- Immerse supplied test strip briefly in water, shake it off and read the test result after about 1 minute
- In the menu, use the *rotary dial* to select the water hardness read from the test strip and confirm

## Fill water tank (> 0.5l)

- **Remove** the water tank and fill it with fresh, cold water without carbonation (no mineral water), reinsert the tank, and confirm using the *rotary dial*

Do not fill any carbonated liquids or any other liquids, or the warranty is void!

## Fill coffee bean holder

- Fill the coffee bean holder with untreated, roasted coffee beans without foreign objects or dirt and without sugar, then close the flavour protection cover well and confirm using the *rotary dial*

## Fill / rinse system, rinse filter

- Place a large container (> 0.5 l) under the outlet and confirm using the *rotary dial*
- For operation **with** filter, a second confirmation with the *rotary dial* is necessary to fill the system and rinse the filter
- Wait until no more water comes out of the outlet, then empty the container

\* For operation without filter

## Operation tutorial

At the end of initial startup, a short tutorial on the machine's operation appears. All operating functions that should be performed when they appear are shown on the display one after another. As soon as an operating function has been performed, the next one appears. The tutorial is ended with **exit**.

All settings that were determined during initial startup can be changed at any time in the **Settings** menu.

## 5. MENU NAVIGATION

In the NIVONA machine, you can select the main menus **Settings**, **Speciality Coffees**, and **Maintenance**. All available functions of the machine can be carried out within these main menus.

Detailed information on navigation within and between the main menus is found in Chapter 3 starting at page 7.

## 6. PREPARE SPECIALITY COFFEES

### 6.1. Draw speciality coffee

- Select the desired speciality coffee in the **Speciality Coffees** menu
- For speciality coffees with milk, connect the milk-filled container (milk container, milk refrigerator, Tetra Pack, or similar) to the lower end of the milk tube. The upper end remains in the outlet
- A short press on the desired speciality coffee begins the beverage draw




Settings

Speciality  
Coffees

Maintenance

Switch  
between the  
main menusBack / cancel /  
leave menuSpeciality  
Coffees


Connect milk source



Connect tube



Frother rinsing

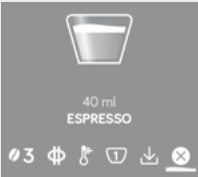

Recipe menu



Save



Start beverage draw  
in the Recipe menu

- After completion of the draw of a speciality coffee with milk, the display shows the message / instruction to rinse the frother. The frother should then be rinsed as soon as possible, but at the latest before switching off the machine. To do this, reconnect the tube to the drip tray, and select and confirm the message / instruction on the display using the *rotary dial*. Follow the instructions in the display up to the end of the program and confirm each time with the *rotary dial*.

## 6.2. Recipe menu

The Recipe menu is a submenu in the individual speciality coffees. Here, the factory recipe settings can be changed individually and stored permanently.

- A long press of the *rotary dial* on the symbol of a speciality coffee leads to the **Recipe menu** of the beverage

Adjustable parameters in the Recipe menu:

|  |                 |  |                                                      |                                   |                                                                                           |
|--|-----------------|--|------------------------------------------------------|-----------------------------------|-------------------------------------------------------------------------------------------|
|  | Coffee strength |  | 1- or 2-cup function                                 | 80 ml<br>—<br>80 ml<br>—<br>40 ml | Quantity<br>(Coffee / milk foam /<br>water / milk, depending<br>on the speciality coffee) |
|  | Temperature     |  | Flavour profile<br>(DYNAMIC, CON-<br>STANT, INTENSE) |                                   |                                                                                           |

- A short press on the activated **Save** symbol saves the beverage recipe with the changed parameters
- A short press on the activated **Start** symbol begins the beverage draw with the changed parameters

### 6.3. 2-cup function\*

To fill two cups directly next to each other from the same beverage draw, a second cup must be placed under the outlet and then either

- Press the rotary dial briefly twice in succession to start beverage preparation (for the current draw) or
- Change the cup symbol in the Recipe menu of the speciality coffee (as permanent recipe setting)

### 6.4. Cappuccino-Connaisseur

By changing the sequence in the sequence symbol, cappuccino / caffè latte enthusiasts can set **in the Recipe menu** whether the milk or the coffee goes into the cup first.

### 6.5. Flavour profiles

Changing the flavour profile (DYNAMIC | CONSTANT | INTENSE) **in the Recipe menu** changes the brewing process and extraction from the beans and thus the taste of the coffee (see also Chapter 7.3. Aroma Balance System on page 16).

### 6.6. MY COFFEE (for individual speciality coffees)

Up to 9 different beverages can be individually set, named, and stored with the NIVONA machine.

- To do this, in the **Speciality Coffees** menu select the menu option **MY COFFEE**
- Select an existing beverage with a long press or add a new one with +

\* Not for CAFFÈ AMERICANO, HOT WATER, MY COFFEE, ground coffee



1 cup



2 cups



First milk



First coffee



DYNAMIC



CONSTANT



INTENSE



MY COFFEE



Save

Confirm  
deletion

Fill ground coffee

**CAUTION**

The ground coffee shaft is not a storage container. Therefore, never add more than one portion to the shaft and use only fresh or vacuum-packed ground coffee from coffee beans.

**Water-soluble instant coffee must not be used!**

**NOTE**

If you accidentally open the ground coffee shaft – or have not started a beverage draw after adding ground coffee – the machine is automatically rinsed about one minute after the cover is closed again and is then ready for use again.

- Select a base recipe (speciality coffee), assign a name (if necessary, delete the MY COFFEE presetting and save the name with **OK**), set the recipe individually and save it
- A stored **MY COFFEE recipe** can be changed or edited with a long press of the *rotary dial* on the corresponding symbol and also removed through confirmation of deletion

### 6.7. Prepare ground coffee

- Open the cover of the ground coffee shaft (underneath the cover on the upper right of the machine)
- The display shows **Fill ground coffee and close shaft lid**
- Add a level measuring spoon of ground coffee
- Close cover and flap
- The display shows when the ground coffee is ready
- Place a cup in the middle below the coffee outlet
- Select the beverage in the **Speciality Coffees** menu
- Start preparation

## 7. BASIC SETTINGS

### 7.1. General settings

All of the following parameters can be changed, edited, or checked in the **Settings** menu using the *rotary dial*.



Settings


|                                                                                                                                                                                                                                                                                                              |                                                                                                                                                                                                                                                                                                                                                                                                       |                                                                                                                                                                                                                                                                                                                |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  <b>LIVE PROGRAMMING</b> <ul style="list-style-type: none"> <li>– Change and save the recipe setting while a beverage is being drawn<br/>(Choose a speciality coffee and follow the instructions on the display)</li> </ul> |  <b>TIMES</b> <ul style="list-style-type: none"> <li>– Activate / deactivate automatic switch-on time<br/>(Setting of the current time and the switch-on time)</li> <li>– Activate / deactivate automatic switch-off time*</li> <li>– Set time of day**<br/>(Only appears if switch-on time is activated)</li> </ul> |  <b>COMFORT SETTINGS</b> <ul style="list-style-type: none"> <li>– Activate / deactivate energy saving (ECO) mode***</li> <li>– Set display brightness</li> <li>– Activate / deactivate automatic switch-on rinse</li> </ul> |
|  <b>FILTER</b> <ul style="list-style-type: none"> <li>– Set operation with / without filter</li> </ul>                                                                                                                      |  <b>WATER HARDNESS</b> <ul style="list-style-type: none"> <li>– Set the water hardness<br/>(Only displayed during operation without filter)</li> </ul>                                                                                                                                                               |  <b>LANGUAGE</b> <ul style="list-style-type: none"> <li>– Set the language</li> </ul>                                                                                                                                       |
|  <b>STATISTICS</b> <ul style="list-style-type: none"> <li>– Displays the draws per special-ist coffee and the performed maintenance functions since initial startup</li> </ul>                                              |  <b>FACTORY SETTINGS</b> <ul style="list-style-type: none"> <li>– Recipes, settings and Bluetooth can be reset to the factory setting here</li> </ul>                                                                                                                                                                |  <b>BLUETOOTH</b> <ul style="list-style-type: none"> <li>– Connection to smartphone / tablet and control of the machine with the NIVONA App</li> </ul>                                                                      |

#### \* CAUTION


Extending the time before switch-off increases energy consumption. Detailed information on energy consumption can be found via the QR code in chapter 13 on p. 29.

\*\* After disconnection from the power network, the time of day must be reset

\*\*\* If the *rotary dial* has not been actuated for a longer period of time, the machine switches automatically into the **ECO mode**. A screen saver appears on the display. Actuate the *rotary dial* to leave the **ECO mode**.

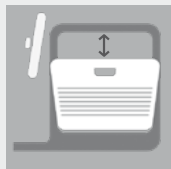

Open / close  
service door

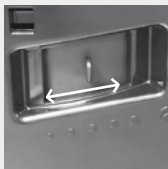

Grind fineness  
setting

### CAUTION

The grind fineness may only be set when the grinder is running!

The grinder can be adjusted to adapt to the roast of the coffee beans. We recommend always leaving the grinder at a medium setting.

### NOTE

When changing the grind fineness, we recommend:

- a finer setting for light roasts (regulator further to the left),
- a coarser setting for dark roasts (regulator further to the right).

## 7.2. Set grind fineness

To change the grind fineness, please:

- Open the service door on the right side of the housing (gently pull the unlocking device inside the handle upward, then carefully remove the service door from the housing)
- Place cup under the height-adjustable outlet
- Set *rotary dial* in the **Speciality Coffees** menu to **ESPRESSO**, then press the *rotary dial*
- While the grinder grinds, change the grind fineness by moving the regulator (above right) (left = finer, right = coarser)
- Close service door again (guide pins on the bottom of the service door into the recesses, then press the service door until it locks in place)

## 7.3. Aroma Balance System

The NIVONA machine is equipped with the **Aroma Balance System**, which brings out the best of the bean for every taste. The three flavour profiles DYNAMIC, CONSTANT and INTENSE create a different taste with the same bean, same coffee strength, and same water amount.



DYNAMIC



CONSTANT



INTENSE



## 7.4. NIVONA App

The NIVONA machine can be controlled and operated through the NIVONA App, as it is equipped with a Bluetooth interface.

- Download the NIVONA App from the Google Play Store (Android) or from the Apple App Store (iOS) onto your mobile device
- In the **Settings** menu, select the **BLUETOOTH** menu option and activate Bluetooth with **Connect** on the NIVONA machine
- Activate Bluetooth on your mobile device and from there connect to the NIVONA machine through the NIVONA App

Now the NIVONA machine can be operated / controlled through the app.



BLUETOOTH

## 8. CLEANING & MAINTENANCE

All cleaning and maintenance programs can generally be selected and started in the **Maintenance** menu. If a message / instruction for a cleaning / maintenance activity appears on the display, this program can also be started directly through the message / instruction.

- Select and confirm the instruction with the *rotary dial* or
- Select **Maintenance** menu
- Select the cleaning or maintenance program and start it with the *rotary dial*

The machine starts the corresponding cleaning or maintenance process and displays instructions for additional actions.

- Follow the instructions in the display up to the end of the program and confirm each time with the *rotary dial*




Maintenance

**CAUTION**

The running program must not be interrupted!



RINSE  
FROTHER



Connect tube

## 8.1. Rinse frother

After you make speciality coffees with milk, the display instructs you to rinse the frother. This should be done as soon as possible, but at the latest before switching off the machine. Proceed as follows:

- Select and confirm the instruction with the *rotary dial* or
- In the **Maintenance** menu, select the menu option **RINSE FROTHER**
- Connect the supplied tube with one end to the height-adjustable outlet and put the other end in the drip tray, and confirm with the *rotary dial*
- Put a sufficiently large container ( $\geq 0.5$  l) under the height-adjustable outlet and confirm with the *rotary dial*

The machine starts the rinse process. As soon as the rinse cycle is ended, the machine heats up and is then ready for operation again.

## 8.2. Clean frother

- Select and confirm the message / instruction with the *rotary dial* or
- In the **Maintenance** menu, select the menu option **Clean FROTHER**
- Put some detergent (recommendation: NIVONA CreamClean milk system cleaner) and water in a container (at least 0.3 l)
- Please observe the instructions of the detergent manufacturer for the mix ratio
- Follow the instructions in the display up to the end of the program and confirm each time with the *rotary dial*

The machine then heats up and is ready for operation again.

## 8.3. Rinse system

The system should be rinsed from time to time.

- In the **Maintenance** menu, select the menu option **RINSE SYSTEM**. The display shows **System rinsing**

As soon as the rinse cycle is ended, the machine heats up and is then ready for operation again.



### CAUTION

The running program must not be interrupted!



### NOTE

A message / instruction is shown on the display when the frother has to be cleaned.



CLEAN  
FROTHER



SCAN ME!



### CAUTION

The running program must not be interrupted!



RINSE SYSTEM

**CAUTION**

The running program must not be interrupted!

Please do not insert a cleaning tablet into the round opening of the brewing unit until the machine instructs you to do this.



CLEAN  
SYSTEM



SCAN ME!

**NOTE**

A message / instruction is shown on the display when the machine has to be cleaned. Beverages can still be drawn. But we recommend carrying out the cleaning program as soon as possible to avoid endangering the warranty.

## 8.4. Clean system

- Put a sufficiently large container ( $\geq 0.5$  l) under the height-adjustable outlet
- Select and confirm the instruction with the *rotary dial* or
- In the **Maintenance** menu, select the menu option **RINSE SYSTEM**
- Follow the instructions in the display up to the end of the program and confirm each time with the *rotary dial*

The machine then heats up and is ready for operation again.

## 8.5. Descale system

### CAUTION

**The running descaling program must not be interrupted!**

Never use vinegar or vinegar-based material for descaling, but always use **liquid products** recommended for fully automatic coffee machines (recommendation: NIVONA PREMIUM liquid descaler).

The filter (if present) must be removed from the water tank prior to the start of the descaling program.

**During descaling, please follow exactly the sequence of the displays!**

First pour in the the corresponding amount of **water** up to the 0.5 l mark and **then** add the **descaler**. **Never in reverse order!** Observe the instructions of the descaler manufacturer.

- Select and confirm the instruction with the *rotary dial* or
- In the **Maintenance** menu, select the menu option **DESCALE SYSTEM**
- Put a sufficiently large container ( $\geq 0.5$  l) under the height-adjustable outlet
- Follow the instructions in the display up to the end of the program and confirm each time with the *rotary dial*

The machine then heats up and is ready for operation again.

### CAUTION

Please always remove residual descaling fluid on the housing with a moist cloth afterwards!



DESCALE  
SYSTEM




SCAN ME!

### NOTE

A message / instruction is shown on the display when the machine has to be descaled. (The descaling program can also be started manually at any time). Beverages can still be drawn. But we recommend carrying out the descaling program as soon as possible to avoid endangering the warranty.

**CAUTION**

Clean the brewing unit at least once a month. Otherwise, warranty claims may be excluded.

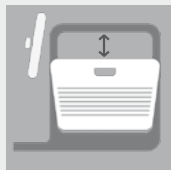

Open / close  
service door



Unlock brewing unit

**CAUTION**

Never immerse the machine in water!  
Do not use scouring agents for cleaning.  
Dried milk residue is hard to remove. Therefore, always clean immediately after the machine cools down! Always follow the message / instructions in the display on rinsing and cleaning the frother.

**8.6. Remove & clean brewing unit**

The brewing unit should be removed and cleaned under running water as needed. Please never use detergent for this, only pure, **cold** water!

- Open the service door on the right side of the housing (gently pull the unlocking device inside the handle upward, then carefully remove the service door from the housing)
- Unlock brewing unit (press red switch upward and turn the handle to the left up to the stop and to lock)
- Carefully remove the brewing unit with the handle
- Clean brewing unit under cold, running water and **then let it dry**
- Carefully insert brewing unit again and lock it (hold down red switch and turn the handle to the right up to the stop and to lock it)
- Close service door again (guide pins on the bottom of the service door into the recesses, then press the service door until it locks in place)

**8.7. Clean regularly by hand****NOTE**

Please follow these cleaning instructions. Maximum cleanliness is required, especially when handling food and beverages.

When cleaning the drip tray, make sure that the two metal contacts and the space between them at the rear of the drip tray are always clean and dry. Occasionally use some soapy water to clean the drip tray.

The machine is equipped with rear rollers. These permit movement on a flat work surface. This allows cleaning under the machine.

- Empty the drip tray and coffee grounds container not later than when shown in the display (only with the machine switched on, as only then can it tell that the containers have been emptied)
- After the drip tray and grounds container have been removed, clean the housing inside with a soft, moist cloth without detergent
- The water tank should be rinsed with clean water daily and refilled with fresh, cool water
- Clean the frother, tube, and outlet regularly

### 8.8. Disassemble and clean frother

- Remove the cover plate at the height-adjustable outlet, gently pull the frother down and then out to the front and take it apart
- Thoroughly clean the parts and put the frother back together
- Insert the assembled frother back in the height-adjustable outlet
- Reattach the cover plate to the height-adjustable outlet

#### NOTE

From time to time (ideally before every longer break in coffee making, but always on a regular basis!), the frother must be disassembled completely and then cleaned under clean water.



Covering plate  
on the height-  
adjustable outlet



Assembled frother



Individual parts  
of the frother

**NOTE**

You can continue to draw beverages. But we recommend changing the filter immediately.

**CAUTION**

Insert filter **straight** and do not overturn



FILTER



Unscrew /  
screw in filter  
(in the water  
tank)

**CAUTION**

In case of low water consumption, you must replace the filter not later than after two months. No message appears in the display. You can set the replacement date with the dial on the head of the filter (month indicator).

STATUS OF  
MAINTENANCE

## 8.9. Change filter

The filter's effectiveness is used up after about 50 l of water has flowed through it. A message / instruction to replace the filter appears in the display.

- In the **Settings** menu, select the **FILTER** menu option
- Select **Yes** so that the machine detects that a filter is currently inserted
- Select **Change filter**
- Empty the water tank; carefully unscrew the old filter from its holder using the mounting aid at the end of the measuring spoon, and throw the filter away
- Carefully screw the new filter into its intended holder in the water tank using the mounting aid at the end of the measuring spoon
- Follow the instructions in the display up to the end of the program and confirm each time with the *rotary dial*
- Wait for some time until no more water comes out of the outlet

The machine then heats up and is ready for operation again.

## 8.10. Status of maintenance

The machine shows through a progress bar whether cleaning or descaling will be required soon. The further to the right the progress bar is, the sooner the cleaning / descaling will be needed

- In the **Maintenance** menu, select the **STATUS OF MAINTENANCE** menu option



## 9. SOLVING PROBLEMS YOURSELF

The following table shows some causes and options for solving the problem if the machine does not work properly.

If the system detects a fault, an error message appears in the display:

- **Note error message**  
(According to the table on page 26 / 27, error 8 can sometimes resolve itself)
- **Switch off machine**
- **Pull out mains plug**




### CAUTION

If a fault occurs, or you cannot fix a problem yourself, please contact your selling dealer or visit the service area at [www.nivona.com](http://www.nivona.com).

The following information is important for fast, competent processing of the matter

- **Model** of the NIVONA product
- **Serial number**
- If available:  
**Error number / error message**

### Type plate (example)

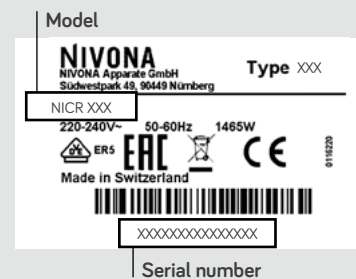

**i NOTE**

To avoid problems, the following should be observed:

- Always remove the water tank from the machine to fill it
- Do not store coffee beans in the refrigerator
- Always empty containers with the machine switched on
- Use fresh and cooled milk

| Problem                                               | Cause                                   | Remedy                                                                                                           |
|-------------------------------------------------------|-----------------------------------------|------------------------------------------------------------------------------------------------------------------|
| No hot water or drawing of milk foam / steam possible | System might need descaling             | Perform high-dosage descaling (Chapter 8.5.)                                                                     |
|                                                       | Frother is plugged                      | Disassemble frother completely and clean it thoroughly                                                           |
| Too little milk foam or liquid foam                   | Frother is plugged                      | Disassemble frother completely and clean it thoroughly                                                           |
|                                                       | Unsuitable milk                         | Use cold milk                                                                                                    |
|                                                       | System might need descaling             | Perform high-dosage descaling (Chapter 8.5.)                                                                     |
| Coffee comes out only dropwise                        | System might need descaling             | Perform high-dosage descaling (Chapter 8.5.)                                                                     |
|                                                       | Grind fineness is too fine / too coarse | Set grind fineness coarser / finer (Chapter 7.2.)                                                                |
|                                                       | Ground coffee is too fine               | Use coarser ground coffee                                                                                        |
|                                                       | Too much ground coffee added            | Add less ground coffee                                                                                           |
|                                                       | Brewing unit is plugged                 | Remove and clean brewing unit (Chapter 8.6).<br>Reinsert brewing unit and perform system cleaning (Chapter 8.4.) |
|                                                       | Coffee outlets are plugged              | Perform system cleaning (Chapter 8.4.)                                                                           |

| Problem                                                                            | Cause                                                          | Remedy                                                                                                                                                                    |
|------------------------------------------------------------------------------------|----------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Coffee does not have “foam”                                                        | Brewing unit is plugged                                        | Remove and clean brewing unit (Chapter 8.6.). Reinsert brewing unit and perform a system cleaning (Chapter 8.4.).                                                         |
|                                                                                    | Unsuitable coffee type                                         | Change coffee type                                                                                                                                                        |
|                                                                                    | Beans are no longer roast-fresh                                | Use fresh beans                                                                                                                                                           |
| Loud noise in the grinder                                                          | Grind fineness not adapted to coffee beans                     | Optimise grind fineness (Chapter 7.2.)                                                                                                                                    |
|                                                                                    | Foreign matter in the grinder, e.g. small stones               | Call NIVONA service telephone; ground coffee can still be used                                                                                                            |
| The display shows <b>Error 8 Service Tel</b>                                       | The drive cannot properly position the brewing unit            | Switch off machine and pull the plug. Plug it back in and switch on the machine. If the machine is ready for operation, remove and clean the brewing unit (Chapter 8.6.). |
| Despite emptied and inserted containers, the display shows <b>EMPTY CONTAINERS</b> | Gap between the contacts at the rear of the drip tray is dirty | Clean gap between the contacts with water and some detergent as well as a brush, then dry                                                                                 |

DE

GB

FR

NL

PL

RU



EVAPORATING



SCAN ME!



#### CAUTION

The running program must not be interrupted!



#### WARRANTY & CUSTOMER SERVICE CONDITIONS

Please see the accompanying information sheet for detailed warranty and customer service conditions.

10.

## 10. ACCESSORIES & COFFEE ASSORTMENT

Our current assortment of accessories and coffee can be found at [www.nivona.com](http://www.nivona.com).

11.

## 11. CUSTOMER SERVICE & WARRANTY

If you have to send in the machine due to a defect, first evaporate it out so that no water remains in the system.

### How to make your machine ready for shipment | Evaporate machine

- In the **Maintenance** menu, select the **EVAPORATE** menu option
- Follow the instructions in the display up to the end of the program and confirm each time with the *rotary dial*
- Empty drip tray, grinds container, water tank and the coffee bean holder as well as possible
- Reinsert all parts
- Pack the machine, ideally in the original packaging (no liability can be accepted for transportation damage)

12.

## 12. PACKAGING & DISPOSAL

The machine's complete original packaging should be kept to protect it during shipping in case customer service is needed.

Electrical and electronic appliances contain many materials which are still valuable or are harmful to the environment, and these should not be treated in the same way as normal household waste. If treated as household waste or handled incorrectly, they may

cause harm to human health or the environment. Therefore, never throw a defective machine away with household waste, but bring it to the community collection point for return and recycling of old electrical and electronic devices.

You can obtain more information from your local town hall, waste disposal service provider, or the retailer from whom the machine was purchased.

Filter cartridges are disposed of as household waste.

### 13. TECHNICAL DATA

|                                   |                                                                             |
|-----------------------------------|-----------------------------------------------------------------------------|
| Voltage                           | 220–240 V AC, 50-60 Hz                                                      |
| Power output                      | 1465 W                                                                      |
| Conformity mark                   | CE                                                                          |
| Static pump pressure max.         | 15 bar                                                                      |
| Water tank capacity               | approx. 2.2 litres                                                          |
| Coffee bean holder capacity       | approx. 270 g                                                               |
| Coffee grounds container capacity | approx. 10 - 15 portions*                                                   |
| Cable length                      | approx. 1.1 m                                                               |
| Weight                            | approx. 11.4 kg                                                             |
| Dimensions (W x H x D)            | approx. 28 x 36 x 50 cm                                                     |
| Bluetooth**                       | Frequency range: 2,400 MHz - 2,483.5 MHz<br>Max. transmission output: 10 mW |

Detailed information on energy consumption can be found via the following QR code:



\* Depending on the coffee strength used

\*\* NIVONA Apparate GmbH hereby declares that the radio system complies with the Directive 2014/53/ EU.

The complete text of the EU conformity declaration is available at the internet address [www.nivona.com](http://www.nivona.com) in the SERVICE download area.



**NIVONA**

*passion  
for coffee*



**NIVONA** Apparate GmbH

Südwestpark 49  
D-90449 Nuremberg  
[www.nivona.com](http://www.nivona.com)

2025 © Copyright NIVONA Apparate GmbH, Germany  
All rights reserved

ANR 000129958  
BDA NICR 930 GB Rev.02 26.04.2025