

### Know Your Air Fryer



Basket (x2)



Control Panel / Displays

Crisper Tray (x2)

The *crisper trays* can be used in the middle of the *basket*. When cooking on 2 layers, the *crisper tray* should be placed at the bottom of the *basket*.

The silicone bumpers on the *crisper tray* must be left on during use. They are food grade and BPA-free. The bumpers can be removed for cleaning.



Racks (x2)

The *racks* can be used in the middle of the *baskets* to add a second layer to each *basket*. Do not use the *rack* at the bottom of the *basket*.




To place the *crisper tray* in the middle of the *basket*:



Front of Basket

The *indents* should face the front of the *basket*.

To place the *crisper tray* at the bottom of the *basket*:

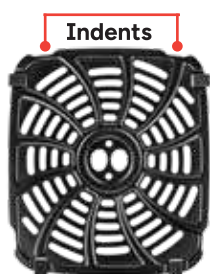

Indents


Back of Basket

The *indents* should face the back of the *basket*.

### Placing the Crisper Tray and Rack into the Basket

#### For 1-Layer Cooking:

It is recommended to place either the *crisper tray* or the *rack* on the tabs in the middle of the *basket*.

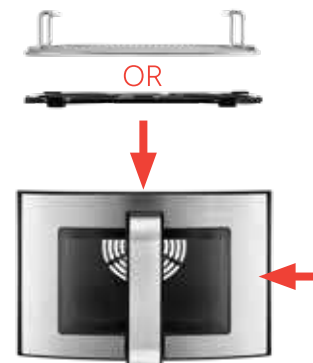


Place *crisper tray* or *rack* in the middle of the *basket*.

Note: If the food requires more space, place the *crisper tray* at the bottom of the *basket*. Do not use the *rack* on the bottom of the *basket*.

#### For 2-Layer Cooking:


Place the *crisper tray* at the bottom of the *basket* and the *rack* on the tabs in the middle of the *basket*.

Step 1

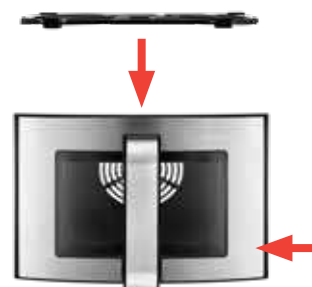

Place the *crisper tray* at the bottom of the *basket*.

Step 2

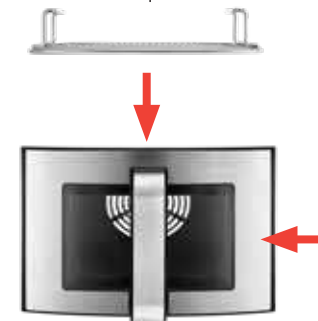

Place the *rack* in the middle of the *basket*.