

A large, thick green curved line that starts from the top left, curves around the right side, and extends towards the bottom left, framing the central text.

waykar

# USER MANUAL

Home Dehumidifier

This manual applies to the following dehumidifier models:

- CHWA80A
- CHWA120A
- CHWA150A
- CHWA150PA (with Pump)

Please read the manual carefully before operating the device and keep it for future reference.



## Message from WAYKAR

---

Thank you for choosing Waykar. Established in 2014 with a commitment to protecting indoor climates, Waykar has grown into a leading brand in the HVAC industry, known for premium products that prioritize comfort and health in your indoor space.

Before you start exploring this product, read this manual carefully for necessary instructions first. It's advised to keep it for future reference.

### 24/7 Full-Time Response


Upon receipt of the dehumidifier, kindly inspect the package contents immediately for any potential missing or damaged parts. In case of issues, we would appreciate your prompt contact with Waykar support for solutions before initiating a return. Send us an email or scan the QR code to start a live chat.

**support@waykar.com**



### Important: Please Read Before Usage

Ensure the dehumidifier is always kept in an upright position to avoid internal damage. After unwrapping the dehumidifier, please set it upright and let it sit for **24 HOURS** before plugging it in.

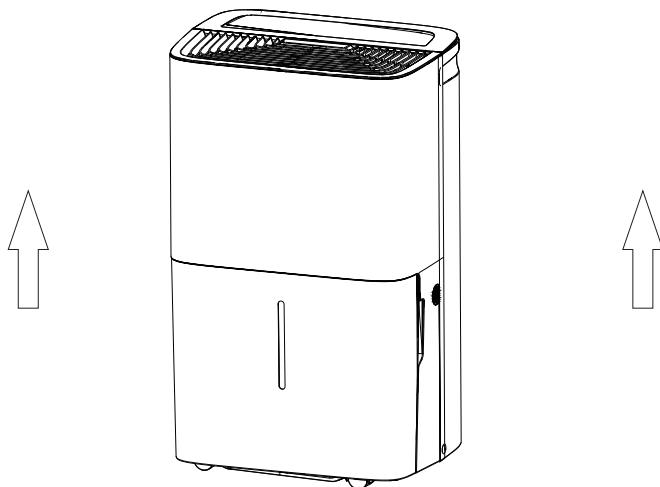

Note: The graphic illustrations in this manual are for demonstration purposes only. The actual product may vary slightly in size and shape.

# Table of Contents

GENERAL SAFETY PRECAUTIONS.....01

PARTS ILLUSTRATION.....03

PACKAGE CONTENTS.....04

POSITION THE DEHUMIDIFIER.....04

FUNCTION OVERVIEW.....05

OPERATION INSTRUCTIONS.....08

WATER DRAINAGE ..... 11

TROUBLESHOOTING..... 14

MAINTENANCE & CLEANING..... 15

SPECIFICATIONS..... 25

WARRANTY & CONTACT.....27



# GENERAL SAFETY PRECAUTIONS

---

- The dehumidifier is designed for indoor use only and is not intended for operation on public transport, such as buses, subways, and trains.
  - Avoid placing the device on soft, shaky, or uneven ground, as this may cause vibration and movement during operation.
  - Verify that the dehumidifier's voltage matches your electrical supply. Always plug the dehumidifier into a properly grounded, dedicated electrical outlet, and avoid using extension cords or power strips to prevent overheating or electrical hazards.
  - Ensure the water tank is emptied before turning on the dehumidifier to prevent overflow and water spillage.
  - Avoid contact with water as the dehumidifier is not waterproof.
- 
- Ensure that the drain hose runs downward without bending or winding to facilitate continuous water drainage.
  - Do not remove the water tank while the dehumidifier is operating.
  - Be sure to unplug the dehumidifier first before cleaning or packing it.
  - Turn off the dehumidifier before unplugging it. Always grasp the plug firmly to remove it from the outlet; do not pull it out by the cord to avoid damage.
  - For damaged cords, please contact the manufacturer or certified technicians for replacement to avoid hazards.
- 
- Do not dismantle or modify the device without professional certification. Such actions may lead to safety hazards and void the warranty.
  - If the dehumidifier is not going to be used for an extended period, please remember to unplug it.
  - Keep the dehumidifier away from direct sunlight, heat-generating devices, and flammable materials, including stoves, gasoline, etc.
  - Avoid sitting, standing, or placing heavy objects on the device.
- 
- No pesticides or flammable liquids are allowed near the device.
  - Avoid inserting fingers, rods, or other thin objects into the air inlet and outlet grilles of the dehumidifier.

## GENERAL SAFETY PRECAUTIONS

- Stop and unplug the device immediately at any sign of malfunction.
- Always keep the appliance upright during transit. After transport, place it upright and leave it unplugged for at least 6 hours before use.
- Do not tilt the device to prevent spilled water from damaging it.
- Always empty the water tank before moving or lifting the unit.
- Children aged 8 and above, as well as individuals with reduced physical, sensory, or mental capabilities, should operate the device only under supervision. Children under 8 should not tamper with it.
- Use soft cloth for cleaning and avoid splashing water directly on it.
- Neutral detergents are recommended for cleaning the dehumidifier. Alcohol, gas, benzene, and other chemical solvents are prohibited for cleaning purposes.

### WARNING

Do not use means to accelerate the defrosting process or to clean, other than those recommended by the manufacturer.

Risk of Fire—Store in a well-ventilated room without continuously operating flames or other potential ignition. Do not pierce or burn.


Be aware that refrigerants may not contain an odour.




- The transportation and disposal of this dehumidifier must comply with local regulations regarding flammable refrigerants.
- Please avoid smoking or having open flames near the device to eliminate potential ignition sources.
- **WARNING:** The appliance shall be installed, operated and stored in a room with a floor area larger than 4 m<sup>2</sup> (43 ft<sup>2</sup>).
- Device maintenance and repair should be left to trained professionals due to the potential safety hazards and environmental concerns associated with refrigerant leaks. Certified technicians can consult the [Maintenance & Cleaning](#) section in this manual for warnings regarding the safe use of flammable refrigerant.

# PARTS ILLUSTRATION

(Front Side)

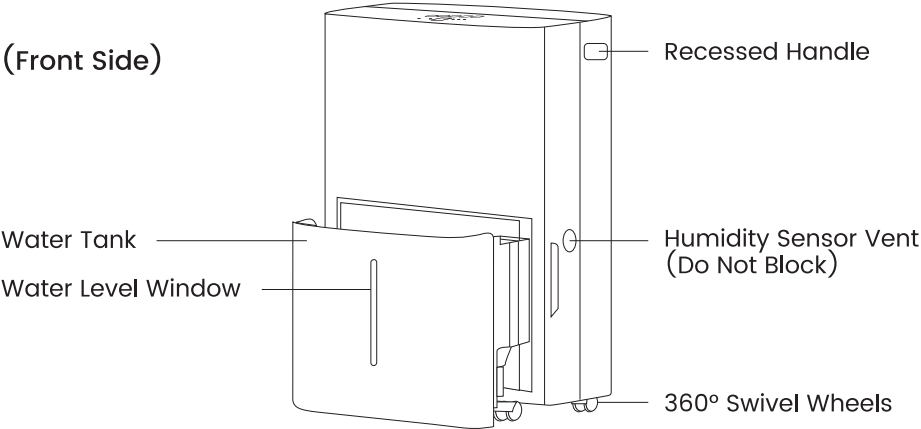


(Back Side)

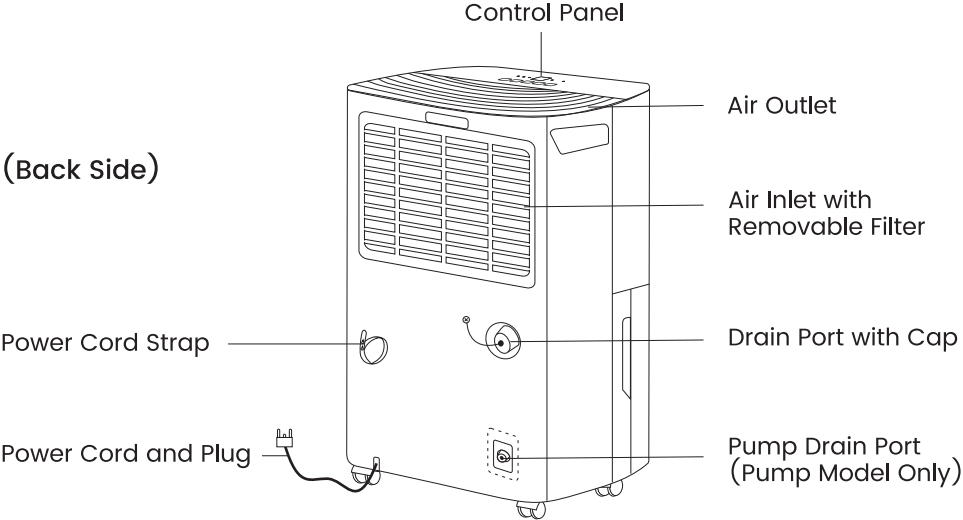


**Note:** These graphic drawings are for demonstration purposes only.  
The actual product may vary slightly in size and shape.


# PACKAGE CONTENTS

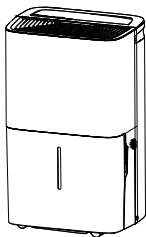


1 × Dehumidifier

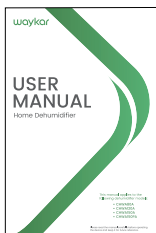

1 × Use Manual

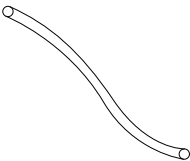


1 × Gravity Drain Hose  
(Inner Diameter: 0.53 in; Outer Diameter: 0.65 in)

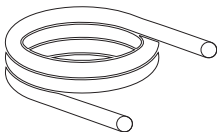

1 × Pump Drain Hose  
(Inner Diameter: 0.17 in; Outer Diameter: 0.25 in)  
Note: ONLY Included in the Pump Model

## POSITION THE DEHUMIDIFIER


1. The operational temperature range for the dehumidifier must be maintained between 41°F to 95°F (5–35°C). Operation outside of this specified temperature range may lead to potential damage to the product. Therefore, please do not place the device in an area where temperatures fall outside of this range.
2. When positioning the dehumidifier, please ensure it is not placed too close to walls or other objects, as this could obstruct the air vents. Maintain a min. distance of 18 inches above and around the device, as depicted in the diagram.
3. The device should be positioned, operated, and stored in an area with a minimum space of 43 sq. ft.

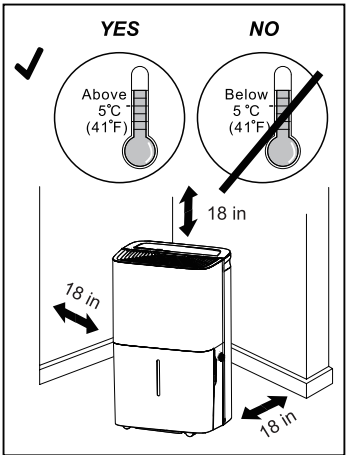


# FUNCTION OVERVIEW

## Control Panel Illustration

Applicable to CHWA80A, CHWA120A, and CHWA150A

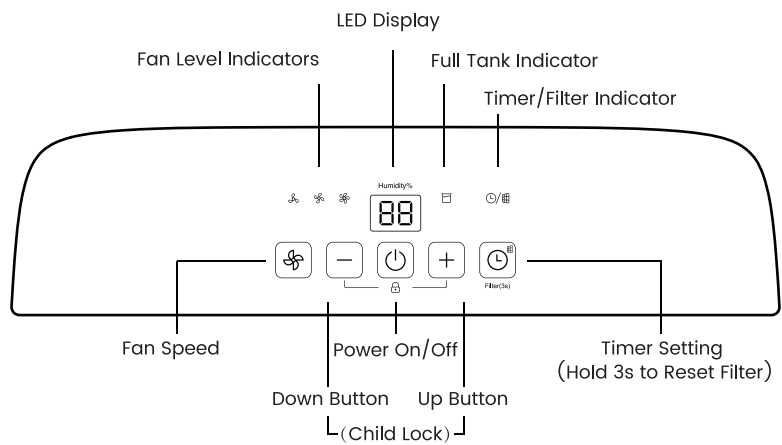

Applicable to CHWA150PA (the Pump Model)

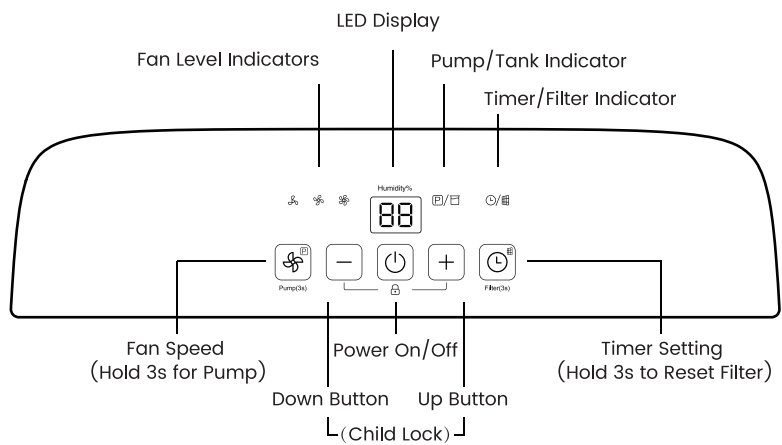

# FUNCTION OVERVIEW

---

## Features

### 24-Hour Timer

Utilize the timer feature to automatically schedule your dehumidifier to turn on or off within a maximum duration of 24 hours. When the device is running, set a timer to cease operation at your desired hour. In standby mode, use the timer to automatically start dehumidification within your specified time frame.

### Auto Defrosting

The dehumidifier automatically detects and addresses frost build-up on its coils to optimize energy efficiency and enhance operation in low temperatures. During defrosting, the compressor will stop running, but the fan continues to operate. The dehumidifier automatically resumes normal operation once the defrosting process is completed.

### Smart & Efficient Humidity Control

This dehumidifier is designed with built-in humidity sensor to detect space humidity and enable smart humidity control.

When the space humidity falls below your preset humidity level by more than 5%RH, the dehumidifier automatically pauses its operation, with the compressor and the fan pausing consecutively.

The compressor and the fan will automatically resume operation as soon as the space humidity rises above the target humidity level by more than 5%RH again. This smart humidity control design helps maintain the space humidity at a desired level in an energy-efficient and convenient way.

### Continuous Dehumidifying

For spaces with heavy dampness requiring constant operation, press the  button repeatedly until the display shows the "C0" symbol. This setting allows the dehumidifier to run continuously, regardless of the current humidity level.

# FUNCTION OVERVIEW

---

## Child Lock

The child lock prevents unintended operation and enhances safety. To activate, press and hold the  and  buttons together for 2 seconds. The "LC" symbol will appear on the display for 5 seconds. To deactivate, simply repeat the same operation.

Under child lock protection, the dehumidifier operates normally, but all buttons are disabled. If any other button is pressed, the "LC" symbol will flash briefly on the display.

## Full Tank Protection

While it's easy to check the water level inside the tank with a glance at the Water Level Window, the dehumidifier features full tank alarm and automatic shut down at a full tank to prevent water overflow.

When the water inside the tank reaches its maximum level, the full tank alarm is triggered. The compressor shuts off immediately, and the fan continues to run for an additional 3 minutes before pausing.

After that, the full tank indicator light  begins to flash red, the "P1" symbol appears on the display, and the unit emits five beeps in succession to alert you to empty the tank.

Note:

1. The dehumidifier cannot be turned back on until the water tank is emptied and put back into place.
2. The full tank indicator  will also flicker in red if the water tank isn't properly placed into position.

## Filter Cleaning Reminder

After 250 hours of cumulative operation, the Filter indicator will flash to remind you to clean the air filter.

Once the filter has been cleaned and reinstalled, press and hold the  button for 3 seconds to reset the reminder.

# OPERATION INSTRUCTIONS

---

## Power On/Off

When the dehumidifier is plugged into a power outlet, all indicator lights and the LED display will briefly illuminate to confirm that the unit is receiving power. Then the control panel will automatically turn off, and the display will go dark.

To begin operation, press  to turn the dehumidifier on or off.

## Power-Off Memory Function

In the event of an unexpected power interruption or accidental unplugging, the dehumidifier will automatically restart and resume operation once power is restored—without the need to press the  button again.

## Humidity Setting

Once the dehumidifier is turned on, it will automatically detect the ambient humidity and display it on the screen.

### To set your desired humidity level:

1. Press either the  or  button once to enter humidity setting mode. The current target humidity will begin to flash on the display.
2. Press the  or  button again to adjust the target humidity level in 5% increments, ranging from 30% RH to 80% RH. The values do not cycle beyond this range.
3. After selecting your desired level, wait approximately 3 seconds. The display will flash the set value twice, then automatically exit setting mode and return to showing the current room humidity.

**Note:** If the target humidity is set below 30% RH, the screen will display “C0”, and the dehumidifier will enter continuous operation mode, running regardless of the room’s humidity level.

## Fan Speed Adjustment

Press the  button to switch between Low, Med, and High speeds to adjust your preferred airflow speed. The corresponding indicators will illuminate when a speed level is selected.



# OPERATION INSTRUCTIONS

---

## Timer Setting

Use the timer setting to schedule the dehumidifier to automatically turn on or off. Please note: The 24-hour timer is for one-time operation only and cannot be set to repeat. Additionally, please be aware that any timer settings will be cleared if the power is interrupted or if the unit is turned off and then back on again.

## Programmed Shut-down:

1. Press [>] to access the timer setting. The "Timer" indicator will light up with the timer length displayed as "0.0".
2. Adjust the timer duration from 1 to 24 hours using the [>] or [>] buttons, with increments of 0.5 hours initially and then 1 hour after 10.
3. After selecting the timer length, wait until it auto-exits. The Timer indicator will remain illuminated.

To cancel the timer, press the Timer button twice consecutively. The indicator will turn off.

## Programmed Start-up:

1. In standby mode, the [>] button is still functional to set an auto-on timer for the dehumidifier.
2. Press [>] and select a duration using the [>] or [>] button. The Timer indicator will remain lit once a timer is successfully set.
3. The auto-on timer will restore the previous humidity setting from before the last power-off.

**Note:** For settings that use the [>] and [>] buttons, pressing and holding either button allows for continuous adjustment.

## Pump Setting

### (ONLY for the Pump Model: CHWA150PA )

For the CHWA150PA model, which features a built-in pump, press and hold the [>] button for 3 seconds to activate or deactivate the pump function. When activated, the "/□" indicator will illuminate.

# OPERATION INSTRUCTIONS

**Note:** Activating the pump does not mean it will operate continuously. The pump will automatically start draining only when the water level inside the tank reaches a specific threshold.

## Pump/Tank Indicator Status for the Pump Model CHWA150PA

- When the "P/T" indicator is steadily illuminated, the built-in pump is activated.
- When the "P/T" indicator is flashing red, it indicates a full water tank.

## Error Code Explanation

| Error | Possible Cause                                          | Recommended Action                                                       |
|-------|---------------------------------------------------------|--------------------------------------------------------------------------|
| EC    | High temperature protection                             | Ensure the ambient temperature is within the recommended range: 5°C–35°C |
| Ed    | Low temperature protection                              | Ensure the ambient temperature is within the recommended range: 5°C–35°C |
| E1    | Temperature sensor failure                              | Contact the manufacturer for assistance                                  |
| E3    | Evaporator coil sensor fault                            |                                                                          |
| E4    | DC motor malfunction                                    |                                                                          |
| E8    | Communication failure                                   |                                                                          |
| P1    | Full tank alarm                                         | Empty the tank and ensure it's properly positioned                       |
| P3    | Refrigerant leaked                                      | Contact the manufacturer for assistance                                  |
| H1    | Pump malfunction<br>(ONLY applicable to the pump model) | Contact the manufacturer for assistance                                  |


# WATER DRAINAGE

## Water Tank Drain

A water tank is included for efficient water collection, significantly enhancing the dehumidifier's mobility.

### Water tank volumes:

A 5.5 L/1.45 Gal water tank is included for the CHWA80A and CHWA120A models, and a 9 L/2.38 Gal tank for CHWA150A and CHWA150PA.

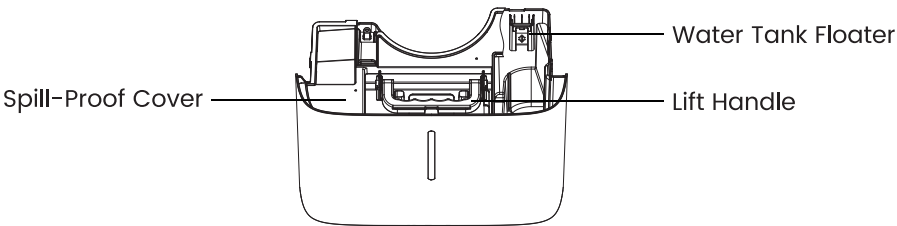



## Full Tank Protection

This dehumidifier features full tank protection through a built-in floater inside the water tank. As moisture is collected, the water level in the tank rises, causing the floater to rise as well. When the water reaches the maximum level, the floater triggers a sensor that automatically shuts off the unit to prevent overflow.

**Note:** After emptying the tank, ensure it is properly reinserted. If the tank is not correctly positioned, the floater may remain in the "full" position, and the dehumidifier will not resume operation.

## Tank Cleaning

It's recommended to empty and clean the water tank before turning on the dehumidifier each time.
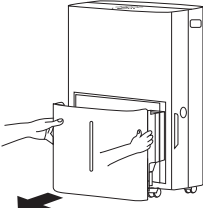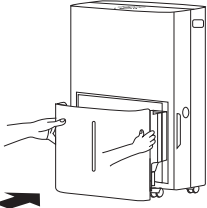
|                                                                                     |                                                                                     |                                                                                     |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
|  |  |  |
| Use both hands to grasp the tank by its connection points and slide it outward.     | Lift the tank handle and take it to a sink and pour water out.                      | Put down the handle and place the water tank back into its compartment.             |



# WATER DRAINAGE

## How to Remove the Spill-Proof Cover


1. Align the locking tab with the release slot, then wiggle the handle side to side to detach it from the securing brackets.
2. Loosen the two locking tabs on the top of the cover. Then, loosen the four locking tabs on the sides of the tank that secure the cover in place.
3. Grip the cover through the opening and lift it straight up to remove it from the tank.

## Gravity Drain Option

In addition to collecting water in the tank, you can also connect the dehumidifier's drain port to a drain hose for continuous water outflow via (1) the included drain hose, or (2) a standard garden hose (NOT Included).

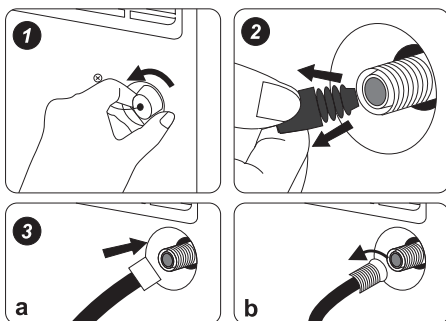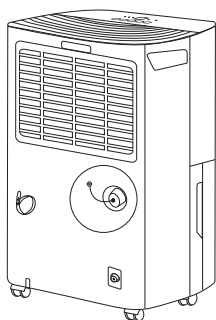

1. Locate the drain port on the back of the dehumidifier. Hold the drain cap and turn it counterclockwise to remove it.
2. Remove the drain plug from inside the port and set it aside.
3. Insert the included drain hose into the drain port and twist it counterclockwise to secure.

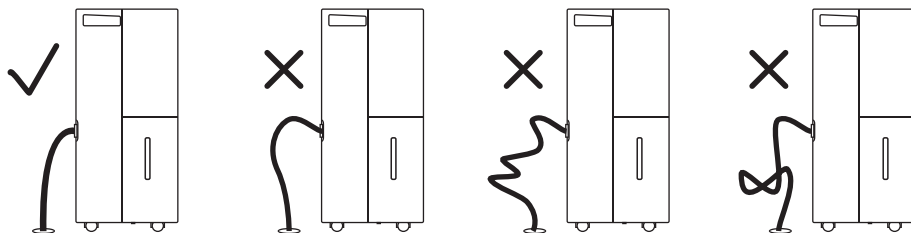



# WATER DRAINAGE

## Note:


1. If no hose is connected for continuous gravity drainage, please make sure to tighten the drain plug to prevent water leakage.
2. The hose should run smoothly downward and remain at least 3.94 inches lower than the drain port level to prevent water leakage.
3. A twisted, crooked, or blocked drain hose could impede water flow and cause the condensate water to accumulate in the water tank.

## Pump Drain (ONLY for the Pump Model: CHWA150PA )

The CHWA150PA model is equipped with a built-in pump and includes a pump drain hose for upward or long-distance drainage.

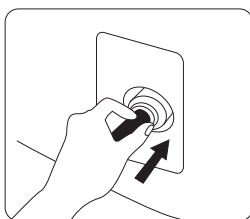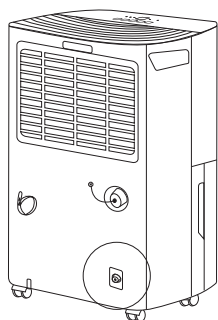

1. Locate the pump drain port on the back of the unit.
2. Align the included pump drain hose with the port.
3. Insert the hose all the way into the port until it clicks securely into place.

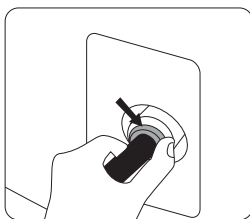

### To disconnect:

Do not pull the hose directly. Instead, press the gray release tab on the port connector, then simultaneously pull the hose out.

## Important Notes

- After connecting the hose, verify that the pump is activated by checking whether the Pump Indicator is illuminated.
- Once activated, the pump will not drain immediately. It will begin operation only when the water tank reaches its maximum level, and it will stop once the water is drained to the minimum level.
- In the event of a power outage, the dehumidifier will automatically resume with the previously saved settings—except for the pump. Please reactivate the pump manually if needed.

# TROUBLESHOOTING

In the event of product malfunctions, please refer to the guide below to troubleshoot common issues that may arise with general dehumidifiers. If problems persist, kindly disconnect the dehumidifier and promptly contact Waykar Customer Service for assistance.

| Problems                                         | Possible Causes                                        | Solutions                                                                            |
|--------------------------------------------------|--------------------------------------------------------|--------------------------------------------------------------------------------------|
| Unable to run the dehumidifier                   | Loose power connection                                 | Check if the device is properly plugged into a working electrical outlet.            |
|                                                  | The water tank is full or not properly placed.         | Empty the water tank and make sure it's properly positioned.                         |
|                                                  | Space temperature out of the recommended 41–95°F range | The device can only operate in temperatures between 5°C (41°F) and 35°C (95°F).      |
|                                                  | Defrosting in progress due to low temperature          | No action required. Wait until defrosting is completed and it will resume operation. |
|                                                  | Space humidity is already below the preset humidity    | Set the target humidity lower than the space humidity.                               |
|                                                  | 3-minute compressor protection triggered               | Compressor start delayed. Wait for 3 minutes and try again.                          |
| Not effectively dehumidifying the space          | Blocked air inlet or outlet                            | Ensure that the inlet or outlet is kept clear of any objects.                        |
|                                                  | Poor air circulation                                   | Maintain a min. 18-inch distance above and around the device.                        |
|                                                  | Open doors and windows                                 | Keep windows and doors closed for efficient moisture removal.                        |
|                                                  | Space too large for the device                         | Consider adding an additional dehumidifier unit.                                     |
|                                                  | Running insufficiently long                            | Allow the dehumidifier to run for a longer period.                                   |
|                                                  | Humidity setting isn't low enough                      | Set the target humidity lower than the current space humidity.                       |
| Much noise                                       | Unstable device placement                              | Position the dehumidifier on a flat surface.                                         |
|                                                  | Blocked filter or improperly positioned                | Clean the filter and put it back into place.                                         |
| Water leakage                                    | Loose hose connection                                  | Ensure that the hoses are firmly attached.                                           |
|                                                  | Faulty full tank alarm                                 | Check if the floater inside the water tank can still function.                       |
|                                                  | Blocked drain port                                     | Clean the port and ensure the drain hose is clear and smooth.                        |
| Running for unusually long periods               | Accidentally set to Continuous Mode                    | Set target humidity above 30%RH.                                                     |
|                                                  | Constant moisture buildup                              | Check for open windows or doors.                                                     |
| Humidity display error (always at 25% or 99% RH) | Humidity sensor failure                                | Contact the manufacturer for repair or replacement.                                  |

# MAINTENANCE & CLEANING

---

**Note:** Please remember to unplug the dehumidifier first before servicing or cleaning the unit.

## Exterior Cleaning


Use a soft, damp cloth to wipe clean the dust buildup on the surface of the dehumidifier. Neutral detergents are acceptable for cleaning, but avoid abrasive cleaners or harsh chemicals as they may damage the finish.

Please do not spray water directly on the device as the dehumidifier isn't waterproof. Pay special attention to the air inlets and outlets to remove any dust or debris buildup that could obstruct airflow.

## Filter Cleaning

The dehumidifier is equipped with a removable filter and includes a filter cleaning reminder that activates after approximately 250 hours of cumulative operation. When the Filter Cleaning indicator light turns on, follow the steps below to remove and clean the filter to maintain optimal performance.

1. The filter is positioned in the top compartment at the back of the dehumidifier.
2. Locate the opening between the filter and the compartment, tap it, and gently pull the filter outward to remove it.
3. Brush off any dust and debris from the filter, rinse it thoroughly, and let it dry completely. Avoid drying it in direct sunlight to prevent deformation.
4. Insert the bottom tabs of the filter into the slots of the compartment, then press down on the top of the filter until its top locking tabs snap into place.

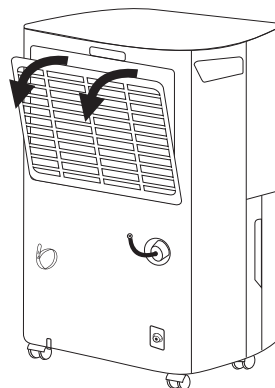

## Device Storage

While it's recommended to run the dehumidifier year-round for a comfortable environment, follow these steps for proper storage during extended periods of non-use to preserve performance and lifespan.

# MAINTENANCE & CLEANING

---

1. Firstly, unplug the unit and allow it to cool.
2. Empty and clean the water tank, detach the drain hose, and clean the drain port.
3. Clean and dry the filter.
4. Neatly organize the power cord using the attached cord strap.
5. Cover the device with a breathable cloth to protect it from dust.
6. Store it in a dry and well-ventilated place, away from direct sunlight.

## Warnings Regarding the R32 Refrigerant



R32  
A2L

This dehumidifier contains R32, a flammable refrigerant. All operators or maintenance personnel for refrigeration systems must hold a valid certificate from an industry-recognized body for the safe disposal of refrigerants. Repairs and maintenance should strictly adhere to the manufacturer's guidelines. If additional help is required, ensure it's under the supervision of personnel qualified in handling combustible refrigerants.

- **WARNING – Risk of Fire. Flammable Refrigerant Used. To Be Repaired Only By Trained Service Personnel. Do Not Puncture Refrigerant Tubing.**
- **WARNING – Risk of Fire. Dispose of Properly In Accordance With Federal Or Local Regulations. Flammable Refrigerant Used.**
- **WARNING – Risk of Fire. Flammable Refrigerant Used. Consult Repair Manual/Owner's Guide Before Attempting To Service This Product. All Safety Precautions Must Be Followed.**
- **WARNING – Risk of Fire due to Flammable Refrigerant Used. Follow Handling Instructions Carefully in Compliance with National Regulations.**
- **WARNING – Risk of Fire or Explosion – Store in a Well-Ventilated Room Without Continuously Operating Flames or Other Potential Ignition Sources.**
- **WARNING – Risk of Fire – Auxiliary Devices Which May Be Ignition Sources Shall Not Be Installed in the Ductwork, Other Than Auxiliary Devices Listed for Use With the Specific Appliance.**
- **WARNING – Risk of Fire – The Appliance Shall Be Installed, Operated, and Stored in a Room With a Floor Area Larger Than 4 m<sup>2</sup> (43 ft<sup>2</sup>).**



# MAINTENANCE & CLEANING

---

## **Transportation, marking and storage for units that employ flammable refrigerants**

### **1. General**

The following information is provided for units that employ FLAMMABLE REFRIGERANTS.

### **2. Transport of equipment containing flammable refrigerants**

Attention is drawn to the fact that additional transportation regulations may exist with respect to equipment containing flammable gas. The maximum number of pieces of equipment or the configuration of the equipment permitted to be transported together will be determined by the applicable transport regulations.

### **3. Marking of equipment using signs**

Signs for similar appliances used in a work area are generally addressed by local regulations and give the minimum requirements for the provision of safety and/or health signs for a work location. All required signs are to be maintained and employers should ensure that employees receive suitable and sufficient instruction and training on the meaning of appropriate safety signs and the actions that need to be taken in connection with these signs.

The effectiveness of signs should not be diminished by too many signs being placed together. Any pictograms used should be as simple as possible and contain only essential details.

### **4. Disposal of equipment using flammable refrigerants**

See national regulations.

### **5. Storage of equipment/appliances**

The storage of the appliance should be in accordance with the applicable regulations or instructions, whichever is more stringent.

### **6. Storage of packed (unsold) equipment**

Storage package protection should be constructed in such a way that mechanical damage to the equipment inside the package will not cause a leak of the REFRIGERANT CHARGE.

The maximum number of pieces of equipment permitted to be stored together will be determined by local regulations.

## **Requirements for operation, service and installation manuals of appliances using flammable refrigerants**

### **Qualification of workers**

The manual shall contain specific information about the required qualification of the working personnel for maintenance, service and repair operations. Every working procedure that affects safety means shall only be carried out by competent persons.

### **Examples for such working procedures are:**

- breaking into the refrigerating circuit;
- opening of sealed components;

### **Competence of service personnel**

#### **1. General**

Information of procedures additional to usual information for refrigerating appliance installation, repair, maintenance and decommission procedures is required when an appliance with FLAMMABLE REFRIGERANT is affected.

The training of these procedures is carried out by national training organisations or manufacturers that are accredited to teach the relevant national competency standards that may be set in legislation.

The achieved competence should be documented by a certificate.

# MAINTENANCE & CLEANING

---

## 2. Information and training

- 2.1) The training should include the substance of the following.
- 2.2) Information about the explosion potential of FLAMMABLE REFRIGERANTS to show that flammables may be dangerous when handled without care.
- 2.3) Information about POTENTIAL IGNITION SOURCES, especially those that are not obvious, such as lighters, light switches, vacuum cleaners, electric heaters.
- 2.4) Information about the different safety concepts:
  - Unventilated-Safety of the appliance does not depend on ventilation of the housing.
  - Switching off the appliance or opening of the housing has no significant effect on the safety.
  - Nevertheless, it is possible that leaking refrigerant may accumulate inside the enclosure and flammable atmosphere will be released when the enclosure is opened.
  - Ventilated enclosure-Safety of the appliance depends on ventilation of the housing.
  - Switching off the appliance or opening of the enclosure has a significant effect on the safety.
  - Care should be taken to ensure sufficient ventilation before.
  - Ventilated room -Safety of the appliance depends on the ventilation of the room.
  - Switching off the appliance or opening of the housing has no significant effect on the safety.
  - The ventilation of the room shall not be switched off during repair procedures.
- 2.5) Information about refrigerant detectors:
  - Principle of function, including influences on the operation.
  - Procedures, how to repair, check or replace a refrigerant detector or parts of it in a safe way.
  - Procedures, how to disable a refrigerant detector in case of repair work on the refrigerant carrying parts.
- 2.6) Information about the concept of sealed components and sealed enclosures according to IEC60079-15:2010.
- 2.7) Information about the correct working procedures:
  - a) Commissioning
    - Ensure that the floor area is sufficient for the REFRIGERANT CHARGE or that the ventilation duct is assembled in a correct manner.
    - Connect the pipes and carry out a leak test before charging with refrigerant.
    - Check safety equipment before putting into service.
  - b) Maintenance
    - Portable equipment shall be repaired outside or in a workshop specially equipped for servicing units with FLAMMABLE REFRIGERANTS.
    - Ensure sufficient ventilation at the repair place.
    - Be aware that malfunction of the equipment may be caused by refrigerant loss and a refrigerant leak is possible.
    - Discharge capacitors in a way that won't cause any spark. The standard procedure to short circuit the capacitor terminals usually creates sparks.
    - Reassemble sealed enclosures accurately. If seals are worn, replace them.
    - Check safety equipment before putting into service.
  - c) Repair
    - Portable equipment shall be repaired outside or in a workshop specially equipped for servicing units with FLAMMABLE REFRIGERANTS.
    - Ensure sufficient ventilation at the repair place.
    - Be aware that malfunction of the equipment may be caused by refrigerant loss and a refrigerant leak is possible.

# MAINTENANCE & CLEANING

---

- Discharge capacitors in a way that won't cause any spark.
- When brazing is required, the following procedures shall be carried out in the right order:  
Remove the refrigerant. If the recovery is not required by national regulations, drain the refrigerant to the outside. Take care that the drained refrigerant will not cause any danger. In doubt, one person should guard the outlet. Take special care that drained refrigerant will not float back into the building.
- Evacuate the refrigerant circuit.
- Purge the refrigerant circuit with nitrogen for 5 min (not required for A2L REFRIGERANTS).
- Evacuate again (not required for A2L REFRIGERANTS).
- Remove parts to be replaced by cutting, not by flame.
- Purge the braze point with nitrogen during the brazing procedure.
- Carry out a leak test before charging with refrigerant.
- Reassemble sealed enclosures accurately. If seals are worn, replace them.
- Check safety equipment before putting into service.

## d) Disposal

- Ensure sufficient ventilation at the working place.
- Remove the refrigerant. If the recovery is not required by national regulations, drain the refrigerant to the outside. Take care that the drained refrigerant will not cause any danger. In doubt, one person should guard the outlet. Take special care that drained refrigerant will not float back into the building.
- When flammable refrigerants are used,
  - evacuate the refrigerant circuit.
  - purge the refrigerant circuit with oxygen free nitrogen.
  - evacuate again. (not required for A2L refrigerants);
  - cut out the compressor and drain the oil.

## Information on servicing

### 1. General

The manual shall contain specific information for service personnel according.

### 2. Checks to the area

Prior to beginning work on systems containing FLAMMABLE REFRIGERANTS, safety checks are necessary to ensure that the risk of ignition is minimised.

For repair to the REFRIGERATING SYSTEM

### 3. Work procedure

Work shall be undertaken under a controlled procedure so as to minimise the risk of a flammable gas or vapour being present while the work is being performed.

### 4. General work area

All maintenance staff and others working in the local area shall be instructed on the nature of work being carried out. Work in confined spaces shall be avoided.

### 5. Checking for presence of refrigerant

The area shall be checked with an appropriate refrigerant detector prior to and during work, to ensure the technician is aware of potentially toxic or flammable atmospheres. Ensure that the leak detection equipment being used is suitable for use with all applicable refrigerants, i. e. non-sparking, adequately sealed or intrinsically safe.

# MAINTENANCE & CLEANING

---

## 6. Presence of fire extinguisher

If any hot work is to be conducted on the refrigerating equipment or any associated parts, appropriate fire extinguishing equipment shall be available to hand. Have a dry powder or CO<sub>2</sub> fire extinguisher adjacent to the charging area.

### a) Commissioning

- Ensure that the floor area is sufficient for the REFRIGERANT CHARGE or that the ventilation duct is assembled in a correct manner.
- Connect the pipes and carry out a leak test before charging with refrigerant.
- Check safety equipment before putting into service.

### b) Maintenance

- Portable equipment shall be repaired outside or in a workshop specially equipped for servicing units with FLAMMABLE REFRIGERANTS.
- Ensure sufficient ventilation at the repair place.
- Be aware that malfunction of the equipment may be caused by refrigerant loss and a refrigerant leak is possible.
- Discharge capacitors in a way that won't cause any spark. The standard procedure to short circuit the capacitor terminals usually creates sparks.
- Reassemble sealed enclosures accurately. If seals are worn, replace them.
- Check safety equipment before putting into service.

### c) Repair

- Portable equipment shall be repaired outside or in a workshop specially equipped for servicing units with FLAMMABLE REFRIGERANTS.
- Ensure sufficient ventilation at the repair place.
- Be aware that malfunction of the equipment may be caused by refrigerant loss and a refrigerant leak is possible.
- Discharge capacitors in a way that won't cause any spark.
- When brazing is required, the following procedures shall be carried out in the following order:
  - Safely remove the refrigerant following local and national regulations. If the recovery is not required by national regulations, drain the refrigerant to the outside. Take care that the drained refrigerant will not cause any danger. In doubt, one person should guard the outlet. Take special care that drained refrigerant will not float back into the building;

### d) Decommissioning

- If the safety is affected when the equipment is put out of service, the REFRIGERANT CHARGE shall be removed before decommissioning.
- Ensure sufficient ventilation at the equipment location.
- Be aware that malfunction of the equipment may be caused by refrigerant loss and a refrigerant leak is possible.
- Discharge capacitors in a way that won't cause any spark.
- Remove the refrigerant. If the recovery is not required by national regulations, drain the refrigerant to the outside. Take care that the drained refrigerant will not cause any danger. In doubt, one person should guard the outlet. Take special care that drained refrigerant will not float back into the building.
- When FLAMMABLE REFRIGERANTS except A2L REFRIGERANTS are used,
  - Evacuate the refrigerant circuit.

# MAINTENANCE & CLEANING

---

## 7. No ignition sources

No person carrying out work in relation to a REFRIGERATING SYSTEM which involves exposing any pipe work shall use any sources of ignition in such a manner that it may lead to the risk of fire or explosion. All possible ignition sources, including cigarette smoking, should be kept sufficiently far away from the site of installation, repairing, removing and disposal, during which refrigerant can possibly be released to the surrounding space. Prior to work taking place, the area around the equipment is to be surveyed to make sure that there are no flammable hazards or ignition risks. "No Smoking" signs shall be displayed.

## 8. Ventilated area

Ensure that the area is in the open or that it is adequately ventilated before breaking into the system or conducting any hot work. A degree of ventilation shall continue during the period that the work is carried out. The ventilation should safely disperse any released refrigerant and preferably expel it externally into the atmosphere.

## 9. Checks to the refrigerating equipment

Where electrical components are being changed, they shall be fit for the purpose and to the correct specification. At all times the manufacturer's maintenance and service guidelines shall be followed. If in doubt, consult the manufacturer's technical department for assistance. The following checks shall be applied to installations using.

### FLAMMABLE REFRIGERANTS:

- the actual REFRIGERANT CHARGE is in accordance with the room size within which the refrigerant containing parts are installed;
- the ventilation machinery and outlets are operating adequately and are not obstructed;
- if an indirect refrigerating circuit is being used, the secondary circuit shall be checked for the presence of refrigerant;
- marking to the equipment continues to be visible and legible. Markings and signs that are illegible shall be corrected;
- refrigerating pipe or components are installed in a position where they are unlikely to be exposed to any substance which may corrode refrigerant containing components, unless the components are constructed of materials which are inherently resistant to being corroded or are suitably protected against being so corroded.

## 10. Checks to electrical devices

Repair and maintenance to electrical components shall include initial safety checks and component inspection procedures. If a fault exists that could compromise safety, then no electrical supply shall be connected to the circuit until it is satisfactorily dealt with. If the fault cannot be corrected immediately but it is necessary to continue operation, an adequate temporary solution shall be used. This shall be reported to the owner of the equipment so all parties are advised.

### Initial safety checks shall include:

- that capacitors are discharged: this shall be done in a safe manner to avoid possibility of sparking;
- that no live electrical components and wiring are exposed while charging, recovering or purging the system;
- that there is continuity of earth bonding.

# MAINTENANCE & CLEANING

---

## **11. Repairs to sealed components**

1) During repairs to sealed components, all electrical supplies shall be disconnected from the equipment being worked upon prior to any removal of sealed covers, etc. If it is absolutely necessary to have an electrical supply to equipment during servicing, then a permanently operating form of leak detection shall be located at the most critical point to warn of a potentially hazardous situation.

2) Sealed electrical components shall be replaced.

## **12. Repair to intrinsically safe components**

Do not apply any permanent inductive or capacitance loads to the circuit without ensuring that this will not exceed the permissible voltage and current permitted for the equipment in use. Intrinsically safe components must be replaced.

Replace components only with parts specified by the manufacturer. Other parts may result in the ignition of refrigerant in the atmosphere from a leak.

## **13. Cabling**

Check that cabling will not be subject to wear, corrosion, excessive pressure, vibration, sharp edges or any other adverse environmental effects. The check shall also take into account the effects of aging or continual vibration from sources such as compressors or fans.

## **14. Detection of flammable refrigerants**

Under no circumstances shall potential sources of ignition be used in the searching for or detection of refrigerant leaks. A halide torch (or any other detector using a naked flame) shall not be used. The following leak detection methods are deemed acceptable for all refrigerant systems. Electronic leak detectors may be used to detect refrigerant leaks but, in the case of FLAMMABLE REFRIGERANTS, the sensitivity may not be adequate, or may need re-calibration. (Detection equipment shall be calibrated in a refrigerant-free area.)

Ensure that the detector is not a potential source of ignition and is suitable for the refrigerant used.

Leak detection equipment shall be set at a percentage of the LFL of the refrigerant and shall be calibrated to the refrigerant employed, and the appropriate percentage of gas (25 % maximum) is confirmed.

Leak detection fluids are also suitable for use with most refrigerants but the use of detergents containing chlorine shall be avoided as the chlorine may react with the refrigerant and corrode the copper pipe-work.

If a leak is suspected, all naked flames shall be removed/extinguished.

If a leakage of refrigerant is found which requires brazing, all of the refrigerant shall be recovered from the system, or isolated (by means of shut off valves) in a part of the system remote from the leak. Removal of refrigerant shall be according to Removal and evacuation.

## **15. Removal and evacuation**

When breaking into the refrigerant circuit to make repairs -or for any other purpose- conventional procedures shall be used. However, for flammable refrigerants it is important that best practice be followed, since flammability is a consideration.

# MAINTENANCE & CLEANING

---

The following procedure shall be adhered to:

- safely remove refrigerant following local and national regulations;
- purge the circuit with inert gas(optional for A2L);
- evacuate(optional for A2L);
- continuously flush or purge with inert gas when using flame to open circuit ; and
- open the circuit.

The refrigerant charge shall be recovered into the correct recovery cylinders if venting is not allowed by local and national codes. For appliances containing flammable refrigerants, the system shall be purged with oxygen-free nitrogen to render the appliance safe for flammable refrigerants. This process might need to be repeated several times. Compressed air or oxygen shall not be used for purging refrigerant systems. For appliances containing flammable refrigerants, refrigerants purging shall be achieved by breaking the vacuum in the system with oxygen-free nitrogen and continuing to fill until the working pressure is achieved, then venting to atmosphere, and finally pulling down to a vacuum (optional for A2L). This process shall be repeated until no refrigerant is within the system (optional for A2L). When the final oxygen-free nitrogen charge is used, the system shall be vented down to atmospheric pressure to enable work to take place.

The outlet for the vacuum pump shall not be close to any potential ignition sources, and ventilation shall be available.

## **16. Charging procedures**

In addition to conventional charging procedures, the following requirements shall be followed.

- Ensure that contamination of different refrigerants does not occur when using charging equipment. Hoses or lines shall be as short as possible to minimise the amount of refrigerant contained in them.
- Cylinders shall be kept in an appropriate position according to the instructions.
- Ensure that the REFRIGERATING SYSTEM is earthed prior to charging the system with refrigerant.
- Label the system when charging is complete (if not already).
- Extreme care shall be taken not to overfill the REFRIGERATING SYSTEM. Prior to recharging the system, it shall be pressure-tested with the appropriate purging gas. The system shall be leak-tested on completion of charging but prior to commissioning. A follow up leak test shall be carried out prior to leaving the site.

## **17. Decommissioning**

Before carrying out this procedure, it is essential that the technician is completely familiar with the equipment and all its detail. It is recommended good practice that all refrigerants are recovered safely. Prior to the task being carried out, an oil and refrigerant sample shall be taken in case analysis is required prior to re-use of recovered refrigerant.

It is essential that electrical power is available before the task is commenced.

- a) Become familiar with the equipment and its operation.
- b) Isolate system electrically.
- c) Before attempting the procedure, ensure that:

# MAINTENANCE & CLEANING

---

- Mechanical handling equipment is available, if required, for handling refrigerant cylinders;
  - All personal protective equipment is available and being used correctly;
  - The recovery process is supervised at all times by a competent person;
  - Recovery equipment and cylinders conform to the appropriate standards.
- d) Pump down refrigerant system, if possible.
- e) If a vacuum is not possible, make a manifold so that refrigerant can be removed from various parts of the system.
- f) Make sure that cylinder is situated on the scales before recovery takes place.
- g) Start the recovery machine and operate in accordance with instructions.
- h) Do not overfill cylinders (no more than 80 % volume liquid charge).
- i) Do not exceed the maximum working pressure of the cylinder, even temporarily.
- j) When the cylinders have been filled correctly and the process completed, make sure that the cylinders and the equipment are removed from site promptly and all isolation valves on the equipment are closed off.
- k) Recovered refrigerant shall not be charged into another REFRIGERATING SYSTEM unless it has been cleaned and checked.

## 18. Labelling

Equipment shall be labelled stating that it has been de-commissioned and emptied of refrigerant. The label shall be dated and signed. For appliances containing FLAMMABLE REFRIGERANTS, ensure that there are labels on the equipment stating the equipment contains FLAMMABLE REFRIGERANT.

## 19. Recovery

When removing refrigerant from a system, either for servicing or decommissioning, it is recommended good practice that all refrigerants are removed safely. When transferring refrigerant into cylinders, ensure that only appropriate refrigerant recovery cylinders are employed. Ensure that the correct number of cylinders for holding the total system charge is available. All cylinders to be used are designated for the recovered refrigerant and labelled for that refrigerant (i. e. special cylinders for the recovery of refrigerant). Cylinders shall be complete with pressure-relief valve and associated shut-off valves in good working order. Empty recovery cylinders are evacuated and, if possible, cooled before recovery occurs. The recovery equipment shall be in good working order with a set of instructions concerning the equipment that is at hand and shall be suitable for the recovery of the flammable refrigerant. If in doubt, the manufacturer should be consulted. In addition, a set of calibrated weighing scales shall be available and in good working order. Hoses shall be complete with leak-free disconnect couplings and in good condition.

The recovered refrigerant shall be processed according to local legislation in the correct recovery cylinder, and the relevant waste transfer note arranged. Do not mix refrigerants in recovery units and especially not in cylinders.

If compressors or compressor oils are to be removed, ensure that they have been evacuated to an acceptable level to make certain that flammable refrigerant does not remain within the lubricant.

The compressor body shall not be heated by an open flame or other ignition sources to accelerate this process. When oil is drained from a system, it shall be carried out safely.



# SPECIFICATIONS

## Applicable to CHWA80A

|                                           |                      |
|-------------------------------------------|----------------------|
| Power Source                              | 115V~60Hz            |
| Rated Power                               | 262 W                |
| Rated Current                             | 2.2 A                |
| Moisture Removal Capacity(at 65°F, 60%RH) | 22.66 Pints/Day      |
| Moisture Removal Capacity(at 80°F, 60%RH) | 33.7 Pints/Day       |
| Moisture Removal Capacity(at 86°F, 80%RH) | 50.8 Pints/Day       |
| Moisture Removal Capacity(at 95°F, 90%RH) | 80 Pints/Day         |
| Input Power (65°F, 60%RH)                 | 400 W                |
| Input Current (65°F, 60%RH)               | 3.6 A                |
| IEF (Integrated Energy Factor)            | 1.7 L/kWh            |
| Motor FLA                                 | 0.38 A               |
| Motor Compressor (RLA/LRA)                | RLA: 2.7 A/LRA: 14 A |
| Refrigerant/Charge                        | R32/95 g (3.35 oz)   |
| Max. Allowable Pressure                   | 4.07 Mpa             |
| Suction Pressure                          | 2.10 Mpa             |
| Discharge Pressure                        | 4.07 Mpa             |

## Applicable to CHWA120A

|                                           |                        |
|-------------------------------------------|------------------------|
| Power Source                              | 115V~60Hz              |
| Rated Power                               | 340 W                  |
| Rated Current                             | 3.1 A                  |
| Moisture Removal Capacity(at 65°F, 60%RH) | 36.9 Pints/Day         |
| Moisture Removal Capacity(at 80°F, 60%RH) | 53.9 Pints/Day         |
| Moisture Removal Capacity(at 86°F, 80%RH) | 78.5 Pints/Day         |
| Moisture Removal Capacity(at 95°F, 90%RH) | 120 Pints/Day          |
| Input Power (65°F, 60%RH)                 | 570 W                  |
| Input Current (65°F, 60%RH)               | 6.1 A                  |
| IEF (Integrated Energy Factor)            | 2.01 L/kWh             |
| Motor FLA                                 | 0.51 A                 |
| Motor Compressor (RLA/LRA)                | RLA: 4.9 A/LRA: 18.3 A |
| Refrigerant/Charge                        | R32/130 g (4.59 oz)    |
| Max. Allowable Pressure                   | 5.21 Mpa               |
| Suction Pressure                          | 2.48 Mpa               |
| Discharge Pressure                        | 5.21 Mpa               |

# SPECIFICATIONS

## Applicable to CHWA150A & CHWA150PA

|                                           |                      |
|-------------------------------------------|----------------------|
| Power Source                              | 115V~60Hz            |
| Rated Power                               | 470 W                |
| Rated Current                             | 5 A                  |
| Moisture Removal Capacity(at 65°F, 60%RH) | 49.67 Pints/Day      |
| Moisture Removal Capacity(at 80°F, 60%RH) | 75.4 Pints/Day       |
| Moisture Removal Capacity(at 86°F, 80%RH) | 116.8 Pints/Day      |
| Moisture Removal Capacity(at 95°F, 90%RH) | 150 Pints/Day        |
| Input Power (65°F, 60%RH)                 | 900 W                |
| Input Current (65°F, 60%RH)               | 10 A                 |
| IEF (Integrated Energy Factor)            | 2.01 L/kWh           |
| Motor FLA                                 | 0.61 A               |
| Motor Compressor (RLA/LRA)                | RLA: 5.6 A/LRA: 28 A |
| Refrigerant/Charge                        | R32/180 g (6.35 oz)  |
| Max. Allowable Pressure                   | 4.62 Mpa             |
| Suction Pressure                          | 2.69 Mpa             |
| Discharge Pressure                        | 4.62 Mpa             |

**Note:**

Recommended operating temperature: 41°F to 95°F. The dehumidifier may experience malfunctions outside of this temperature range.

The manufacturer reserves the right to modify the product without formal notice to the public.

 **WARNING:**

This product can expose you to chemicals including styrene and its compounds, which are known to the State of California to cause cancer or birth defects or other reproductive harm. For more information go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).

**Important:**

This warning is legally required by California's Proposition 65, which mandates disclosure even for trace amounts of certain substances. The warning does not indicate that the product is unsafe when used as intended; the risk primarily applies to long-term exposure to significant amounts of these substances. The levels in this product are negligible and within safe limits.

# WARRANTY & CONTACT

---

## Warranty Terms

All Waykar products are covered under our 12-month warranty. Customers, whether purchasing directly from Waykar or through an authorized retailer, can reach out to Waykar for support. An order invoice or proof of purchase will be appreciated.

Please note that product damage caused by regular wear and tear will not be covered under warranty, and the warranty will be voided for these behaviors (including but not limited to):

1. Failing to follow the instructions in the manual.
2. Purposeful mishandling of the device.
3. Damaging the device through violent impact.
4. Exposing the device to liquids or infiltrating foreign particles.
5. Unauthorized modification or overhauling of the device.
6. Damage from placing the device upside down.

These are our general terms for warranty service. Customers are more than welcome to contact us for any feedback or advice.

## Extend Your Warranty by 1 Year

Register your product at [www.waykar.com](http://www.waykar.com) to extend your 1-year warranty by an additional year.

\*Please fill out all required fields and include your Order ID and Date of Purchase if applicable.

## Customer Support

For any product-related queries, kindly contact our support team at Waykar. In case of missing, displaced, or damaged dehumidifier parts, you can always reach out to Waykar support for assistance.

## WAYKAR Office

🏢 805 Victory Trail Rd, Gaffney, SC, 29340 USA

✉ Email: [support@waykar.com](mailto:support@waykar.com)

☎ Tel: +1-(213)-895-4871

💬 Live Chat: [www.waykar.com](http://www.waykar.com)

🕒 24/7 Full-Time Response

\*Have your Order Number ready before contacting customer support.

# waykar



Scan the QR code  
for Live Chat



@ Waykar

We hope our products will make your living space healthier and more comfortable.

Your satisfaction is our top priority.

Feel free to tag us when you share a snap on your social media.

---

WAYKAR® All rights reserved.