

I-LCD TV

Imiyalelo yokuyisebenzisa


Ukubalwa kwezinsiza

Table-Top Stand (1)*
Ukulungisa izikulu fu ze-Table -Top Stand (M5 x 16) (2)
Irimothi (1)
Intambo yamandla kagesi e-AC (ama-mains lead) (1)
I-adaptha ye-AC (1)
Okokuphatha ikhebula (3)
Usayizi AAA wamabhethi (uhlobo R03) (2)
Imiyalelo Yokusebenzisa (leli bhukuncazelo) kanye neminye imiqulu
Izinsiza zebhulakhethi yokumisa obondeni (I-KLV-46/40R472A, KLV-32/24R422A kuphela)
* Bheka ibhukwana le Table-Top Stand ukuze uhlangeise i-Table-Top Stand.

1: Ukufaka i-Table-Top Stand

- Uma usebenzisa isikrudrayiva sikagesi, yenza amandla okujika abe ku-1.5 N·m (15 kgf·cm).



■ KLV-46/40R452A, KLV-40R457A, KLV-32R407A, KLV-32/24R402A:

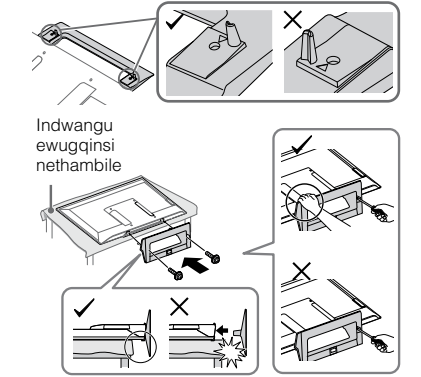

Ukususa i-Table-Top Stand kwi-TV


- Ungayikhiphi i-Table-Top Stand nganoma isiphi isizathu ngaphandle kokubeka odongeni i-TV.

■ KLV-46/40R452A, KLV-40R457A, KLV-32R407A, KLV-32/24R402A:

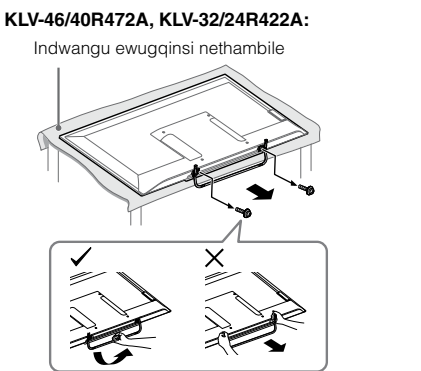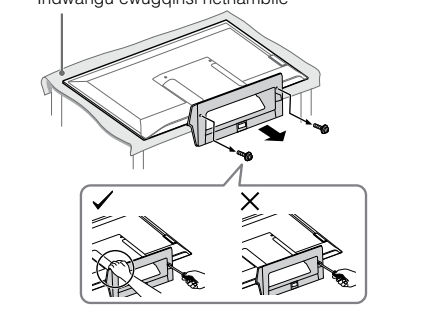


2: Ukuxhuma



Ukuxhuma ikhebula/(i-eriyeli) ye-antenna

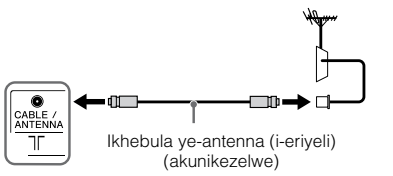

Ukuxhuma ikhebula/(i-eriyeli) ye-antenna ne-VCR

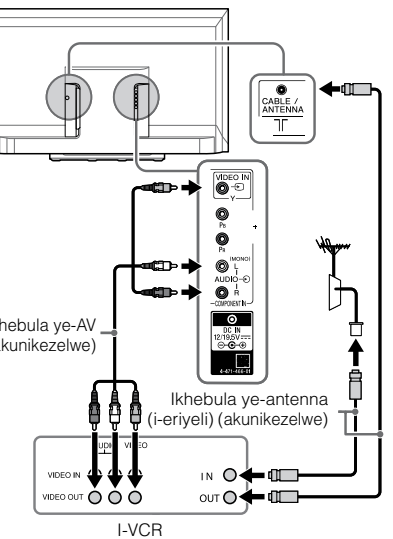


Ukuxhuma imishini yomsindo/yevidiyo

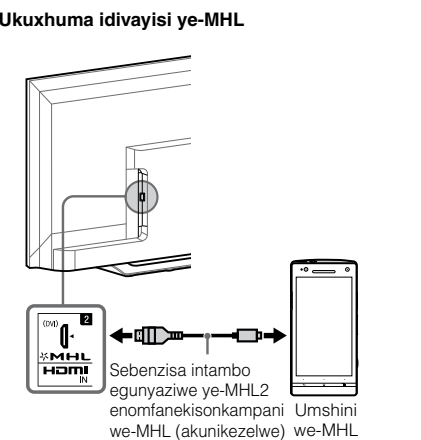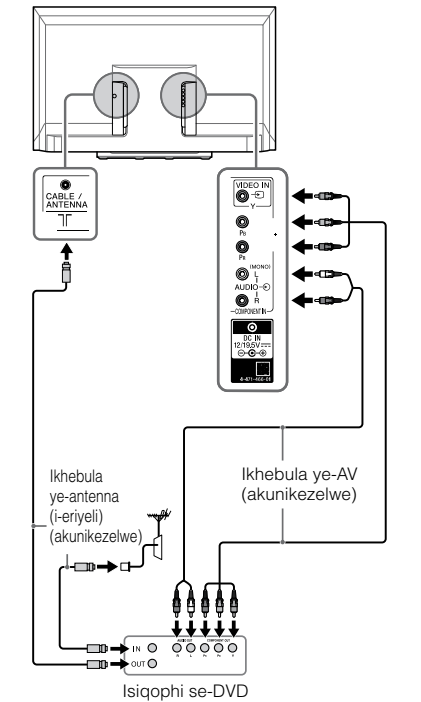

I-MHL (Mobile High-Definition Link) ivumela i-TV ukuthi ixhumane nemishini ehambisana ne-MHL exhumekile. I-TV ingasheya idivayisi exhunyiwe ehambisana ne-MHL nezithombe/umculo/amavidiyo kusuka kuyo. Ungasebenzisa irimothi ye-TV ukulawula umshini oxhunyiwe ehambisana ne-MHL.


- Uma "Shintsh" Kokufakw. Ngokuzenzek (MHL) kusethelwe kokuthi "Vuliwe". I-TV izishintshela yona iye ku-"HDMI / MHL" noma i-"HDMI 2 / MHL" (kuya ngemodeli ye-TV yakho) kusuka kokunye kokufaka lapho idivayisi ehambisana ne-MHL exhunyiwe ku-jack ye-HDMI IN / MHL noma ye-HDMI IN 2 / MHL. Ukuba khona "Shintsh" Kokufakw. Ngokuzenzek (MHL) kuncika ekutheni umshini ohambelana ne-MHL uyakweseka yini lokhu.
- Ungaphubeka nokusebenzisa umshini ohambelana ne-MHL oxhumekile ukuthi usebenze ngendlela ejwayelekile (njengokwamukela izingcingo) kuncike emandleni awo.
- Okunye ukusebenza kwirimothi kungenzeka kungatholokali, kuncika kokuphelele komshini ohambisana ne-MHL oxhunyiwe. Ucelwa ukuba ubheke ibhukuncazelo lomshini ukuze uthole imininingwane.
- Lo mkhiziqo ugunyaziswe ngokwe-MHL.
- Ngokusemthethweni ngokusebenza ngaphandle kwamadivayisi angunyaziswe e-MHL. Uma uhlangebezana nezinkinga uma usebenzisa umsebenzi we-MHL, sicela uxhumane nomkhiziqo wedivayisi ngasekelo.

3: Ukugwema ukuthi i-TV iwe phansi

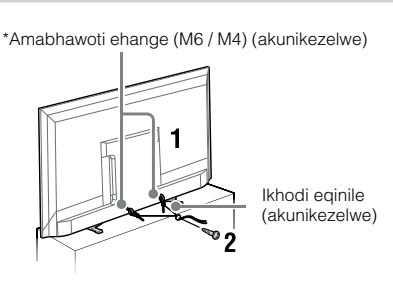


- * Amabhawoti ehange (M6 / M4) (akunikezelwe)
- * I-KLV-46/40R472A, KLV-46/40R452A, KLV-40R457A, KLV-32R422A, KLV-32R407A, KLV-32/24R402A: Sebenzisa amabhawoti ehange angu-M6
- * KLV-24R422A, KLV-24R402A: Sebenzisa amabhawoti ehange angu-M4

4: Ukulungiselela kwasekuqaleni

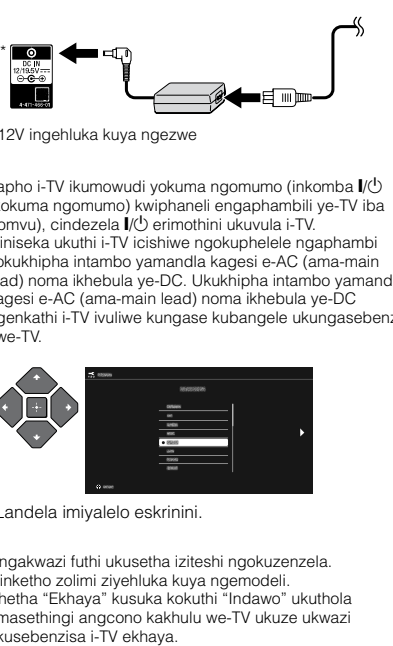


Okufingqiwe kwezilawuli ze-TV nezinkomba

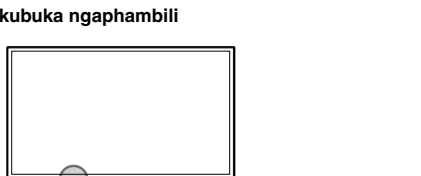

- Okokuzwa kwirimothi
- Inkomba yamandla kagesi/emile
 - Kukhanyisa umbala obomvu lapho kumile.
 - Kukhanyisa umbala oluhlaza lapho i-TV ivuliwe.
 - Kuyabonakala ngenkathi irimothi isetshenziswa.


- Ungabeki lutho ngaphezu kokokuzwa, ukwenza kanjalo kungase kuhinyabeze ukusebenza kwayo.

Ukubuka kwasemuva

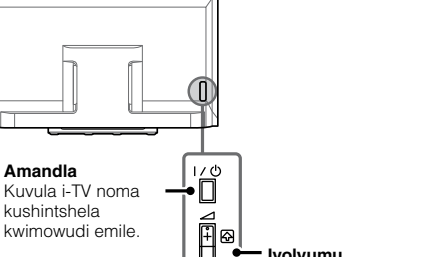

- CH/INPUT
 - Kukhetha ibhathini kuze kube yilapho okuthi "I-Uhlobo +/-" kuvela bese kukhetha iziteshi ezinebhathini yeVolomvu.
 - Cindezela ibhathini kuze kube yilapho okuthi "I-Ukhetha okufakwayo" kuvela bese kukhetha umthombo wokokufaka ngebhathini yeVolomvu.
- Ivolomvu
 - Kulungisa ivolomvu.
 - Kuhamba phansi noma phezulu kwizinketho lapho ukhetha iziteshi noma umthombo wokokufaka.

Okufingqiwe kwerimothi

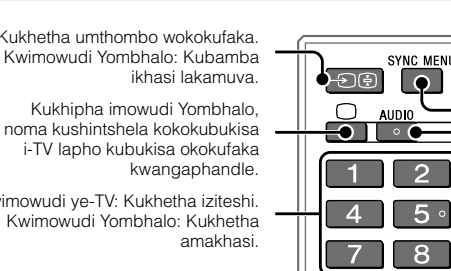


- Kukhetha umthombo wokokufaka. Kwimowudi Yombhalo: Kubamba ikhasi lakamuva.
- Kukhipha imowudi Yombhalo, noma kushintshela kokokubukisa i-TV lapho kubukisa okokufaka kwangaphandle.
- Kwimowudi ye-TV: Kukhetha iziteshi. Kwimowudi Yombhalo: Kukhetha amakhasi.
- Kubukisa ulwazi lombhalo.
- Kutholakala lapho isiqondiso sokusebenza sivela kuskurini.
- Kusetha ifremu yesithathi esisisekayo ukucisha i-TV ngokuzenzakalela.
- Kubuyela kuskurini esandulele. Kumowudi ye-USB: Kumisa ukuphinda kudala.
- Kubukisa noma kukhansela imenyu.
- Kulungisa ivolyumu.
- Kuthulisa noma kubuyisela umsindo.


- Kuvula i-TV noma kushintshela kwimowudi emile.
- Kubukisa Imenyu BRAVIA Sync bese kukhetha isetshenziswa esixhunyiwe se-HDMI/MHL kusuka kokuthi "Ukukhethwa Kwedivayisi".
- Umsindo-nhlangothimbili.
- Kukhetha imowudi ebanzi efiselekayo.
- Kubukisa ulwazi olumayelana nohlelo/okokufaka noma kuvuza ulwazi kwimowudi Yombhalo.
- Kukhetha, kulungisa noma kuqinisekisa izinto ezikhetheliwe.
- Kubukisa uhlu lwazindlela ezinqamulelayo kwamanye amamenyu weseithing.
- Kubuyela kwiteshi esandulele noma okokufaka okubukisa (imizwana engaphezu kweng-15)
- Kwimowudi ye-TV: Kukhetha iziteshi esilandelayo noma esandulele. Kwimowudi Yombhalo: Kukhetha ikhasi elilandelayo noma elandulele.
- Kusebenzisa i-BRAVIA Sync nesetshenziswa esihambisanayo se-USB esixhunyiwe ku-TV.

Ukushintsha Imodi Ebanzi

Ngokwe-TV, Ividiyo, Into noma i-HDMI (ngaphandle kokokufaka kwe-PC)/ MHL



Okokufaka kwe-HDMI PC (isikhati se-PC)

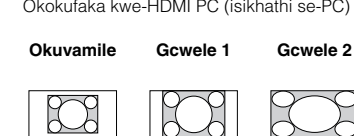

- Izingxenye ezingaphezulu nangaphansi kwesithombe zingase zinqamulele.
- Ezinye izinketho zingase zingatholokali kuya ngomthombo wesigali.

BRAVIA

http://www.sony.net/
© 2013 Sony Corporation

KLV-46R472A / 46R452A / 40R472A / 40R457A / 40R452A / 32R422A / 32R407A / 32R402A / 24R422A / 24R402A

- Ingeniso**
Siyabonga ngokukhetha lo mkhiziqo wakwaSony. Ngaphambi kokusebenzisa i-TV, sicela ufunde le manuwali kahle bese bese uyigcinela ingomuso.
- U-"X" ovela egameni lemodeli ubhelanala nedjithi yemobolo, ehlolene nomklamo, umbala noma isistimu ye-TV.
- Imiyalelo mayelana "Nokufaka Ibhulakhethi Lokubeka Odongeni" ifakwe kuleli bhukuncazelo lemiyalelo ye-TV.
- Imiwebho eyincazelo esetshenziswe kule manuwali ingahluka ngokuyo ngqothozo kwakho kwe-TV.
- Imiwebho eyincazelo yesilawuli kude esetshenziswe kule manuwali iye-HY-GA224 ngaphandle kokuthi kusho.
- Ngaphambi kokusebenzisa i-TV, sicela ufunde Ulwazi Lokuphepha. Buyisela lemanuwali ngokubheka okulandelayo.

Indawo okubhalwe kuyo ilebula yokuyihlonza
Amalebuli wenombolo yohlobo nokulinganiswa kwe-TV kokukhetha kwamandla (ngokuya nomthetho wokuphepha osebenezayo) kubekwe emuva kwe-TV. Amalebuli Enombolo Yemodeli ye-adaptha nembolo yesinyeli kutholakala ngenzansi kwe-adaptha ye-AC.

- Imininingwane yophawu lokuhweba**
 - i-HDMI, logo ye-HDMI, ne-High-Definition Multimedia Interface zimpawu zokuhweba noma zimpawu zokuhweba ezibhaliswe ze-HDMI Licensing LLC e-United States nakemanye amazwe.
 - Kukhiziqwe ngaphansi kwelaysense kusuka ku-Dolby Laboratories.
 - I-"BRAVIA" kanye ne-BRAVIA zimpawu zokuhweba ze-Sony Corporation.
 - i-MHL, Mobile High-Definition Link, kanye nelogo ye-MHL, zimpawu zokuhweba noma zimpawu zokuhweba ze-MHL Licensing, LLC.
 - Kukhiziqwe ngaphansi kwelaysense kusuka ku-DTS Licensing Limited. Ngokuzobala kwe-U.S. nomklaba ijelele neminingwane yophawu lokuhweba, bona www.dts.com/patents/legacy.aspx.
 - (c) DTS Licensing Limited ne-DTS, Inc. 2012.

HDMI


MHL

dts

dts

Ukubuka izithombe kusuka kwisethshenziswa esixhunyiwe

Vula isethshenziswa esixhunyiwe, bese ucindezela kwisilawuli serimothi noma CH/INPUT ku-TV ukubonisa uhlu lwisethshenziswa esixhunyiwe.

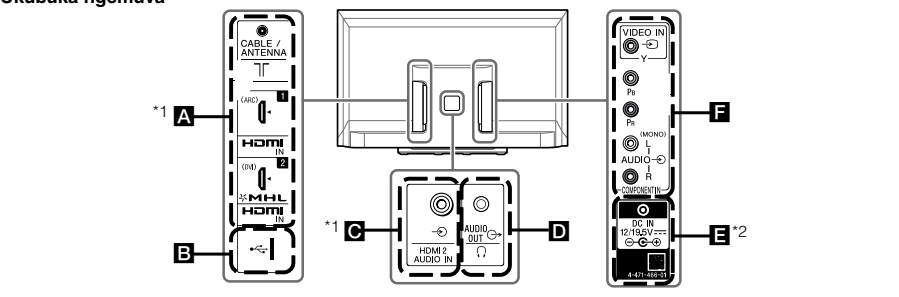

- *1 Amatheminali namalebula kungase wehluke kuya ngemodeli ye-TV.
- *2 U-12V ungase wehluke kuya ngezwe.

A i-HDMI / MHL, HDMI IN 2 / MHL ne-HDMI IN 1 (Amasistimu we-Home Theatre, i-Camcorder, isidali sediski ye-Blu-ray, isidali se-DVD, i-PC enokokukhipha kwe-HDMI namadivayisi womakhalekhukhuni).
Xhuma i-jack ye-HDMI IN uma isethshenziswa sine-jack ye-HDMI.
Uma isethshenziswa sine-jack ye-DVI, xhuma i-jack ye-DVI ku-jack ye-HDMI IN / MHL noma ye-HDMI IN 2 / MHL ngokokukhumbisa kwe-adaptha ye-DVI - xhuma i-jack ye-MHL yesethshenziswa ku-jack we-HDMI IN / MHL noma i-HDMI IN 2 / MHL ngekhebula ye-MHL - HDMI cable (akunikezelwe).
Uma uxhuma isistimu yomsindo wedijithali ehambisana noduchwepheshe Besithi Somsindo Esibuyayo (ARC), sebenzisa i-HDMI IN 1 (ARC). Uma kungenjalo, sebenzisa uxhumano olwengeziwe lwe-AUDIO OUT (Bheka **U-D**) uma kudingeka.

- Ama-jack we-HDMI angakwazi ukusela isikhati se-PC kwimowudi ye-HDMI PC. Bheka isidali lefererensi yesigali yokokufaka kwe-PC ngaphansi kokuthi "Amasething e-PC".
- Qiniseka ukuthi usebenzisa ikhebula ye-HDMI egunyaziswe kuphela enelogo ye-HDMI, noma ikhebula egunyaziswe ye-MHL enelogo ye-MHL.
- i-HDMI IN 1 (ARC) itholakala kuya ngemodeli yakho ye-TV.

↔ (Khamera emile yedijithali, i-Camcorder, i-media yesitoreji se-USB)
Finyelela kamafayela isithombe/umculo/kumavidiyo agcinwe kudivayisi ye-USB.


Ⓢ HDMI AUDIO IN noma i-HDMI 2 AUDIO IN (i-PC namanye amadivayisi omsindo)
Xhuma → i-HDMI AUDIO IN noma i-HDMI 2 AUDIO IN. Kuyanconywa ukusebenzisa okokufaka umsindo (i-minijack yesitoreji).

Ⓢ AUDIO OUT (i-Amasistimu wesiitoreji, ama-Headphone)
Xhuma ikhebula yomsindo noma ama-headphone. Ungakwazi ukulalela umsindo we-TV ngesistimu yakho yesitoreji noma ama-headphone. Ungakwazi ukusetha "Okuhlezi" kwimenyu "I-Audio Out".

Ⓢ DC IN 12/19.5 V
Xhuma i-adaptha ye-5V ku-DC IN 12/19.5 V jack.

Ⓢ VIDEO IN (i-COMPONENT IN/AUDIO (i-Isidali se-DVD, i-VCR, isisethshenziswa somdalo wevidiyo, i-camcorder ye-S VHS/H8/DVC, isidali se-DVD sokukhipha into)
Xhuma ku-VIDEO IN i-Ⓢ jack nama-Ⓢ jack we-AUDIO. Uma uxhuma isethshenziswa se-mono, xhuma ku-jack we-L (MONO).
Ukuze uthole ikhwalithi yesithombe engcono kakhulu, uxhumano lwento luyanconywa uma isidali sakho se-DVD sinokokukhipha ividiyo yento. Xhuma kuma-jack we-COMPONENT IN.

Ukusebenzisa Imisebenzi Yemenyu

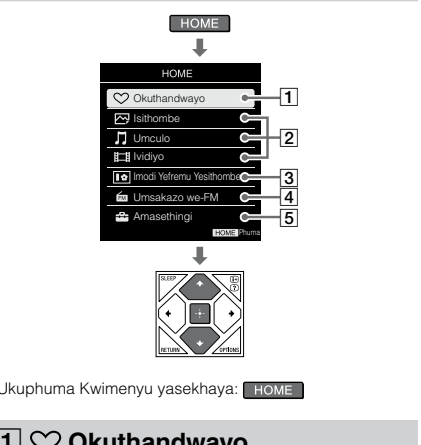


1 Okuthandwayo

Gcina iziteshi ezifika kwezingu-18 noma okokufaka kwangaphandle.

Ukufaka isithesi sakamava noma okokufaka kwangaphandle ohlini Lokuthandwayo




Ukubukela isithesi noma okokufaka kwangaphandle

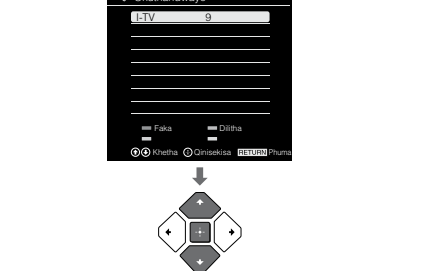

Ukuphuma Ohlini Lokuthandwayo

- Lapho usebenzisa "Ukushuna Ngokuzenzekela", iziteshi zohlobo kuphela ezisihlini lwakho Lokuthandwayo ezizobonakala.

2 Isithombe / Umculo / Ividiyo

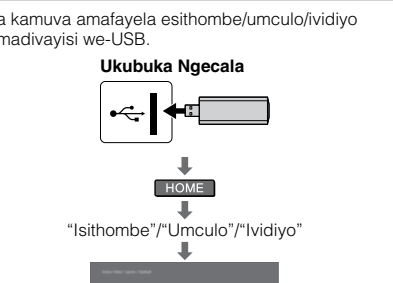

Dlala kamava amafayela esithombe/umculo/ividiyo ngamadivayisi we-USB.


Ukubuka Ngecala



Ukulungisa isethingi yesithombe nomsindo (Ividiyo)

- Lapho i-TV ili nyeliselwa idatha kwidivayisi ye-USB, ungacishi i-TV noma idivayisi ye-USB exhunyiwe, nqamula ikhebula ye-USB, noma khipha idivayisi ye-USB.
- I-Sony ngeke ibe necala lanoma yikuphi ukonakala, noma ukulahlakela, kwedatha kwi-media yokugqoka ngexa yokungasebenzi kahle kwanoma yimaphi amadivayisi axhunyiwe noma i-TV.
- Igama lelayela negama lefolda kungase kungabonakali kahle kwezinye izimo.
- Lapho uxhuma ikhamera emile yedijithali ye-Sony setha imowudi yoxhumano le-USB yekhamera kube Okuzenzakalela noma Isethingi Sesinyokho. Ukuze uthole ulwazi olwengeziwe olumayelana nemowudi yoxhumano le-USB, bheka iziqondiso ezinikezwe nekhamera yakho yedijithali.
- Hlola weithusayithi engezansi ukuthola ulwazi olubuyekizwe olumayelana namadivayisi we-USB ahambanisanyo.
- http://www.sony-asia.com/bravia/faq.html
- Sebenzisa idivayisi yesitoreji se-USB ehambelana nezimiso zesigaba sedivayisi yesitoreji senyokho.

Ukulalela isithombe njengombukiso wamaslayidi (Isithombe)

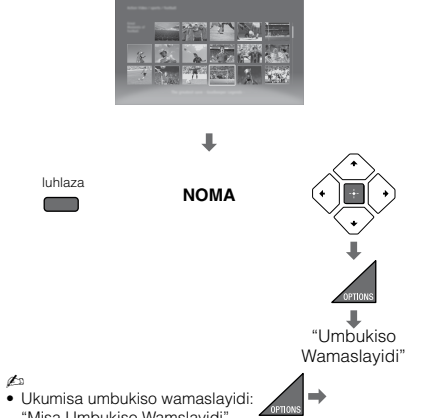

- Ukumisa umbukiso wamaslayidi: "Misa Umbukiso Wamaslayidi"

Ukuphuma Kwimenyu yasekhaya

- Lapho i-TV ili nyeliselwa idatha kwidivayisi ye-USB, ungacishi i-TV noma idivayisi ye-USB exhunyiwe, nqamula ikhebula ye-USB, noma khipha idivayisi ye-USB.
- I-Sony ngeke ibe necala lanoma yikuphi ukonakala, noma ukulahlakela, kwedatha kwi-media yokugqoka ngexa yokungasebenzi kahle kwanoma yimaphi amadivayisi axhunyiwe noma i-TV.
- Igama lelayela negama lefolda kungase kungabonakali kahle kwezinye izimo.
- Lapho uxhuma ikhamera emile yedijithali ye-Sony setha imowudi yoxhumano le-USB yekhamera kube Okuzenzakalela noma Isethingi Sesinyokho. Ukuze uthole ulwazi olwengeziwe olumayelana nemowudi yoxhumano le-USB, bheka iziqondiso ezinikezwe nekhamera yakho yedijithali.
- Hlola weithusayithi engezansi ukuthola ulwazi olubuyekizwe olumayelana namadivayisi we-USB ahambanisanyo.
- http://www.sony-asia.com/bravia/faq.html
- Sebenzisa idivayisi yesitoreji se-USB ehambelana nezimiso zesigaba sedivayisi yesitoreji senyokho.

Ifomethi yeVidiyo ye-USB

Isikhulisi	Isiqakathi	I-Codec yeVidiyo	I-Codec Yomsindo
.avi	AVI	MPEG1, MPEG2, Xvid, MPEG4, H.264, MJPEG	PCM, AC3, MPEG1 Layer1/2, MPEG2 AAC, MPEG4 AAC, WMA V8, MP3
.wmv, .asf	ASF	WMV V9, Xvid, MPEG4, VC-1	MP3, WMA V8
.mp4, .mov, .3gp	MP4	MPEG4, H.264, H.263, MJPEG	MPEG1 Layer1/2, MP3, MPEG2 AAC, MPEG4 AAC, MPEG4 HE-AAC, WMA V8, MP3
.mkv	MKV	WMV V9, MPEG4, H.264, VC-1	PCM, MP3, MPEG1 Layer1/2, MP3, MPEG2 AAC, MPEG4 AAC, MPEG4 HE-AAC, AC3, WMA V8
		VP8	DTS, DTS 2.0
.mpg, .mpeg, .vob, .vro	MPEG1	MPEG1	MPEG1 Layer1/2, MP3, AC3
.ts, .m2ts	MPEG2TS	MPEG2, H.264, VC-1	MPEG2 AAC, MPEG4 HE-AAC, AC3, MPEG4 AAC
		DTS, DTS 2.0	DTS, DTS 2.0

Ifomethi Yomculo we-USB

Isikhulisi	I-Codec Yomsindo
.mp3	MPEG1 Audio Layer 3
.wma	WMA V8
.wav	LPCM

Ifomethi Yesithombe se-USB


Isikhulisi	I-Codec Yesithombe
.jpg, .jpe, .jpeg	JPEG

I-DCF2.0 noma i-EXIF2.21 iyasekelwa.

- Ukuphinda kudlala kwamafomethi wafayela angenhla akunikekisiwe.
- Idivayisi ye-USB isekela i- FAT16, i- FAT32 ne-NTFS.

Imodi YeYefremu Yesithombe (I-KLV-46/40R472A, KLV-32/24R422A kuphela)

Ukubonisa Isithombe, Umculo, nekhalendwa yeWashi ngesikhati esisodwa

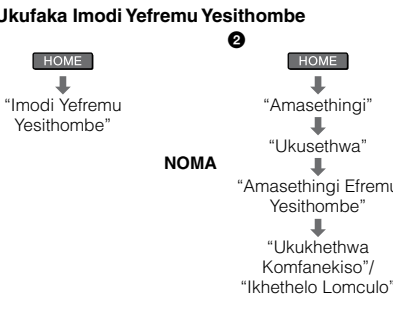

- Ukuphuma kwimowudi YeYefremu Yesithombe:


4 Umsakazo we-FM



Ukubonisa isithombe ngenkathi ualale Umsakazo we-FM

- Ukusekela isithesi esisisekayo
- Ukukhetha Umsakazo we-FM
- Ukufinyelela imowudi Umsakazo we-FM:
- Ukufinyelela imowudi Umsakazo we-FM:

Ukulalela iziteshi ezisethwe ngaphambili:

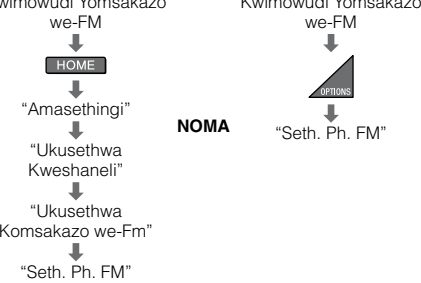

Ukulalela iziteshi ezingasethiwe ngaphambili:




5 Amasething




Ukubonisa isithombe ngenkathi ualale Umsakazo we-FM

- Ukusekela isithesi esisisekayo
- Ukukhetha Umsakazo we-FM
- Ukufinyelela imowudi Umsakazo we-FM:
- Ukufinyelela imowudi Umsakazo we-FM:

Ukuphuma "Imodi YeYefremu Yesithombe"/"Umbukiso Wamaslayidi"/"Ifremu Yesithombe":

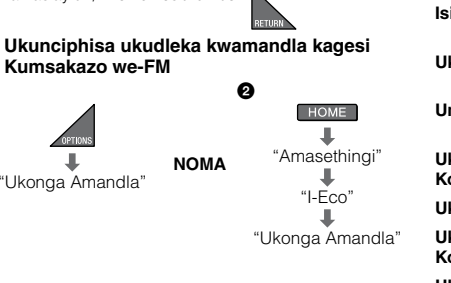

Ukuphuma kwimowudi Umsakazo we-FM

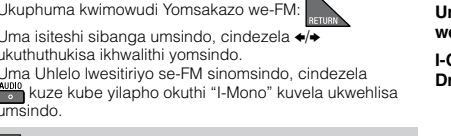


5 Amasething




Ukubonisa isithombe ngenkathi ualale Umsakazo we-FM

- Ukusekela isithesi esisisekayo
- Ukukhetha Umsakazo we-FM
- Ukufinyelela imowudi Umsakazo we-FM:
- Ukufinyelela imowudi Umsakazo we-FM:


Ilambu langemuva Isithombe

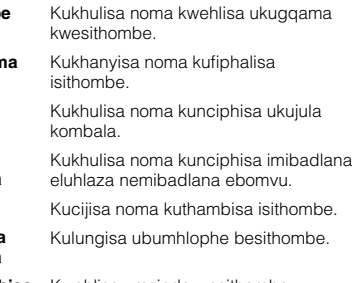

Ukuphuma kwimowudi Umsakazo we-FM

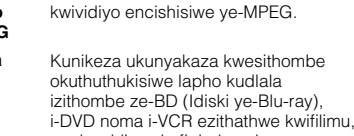

5 Amasething

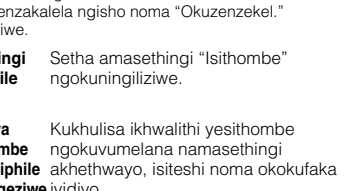

Ukubonisa isithombe ngenkathi ualale Umsakazo we-FM

- Ukusekela isithesi esisisekayo
- Ukukhetha Umsakazo we-FM
- Ukufinyelela imowudi Umsakazo we-FM:
- Ukufinyelela imowudi Umsakazo we-FM:

5 Amasething

- Ukusekela isithesi esisisekayo
- Ukukhetha Umsakazo we-FM
- Ukufinyelela imowudi Umsakazo we-FM:
- Ukufinyelela imowudi Umsakazo we-FM:

