



Nokia 8 Sirocco

User Guide

Table of Contents

| | | |
|----------|---|-----------|
| 1 | About this user guide | 5 |
| 2 | Get started | 6 |
| | Keep your phone up to date | 6 |
| | Keys and parts | 6 |
| | Insert or remove the SIM card | 8 |
| | Charge your phone | 9 |
| | Switch on and set up your phone | 9 |
| | Setting up fingerprint ID | 10 |
| | Lock or unlock your phone | 10 |
| | Use the touchscreen | 10 |
| 3 | تای دابم | 14 |
| | Personalise your phone | 14 |
| | Open and close an app | 14 |
| | Notifications | 15 |
| | Control volume | 16 |
| | Screenshots | 16 |
| | Battery life | 16 |
| | Save on data roaming costs | 17 |
| | Write text | 18 |
| | Date and time | 20 |
| | Clock and alarm | 20 |
| | Calculator | 21 |
| | Accessibility | 21 |
| 4 | Connect with your friends and family | 23 |
| | Calls | 23 |
| | Contacts | 23 |
| | Send and receive messages | 24 |
| | Email | 25 |
| | Get social | 26 |

| | | |
|-----------|--|-----------|
| 5 | Camera | 27 |
| | Camera basics | 27 |
| | Record a video | 28 |
| | Use your camera like a pro | 29 |
| | Your photos and videos | 30 |
| 6 | Internet and connections | 32 |
| | Activate Wi-Fi | 32 |
| | Use a mobile data connection | 32 |
| | Browse the internet | 33 |
| | Close a connection | 34 |
| | Bluetooth® | 35 |
| | NFC | 37 |
| | VPN | 38 |
| 7 | Music and videos | 39 |
| | Music | 39 |
| | Videos | 39 |
| 8 | Organize your day | 41 |
| | Calendar | 41 |
| | Notes | 41 |
| 9 | Maps | 43 |
| | Find places and get directions | 43 |
| | Download and update maps | 44 |
| | Use location services | 44 |
| 10 | Apps and services | 46 |
| | Google Play | 46 |

| | |
|--|-----------|
| 11 Software updates and backups | 48 |
| Update your phone software | 48 |
| Back up your data | 48 |
| Restore original settings and remove private content from your phone | 48 |
| Storage | 49 |
| 12 Protect your phone | 51 |
| Protect your phone with your fingerprint | 51 |
| Change your SIM PIN | 51 |
| Access codes | 52 |
| 13 تمامولعم ی کی یتمالس روا ٹکڈورپ | 54 |
| For your safety | 54 |
| Network services and costs | 57 |
| Emergency calls | 57 |
| سری رک ل اھب ھکی دی کی کے ل آ ے نپا | 58 |
| ل کی یئ اس یر | 59 |
| ت مال ع کی کی رک وٹ راد ے ہی ہپ ہدش سارک | 60 |
| Battery and charger information | 60 |
| چے چ بے ٹ وھچ | 61 |
| تال آ ی ب ط | 61 |
| تال آ ل کی ی ڈیم ے ی گ ے ی ل خاد سی م مسج | 62 |
| ت ع امس | 62 |
| سی ی اچ ب ے س تال وم شم رضم وک ہل آ ے نپا | 62 |
| س ای ژاگ | 63 |
| ل و ح ام زی خ ہک ام ھد رپ روط ی نا کم ا | 63 |
| Wet or dusty conditions | 63 |
| (SAR) تمامولعم ی کی قی دصت | 64 |
| سی م ے راب ے کے م اظتنا کے ق و ق ح ل ٹ ی ج ی ڈ | 65 |
| Copyrights and notices | 65 |

1 About this user guide



Important: For important information on the safe use of your device and battery, read “Product and safety information” before you take the device into use. To find out how to get started with your new device, read the user guide.

2 Get started

KEEP YOUR PHONE UP TO DATE


Your phone software

Keep your phone up to date and accept available software updates to get new and enhanced features for your phone. Updating the software may also improve your phone's performance.

KEYS AND PARTS

Explore the keys and parts of your new phone.

Your phone

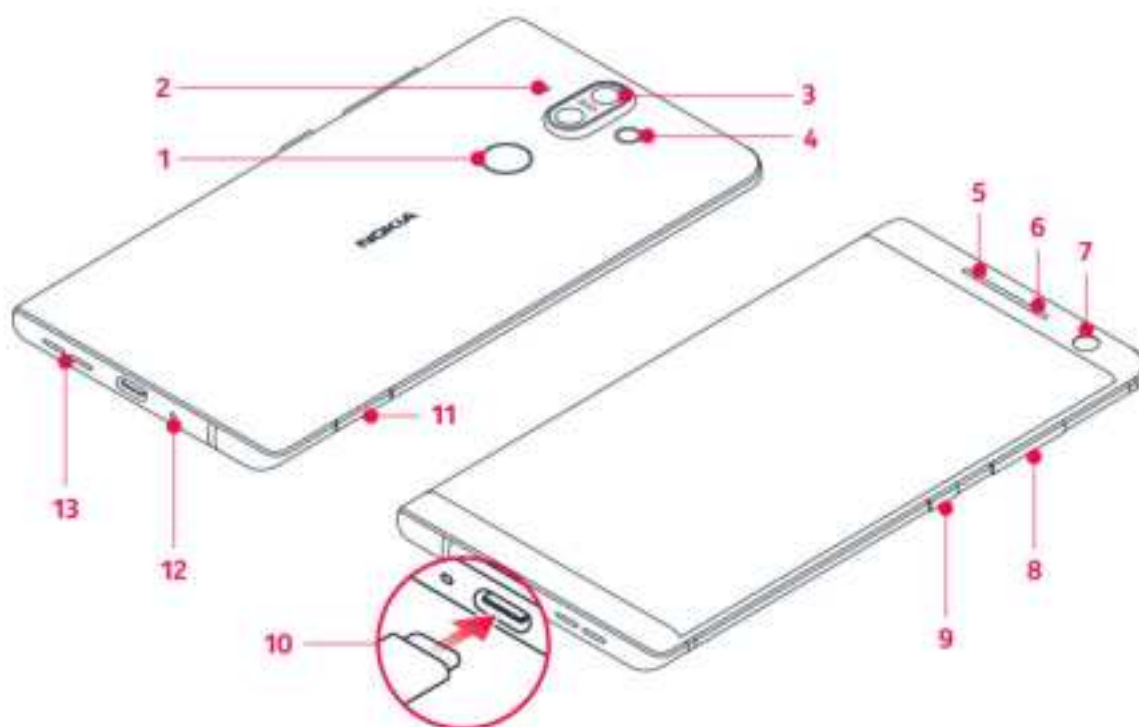

This user guide applies to the following models: TA-1005.


- | | |
|-----------------------|-----------------|
| 1. Fingerprint sensor | 5. Microphone |
| 2. Microphone | 6. Earpiece |
| 3. Main cameras | 7. Front camera |
| 4. Flash | 8. Volume keys |

- | | |
|--|-------------------|
| 9. Power/Lock key | 11. SIM card tray |
| 10. Charger and headset connector (USB Type-C audio output) ¹ | 12. Microphone |
| | 13. Loudspeaker |

Some of the accessories mentioned in this user guide, such as chargers, headsets, and data cables, may be sold separately.

- ❗ **Important:** The device screen and back cover are made of glass. This glass can break if the device is dropped on a hard surface or receives a substantial impact. If the glass breaks, do not touch the glass parts of the device or attempt to remove the broken glass from the device. Stop using the device until the glass is replaced by authorised service personnel.
- ❗ **Important:** It is recommended to use the protective cover included in the sales box which protects the device if dropped.

Use the headset adapter

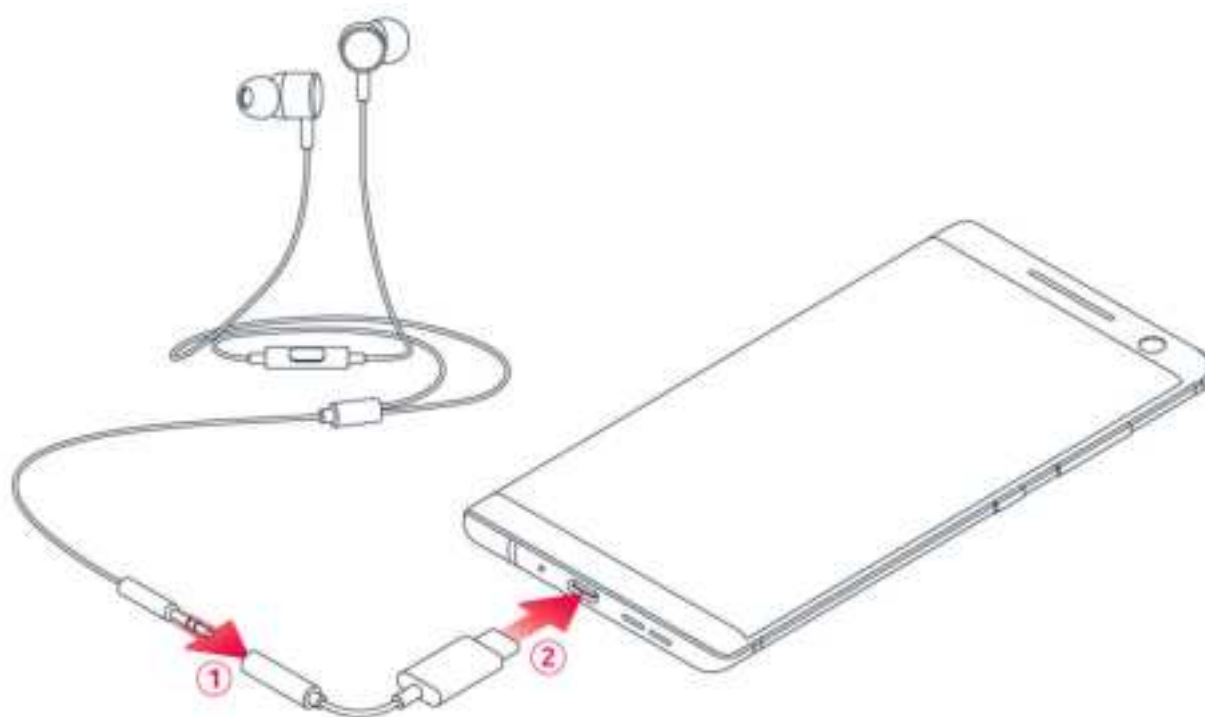

Your phone has a USB Type-C audio output. You can use a regular 3.5 mm plug headset with your new phone: just plug the headset into the adapter that came with your phone, and then plug the USB end of the adapter into your phone.

Parts and connectors, magnetism

Do not connect to products that create an output signal, as this may damage the device. Do not connect any voltage source to the audio connector. If you connect an external device

or headset, other than those approved for use with this device, to the audio connector, pay special attention to volume levels.

Parts of the device are magnetic. Metallic materials may be attracted to the device. Do not place credit cards or other magnetic stripe cards near the device for extended periods of time, since the cards may be damaged.

¹ Your phone supports digital audio output only.

INSERT OR REMOVE THE SIM CARD

Insert the SIM card



1. To open the SIM card tray, insert the tray opener into the hole next to the tray and push.
2. Put the nano-SIM into the slot located on the tray with the contact area face down.
3. Slide the SIM card tray back into the slot.¹

Remove the SIM card

Open the SIM card tray, remove the card, and slide the tray back into its slot.

¹ Use only original nano-SIM cards. Use of incompatible SIM cards may damage the card or the device, and may corrupt data stored on the card.

CHARGE YOUR PHONE

Charge the battery



1. Plug a compatible charger into a power socket.
2. Connect the cable to your phone.

You can charge your phone wirelessly. Use only Qi-compatible chargers for wireless charging.

Your phone supports the USB-C cable. You can also charge your phone from a computer using a USB cable, but it may take longer.

If the battery is completely discharged, it may take several minutes before the charging indicator is displayed.

SWITCH ON AND SET UP YOUR PHONE

When you switch your phone on for the first time, your phone guides you to set up your network connections and phone settings.

Switch on your phone

1. To switch on your phone, press and hold the power key until the phone vibrates.
2. When the phone is switched on, choose your language and region.
3. Follow the instructions shown on your phone.

Transfer data from your previous phone

You can transfer data from an old phone to your new phone using your Google account.

To back up data on your old phone to your Google account, refer to your old phone's user guide.

1. Tap **Settings** > **Users & accounts** > **Add account** > **Google**.
2. Select which data you want to restore on your new phone. The sync starts automatically once your phone is connected to the internet.

Restore app settings from your previous Android™ phone

If your previous phone was an Android, and back up to Google account is enabled on it, you can restore your app settings and Wi-Fi passwords.

1. Tap **Settings** > **System** > **Backup**.
2. Switch **Backup to Google Drive** to **On**.

SETTING UP FINGERPRINT ID

You can unlock your phone with just a touch of your finger. Set up your fingerprint ID for extra security.

Add a fingerprint

1. Tap **Settings** > **Security & Location** > **Fingerprint**. If you don't have screen lock set up on your phone, tap **Screen lock**.
2. Select which backup unlocking method you want to use for the lock screen and follow the instructions shown on your phone.

LOCK OR UNLOCK YOUR PHONE

Lock your phone

If you want to avoid accidentally making a call when your phone is in your pocket or bag, you can lock your keys and screen.

To lock your keys and screen, press the power key.

Unlock the keys and screen

Press the power key, and swipe up across the screen. If asked, provide additional credentials.

USE THE TOUCHSCREEN

Important: Avoid scratching the touchscreen. Never use an actual pen, pencil, or other sharp object on the touchscreen.


Your phone display

Leaving the phone screen on with maximum brightness level for a long time may cause the display image to remain on the screen even when the screen switches off or when a new image appears on the screen.

To avoid this:


- Lock your screen when you're not using the phone and set the phone screen to switch off after a short time. Tap **Settings** > **Display** > **Advanced** > **Sleep** and select the time.
- Keep your phone up to date and accept available software updates
- Lower the screen brightness: Tap **Settings** > **Display** > **Brightness level**. To adjust the brightness, drag the brightness level slider. Make sure that **Adaptive brightness** is disabled.

Tap and hold to drag an item

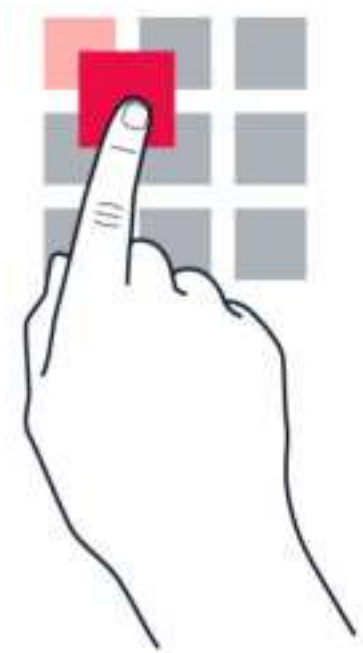


Place your finger on the item for a couple of seconds and slide your finger across the screen.

Swipe

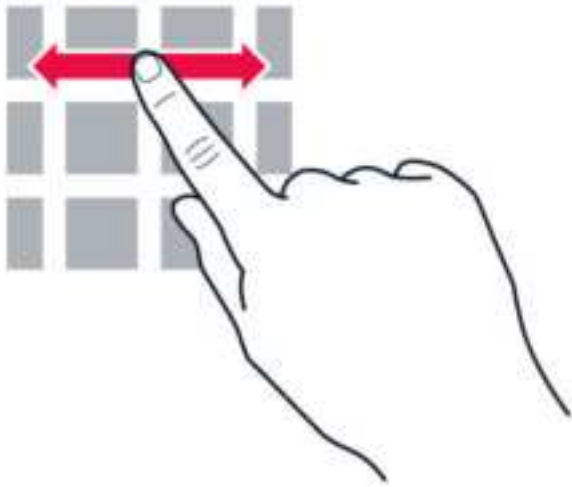


Place your finger on the screen and slide your finger in the direction you want.

Scroll through a long list or menu

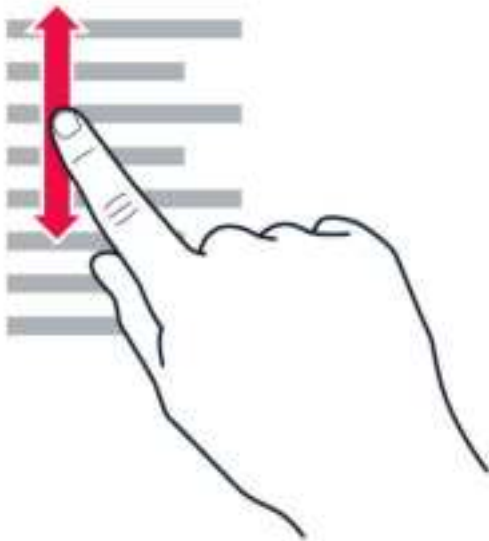

Slide your finger quickly in a flicking motion up or down the screen and lift your finger. To stop the scrolling, tap the screen.

Zoom in or out

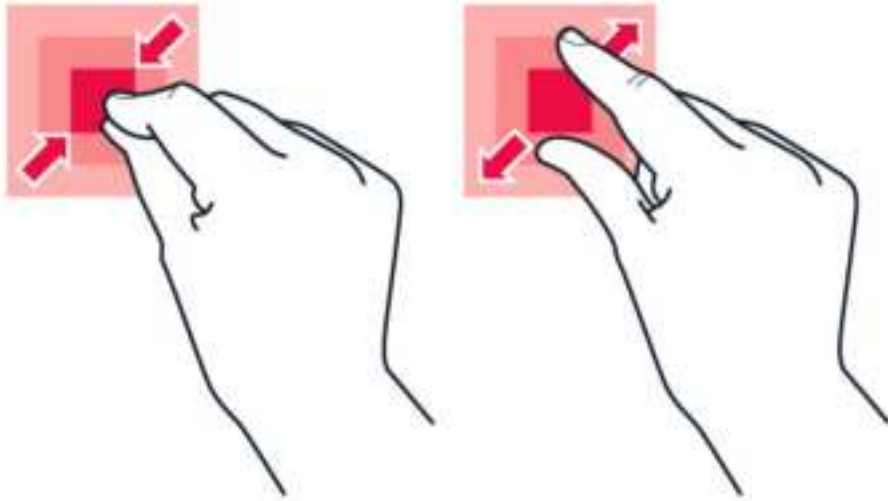


Place 2 fingers on an item, such as a map, photo, or web page, and slide your fingers apart or together.

Lock the screen orientation


The screen rotates automatically when you turn the phone 90°.


To lock the screen in portrait mode, swipe down from the top of the screen and tap **Auto-rotate** to switch to **Portrait**.

Use the navigation keys



To see which apps you have open, tap the Overview key .

To switch to another app, tap the app you want. To close an app, tap the × icon next to it.

To go back to the previous screen, tap the Back key . Your phone remembers all the apps and websites you've visited since the last time your screen was locked.

To go to the home screen, tap the Home key . The app you were in stays open in the background.

Open two apps at once

For easier navigation between apps, press and hold the overview  key to divide the screen between two apps. To go back to normal view, press and hold the overview  key again.

3 تاي دابم

PERSONALISE YOUR PHONE

Learn how to personalise the Home screen and how to change ringtones.

Change your wallpaper

Tap **Settings** > **Display** > **Wallpaper**.

Change your phone ringtone


Tap **Settings** > **Sound** > **Phone ringtone**.

Change your message notification sound



Tap **Settings** > **Sound** > **Advanced** > **Default notification sound**.

OPEN AND CLOSE AN APP

Open an app

On the home screen, tap an app icon to open it. To open one of the apps running in the background, tap , and select the app.


Close an app

Tap , and then tap  on the app you want to close.

Find your apps

On the home screen, swipe up from the bottom of the screen to see all your apps.

Close all running apps

Press , swipe up through all apps, and tap **CLEAR ALL**.

NOTIFICATIONS

Stay in touch with what's happening on your phone with notifications.

Use the notification panel

When you receive new notifications, such as messages or missed calls, indicator icons appear on the status bar at the top of the screen. To see more information about the notifications, drag the status bar down. To close the view, swipe up on the screen.


To open the notification panel, drag the status bar down. To close the notification panel, swipe up on the screen.

To change the notification settings for an app, tap **Settings** > **Apps & notifications** > **Notifications** > **App notifications** and tap the app name to open the app settings. You can turn notifications on or off for each app individually. To see the apps that are not allowed to send notifications, tap **All apps** > **Apps: Turned off**.




Tip: To see notification dots, tap **Settings** > **Apps & notifications** > **Notifications** and switch **Allow notification dots** on. A small dot will appear on the app icon if you've got a notification, but haven't attended to it yet. Tap and hold the icon to see available options. You can tap the notification to open it or swipe to dismiss it.

Use the quick setting icons

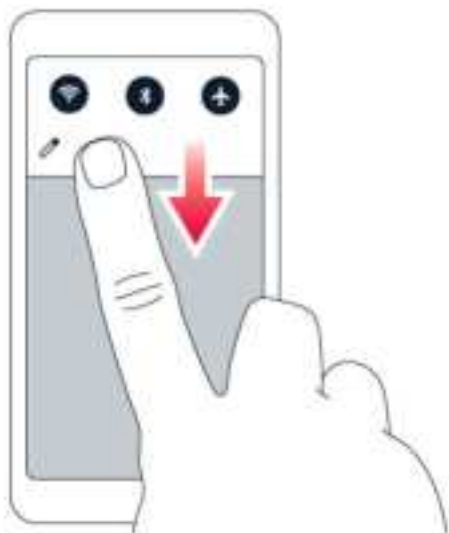

To activate certain features, tap the quick settings icons on the notification panel. To see more icons, drag the menu down.

To rearrange the icons, tap , tap and hold an icon, and then drag it to another location.


CONTROL VOLUME

Change the volume

If you have trouble hearing your phone ringing in noisy environments, or calls are too loud, you can change the volume to your liking by using the volume keys on the side of your phone.

Do not connect to products that create an output signal, as this may damage the device. Do not connect any voltage source to the audio connector. If you connect an external device or headset, other than those approved for use with this device, to the audio connector, pay special attention to volume levels.

Change the volume for media and apps

Press a volume key on the side of your phone to see the volume status bar, tap , and drag the slider on the volume bar for media and apps left or right.

Set the phone to silent

To set the phone to silent, press and hold the volume down key and then press the key again. The first press sets the phone to vibrate only and the second press sets it to silent.



Tip: Don't want to keep your phone in silent mode, but can't answer right now? To silence an incoming call, press the Volume down key. You can also set your phone to mute the ringing when you pick the phone up: tap **Settings** > **System** > **Gestures** > **Mute on pickup**, and switch to on.

If you want to be able to reject an incoming call by turning over the phone, tap **Settings** > **System** > **Gestures** > **Turn over to reject call**, and switch to on.

SCREENSHOTS

Take a screenshot

To take a screenshot, open the notification panel and drag the status bar downwards. Tap **Screen capture**. You can view captured images in **Photos**.


It is not possible to capture a screenshot while using some apps and features.

BATTERY LIFE

Get the most out of your phone while getting the battery life you need. There are steps you can take to save power on your phone.

Extend battery life

To save power:

1. Always charge the battery fully.
2. Mute unnecessary sounds, such as touch sounds. Tap **Settings** > **Sound** > **Advanced**, and under **Other sounds and vibrations**, select which sounds to keep.
3. Use wired headphones, rather than the loudspeaker.
4. Set the phone screen to switch off after a short time. Tap **Settings** > **Display** > **Advanced** > **Sleep** and select the time.
5. Tap **Settings** > **Display** > **Brightness level**. To adjust the brightness, drag the brightness level slider. Make sure that **Adaptive brightness** is disabled.
6. Stop apps from running in the background: tap  and close the apps you don't need.
7. Enable the Background activity manager. The notifications of some apps or emails may not be able to be retrieved instantly. You can manage the battery life by adding apps to or removing them from the whitelist. Tap **Settings** > **Battery** > **Background activity manager**.
8. Switch on the power saver: Tap **Settings** > **Battery** > **Battery saver** and switch to **On**.
9. Use location services selectively: Switch location services off when you don't need them. Tap **Settings** > **Security & Location** > **Location**, and switch to **Off**.
10. Use network connections selectively: switch Bluetooth on only when needed. Use a Wi-Fi connection to connect to the internet, rather than a mobile data connection. Stop your phone scanning for available wireless networks. Tap **Settings** > **Network & Internet** > **Wi-Fi**, and switch to **Off**. If you're listening to music or otherwise using your phone, but don't want to make or receive calls, switch flight mode on. Tap **Settings** > **Network & Internet** > **Flight mode**.

Flight mode closes connections to the mobile network and switches your device's wireless features off.

SAVE ON DATA ROAMING COSTS

You can cut data roaming costs and save on your phone bills by changing mobile data settings. To use the optimal connection method, change the Wi-Fi and mobile networks settings.

Data roaming means using your phone to receive data over networks that your network service provider doesn't own or operate. Connecting to the internet when roaming, especially when abroad, can raise data costs substantially.

Using a Wi-Fi connection is generally faster and less expensive than using a mobile data connection. If both Wi-Fi and mobile data connections are available, your phone uses the Wi-Fi connection.

Connect to a Wi-Fi network

1. Tap **Settings** > **Network & Internet** > **Wi-Fi**.

2. Make sure Wi-Fi networking is switched to **On**.
3. Select the connection you want to use.

Close the mobile data connection

Swipe down from the top of the screen, tap  **Mobile data** and switch **Mobile data** off.



Tip: To monitor your data usage, tap **Settings** > **Network & Internet** > **Data usage**.

Stop data roaming

Tap **Settings** > **Network & Internet** > **Mobile network**, and switch **Roaming** off.

WRITE TEXT

Learn how to write text quickly and efficiently using your phone's keyboard.

Use the on-screen keyboard

Writing with the on-screen keyboard is easy. You can use the keyboard when holding your phone in portrait or landscape mode. The keyboard layout can vary in different apps and languages.

To open the on-screen keyboard, tap a text box.

Switch between upper and lower case characters

Tap the shift key. To switch caps lock mode on, double-tap the key. To return to normal mode, tap the shift key again.

Enter a number or special character

Tap the numbers and symbols key. Some special character keys bring up more symbols. To see more symbols, tap and hold a symbol or special character.

Insert emojis

Tap the emoji key and select the emoji.

Copy or paste text

Tap and hold a word, drag the markers before and after the word to highlight the section you want to copy and tap **COPY**. To paste the text, tap where you want to paste the text and select **PASTE**.

Add an accent to a character

Tap and hold the character, then tap the accent or the accented character, if supported by your keyboard.

Delete a character

Tap the backspace key.

Move the cursor

To edit a word you just wrote, tap the word and drag the cursor to the place you want.

Use keyboard word suggestions

Your phone suggests words as you write, to help you write quickly and more accurately. Word suggestions may not be available in all languages.

When you start writing a word, your phone suggests possible words. When the word you want is shown in the suggestion bar, select the word. To see more suggestions, tap and hold the suggestion.



Tip: If the suggested word is marked in bold, your phone will automatically use it to replace the word you wrote. If the word is wrong, tap and hold it to see a few other suggestions.

If you do not want the keyboard to suggest words while typing, turn off the text corrections. Tap **Settings** > **System** > **Languages & input** > **Virtual keyboard**. Select the keyboard you normally use. Tap **Text correction** and switch off the text correction methods you do not want to use.

Correct a word

If you notice that you have misspelled a word, tap it to see suggestions for correcting the word.

Switch spell checker off

Tap **Settings** > **System** > **Languages & input** > **Advanced** > **Spell checker**, and switch **Spell checker** to **Off**.

DATE AND TIME

Keep track of time – learn how to use your phone as a clock, as well as an alarm clock, and how to keep your appointments, tasks, and schedules up to date.

Set date and time

Tap **Settings** > **System** > **Date & time**.

Update the time and date automatically

You can set your phone to update the time, date, and time zone automatically. Automatic update is a network service and may not be available depending on your region or service provider.

1. Tap **Settings** > **System** > **Date & time**.
2. Switch **Automatic date & time** on.
3. Switch **Automatic time zone** on.

Change the clock to the 24-hour format


Tap **Settings** > **System** > **Date & time**, and switch **Use 24-hour format** on.

CLOCK AND ALARM

Your clock is not just for alarms – learn what else you can do.


Use the countdown timer

No more overcooking – use the countdown timer to measure your cooking times.

1. Tap **Clock** >  **TIMER**.
2. Set the duration of the timer.



Use the stopwatch

Use the stopwatch to see how you improve on the running track.


Tap **Clock** >  **STOPWATCH**.

Set an alarm

You can use your phone as an alarm clock.

1. Tap **Clock** >  **ALARM**.
2. To add an alarm, tap .
3. To modify an alarm, tap it. To set the alarm to repeat on specific dates, select **Repeat** and highlight the days of the week.



Set an alarm to Snooze

If you don't want to get up just yet, when the alarm sounds, swipe the alarm left. To adjust the snooze length, tap **Clock** >  > **Settings** > **Snooze length** and select the desired length.

Switch an alarm off

When the alarm sounds, swipe the alarm right.

Delete an alarm

Tap **Clock** >  **ALARM**. Select the alarm and tap  **Delete**.

CALCULATOR

Forget your pocket calculator – there's a calculator on your phone.

Use the calculator

Tap **Calculator**.

To use the advanced calculator, swipe the bar from the right edge of the screen to the left.

ACCESSIBILITY

You can change various settings to make using your phone easier.

Increase or decrease the font size

Do you want to have larger fonts on your phone?

1. Tap **Settings** > **Accessibility**.
2. Tap **Font size**. To increase or decrease the font size, drag the Font size slider.

Increase or decrease the display size

Do you want to make the items on your screen smaller or larger?

1. Tap **Settings** > **Accessibility**.
2. Tap **Display size** and adjust the display size by dragging the display size level slider.

4 Connect with your friends and family

CALLS

Make a call

1. Tap .
2. Enter a number or tap  and select a contact you want to call.
3. Tap .

Answer a call

When the phone rings, swipe up to answer.



Tip: Don't want to keep your phone in silent mode, but can't answer right now? To silence an incoming call, press the Volume down key. You can also set your phone to mute the ringing when you pick the phone up: tap **Settings** > **System** > **Gestures** > **Mute on pickup**, and switch to on.

If you want to be able to reject an incoming call by turning over the phone, tap **Settings** > **System** > **Gestures** > **Turn over to reject call**, and switch to on.


Reject a call

To reject a call, swipe down.

CONTACTS

Save and organise your friends' and family members' phone numbers.


Save a contact from your call history

1. In **Phone**, tap  to see call history.
2. Tap the number you want to save.
3. Select if you want to **Create new contact** or **Add to a contact**.
4. Type in the contact information, and tap **Save**.


Add a contact

1. Tap **Contacts** > **+**.
2. Fill in the information.
3. Tap **Save**.


Edit a contact

1. Tap **Contacts** and tap the contact you want to edit.
2. Tap .
3. Edit the information.
4. Tap **Save**.


Search for a contact

1. Tap **Contacts**.
2. Tap .

Filter your contacts list

1. Tap **Contacts**.
2. Tap .
3. Tap **Settings** > **Contacts to display**.

Import or export contacts

1. Tap **Contacts**.
2. Tap .
3. Tap **Settings** > **Import/export**.

SEND AND RECEIVE MESSAGES

Keep in touch with your friends and family members through text messages.

Send a message

1. Tap **Messages**.
2. Tap **+**.
3. To add a recipient, type their number in the recipient's box. To add a contact, start typing their name and tap the contact.
4. After choosing all of the recipients, tap **✓**.
5. Write your message in the text box.
6. Tap **➤**.



Tip: If you want to send a photo in a message, tap **Photos**, tap the photo you want to share, and tap **↩**. Select **Messages**.

Read a message

1. Tap **Messages**.
2. Tap the message you want to read. You can also read a message from the notification panel. Slide down from the top of the screen and tap the message.

Reply to a message

1. Tap **Messages**.
2. Tap the message you want to reply to.
3. Write your reply in the text box below the message and tap **➤**.

EMAIL

You can use your phone to read and reply to emails when you're on the go.

Add an email account




When you use the Gmail app for the first time, you are asked to set up your email account.

1. Tap **Gmail**.
2. You can select the address connected with your Google account or tap **Add an email address**.
3. After adding all the accounts, tap **TAKE ME TO GMAIL**.



Delete an email account

1. Tap **Settings**.
2. Tap **Accounts**.
3. Tap the account you want to delete and then tap **⋮ > Remove account**.



Send mail

1. Tap **Gmail**.
2. Tap .
3. In the **To** box, type in an address, or tap  > **Add from Contacts**.
4. Type in the message subject and the mail.
5. Tap .

Read and reply to email

1. Tap **Gmail**.
2. Tap the message you want to read.
3. To reply to the message, tap  or tap  > **Reply all**.

Delete emails

1. Tap **Gmail**.
2. Tap the message you want to delete and tap .
3. To delete multiple messages, tap the circle with the recipient's initial to select messages and tap .

GET SOCIAL

Want to connect and share stuff with the people in your life? With social apps, you can stay up to date with what's happening with your friends.

Social apps

To keep in touch with your friends and family, sign in to your instant messaging, sharing, and social networking services. Select the service you want to use from your Home screen. Social apps are available in the **Google Play Store**. The available services may vary.


5 Camera

CAMERA BASICS

Why carry a separate camera when your phone has all you need for capturing memories? With your phone's camera, you can easily take photos or record videos.



Take a photo

Shoot sharp, vibrant photos – capture the best moments in your photo album.

1. Tap **Camera**.
2. Take aim and focus.
3. Tap .






Take a selfie

Need that perfect selfie? Use the phone's front camera to take one.

1. Tap **Camera**.
2. Tap  to switch to the front camera.
3. Take aim and focus.
4. Tap .

Take a bothie

In addition to the perfect selfie, you can take a split-screen photo with your phone's cameras. Use the front and rear cameras simultaneously.

1. Tap **Camera** and tap .
2. Tap  **Dual** for a split-screen photo. Or to take a picture-in-picture photo, tap .
3. Take aim and focus.
4. Tap .
5. To go back to Full screen mode, **single** tap .




Tip: When you take a picture-in-picture photo or record a picture-in-picture video, and want to move the smaller picture, tap and hold it and drag it to where you want it.

Take panoramas

Tap **Camera** > ≡ > 📷 **Panorama** and follow the instructions on your phone.

RECORD A VIDEO

Use the full 360° surround system

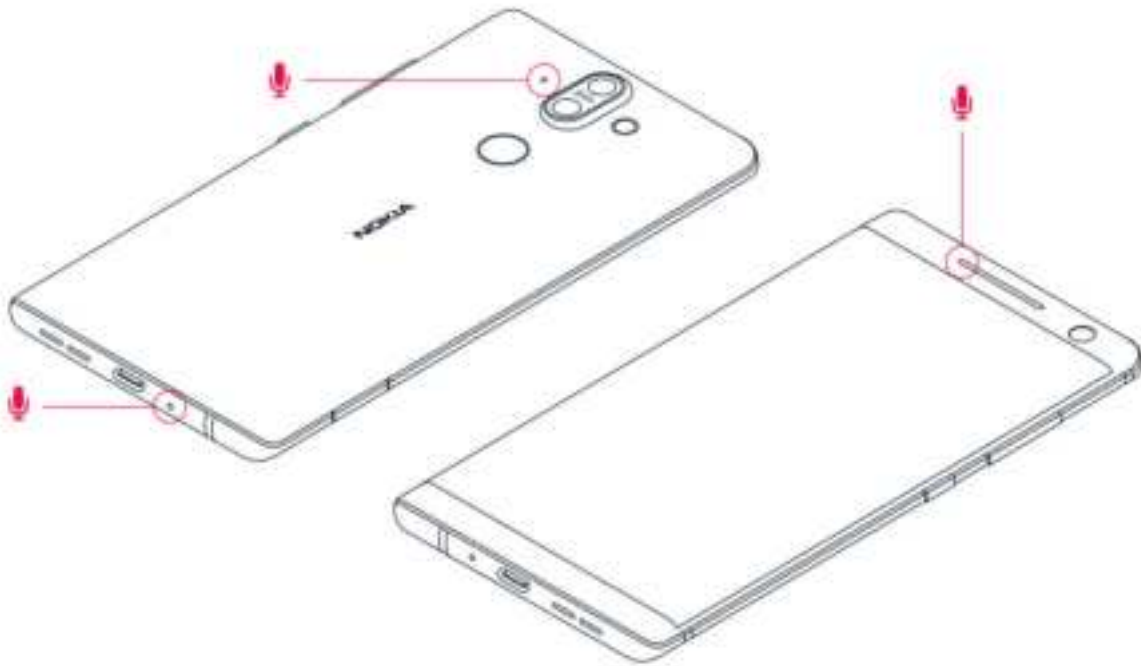



With your phone camera, you can easily record videos with full 360° surround sound. Tap **Camera**. To switch to Video recording mode, swipe to the left.

Your phone has three microphones that are used by OZO Audio technology to record and process audio spatially. In Video recording mode, to change the way audio is recorded, tap 🎧.

1. To clearly record what is in front of you, while silencing audio coming from behind, tap 🎧 **Front**. Use this setting when you, for example, interview someone.
2. To clearly record your own voice or audio coming from behind you, while silencing audio coming from in front, tap 🎧 **Rear**.
3. To record audio naturally from all directions, tap 🎧 **Surround**.





To optimise the audio quality for your videos, do not cover any of your phone's small microphone holes while recording a video. To record a full 360° surround sound, keep the phone horizontal, and hold it by the long edges.

Record a video

1. Tap **Camera**.
2. To switch to Video recording mode, swipe to the left.
3. Tap  **Video** to start recording.
4. To stop recording, tap .
5. To go back to Camera mode, swipe to the right.

Record a bothie video


You can record a split-screen video with your phone. Use the front and rear cameras simultaneously.

1. Tap **Camera**.
2. To switch to Video recording mode, swipe to the left. Tap .
3. Tap  **Dual** for a split-screen video. Or to record a picture-in-picture video, tap  **P-I-P**.
4. Tap  to start recording.


USE YOUR CAMERA LIKE A PRO

Use the different modes on your camera to enhance the quality of your photos.

Learn about your camera's settings



In the Camera app, tap  >  **Settings** to learn more about each setting.

Use the camera in Manual mode

With Manual mode, you can take close-ups, wide angle photos, change your camera's ISO settings, and adjust the AWB (Auto White Balance). To try out Manual mode, tap **Camera** >  **Pro**.



Use Live Bokeh mode

If you want to be able to change the focus area of your photo after you have taken it, use the Live Bokeh mode when taking a photo.





1. Tap **Camera**.
2. Tap  > **Live Bokeh**.
3. Take aim and focus. Tap  **Live Bokeh**.
4. Tap the photo you just took on the bottom right corner of the display.
5. Tap **Bokeh Editor** to edit your photo.

Take photos with a timer



Want to have time to get in the shot too? Try out the timer.

1. Tap **Camera**.
2. Tap . The button shows the timer setting. To change it, tap it again.
3. Select the duration of the timer.
4. Tap  **Photo**.

Record a slow motion video

1. To switch to Video recording mode, swipe to the left.
2. Tap .
3. Tap  **Slow Motion**.
4. Tap  **Slow Motion** to start recording.
5. To stop recording, tap .

Take high quality photos

In the Camera app, tap  >  **Settings** > **Resolution** and set the resolution that you want to use.

YOUR PHOTOS AND VIDEOS

View photos and videos on your phone

Want to relive those important moments? View photos and videos on your phone.

Tap **Photos**.

Copy your photos and videos to your computer


Do you want to view your photos or videos on a larger screen? Move them to your computer.

You can use your computer's file manager to copy or move your photos and videos to the computer.

Connect your phone to the computer with a compatible USB cable. To set the USB connection type, open the notification panel and tap the USB notification.

Share your photos and videos

You can share your photos and videos quickly and easily for your friends and family to see.

1. In **Photos**, tap the photo you want to share and tap .
2. Select how you want to share the photo or video.

6 Internet and connections

ACTIVATE WI-FI

Using a Wi-Fi connection is generally faster and less expensive than using a mobile data connection. If both Wi-Fi and mobile data connections are available, your phone uses the Wi-Fi connection.

Turn on Wi-Fi

1. Tap **Settings** > **Network & Internet** > **Wi-Fi**.
2. Switch Wi-Fi to **On**.
3. Select the connection you want to use.

Your Wi-Fi connection is active when  is shown on the status bar at the top of the screen.

Important: Use encryption to increase the security of your Wi-Fi connection. Using encryption reduces the risk of others accessing your data.



Tip: If you want to track locations when satellite signals are not available, for example when you're indoors or between tall buildings, switch Wi-Fi on to improve positioning accuracy.

USE A MOBILE DATA CONNECTION

Close the mobile data connection

Swipe down from the top of the screen, tap  **Mobile data** and switch **Mobile data** off.

Turn on the mobile data connection

Swipe down from the top of the screen, tap **Mobile data** and switch **Mobile data** on.

Use a mobile data connection when roaming

Tap **Settings** > **Network & Internet** > **Mobile network**, and switch **Data roaming** to **On**.¹



Tip: To monitor your data usage, tap **Settings** > **Network & Internet** > **Data usage**.

¹

Connecting to the internet when roaming, especially when abroad, can raise data costs substantially.

BROWSE THE INTERNET

Use your phone to connect your computer to the internet

It's simple to use the internet on your laptop on the go. Turn your phone into a Wi-Fi hotspot and use your mobile data connection to access the internet with your laptop or other device.

1. Tap **Settings** > **Network & Internet** > **Hotspot & tethering**.
2. Switch on the **Wi-Fi hotspot** to share your mobile data connection over Wi-Fi, **USB tethering** to use a USB connection, or **Bluetooth tethering** to use Bluetooth.

The other device uses data from your data plan, which may result in data traffic costs. For information on availability and costs, contact your network service provider.

Start browsing

No need for a computer – you can easily browse the internet on your phone. Catch up on the news and visit your favourite websites. You can use the browser on your phone to view web pages on the internet.

1. Tap **Chrome**.
2. Enter a web address and tap →.



Tip: If your network service provider doesn't charge you a fixed fee for data transfer, to save on data costs, use a Wi-Fi network to connect to the internet.

Open a new tab

When you want to visit several websites at the same time, you can open new browser tabs and switch between them.

In Chrome,

1. Tap the box next to the address bar.
2. Tap **+**.

Switch between tabs

In Chrome,

1. Tap the box next to the address bar.
2. Tap the tab you want.

Close a tab

In Chrome,

1. Tap the box next to the address bar.
2. Tap **X** on the tab you want to close.

Search the web

Explore the web and the outside world with Google Search. You can use the keyboard to enter your search words.

In Chrome,

1. Tap the search bar.
2. Enter your search word in the search box.
3. Tap →.

You can also select a search word from the proposed matches.

Use your data plan efficiently

If you're worried about your data usage costs, your phone helps you prevent some apps from sending or receiving data when running in the background.

1. Tap **Settings** > **Network & Internet** > **Data usage** > **Data saver**.
2. Switch **Data saver** to **On**.

CLOSE A CONNECTION

Close internet connections

Save your battery by closing internet connections that are open in the background. You can do it without closing any apps.

1. Tap **Settings** > **Network & Internet** > **Wi-Fi**.
2. Switch **Wi-Fi** to **Off**.

Close the mobile data connection

Swipe down from the top of the screen, tap  **Mobile data** and switch **Mobile data** off.

Switch on Flight mode

1. Tap **Settings** > **Network & Internet**.
2. Switch on **Flight mode**.

Flight mode closes connections to the mobile network and turns your device's wireless features off. Comply with the instructions and safety requirements given by, for example, an airline, and any applicable laws and regulations. Where allowed, you can connect to a Wi-Fi network to, for example, browse the internet or switch Bluetooth sharing on in aeroplane mode.

BLUETOOTH®

You can connect wirelessly to other compatible devices, such as phones, computers, headsets, and car kits. You can also send your photos to compatible phones or to your computer.

Connect to a Bluetooth accessory

You can connect your phone with many useful Bluetooth devices. For example, with a wireless headset (sold separately), you can speak on the phone hands-free – you can continue what you're doing, such as working at your computer, during a call. Connecting a phone to a Bluetooth device is called pairing.

1. Tap **Settings** > **Connected devices** > **Bluetooth**.
2. Switch **Bluetooth** to **On**.
3. Make sure the other device is switched on. You may need to start the pairing process from the other device. For details, see the user guide for the other device.
4. To pair your phone and the device, tap the device in the list of discovered Bluetooth devices.
5. You may need to enter a passcode. For details, see the user guide for the other device.


Since devices with Bluetooth wireless technology communicate using radio waves, they do not need to be in direct line-of-sight. Bluetooth devices must, however, be within 10 metres (33 feet) of each other, although the connection may be subject to interference from obstructions such as walls or from other electronic devices.

Paired devices can connect to your phone when Bluetooth is switched on. Other devices can detect your phone only if the Bluetooth settings view is open.

Do not pair with or accept connection requests from unknown devices. This helps to protect your phone from harmful content.

Remove a pairing

If you no longer have the device that you paired your phone with, you can remove the pairing.

1. Tap **Settings** > **Connected devices** > **Bluetooth**.
2. Tap  next to a device name.
3. Tap **FORGET**.

Connect to your friend's phone with Bluetooth

You can use Bluetooth to wirelessly connect to your friend's phone, to share photos, and much more.


1. Tap **Settings** > **Connected devices** > **Bluetooth**.
2. Make sure Bluetooth is switched on on both phones.
3. Make sure the phones are visible to each other. You need to be in the Bluetooth settings view for your phone to be visible to other phones.
4. You can see the Bluetooth phones within range. Tap the phone you want to connect to.
5. If the other phone needs a passcode, enter or accept the passcode, and tap **Pair**.

The passcode is only used when you connect to something for the first time.

Send your content using Bluetooth

When you want to share your content or send photos you've taken to a friend, use Bluetooth to send them to compatible devices.

You can use more than one Bluetooth connection at a time. For example, while using a Bluetooth headset, you can still send things to another device.

1. Tap **Settings** > **Connected devices** > **Bluetooth**.
2. Switch **Bluetooth** to **On**.
3. Go to the content you want to send and tap  > **Bluetooth**.
4. Tap the device to connect to. You can see the Bluetooth devices within range.
5. If the other device needs a passcode, enter the passcode. The passcode, which you can make up, must be entered on both devices. The passcode in some devices is fixed. For details, see the user guide for the other device.

The location of the received files depends on the other device. For details, see the user guide for the other device.

NFC

Explore the world around you. If your phone supports Near Field Communication (NFC), you can tap accessories to connect to them, and tap tags to call someone or go to a website.

Get started with NFC

Switch on the NFC features in your phone and start tapping to share stuff or connect to devices. To see if your phone supports NFC, tap **Settings** > **Connected devices**.

With NFC, you can:

- Connect to compatible Bluetooth accessories that support NFC, such as a headset or a wireless loudspeaker
- Tap tags to get more content for your phone or to access online services
- Pay with your phone, if supported by your network service provider

The NFC area is on the back of your phone. Tap other phones, accessories, tags, or readers with the NFC area.

1. Tap **Settings** > **Connected devices** > **NFC**.
2. Switch **NFC** to **On**.

Before using NFC, make sure the screen and keys are unlocked.

Read NFC tags

NFC tags can contain information, such as a web address, a phone number, or a business card. The information you want is just a tap away.

To read a tag, tap the tag with the NFC area of your phone.



Note: Payment and ticketing apps and services are provided by third parties. HMD Global does not provide any warranty or take any responsibility for any such apps or services including support, functionality, transactions, or loss of any monetary value. You may need to reinstall and activate the cards you have added as well as the payment or ticketing app after repair of your device.

Connect to a Bluetooth accessory with NFC

Hands busy? Use a headset. Or why not listen to music using wireless speakers? You only need to tap the compatible accessory with your phone.

1. Tap the NFC area of the accessory with the NFC area of your phone.*
2. Follow the instructions on the screen.

*Accessories are sold separately. The availability of accessories varies by region.

Disconnect the connected accessory

If you don't need to be connected to the accessory anymore, you can disconnect the accessory.

Tap the NFC area of the accessory again.

For more information, see the accessory's user guide.

VPN


You may need a Virtual Private Network (VPN) connection to access your company resources, such as intranet or corporate mail, or you may use a VPN service for personal purposes.

Contact your company IT administrator for details of your VPN configuration or check your VPN service's website for additional information.


Use a secure VPN connection

1. Tap **Settings** > **Network & Internet** > **VPN**.
2. To add a VPN profile, tap **+**.
3. Enter the profile information as instructed by your company IT administrator or VPN service.

Edit a VPN profile

1. Tap  next to a profile name.
2. Change the info as required.

Delete a VPN profile

1. Tap  next to a profile name.
2. Tap **FORGET VPN**.

7 Music and videos

MUSIC

Listen to your favourite music wherever you are.

Play music

1. Tap **Play Music** > ≡ > **Music library**.
2. Tap the artist, album, song, genre, or playlist you want to play.

Pause or resume playback

Tap **⏸** to pause and **▶** to resume.



Tip: To play songs in a random order, tap **⌵**.

Create a playlist

Organise your songs into playlists, so you can listen to music that fits your mood.

1. When playing a song, tap **⋮** > **Add to playlist**.
2. To add a song to your new playlist, tap **NEW PLAYLIST**, or, to add a song to an existing playlist, select the playlist from the list.

Add songs to your phone

If you have music or videos stored on your computer, but want to access them on your phone, use a USB cable to sync the media between your phone and computer.

1. Connect your phone to a compatible computer with a USB cable.
2. In your computer's file manager, drag and drop your songs and videos to your phone.

VIDEOS

Have your favourite media with you while on the move – watch videos wherever you are.

Play a video

Tap **Photos** and tap the video you want to play.



Tip: To pause playback, tap **⏸**. To resume, tap **▶**.

Fast forward or rewind a video

To fast forward or rewind a video, drag the slider at the bottom of the screen right or left.

8 Organize your day

CALENDAR

Keep track of time – learn how to keep your appointments, tasks, and schedules up to date.

Manage calendars

Tap **Calendar** > ≡, and select the type of calendar you want to see.

Calendars are added automatically when you add an account to your phone. To add a new account with a calendar, go to the apps menu and tap **Settings** > **Users & accounts** > **Add account**.

Add an event

To remember an appointment or an event, add it to your calendar.

1. In **Calendar**, tap **+** and select an entry type.
2. Enter the details you want, and set the time.
3. To make an event repeat on certain days, tap **More options** > **Does not repeat** and select how often the event should repeat.
4. To edit the reminder time, tap the reminder time, and select the time you need.



Tip: To edit an event, tap the event and , and edit the details.

Delete an appointment

1. Tap the event.
2. Tap **:** > **Delete**.

NOTES

Make a note

Notes on paper are easy to lose. Instead, jot them down with the **Keep** app. This way, you always have your notes with you.

1. Tap **Keep** > **Take a note**.
2. Write a note.

Your notes are automatically saved.

9 Maps

FIND PLACES AND GET DIRECTIONS

Find a spot

Google Maps helps you find specific locations and businesses.

1. Tap **Maps**.
2. Write search words, such as a street address or place name, in the search bar.
3. Select an item from the list of proposed matches as you write, or tap 🔍 to search.

The location is shown on the map. If no search results are found, make sure the spelling of your search words is correct.

See your current location

Tap **Maps** > 📍.

Get directions to a place

Get directions for walking, driving, or using public transport – use your current location or any other place as the start point.

1. Tap **Maps** and enter your destination in the search bar.
2. Tap **Directions**. The highlighted icon shows the mode of transportation, for example 🚗. To change the mode, select the new mode under the search bar.
3. If you don't want the starting point to be your current location, tap **Your location** and search for a new starting point.
4. Tap **START** to start the navigation.

The route is shown on the map, along with an estimate of how long it should take to get there. To see detailed directions, swipe up from the bottom of the screen.

DOWNLOAD AND UPDATE MAPS

Download a map

Save new maps to your phone before a journey, so you can browse the maps without an internet connection when travelling.

1. Tap **Maps** > ≡ > **Offline maps** > **SELECT YOUR OWN MAP**.
2. Select the area on the map and tap **DOWNLOAD**.

Update an existing map

1. Tap **Maps** > ≡ > **Offline maps** and the map name.
2. Tap **UPDATE**.



Tip: You can also set your phone to update the maps automatically. Tap **Maps** > ≡ > **Offline maps** > ⚙️ and switch **Automatically update offline maps** and **Automatically download offline maps** to **On**.

Delete a map

1. Tap **Maps** > ≡ > **Offline maps** and the map name.
2. Tap **DELETE**.

USE LOCATION SERVICES

Use Maps to find out where you are, attach your location to the photos you take. Location info can be attached to a photo or video, if your location can be determined using satellite or network technology. If you share a photo or video that contains location info, the location info may be shown to those who view the photo or video. Some apps can use your location information to offer you a wider variety of services.

Switch on location services

Your phone shows your location on the map using a satellite positioning system, Wi-Fi, or network (Cell ID) based positioning.

The availability, accuracy, and completeness of the location information depend on your location, surroundings, third-party sources, and other factors, and may be limited. Location information may not be available inside buildings or underground, for example. For

privacy info related to positioning methods, see the HMD Global Privacy Policy, available at <http://www.hmd.com/privacy>.

Some satellite positioning systems may require small amounts of data to be transferred over the mobile network. If you want to avoid data costs, when travelling, for example, you can switch the mobile data connection off in your phone settings.

Wi-Fi positioning improves positioning accuracy when satellite signals are not available, especially when you are indoors or between tall buildings. If you're in a place where the use of Wi-Fi is restricted, you can switch Wi-Fi off in your phone settings.

Tap **Settings** > **Security & location**, and switch **Location** on.

10 Apps and services

GOOGLE PLAY

Your Android phone can live up to its full potential with Google Play – apps, music, movies, and books are all readily available for your entertainment. All you need is a Google account.

Add a Google account to your phone

1. Tap **Settings** > **Users & accounts** > **Add account** > **Google**. If asked, confirm your device lock method.
2. Type in your Google account credentials and tap **Next**, or, to create a new account, tap **Create account**.
3. Follow the instructions on your phone.

Download apps

Unleash your phone's potential – there are thousands of apps waiting in the Google Play Store to help you with this.¹

1. Tap **Play Store**.
2. Tap the search bar to look for apps, or select apps from your recommendations.
3. In the app description, tap **INSTALL** to download and install the app.

To see your apps, go to the home screen and swipe up from the bottom of the screen.

Update apps

Update your **Play Store** apps to get all the latest features and bug fixes.

1. Tap **Play store** > ≡ > **My apps & games** to see available updates.
2. Tap the app with an update available and **UPDATE**.

You can also update all apps at once. In **My apps & games**, tap **UPDATE ALL**.

Remove downloaded apps

Tap **Play Store** > ≡ > **My apps & games**, choose an app you want to remove, and then tap **UNINSTALL**.

Get music, films, or books with Google Play

With Google Play, you can gain access to songs, movies, and books.

Tap **Music**, **Movies**, or **Books** to learn more.

¹ You need to have a Google account added to your phone to use Google Play services. Charges may apply to some of the content available in Google Play. To add a payment method, tap **Play Store** > **Menu** > **Account** > **Payment methods**. Always make sure you have permission from the bill payer when buying content from Google Play.

11 Software updates and backups

UPDATE YOUR PHONE SOFTWARE

Stay in step with the beat – update your phone software and apps wirelessly to get new and enhanced features for your phone. Updating the software may also improve your phone performance.

Install available updates

Tap **Settings** > **System** > **System updates** > **Check for update** to check if updates are available.

When your phone notifies you that an update is available, just follow the instructions shown on the screen.

Warning: If you install a software update, you cannot use the device, even to make emergency calls, until the installation is completed and the device is restarted.

Before starting the update, connect a charger or make sure the device battery has enough power, and connect to Wi-Fi, as the update packages may use up a lot of mobile data.

BACK UP YOUR DATA

To ensure your data is safe, use the backup feature in your phone. Your device data (such as Wi-Fi passwords and call history) and app data (such as settings and files stored by apps) will be backed up remotely.

Switch on automatic backup

Tap **Settings** > **System** > **Backup**, and switch backup on.

RESTORE ORIGINAL SETTINGS AND REMOVE PRIVATE CONTENT FROM YOUR PHONE

Accidents can happen – if your phone is not working properly, you can restore its settings. Or, if you buy a new phone, or otherwise want to dispose of or recycle your phone, here's how you can remove your personal info and content. Note that it is your responsibility to remove all private content.

Reset your phone

1. Tap **Settings** > **System** > **Reset options** > **Erase all data (factory reset)**.
2. Follow the instructions shown on your phone.

STORAGE

To check how much memory you have available, tap **Settings** > **Storage**.

Remove downloaded apps

Tap **Play Store** > ≡ > **My apps & games**, choose an app you want to remove, and then tap **UNINSTALL**.

Disable an app

You can't delete some apps that were pre-installed on your device. But you can disable them and they will be hidden from the list of apps on your device. If you disable an app, you can add it back to your device.

1. Tap **Settings** > **Apps & notifications**.
2. Tap **App info**.
3. Tap the app name.
4. Tap **DISABLE**. You may not be able to disable all apps.

If an installed app depends on a removed app, the installed app may stop working. For details, see the user documentation of the installed app.

Re-add a disabled app

You can add a disabled app back onto the list of apps.

1. Tap **Settings** > **Apps & notifications**.
2. Tap **App info**.
3. Tap **All apps** > **Disabled apps**.
4. Tap the app name.
5. Tap **ENABLE**.

Copy content between your phone and computer

You can copy photos, videos, and other content created by you between your phone and computer to show or store them.

1. Connect your phone to a compatible computer with a compatible USB cable.
2. On your computer, open a file manager, and browse to your phone.
3. Drag and drop items from your phone to the computer or from your computer to the phone.

Make sure you put the files in the right folders on your phone or you may not be able to see them.

12 Protect your phone

PROTECT YOUR PHONE WITH YOUR FINGERPRINT

You can unlock your phone with just a touch of your finger. Set up your fingerprint ID for extra security.

Add a fingerprint

1. Tap **Settings** > **Security & Location** > **Fingerprint**. If you don't have screen lock set up on your phone, tap **Screen lock**.
2. Select which backup unlocking method you want to use for the lock screen and follow the instructions shown on your phone.

Unlock your phone with your finger

Place your registered finger on the sensor.

If there is a fingerprint sensor error, and you cannot use alternative sign-in methods to recover or reset the phone in any way, your phone will require service by authorised personnel. Additional charges may apply and all the personal data on your phone may be deleted. For more information, contact the nearest care point for your phone or your phone dealer.

CHANGE YOUR SIM PIN

If your SIM card came with a default SIM PIN, you can change it to something more secure. Not all network service providers support this.

Select your SIM PIN

You can choose which digits to use for the SIM PIN. The SIM PIN can be 4-8 digits.

1. Tap **Settings** > **Security & Location** > **SIM card lock**.
2. Tap **Change SIM PIN**.



Tip: If you don't want to protect your SIM with a PIN, in **Set up SIM card lock**, switch **Lock SIM card** to **Off** and enter your current PIN.

ACCESS CODES

Learn what the different codes on your phone are for.

PIN or PIN2

PINs or PIN2s have 4-8 digits.

These codes protect your SIM card against unauthorised use or are required to access some features. You can set your phone to ask for the PIN when you switch it on.

If you forget the codes or they aren't supplied with your card, contact your network service provider.

If you enter the code incorrectly 3 times in a row, you'll need to unblock the code with the PUK or PUK2 code.

PUK or PUK2 codes

PUK or PUK2 codes are required to unblock a PIN or PIN2.

If the codes are not supplied with your SIM card, contact your network service provider.

Lock code

Lock code is also known as security code or password.

The lock code helps you protect your phone against unauthorised use. You can set your phone to ask for the lock code that you define. Keep the code secret and in a safe place, separate from your phone.

If you forget the code and your phone is locked, your phone will require service. Additional charges may apply and all the personal data on your phone may be deleted. For more info, contact the nearest authorised service facility for your phone, or your phone dealer.

IMEI code

The IMEI code is used to identify phones in the network. You may also need to give the number to your authorised service facility services or phone dealer.

To view your IMEI number, dial ***#06#**.

Your phone's IMEI code is also printed either on your phone or on the SIM tray depending on your phone model. If your phone has a removable back cover, you can find the IMEI code under the cover.

The IMEI is also visible on the original sales box.

Locate or lock your phone

If you lose your phone, you may be able to find, lock, or erase it remotely if you have signed in to a Google Account. Find My Device is on by default for phones associated with a Google Account.

To use Find My Device, your lost phone must be:

- Turned on
- Signed in to a Google Account
- Connected to mobile data or Wi-Fi
- Visible on Google Play
- Location turned on
- Find My Device turned on

When Find My Device connects with your phone, you see the phone's location, and the phone gets a notification.

1. Open android.com/find on a computer, tablet or phone connected to the internet and sign in to your Google Account.
2. If you have more than one phone, click the lost phone at the top of the screen.
3. On the map, see about where the phone is. The location is approximate and may not be accurate.

If your device can't be found, Find My Device will show its last known location, if available. To lock or erase your phone, follow the instructions on the web site.

13 تامولعم ی کی یتمالس روا ٹک ڈورپ

FOR YOUR SAFETY

Read these simple guidelines. Not following them may be dangerous or against local laws and regulations. For further information, read the complete user guide.

ی درک دنب یی م سوقال ع هع ونمم



تلخادم هی بج ای وه هن تزاجا ی کی لامعتسا ے کی نوف سیلری او بج یی درک دنب وک هل آ نهدنی ا، تال آ ی بط، یی مزاج یی او ره رپ روط ے کی لاثم، وه اتکس نب ثعاب اک ے رطخ ای یی م سوقال ع هع ونمم۔ وه ے هراج ے کی ے کامهدد سا هج ای بیرق ے کی داوم یی ای می کی یی درک لمع رپ ت ایاده مامت

هه مدقم ے س بس تظافح رپ کڑس



ے کی ے نال چ ی ژاگ نارود ے کی گنوی ئارڈ۔ یی درک تعاطا ی کی نی ناوق یی ماقم مامت رپ کڑس تقو ے ترک گنوی ئارڈ هجوت نیلوا ی کی پآ۔ یی هکر دازا هتاه ے نپا هشی مه ے۔ یی هچ ان وه تظافح

تلخادم



ی ک س ج، ییہ ے ت ک س وہ س اس ح ے ل ے ک تلخادم یی ت ے ن پ ا ت ال آ سی ل ری او مام ت
ے۔ ے ت ک س وہ رثا تم ی گ در ک را ک ی ک نا ے س ه ج و

دارفا لہا ے ک تم دخ



۔ ییہ ے ت ک سر ک تم رم ای بی ص ن ت ی ک ه ع و ن ص م سا ی ه دارفا لہا روا دن ت س م فرص

تال آ ی فاضا روا زج راچ، ی ای رٹی ب



ه در ک روظنم ی ک HMD Global Oy فرص ے ل ی ک فرصم هت اس ے ک ے ل آ ص و ص خم سا
تاع و ن ص م ی ل او ے ن ه ک ر ه ن ت ق با ط م ۔ یی ر ک لام ع ت سا تال آ ی فاضا روا زج راچ ی ای رٹی ب
۔ یی ر ک ه ن ن ش ک ن ک هت اس ے ک

SAR



سایا بجے ہر قباطم کے تائیادھ امنھر یی کوہظ کے یسنئیوکیرف ویڈیہل آہی
چنا 0.2 مک زامک سے مسجے تائیاج ایکی لامعتسایا رک اگل رپ ناک ییم تالاج ماع وک
ڈیٹاگ فراص سوا وک زویلیو SAR ہدای ز سے ہدای ز۔ رپ لے ل صاف کے (رٹیم یلم 5)
دیزم۔ ہے اتاج ایکی ل صاح ییم نشکیسی کے (SAR) تامولعم نشکیکی فی ٹرس ییم
سے تائیاج رپ www.sar-tick.com لے ل کیکی تامولعم

ے رسود لے ل کیکی کے ناگل رپ مسجے ای پلک ٹلیب، روکی یوکی لے ل کیکی کے ناچیل بج
ے تائیاج یونوہ یونوہ ل ماش تائیوکی یوکی ییم سا وت، تائیاج ایکی لامعتسایا رڈل وہ اک مسق
ل کیکی ٹون۔ لے ل کیکی ناچ انوہ رپ لے ل صاف ہدرک نایب رپوا سے مسج کے پآ ہل آ روا
ے۔ تائیوکی راج یوہ ریغب کے لاک ی توصل لی سرت ییم تال آ لئیابوم

NETWORK SERVICES AND COSTS

Using some features and services, or downloading content, including free items, require a network connection. This may cause the transfer of large amounts of data, which may result in data costs. You may also need to subscribe to some features.



Important: 4G/LTE might not be supported by your network service provider or by the service provider you are using when travelling. In these cases, you may not be able to make or receive calls, send or receive messages, or use mobile data connections. To make sure your device works seamlessly when full 4G/LTE service is not available, it is recommended that you change the highest connection speed from 4G to 3G. To do this, on the home screen, tap **Settings** > **Network & Internet** > **Mobile network** and switch **Preferred network type** to **3G**.



Note: Using Wi-Fi may be restricted in some countries. For example, in the EU, you are only allowed to use 5150–5350 MHz Wi-Fi indoors, and in the USA and Canada, you are only allowed to use 5.15–5.25 GHz Wi-Fi indoors. For more info, contact your local authorities.

EMERGENCY CALLS




مہ: ل سیری داینب۔ ہے تکی ساج یی د یونوہ ت نامض کی نشکنکی ییم تالاج مامت
سیرک ہن زگرہ ہسورہب لمکم یوہبک رپ نو ف سیلریو یوکی سکی لے ل کیکی لئیاسرو
سایسنج رمی لکی ڈیم سے سیج

Before making the call:

- Switch the phone on.
- If the phone screen and keys are locked, unlock them.
- Move to a place with adequate signal strength.

To place an emergency call on any screen, press the power key quickly 3 times.

On the home screen, tap

1. Type in the official emergency number for your present location. Emergency call numbers vary by location.
2. Tap .
3. Give the necessary information as accurately as possible. Do not end the call until given permission to do so.

You may also need to do the following:

- Put a SIM card in the phone. If you don't have a SIM, on the lock screen, tap **Emergency**.
- If your phone asks for a PIN, tap **Emergency**.
- Switch the call restrictions off in your phone, such as call barring, fixed dialling, or closed user group.
- If the mobile network is not available, you may also try making an internet call, if you can access the internet.

سیرک لاهب ھکی دی کے لے آئے نیا

[illegible]

- ای ہل آے س ت ر ا ر ح ہ ج ر د ی ل ع ا - س ی ہ ک ر
ہے۔ ہ ی ت ک س و ہ ہ ر ا ک ا ن ی ر ٹ ی ب
 - س ی م ت ر ا ر ح ہ ج ر د ی ڈ ن ہ ٹ ہ د ا ی ز و ک ل آ
ن پ ا ہ ل آ ہ ی ب ج - س ی ر ک ہ ن ظ و ف ح م
و ت ، ہ ا ت آ س پ ا و ر پ ت ر ا ر ح ہ ج ر د ل م ر ا ن
ی ت ک س و ہ ا د ی پ ی م ن ر د ن ا ک ل آ س ا
ی ت ک س ا چ ن ہ پ ن ا ص ق ن و ک س ا ر و ا ہ
ہے۔
 - س ی ہ ک ر ک ش خ و ک ل آ ہ ن پ ا
ی ک م ا س ق ا م ا م ت ر و ا ی م ن ، ف ی ث ک ت
ت ا ی ن د ع م س ی م ت ب و ط ر ا ی ت ا ع ی ا م
ک ن ا ر ٹ ک ی ل ا و ج س ی ہ ی ت ک س و ہ ل م ا ش
ل ی ل ح ت ا ی د و ل آ گ ن ز و ک و ٹ ک ر س
ہ ی ہ ت ی د ر ک
 - ہ د ن گ ا ی ر پ ہ س د ن ہ د و ک ل آ
ہ ی ر ک ہ ن ل ا م ع ت س ا س ی م و ق ا ل ع
 - ہ ن س ی م و ہ گ گ م ر گ ہ د ا ی ز و ک ل آ

- شش سوک یی کے نل وھک وک لے آ سا
ہک اسی ج کے سا لے اوس یی رک ہن
لے۔ لے یی گ یی د تی ادہ یی م ڈی اگ ف راص
- م ی م رت یی م نا، ان یی ٹ نی ا زاج م ری غ
نا صقن وک نو ف تال آ ی فاضا ای
کے تال آ وی ڈی ر روا یی ہ تے ک سا چن ہ
نی ن اوق ق ل ع ت م لے س لے رک لور ٹن ک
لے۔ لے یی تے ک سا وھ یی ہب یی زرو ف ا ل خ یی
- ان یی ئ ارگ ان وک لے آ ای یی ر ٹ یی ب
لے۔ لے یی ئال ہ یی ہن روا یی ئ اگل ب رض
ات ک سا ژوت لے سا و ات رب ہ ت سا ئ اش ان
لے۔
- لے لے کے لے رک فاص حطس یی کے لے آ

- لام عت سا اڑ پک ک شخ روا، فاص، مرن
لے۔ لے یی رک
- ان رک ٹ نی پ لے۔ لے یی رک ت م گ نر ر پ لے آ
زی رگ لے س لے رک ماک ر پ روط ب سانم
لے۔ لے ات ک سا رک
- یی سی طان قم ای یی سی طان قم وک لے آ
لے۔ لے یی ہک ر رود لے س لے و ع ط ق
- لے نہک ر ظو ف ح م ا ٹ ی ڈ م ہا ان پ ا
ہ د ح ی ل ع و د م ک ز ا م ک وک سا، لے لے لے
پ آ لے سی ج، لے یی رک ظو ف ح م یی م وھ گ ج
م ہا ای ر ٹ و ی پ م ک ای ڈ راک ہ ظ ف ا ج، لے آ اک
لے۔ لے لے ہک ل ت ا م و ل ع م

مرگ تی اہن لے۔ لے ماع ہی یی م سوت روص رثکا لے۔ لے ات ک سا وھ مرگ لے آ نارود کے لمع لے بمل
لے، لے ات گل لے رک ماک لے س ہت س ہا دوخ ب دوخ لے آ، لے لے لے کے لے رک زی رگ لے س لے نہ وہ
لے۔ لے ات ا ج وھ دن ب ر پ لے ن ژ پ ت رورض روا لے ات ک و ر گ ن ج ر ا چ، لے ات رک دن ب ز م ارگ و ر پ
ت ل وھ س یی ک س ورس دن تسم نی رت ب ی ر ق لے سا و ت، لے اہر رک یی ہن ماک ر پ روط ب سانم
لے۔ لے یی ئ ا ج لے ر پ

لے یی ئ اس یی ر



وک داوم گ ن ج یی کی پ روا لے یی ر ٹ یی ب، تاع و ن ص م ک ن ار ٹ کی ل ا ہ دش لام عت سا لے ن پ ا
ل ب ا ق ان پ آ لے س ح ر ط سا لے۔ لے یی رک س پ او ر پ وھ گ ج یی کے لے رک ا ٹھک ا ص و ص خ م ہ شی م ہ
اک لام عت سا رھ پ ب سانم لے کے لے ا س و روا یی ہ تے تر ک م اھ ت ک وری ک ع ای ض لور ٹن ک
ک ن ار ٹ کی ل ا روا لے یی ر ٹ کی ل ا لے۔ لے یی ہ تے تر ک یی ئ ا ز ف ا ہ ل ص و ح یی کے لے رک ت س ب و د ن ب
(م ی شی ن گ یی م روا، لے یی ٹ س، م یی م و ل یی، ا ب ن ا ت لے سی ج) داوم یی ت م ی ق یی م تاع و ن ص م
لے۔ لے لے م اش یی ہب (م ی ڈ ی ل ی پ روا، یی دن ا چ، ان و س لے سی ج) یی ت اھ د یی گ ن ہ م و ا ل ع کے
لے۔ لے ات ک سا ج ایی ک ل ا ح ب ر پ روط کے یی ئ ا ن ا و ت روا داوم وک داوم مامت کے لے آ

تمالعی کی رکوٹ رادی هپ هوش سارک

Crossed-out wheelie bin symbol



پآ وچ تمالعی رکوٹ رادی گلسارک سی مگنکی پ ای بدای رٹی ب، هعونصم کے پآ کے نرک متخماکسای رٹی بروا تاعونصم کنارٹکی لامامت هک هے ی تال دای وک هے گے ٹناھچ ریغب وک تاعونصم نا۔ هے ی هاج هے ی کے هٹکا هدیلع دعب هے لی کی گنلکی یئاسی روک نا: سیئاگل هن هے ناکهٹ رپ روط هے کے لصف ی تای دل ب تامولعم قلعتم کے ٹناؤپ گنلکی یئاسی رنرت بیرق کے پآ۔ سیئاج هے ل سی رکوٹ رادی س یٹراھٹا هلصف ی ماقم هے نپا هے لی کی

BATTERY AND CHARGER INFORMATION

Battery and charger information

To check if your phone has a removable or non-removable battery, see the printed guide.

Devices with a removable battery Only use your device with its original rechargeable battery. The battery can be charged and discharged hundreds of times, but it will eventually wear out. When the talk and standby times are noticeably shorter than normal, replace the battery.

Devices with a non-removable battery Do not attempt to remove the battery, as you may damage the device. The battery can be charged and discharged hundreds of times, but it will eventually wear out. When the talk and standby times are noticeably shorter than normal, take the device to the nearest authorised service facility to have the battery replaced.

Charge your device with a compatible charger. Charger plug type may vary. Charging time can vary depending on device capability.

Battery and charger safety information

Once your device is fully charged, unplug the charger from the device and electrical outlet. Please note that continuous charging should not exceed 12 hours. If left unused, a fully charged battery will lose its charge over time.

Extreme temperatures reduce the capacity and lifetime of the battery. Always keep the battery between 15°C and 25°C (59°F and 77°F) for optimal performance. A device with a

hot or cold battery may not work temporarily. Note that the battery may drain quickly in cold temperatures and lose enough power to switch off the phone within minutes. When you are outdoors in cold temperatures, keep your phone warm.

Obey local regulations. Recycle when possible. Do not dispose as household waste.

Do not expose the battery to extremely low air pressure or extremely high temperature, such as disposing of it in a fire, as that may cause the battery to explode or leak flammable liquid or gas.

Do not dismantle, cut, crush, bend, puncture, or otherwise damage the battery in any way. If a battery leaks, do not let the liquid touch the skin or eyes. If this happens, immediately flush the affected areas with water or seek medical help. Do not modify, attempt to insert foreign objects into the battery, or immerse or expose it to water or other liquids. Batteries may explode if damaged.

Use the battery and charger for their intended purposes only. Improper use or use of unapproved or incompatible batteries or chargers may present a risk of fire, explosion, or other hazard, and may invalidate any approval or warranty. If you believe the battery or charger is damaged, take it to a service centre or your phone dealer before continuing to use it. Never use a damaged battery or charger. Only use the charger indoors. Do not charge your device during a lightning storm. When charger is not included in the sales pack, charge your device using the data cable (included) and a USB power adaptor (may be sold separately). You can charge your device with third-party cables and power adaptors that are compliant with USB 2.0 or later and with applicable country regulations and international and regional safety standards. Other adaptors may not meet applicable safety standards, and charging with such adaptors could pose a risk of property loss or personal injury.

To unplug a charger or an accessory, hold and pull the plug, not the cord.

Additionally, the following applies if your device has a removable battery:

- Always switch the device off and unplug the charger before removing any covers or the battery.
- Accidental short-circuiting can happen when a metallic object touches the metal strips on the battery. This may damage the battery or the other object.

چے ٹوہچ

لماح کے کے زرپ ے ٹوہچ ہی۔ ہی ہن ے نولھک تال آئی فاضا کے سا روا دل آ اک پآ
ہی۔ ہک ر رود سے چنہ پ کی سوچ بے ٹوہچ ہی ہن۔ ہی ہ ے تکس وہ

تال آئی بط

کنورٹ کی لہدرک مہارف ڈلیش یفاکان ای ہدرک ب صرن رپ روط بسانم ریغ ہی م سویڑاگ
ہل آئی بط ای نی شیف زفی سک۔ ہی ہ ے تکس رک رثاتم زلنگس یئی ای ڈیروک زمٹس
ی نورب ہی ای ہک ے لیلی کے نرک نیعت اک رما سا ییروک ہروشم سے ساک تعنص کے
ہی ہ ے تھکر تی حال ص یفاکان کی گنڈلیش ای وچب سے یئی انوت وی ڈیروک

تال آل کی ڈیم ے گے ل خاد می مسج

شرافس راک تاعون صم ے ک تال آل ی ب ط ے ل ی ک ے نرک زی رگ ے س تلخادم ی ناکم مک نی بام ے ک ہل آل ی ب ط ای گ ای ک ل خاد می مسج روا ہل آل سی لرئ او ہک سی ے ت ترک ساپ ے ک ن ج صاخشا۔ ے ہ ی رورض ان وہ ہل صاف اک (رٹ می ٹ نی س 15.3) چنا 6 مک زا ے ے ی ہا چ وک و ہ تال آل ے سی:

ی ک ہدای ز ے س (رٹ می ٹ نی س 15.3) چنا 6 ے س ہل آل ی ب ط وک ہل آل سی لرئ او ہشی مہ سی۔ ہک رپ ی رود

- سی رک زی رگ ے س ے نہک ر ہل آل سی لرئ او می بی ج ی ل او ے نی س
- می ماہت ہت اس ے ک ناک فل اخم ے ک ے ل آل ی ب ط وک ہل آل سی لرئ او
- ی ہر وہ عاق او تلخادم ہک وہ کش ی ہب اس ارز وک پآ سا رگا سی د رک دن ہل آل سی لرئ او ے۔
- ی ک ت ای ادہ ی ک راک ہ عون صم قل عتم ے ک تال آل ی ب ط ے گ ے ی ک ل خاد می مسج سی رک یوری۔

ی سک می ے راب ے ک ی گ دوچوم ی ک ہل آل سی لرئ او ہت اس ے ک ہل آل کی ڈی م وک پآ رگا ہروشم ے س راک ای ہم تحص ی تظافح ے نپا وت وہ ترورض ی ک تحاضو ی ک مسق سی۔

تعامس



ی ک ے ن نس وک و زواؤ ی نور ی ب ی ک پآ نارود ے ک ے نرک لامعتسا ٹی س ڈیہ: **ہی بنت** ی تمال س ی ک پآ اہج سی رک ہن لامعتسا ٹی س ڈیہ۔ ے ہ ی تکس وہ رثاتم تی حال ص۔ وہ اتکس وہ ق حال ہر طخ وک

سی۔ ے تکس رک تلخادم ہت اس ے ک تال آل ے ک تعامس ہچک، تال آل سی لرئ او ضعب

سی ئاچ ے س تال و مضم وک ہل آل ے نپا

تاطای تحا لی ذ جرد۔ ے ہ اتکس نب راکش اک داوم ہد ناصقن رگی د روا سرئ او ہل آل اک پآ سی ترب:

- سی ہر طاتحم تقو ے تل و ہک تاماغی پ۔ لم اش ری و ٹ فاس مضم می سا ے ک پآ رگی د تروصب ای ے ہ اتکس وہ ہد ناصقن ے ل ی ک رٹوی پم کی ای ے ل۔ ے ہ اتکس وہ تباث
- ای لو بقی سی تس او خرد ی ک ل اصتا ڈول نؤاڈ ازجا ای گ نزؤارب ٹی نرٹنا لباقان۔ سی ہر طاتحم تقو ے ت رک نشک کن Bluetooth ے س و ذخام دامتعا سی رک ہن لو بقی سی تس او خرد ی ک

- بسانم روا دامتعال باق فرص
و ذخام یل او ے نرک مہارف ی تظافح
روا بصن ری و ٹ فاس روا تامدخ ے
س۔ یں رک لامعتسا
- رٹوی پمک لصتم رگی د روا ے لآ ے نپا
ی تظافح رگی د روا سرئی او ی ٹ نی ا رپ
تقو کی ب۔ یں رک بصن ری و ٹ فاس
لامعتسا سرئی او ی ٹ نی ا کی ا فرص
انرک لامعتسا ہدای ز ے س کی ا۔ یں رک
- ی گدرک راک ی رٹوی پمک ای/روا ے لآ
ے۔ اتکسرک رثاتم وک
- قی رف ے رسی ت رپ ٹی نرٹنا پآ رگا
کب ہدش بصن ے س ے لہ پ کے
ے ترک یئ اسرکت سکنل روا سکرام
ری بادت یطای تحا بسانم وت ی ہ
کی سوٹئاس یسی HMD Global۔ یں
ی ہن یراد ہمذ ہن ے ی ترک دیئات
ے۔ ی تلی

سایڑاگ

ظوفحم رپ روط بسانمان ای بصن ے س ے قی رطت سردری غ یں م سویڑاگ لن گس وی ڈی ر
ی نپا ے لآ کی تاملول عم دی زم۔ ی ہ ے تکسرک رثاتم وک تاماظن کنارٹکی لآ ہدرک
ے لآ ی ہ دارفا لہا فرص۔ یں رک کی چھتاس کے سول او ے نان ب تالآ کے یڑاگ ای یڑاگ
پآ روا ے ی تکس وہ کانرطخ بیصنت صقان۔ ی ہ ے تکسرک بصن یں م یڑاگ وک
چن اچ کی ت اب سا هتاس کے ی گدعاق اب۔ ے ی تکس رک رثوم ری غ وک ی ٹنراو کی
ے س حیح ص روا ی ہ یی گ ے ی اگل تالآ سی لرئی او مامت یں م یڑاگ کی پآ ہک یں رک
سج یں ہکر ہن یں م ے ناخ ی سا وک داوم زیخ ہکامھد ای ری گ شتآ۔ ی ہ ے ہررک ماک
کے ؤالیھپ کے گی ب کے اوہ۔ سوہ تامزاول/تالآ ی فاضا ای ے صج کے سا، ہلآ یں
۔ یں ہکر ہن ی ہبک تالآ ی فاضا ای ہلآ انپا یں م ے قالع

لوحام زیخ ہکامھد رپ روط ی ناکما

کراپسا۔ پمپ لورٹپی ے سی ج، یں درک دنب ہلآ انپا یں م لوحام زیخ ہکامھد ہن کمم
ی تح ای ناصقن ی نامسج یں م ہج ی تن کے سچ ے اتکسوہ ببس اک گآ ای ہکامھد
نوناخراک کے داوم ی وایمی ک، سوقالع ے لآ و نھدن ا۔ ے ی تکسوہ عقاو ی ہب توم ہک
ہکامھد ے ردق۔ یں رک لمع رپ سوي دن باپ، وہ ی راج ماک اک ے نرک ہکامھد سا ج ای یں م
۔ ی ہ ے ت وہ ہدز ناشن رپ روط حضاو رثکا رگم یں م ہش ی م ے قالع کے لوحام زیخ
اتاج اہک وک ے نرک دنب نچنا انپا ے س پآ سا ج یں م ی ہ گج ہو ہی رپ روط ماع
ہری خذ ای لی سرت کی داوم ی وایمی ک، کی ڈ کے ے صج ے لچن یں م سوي تشک؛ ے
سویڑاگ نا۔ سوہ تارذ ای داوم ی وایمی ک یں م اوہ سا ج یں م ی ہ گج یں م ی ہ گج کی ے نرک
سی گ می لورٹپی عیام یں م نچ ے ی ہاچ انرک کی چھتاس کے ناگدننک رای ت کے
ای آ ہک ے لآ کی ے نناج ای (نیٹوی ب ای نی پورپ ہک اسی ج) ے اتاج ای کی لامعتسا
ے۔ اتکس اچ ای کی لامعتسا رطخ و فوخ بے کی دزن کے نا ہلآ ہی

WET OR DUSTY CONDITIONS

This device has been given a rating of IP67 for dust and water resistance based on tests done

in standby mode under controlled laboratory conditions. This resistance is not a permanent condition, and may decrease as a result of normal wear.

Water resistance means resistance against cold, clean fresh water only. Do not expose the device to any other type of liquid, (such as sea water, soap water, pool water, detergent, acids or solvents, perfume, adhesive remover, hair dye, lotions, sunscreen or oil). Do not submerge the device in water. If the device has been exposed to water, wipe it off with a dry cloth. If it has been exposed to any other liquid, immediately splash some clean fresh water onto the device. Carefully wipe the device dry. Do not charge the device or connect anything if the connectors are dusty, wet, or damp.

Important: Liquid damage is not covered under warranty. To prevent liquid damage, avoid swimming or bathing with the device, exposing it to pressurised or high velocity water (such as when showering, surfing, or jet skiing), using the device in a sauna or steam room, intentionally submerging the device in water, or using the device outside the suggested temperature ranges or in high humidity conditions.

Important: Accessories for use with this device are not as water-resistant as the device itself. For example, chargers should only be used in dry conditions, never when damp or wet.

(SAR) تامولعم ی ک قی دصت

This mobile device meets guidelines for exposure to radio waves.

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves (radio frequency electromagnetic fields), recommended by international guidelines from the independent scientific organization ICNIRP. These guidelines incorporate substantial safety margins that are intended to assure the protection of all persons regardless of age and health. The exposure guidelines are based on the Specific Absorption Rate (SAR), which is an expression of the amount of radio frequency (RF) power deposited in the head or body when the device is transmitting. The ICNIRP SAR limit for mobile devices is 2.0 W/kg averaged over 10 grams of tissue.

SAR tests are carried out with the device in standard operating positions, transmitting at its highest certified power level, in all its frequency bands.

This device meets RF exposure guidelines when used against the head or when positioned at least 5/8 inch (1.5 centimetres) away from the body. When a carry case, belt clip or other form of device holder is used for body-worn operation, it should not contain metal and should provide at least the above stated separation distance from the body.

Your mobile device is also designed to meet the requirements for exposure to radio waves established by the India Department of Telecommunications. These requirements set a SAR limit of 1.6 W/kg averaged over one gram of tissue.

To send data or messages, a good connection to the network is needed. Sending may be delayed until such a connection is available. Follow the separation distance instructions until the sending is finished.

During general use, the SAR values are usually well below the values stated above. This is because, for purposes of system efficiency and to minimise interference on the network, the

operating power of your mobile is automatically decreased when full power is not needed for the call. The lower the power output, the lower the SAR value.

Device models may have different versions and more than one value. Component and design changes may occur over time and some changes could affect SAR values.

For more info, go to www.sar-tick.com. Note that mobile devices may be transmitting even if you are not making a voice call.

The World Health Organization (WHO) has stated that current scientific information does not indicate the need for any special precautions when using mobile devices. If you are interested in reducing your exposure, they recommend you limit your usage or use a hands-free kit to keep the device away from your head and body. For more information and explanations and discussions on RF exposure, go to the WHO website at www.who.int/peh-emf/en.

سیم ے راب ے ک ماظتنا کے قوقح لٹي جي ڈ

زئاج ے ک سورسود روا تعاطا ی ک نی ن اوق مامت وت، سو ے هررک لامعتسا هل آ هی پآ بج وک پآ تاظفحت ٹئاری پاک۔ سي رک مارتحا اک ٹئاری پاک لومشب یرادزار روا قوقح ے نرک لقتنم اي، ے نرک مي مرت، ے نرک لاب لقن ی ک ازجا ے رسود روا، يقي سوم، ری واصلت سي۔ ے ت کس کور ے س

COPYRIGHTS AND NOTICES

Copyrights and other notices

The availability of products, features, apps and services may vary by region. For more information, contact your dealer or your service provider. This device may contain commodities, technology, or software subject to export laws and regulations from the USA and other countries. Diversion contrary to law is prohibited.

The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability, or contents of this document. HMD Global reserves the right to revise this document or withdraw it at any time without prior notice.

To the maximum extent permitted by applicable law, under no circumstances shall HMD Global or any of its licensors be responsible for any loss of data or income or any special, incidental, consequential, or indirect damages howsoever caused.

Reproduction, transfer, or distribution of part or all of the contents in this document in any form without the prior written permission of HMD Global is prohibited. HMD Global operates a policy of continuous development. HMD Global reserves the right to make changes and improvements to any of the products described in this document without prior notice.

HMD Global does not make any representations, provide a warranty, or take any responsibility for the functionality, content, or end-user support of third-party apps provided with your device. By using an app, you acknowledge that the app is provided as is.

Downloading of maps, games, music, and videos and uploading of images and videos may involve transferring large amounts of data. Your service provider may charge for the data transmission. The availability of particular products, services, and features may vary by region. Please check with your local dealer for further details and availability of language options.

Certain features, functionality, and product specifications may be network dependent and subject to additional terms, conditions, and charges.

All are subject to change without notice.

The HMD Global Privacy Policy, available at <http://www.hmd.com/privacy>, applies to your use of the device.

Qualcomm and Snapdragon are trademarks of Qualcomm Incorporated, registered in the United States and other countries.

ZEISS, the ZEISS logo, Tessar, and T* are registered trademarks of Carl Zeiss AG used under licence from Carl Zeiss Vision GmbH.

Google, Android, Google Play, and other related marks are trademarks of Google LLC.

The 'Qi' symbol is a trademark of the Wireless Power Consortium.

HMD Global Oy is the exclusive licensee of the Nokia brand for phones & tablets. Nokia is a registered trademark of the Nokia Corporation. OZO is a trademark of Nokia Technologies Oy.

The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by HMD Global is under licence.

All other trademarks are the property of their respective owners.