

### **User Manual of Product 1:**

Farberware Countertop Microwave 1000 Watts, 1.1 cu ft -  
Microwave Oven With LED Lighting and Child Lock - Perfect for  
Apartments and Dorms - Easy Clean Metallic Red

### **User Manual of Product 2:**

LUBY Convection Toaster Oven with Timer, Toast, Broil  
Settings, Includes Baking Pan, Rack and Crumb Tray, 6-Slice,  
Red

# MICROWAVE OVEN INSTRUCTION MANUAL

Model: FMO11AHTBKO



Read these instructions carefully before using your microwave oven, and maintain its upkeep. If you follow the instructions, your oven will provide you with many years of good service.

KEEP THESE INSTRUCTIONS IN A SAFE PLACE

## FARBERWARE®

Farberware is a registered trademark of Farberware Licensing Company, LLC  
Manufactured and sold pursuant to a license from Farberware Licensing Company, LLC  
© 2016 Farberware Licensing Company, LLC. All rights reserved.

## Tables of Contents

PRECAUTIONS.....	4
SPECIFICATIONS.....	4
SAFETY.....	5
GROUNDING.....	6
UTENSILS .....	8
SETTING UP YOUR OVEN .....	10
CONTROL PANEL.....	12
OPERATION.....	13
MAINTENANCE .....	18
WARRANTY INFORMATION .....	19

# PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

- (a) Do not attempt to operate this oven with the door open since open door operation can result in harmful exposure to microwave energy.  
It is important not to tamper with the safety interlocks.
- (b) Do not place any object between the oven front face and the door or allow food or cleaner residue to accumulate on the sealing surfaces.
- (c) Do not operate the oven if it is damaged. It is particularly important that the oven door close properly and that there is no damage to the:
  - (1) DOOR (bent)
  - (2) HINGES AND LATCHES (broken or loosened)
  - (3) DOOR SEALS AND SEALING SURFACES (Do not use if the door seal or sealing surfaces are damaged.)
- (d) The oven should not be adjusted or repaired by anyone except properly qualified service personnel.

## SPECIFICATIONS

Model:	FMO11AHTBKO
Rated Voltage:	120V~60Hz
Rated Input Power (Microwave):	1500W
Rated Output Power (Microwave):	1000W
Oven Capacity:	1.1 cubic feet
Turntable Diameter:	12.4 inches
External Dimensions:	20.2*17*12.1 inches
Net Weight:	31.5 lbs

## IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances basic safety precautions should be followed, including the following:

**WARNING** - To reduce the risk of burns, electric shock, fire, injury to persons or exposure to excessive microwave energy:

1. Read all instructions before using the appliance.
2. Read and follow the specific: **“PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY” found on page 4.**
3. This appliance must be grounded. Connect only to properly grounded outlet. See **“GROUNDING INSTRUCTIONS” found on page 6.**
4. Install or locate this appliance only in accordance with the provided installation instructions.
5. Some products such as whole eggs and sealed containers - for example, closed glass jars - are able to explode and should not be heated in this oven.
6. Use this appliance only for its intended use as described in the manual. Do not use corrosive chemicals or vapors in this appliance. This type of oven is specifically designed to heat, cook or dry food. It is not designed for industrial or laboratory use.
7. As with any appliance, close supervision is necessary when used by children.
8. Do not operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped.
9. This appliance should be serviced only by qualified service personnel. Contact nearest authorized service facility for examination, repair, or adjustment.
10. Do not cover or block any openings on the appliance.
11. Do not store this appliance outdoors. Do not use this product near water - for example, near a kitchen sink, in a wet basement, near a swimming pool, or similar location.
12. Do not immerse cord or plug in water.
13. Keep cord away from heated surface.
14. Do not let cord hang over edge of table or counter.
15. When cleaning surfaces of door and oven that comes together on closing the door, use only mild, nonabrasive soaps, or detergent applied with a sponge or soft cloth.
16. To reduce the risk of fire in the oven cavity:
  - a. Do not overcook food. Carefully attend appliance when paper, plastic, or other combustible materials are placed inside the oven to facilitate cooking.
  - b. Remove wire twist-ties from paper or plastic bag before placing bag in oven.
  - c. If material inside of the oven ignites, keep oven door closed, turn oven off, and disconnect the power cord, or shut off power at the fuse or circuit breaker panel.
  - d. Do not use the cavity for storage purposes. Do not leave paper products, cooking utensils, or food in the cavity when not in use.
17. Liquids, such as water, coffee, or tea are able to be overheated beyond the boiling point without appearing to be boiling. Visible bubbling or boiling when the container is removed from the microwave oven is not always present.  
**THIS COULD RESULT IN VERY HOT LIQUID SUDDENLY BOILING OVER WHEN THE CONTAINER IS DISTURBED OR A UTENSIL IS INSERTED INTO THE LIQUID.**

To reduce the risk of injury to persons:

1. Do not overheat the liquid.
2. Stir the liquid both before and halfway through heating it.
3. Do not use straight-sided containers with narrow necks.
4. After heating, allow the container to stand in the microwave oven for a short time before removing the container.
5. Use extreme care when inserting a spoon or other utensil into the container.

## SAVE THESE INSTRUCTIONS

### GROUNDING INSTRUCTIONS

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

**WARNING** – Improper use of the grounding can result in a risk of electric shock. **Consult a qualified electrician or serviceman if the grounding instructions are not completely understood, or if doubt exists as to whether the appliance is properly grounded.** If it is necessary to use an extension cord, use only a 3-wire extension cord that has a 3-blade grounded plug, and 3-slot receptacle that will accept the plug on the appliance. The marked rating of the extension cord shall be equal to or greater than the electrical rating of the appliance.

#### **DANGER** – Electric Shock Hazard

Touching some of the internal components can cause serious personal injury or death. Do not disassemble this appliance.

#### **WARNING** – Electric Shock Hazard

Improper use of the grounding can result in electric shock. Do not plug into an outlet until appliance is properly installed and grounded.

1. A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
2. Longer cord sets or extension cords are available and may be used if care is exercised in their use.
3. If a long cord or extension cord is used:
  - a. The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
  - b. The extension cord must be a grounding-type 3-wire cord.
  - c. The longer cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over unintentionally.

## RADIO INTERFERENCE

1. Operation of the microwave oven may cause interference to your radio, TV or similar equipment.
2. When there is interference, it may be reduced or eliminated by taking the following measures:
3. Clean door and sealing surface of the oven.
  - a. Reorient the receiving antenna of radio or television.
  - b. Relocate the microwave oven with respect to the receiver.
  - c. Move the microwave oven away from the receiver.
  - d. Plug the microwave oven into a different outlet so that microwave oven and receiver are on different branch circuits.

## SAFETY

1. The oven must be on a leveled surface.
2. The turntable and turntable roller rest must be in the oven during cooking. Place the cookware gently on the turntable and handle it carefully to avoid possible breakage.
3. Incorrect use of browning dish may cause the turntable to break.
4. Use only the specified bag size when using Direct Access Popcorn.
5. The oven has several built-in safety switches to ensure that the power remains off when the door is open. Do not tamper with these switches.
6. Do not operate the microwave oven empty. Operating the oven with no food or food that is extremely low in moisture can cause fire, charring or sparking.
7. Do not cook bacon directly on the turntable. Excessive local heating of the turntable may cause the turntable to break.
8. Do not heat baby bottles or baby food in the microwave oven. Uneven heating may occur and could cause physical injury.
9. Do not heat narrow-necked containers, such as syrup bottles.
10. Do not attempt to deep-fry in your microwave oven.
11. Do not attempt home canning in this microwave oven, as it is impossible to be sure all contents of the jar have reached boiling temperature.
12. Do not use this microwave oven for commercial purpose. This microwave oven is made for household use only.
13. To prevent delayed eruptive boiling of hot liquids and beverages or scalding yourself, stir liquid before placing the container in the oven and again halfway through cooking time. Let stand in the oven for a short time and stir again before removing the container.
14. Use care when cooking food in the microwave oven to avoid burning due to excessive cooking.
15. When the appliance is operated in the combination mode, children should only use the oven under adult supervision due to the temperatures generated.
16. Failure to maintain the oven in a clean condition could lead to deterioration that could adversely affect the life of the appliance and possibly result in a hazardous situation.

# UTENSILS

## CAUTION – Personal Injury Hazard

Tightly-closed utensils could explode. Closed containers should be opened and plastic pouches should be pierced before cooking.

See the instructions on “Materials you can use in microwave oven or to be avoided in microwave oven.”

There may be certain non-metallic utensils that are not safe to use for microwaving. If in doubt, you can test the utensil in question following the procedure below.

Utensil Test:

1. Fill a microwave-safe container with 1 cup of cold water (250ml) along with the utensil in question.
2. Cook on maximum power for 1 minute.
3. Carefully feel the utensil. If the empty utensil is warm, do not use it for microwave cooking.
4. Do not exceed 1 minute cooking time.

## MATERIALS TO AVOID IN MICROWAVE OVEN

Utensils	Remarks
Aluminum tray	May cause arcing. Transfer food into microwave-safe dish.
Food carton with metal handle	May cause arcing. Transfer food into microwave-safe dish.
Metal or metal-trimmed utensils	Metal shields the food from microwave energy. Metal trim may cause arcing.
Metal twist ties	May cause arcing and could cause a in the oven.
Paper bags	May cause fire in the oven
Plastic foam	Plastic foam may melt or contaminate the liquid inside when exposed to high temperature.
Wood	Wood will dry out when used in the microwave oven and may split or crack.

## MATERIALS YOU CAN USE IN MICROWAVE OVEN


Utensils	Remarks
Aluminum foil	Shielding only. Small smooth pieces can be used to cover thin parts of meat or poultry to prevent overcooking. Arcing can occur if foil is too close to oven walls. The foil should be at least 1 inch (2.5cm) away from oven walls.
Browning dish	Follow manufacturer* instructions. The bottom of browning dish must be at least 3/16 inch (5mm) above the turntable. Incorrect usage may cause the turntable to break.
Dinnerware	Microwave-safe only. Follow manufacturer's instructions. Do not use cracked or chipped dishes.
Glass jars	Always remove lid. Use only to heat food until just warm. Most glass jars are not heat resistant and may break.
Glassware	Heat-resistant oven glassware only. Make sure there is no metallic trim. Do not use cracked or chipped dishes.
Oven cooking bags	Follow manufacturer* instructions. Do not close with metal tie. Make slits to allow steam to escape.
Paper plates and cups	Use for short term cooking/warming only. Do not leave oven unattended while cooking.
Paper towels	Use to cover food for reheating and absorbing fat. Use with supervision for a short-term cooking only.
Parchment paper	Use as a cover to prevent splattering or a wrap for steaming.
Plastic	Microwave-safe only. Follow the manufacturer* instructions. Should be labeled "Microwave Safe". Some plastic containers soften, as the food inside gets hot. "Boiling bags" and tightly closed plastic bags should be slit, pierced or vented as directed by package.
Plastic wrap	Microwave-safe only. Use to cover food during cooking to retain moisture. Do not allow plastic wrap to touch food.
Thermometers	Microwave-safe only (meat and candy thermometers).
Wax paper	Use as a cover to prevent splattering and retain moisture.

# SETTING UP OUR OVEN

## Names of Oven Parts and Accessories

Remove the oven and all materials from the carton and oven cavity. Your oven comes with the following accessories.


Glass tray (turntable)  
Turntable ring assembly  
Instruction manual

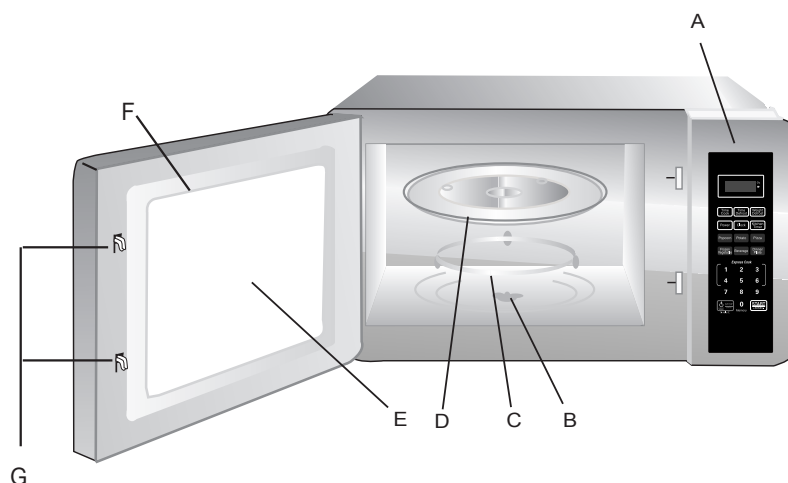

**A) Control panel**  
**B) Turntable shaft**  
**C) Turntable ring assembly**  
**D) Glass tray**

**E) Observation window**  
**F) Door assembly**  
**G) Safety interlock system**

## Turntable Installation

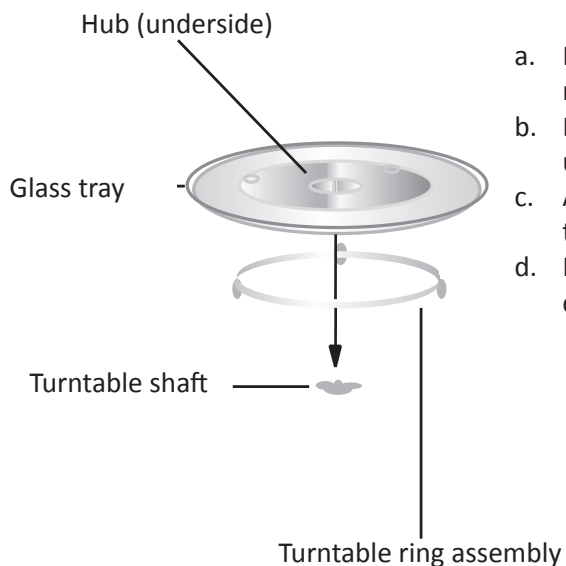


- Never place the glass tray upside down. The glass tray should never be restricted.
- Both glass tray and turntable ring assembly must always be used during cooking.
- All food and containers of food are always placed on the glass tray for cooking.
- If glass tray or turntable ring assembly cracks or breaks, contact your nearest authorized service center.

## Countertop Installation

Remove all packing material and accessories. Examine the oven for any damage such as dents or broken door. Do not install if oven is damaged.

Cabinet: Remove any protective film found on the microwave oven cabinet surface.


Do not remove the light brown Mica cover that is attached to the oven cavity to protect the magnetron.

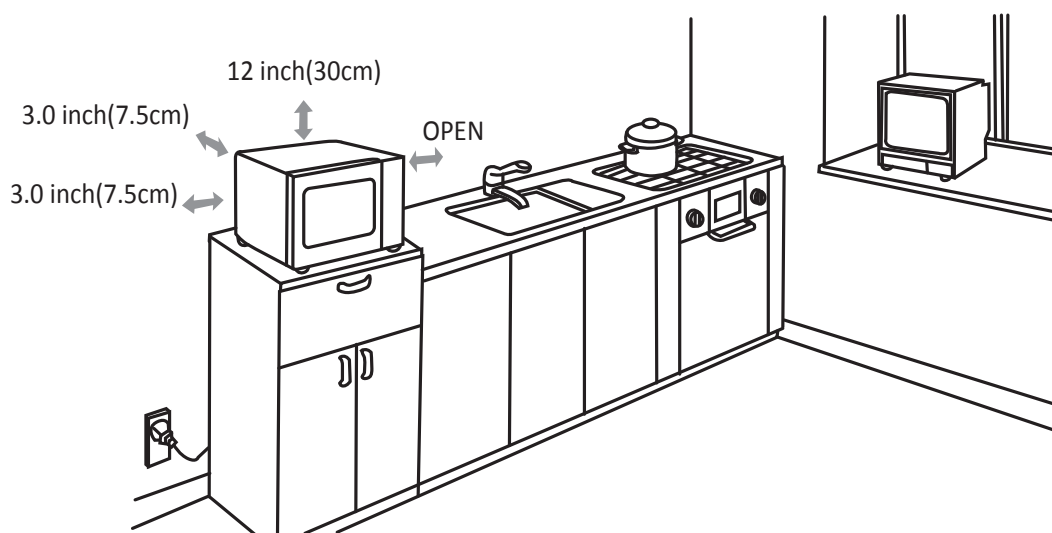

1. Select a level surface that provide enough open space for the intake and/or outlet vents. A minimum clearance of 3.0 inches (7.5cm) is required between the oven and any adjacent walls. One side must be open.
  - a. Leave a minimum clearance of 12 inches (30cm) above the oven.
  - b. Do not remove the legs from the bottom of the oven.
  - c. Blocking the intake and/or outlet openings can damage the oven.
  - d. Place the oven as far away from radios and TV as possible. Operation of microwave oven may cause interference to your radio or TV reception.
2. Plug your oven into a standard household outlet. Be sure the voltage and the frequency is the same as the voltage and the frequency on the rating label.

**WARNING:** Do not install oven over a range cooktop or other heat-producing appliance. If installed near or over a heat source, the oven could be damaged and the warranty would be void.

# CONTROL PANEL

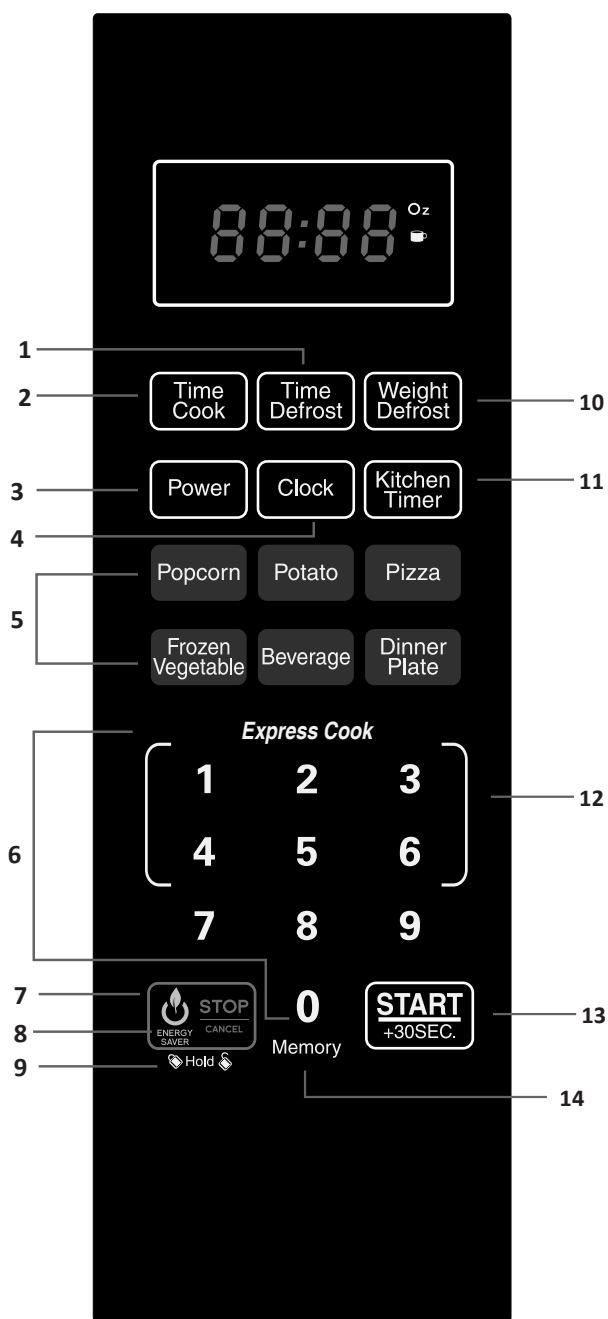

1. Time Defrost
2. Time Cook
3. Power (10 power levels)
4. Clock
5. Auto Cook Menu (Popcorn, Potato, Pizza, Frozen Vegetable, Beverage, Dinner Plate)
6. Number Pad (0-9)
7. Stop/CANCEL (Before cooking starts, press to clear all previous settings; during cooking, press once to stop oven; press twice to stop oven and clear all settings.)
8. Energy Saver Mode (turns off display)
9. Child Lock (Hold)
10. Weight Defrost
11. Kitchen Timer
12. Express Cook (Number Pad 1-6)
13. START/+30SEC (Begin cooking time or add time to cooking)
14. Memory function

## OPERATION

### 1. POWER LEVEL

10 Power levels are available

Level	10	9	8	7	6	5	4	3	2	1
Power	100%	90%	80%	70%	60%	50%	40%	30%	20%	10%
Display	PL10	PL9	PL8	PL7	PL6	PL5	PL4	PL3	PL2	PL1

### 2. CLOCK SETTING

- (1) Press "Clock", "00:00" will display.
- (2) Press the number keys and enter the current time. For example, time is 10:12 now, please press "1, 0, 1, 2" in turn.
- (3) Press "Clock" to finish clock setting. ":" will flash and the clock will be illuminated.
- (4) If the numbers input are not within the range of 1:00-12:59, the setting will be invalid until valid numbers are input.

Note:

- A. In the process of clock setting, if the "STOP/Cancel" button is pressed or if there is no operation within 1 minute, the oven will go back to the former setting automatically.
- B. If the clock needs to be reset, please repeat step 1 to step 3.

### 3. KITCHEN TIMER

- (1) Press "Kitchen Timer" once, the screen will display 00:00.
- (2) Press the number keys and enter the timer time. The maximum cooking time is 99 minutes and 99 seconds.
- (3) Press "START/+30SEC." to confirm setting.
- (4) When the timer finishes, the buzzer will sound 5 times, and the screen will display the current time.

Note:

- A. The kitchen time is different from 12-hour system, Kitchen Timer is a timer.
- B. Kitchen Timer and cooking (including microwave, defrosting, Auto menu) are independent. All cooking functions can not be set while running the Kitchen Timer, the Kitchen Timer can not be set while running the cooking functions.

#### 4. MICROWAVE COOK

- (1) Press "Time Cook" once, the screen will display "00:00".
- (2) Press number keys to input the cooking time; the maximum cooking time is 99 minutes and 99 seconds.
- (3) Press "Power " once, the screen will display "PL10". The default power is 100% power. Now you can press number keys to adjust the power level.
- (4) Press "START/+30SEC." to start cooking.

Example: to cook the food with 50% microwave power for 15 minutes.

- A. Press "Time Cook" once, the screen displays "00:00".
- B. Press "1", "5", "0", "0" in order.
- C. Press "Power " once, then press "5" to select 50% microwave power.
- D. Press "START/+30SEC." to start cooking.

Note:

- A. In the process of setting, if the "STOP/Cancel" button is pressed or if there is no operation within 5 minutes, the oven will go back to the former setting automatically.
- B. You can skip the step of "c" and cook at 100% microwave power.

#### 5. EXPRESS COOKING

- (1) Start cooking instantly at 100% power level at cooking times from 1 to 6 minutes by pressing number pads 1 to 6. Press "START/+30SEC." to increase the cooking time; the maximum cooking time is 99 minutes and 99 seconds.
- (2) Start cooking instantly at 100% power level with 30 seconds cooking time by pressing "START/+30SEC.". Each press on the same button will increase cooking time by 30 seconds. The maximum cooking time is 99 minutes and 99 seconds.
- (3) Press "Time Cook" to adjust cooking time, then press "START/+30SEC." to start cooking with full microwave power.

Note: During microwave cooking, time defrost , time can be added by pressing "START/+30SEC." button.

#### 6. CANCEL QUICKLY

During setting or running procedure, only pressing "STOP/Cancel" can stop current states and turn back to the standby state.

#### 7. WEIGHT DEFROST FUNCTION

- (1) Press "Weight Defrost" once, the screen will display "dEF1".
- (2) Press numerical buttons to input weight to be defrosted. Input the weight range ranged between 4~100 oz.
- (3) If the weight input is not within 4~100 oz, the input will be invalid. The unit will not work until valid numbers are input.
- (4) Press "START/+30SEC." to start defrosting and the cooking time remaining will be displayed.

## 8. TIME DEFROST FUNCTION

- (1) Press "Time Defrost", the screen will display "dEF2".
- (2) Press numerical buttons to input time to be defrosted. Input the time ranging between 0:01~99:99.
- (3) Press "START/+30SEC." to start defrosting. The default microwave power is PL3. The power cannot be adjusted.

## 9. POPCORN

- (1) Press "Popcorn" repeatedly until the weight you need appears in the display.

For example, press "Popcorn" twice, "3.0" displays.

- (2) Press "START/+30SEC." to cook.

Times Pressed "POPCORN"	Weight	Display
1	1.75 oz	1.75
2	3.0 oz	3.0
3	3.5 oz	3.5

## 10. BEVERAGE

- (1) Press "Beverage" repeatedly until the number you wish appears in the display, "1", "2", "3" cup will display in order. One cup is about 120 ml.  
For example, press "Beverage" once, "1" appears.
- (2) Press "START/+30SEC." to cook, buzzer sounds once. When cooking finishes, buzzer sounds five times and then turns back to waiting state.

## 11. PIZZA REHEAT

- (1) Press "Pizza" repeatedly until the number you wish appears in the display, "4.0", "8.0", "14.0" oz will display in order.  
For example, press "Pizza" once, "4.0" appears.
- (2) Press "START/+30SEC." to cook, buzzer sounds once. When cooking finishes, buzzer sounds five times and then turns back to waiting state.

## 12. POTATO

- (1) Press "Potato" repeatedly until the number you wish appears in the display, "1", "2", "3" will display in order.  
For example, press "Potato" once, "1" appears.
- (2) Press "START/+30SEC." to cook, buzzer sounds once. When cooking finishes, buzzer sounds five times and then turns back to waiting state.

## 13. FROZEN VEGETABLE

- (1) Press "Frozen Vegetable" repeatedly until the number you wish appears in the display, "4.0", "8.0", "16.0" oz will display in order.  
For example, press "Frozen Vegetable" once, "4.0" appears.
- (2) Press "START/+30SEC." to cook, buzzer sounds once. When cooking finishes, buzzer sounds five times and then turns back to waiting state.

#### 14. DINNER PLATE

- (1) Press "Dinner Plate" repeatedly until the number you wish appears in the display, "9.0", "12.0", "18.0" oz will display in order.  
For example, press "Dinner Plate" once, "9.0" appears.
- (2) Press "START/+30SEC." to cook, buzzer sounds once. When cooking finishes, buzzer sounds five times and then turns back to waiting state.

#### 15. MEMORY FUNCTION

- (1) Press "0/Memory" to choose memory 1-3 procedure. 1, 2, or 3 will display.
- (2) If the procedure has been set, press "START/+30SEC." to use it. If not, continue to set the procedure. Only one or two microwave stages can be set.
- (3) After finishing the setting, press "START/+30SEC." to save the procedure and turn back to the standby modes. Press "START/+30SEC." to save and operate the setting.

EXAMPLE: To set the following procedure as the second memory, that is memory 2, and cook the food with 80% microwave power for 3 minutes and 20 seconds. Follow these steps:

- A. In standby mode, press "0/Memory" twice, "2" displays.
  - B. Press "Time Cook", then input number keys "3", "2", "0" to choose the cooking time.
  - C. Press "Power" once, then press number button "8", "PL8" displays.
  - D. Press "START/+30SEC." once to save the current setting. Buzzer sounds once then the screen will display "2".  
If you press "START/+30SEC." again, the cooking program can be operated as memory 2.
  - E. If the electricity is not cut off, the procedure will be saved permanently. If it is, the procedure will need to be reset.
  - F. To run the saved program, in standby mode, press "0/Memory" twice, "2" displays and press "START/+30SEC." to run the saved cooking program.
- Note: Auto cook and defrosting cannot be set in memory function.

#### 16. MULTI-SECTION COOKING

At most, 2 stages can be set for cooking. In multi-stage cooking, if one stage is defrosting, then defrosting shall be placed at the first stage automatically.

Note: Auto menu cannot work in the multi-stage cooking.

Example: if you want to cook with 80% microwave power for 5 minutes at 60% microwave power for 10 minutes. The cooking steps are as follows:

- (1) Press "Time Cook" once, then press "5", "0", "0" to set 5 minutes.
- (2) Press "Power" once.
- (3) Press number button "8" to set 80% microwave power.
- (4) Press "Time Cook" once, then press "1", "0", "0", "0" to set 10 minutes.
- (5) Press "Power" once.
- (6) Then press number button "6" to set 60% microwave power.
- (7) Press "START/+30SEC." to start cooking.

Note: Auto cook cannot be set as one of the multi-section.

#### 17. INQUIRING FUNCTION

In the microwave cooking mode, press "Power" to inquire microwave power level, and the current microwave power will be displayed. After 3 seconds the microwave will return to its previous mode. The same method can be used to find power in the multi-mode cooking mode.

## 18. LOCK FUNCTION FOR CHILDREN

- (1) Lock: In standby mode, press "STOP/Cancel" for 3 seconds, there will be a long "beep" denoting the entering into the children-lock mode; the lock indicator will light and the screen will display [ ]
- (2) Unlock: In locked mode, press "STOP/Cancel" for 3 seconds, there will be a long "beep" denoting that lock is released.

## 19. END OF COOKING REMINDER

When the cooking is over, the buzzer will sound 5 "beeps" to alert user that cooking is finished.

## 20. ENERGY SAVER MODE

- (1) In standby mode, press the "STOP/Cancel" once (less than 3 seconds to avoid starting the child lock function) to enter the Energy Saver mode.
- (2) In child-locked mode, press the "STOP/Cancel" once (less than 3 seconds) and release to enter the Energy Saver Mode.
- (3) Above operation is the only way to start the Energy Saver mode.
- (4) The Energy Saver mode works only if the door is closed.

## 21. OTHER SPECIFICATIONS

- (1) In standby mode, if the set clock displays current time, " : " will flash; otherwise, it shows "0:00"
- (2) In setting function mode, the corresponding setting displays.
- (3) In working or pause mode, the surplus cooking time displays.
- (4) When the cooking is finished the screen will display the correct time. Opening the door or pressing "STOP/Cancel" can make the oven enter standby mode.

# MAINTENANCE

## Troubleshooting

Check your problem by using the chart below and try the solutions for each problem. If the microwave oven still does not work properly, contact the nearest authorized service center

Trouble	Possible Cause	Possible Remedy
Oven will not start	a. Electrical cord for oven is not plugged in. b. Door is open. c. Wrong operation is set.	a. Plug into the outlet. b. Close the door and try again. c. Check instructions.
Arcing or sparking	a. Materials to be avoided in microwave oven were used. b. The oven is operated when empty. c. Spilled food remains in the cavity.	a. Use microwave-safe cookware only. b. Do not operate with oven empty. c. Clean cavity with wet towel
Unevenly cooked foods	a. Materials to be avoided in microwave oven were used. b. Food is not defrosted completely. c. Cooking time, power level is not suitable. d. Food is not turned or stirred.	a. Use microwave-safe cookware only. b. Completely defrost food. c. Use correct cooking time, power level. d. Turn or stir food.
Overcooked foods	Cooking time, power level is not suitable.	Use correct cooking time, power level.
Undercooked foods	a. Materials to be avoided in microwave oven were used. b. Food is not defrosted completely. c. Oven ventilation ports are restricted. d. Cooking time, power level is not suitable.	a. Use microwave-safe cookware only. b. Completely defrost food. c. Check to see that oven ventilation ports are not restricted. d. Use correct cooking time, power level.
Improper Defrosting	a. Materials to be avoided in microwave oven were used. b. Cooking time, power level is not suitable. c. Food is not turned or stirred.	a. Use microwave-safe cookware only. b. Use correct cooking time, power level. c. Turn or stir food.

## ONE YEAR LIMITED WARRANTY

This warranty applies to products purchased and used in the U.S and Canada.

This is the only express warranty for this product and is in lieu of any other warranty or condition.

This product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of original purchase. This warranty is valid for the original retail purchaser or gift recipient from the date of initial retail purchase and is not transferable.

Keep your original sales receipt as proof of purchase is required to make a warranty claim.

**IMPORTANT:** This warranty does not cover damages resulting from use not in conformity with the printed directions, accident, misuse or abuse, alternation, the affixing of any attachments not provided with the product, loss of parts, or subjecting the appliance to any but the specified voltage. (Read directions carefully.) This warranty is void if the product is used for other than single-family household use or subjected to any voltage and waveform other than as specified on the rating label (e.g., 120V ~ 60 Hz).

Edge Consumer Brands, LLC excludes all claims for special, incidental, and consequential damages caused by breach of express or implied warranty. All liability is limited to the amount of the purchase price. Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty. This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental, or consequential damages, so the foregoing limitations may not apply to you.

To make a warranty claim or if service is required, please call our CUSTOMER SERVICE NUMBER.

For faster service, please have the model, type, and series numbers ready for the operator to assist you.

Customer Service Number  
Edge Consumer Brands, LLC  
In the US 877-648-5973

Email: [Support@EDGECEB.com](mailto:Support@EDGECEB.com)



# INSTRUCTION MANUAL

## ELECTRIC TOASTER OVEN



**MODEL: GH23CL**

**CAPACITY: 23 LITRES**

**120V/60Hz, 1500W**

**Read all the sections of this booklet and follow all the instructions carefully.**

**SAVE THESE INSTRUCTION-  
For Household Use Only**

If you have any questions to our products, please contact us by E-mail:  
[luby-business@hotmail.com](mailto:luby-business@hotmail.com). Our customer services are always ready to offer you a  
satisfying solution.

Service website: <http://www.luby-hainter.com>

Product verification code:


# IMPORTANT SAFETY INSTRUCTIONS

When using your *Electric Oven*, basic safety precautions should always be observed, including the following:

1. **Do not** touch hot surfaces. Always use handles or knobs.
2. Close supervision is necessary when any appliance is used by or near children.
3. To protect against electric shock, do not immerse cord, plug or any parts of the oven in water or any other liquids.
4. **Do not** let cord hang over edge of table or counter, or touch hot surfaces.
5. **Do not** operate an appliance with a damaged cord or plug or after the appliance malfunctions or has been damage in any manner.
6. The use of accessory attachments not recommended by the appliance manufacturer may cause hazard or injury.
7. **Do not** place on or near a hot gas or electric burner.
8. When operating the oven, keep at least four inches of free space on all sides of the oven to allow for adequate air circulation.
9. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts and before cleaning.
10. To disconnect, turn the time control to OFF, then remove the plug. Always hold the plug, and never pull the cord.
11. Extreme caution must be used when moving a drip pan containing hot oil or other hot liquids.
12. **Do not** cover any part of the oven with metal foil. This may cause the oven to overheat.
13. Use extreme caution when removing the tray, racks or disposing of hot grease or other hot liquids.
14. **Do not** clean the inside of the oven with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
15. Oversized foods or metal utensils must not be inserted in a toaster oven as they may create a fire or an electric shock.
16. A fire may occur if the oven is covered or touching flammable material, including the curtains, draperies, walls, and the like, when in operation. Do not store any item on top of the appliance when in operation.
17. Extreme cautions should be exercised when using cooking or baking containers constructed of anything other than metal or ovenproof glass.
18. Be sure that nothing touches the top or bottom elements of the oven.
19. **Do not** place any of the following materials in the oven: cardboard, plastic, paper or anything similar.
20. **Do not** store any materials other than the manufacturer's recommended accessories in this oven when not in use.
21. Always wear protective, insulated oven gloves when inserting or removing items from the hot oven.
22. This appliance has a tempered, safety glass door. The glass is stronger than ordinary glass and more resistant to breakage. Tempered glass can still break around the edges. Avoid scratching the door surface or nicking the edges.
23. This appliance is OFF when the Timer Control button is in the "OFF" position.
24. **Do not** use outdoors.
25. **Do not** use this appliance for other than its intended use.

# Getting To Know Your Electric Oven

## MAIN COMPONENT:

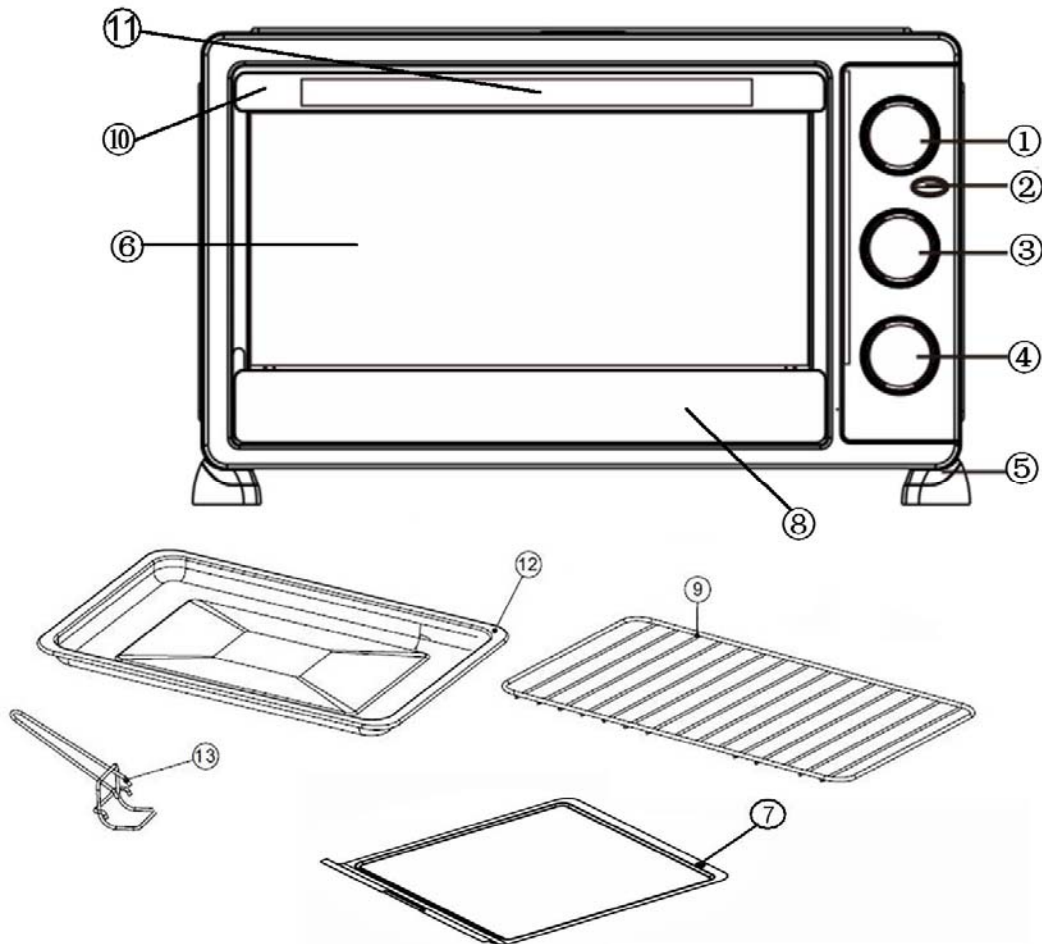


1. Temperature Control Knob	2. Indicator Light
3. Function Control Knob	4. Timer Control Knob
5. Oven Foot	6. Door Glass
7. Crumb Tray	8. Bottom Door Frame
9. Wire Rack	10. Top Door Frame
11. Oven Handle	12. Bake Tray
13. Tray Handle	

## Technical Specifications

Voltage: 120V/ 60Hz.  
Power: 1500 Watts

### Before using your Electric oven

▲ Before using your electric oven for the first time, be sure to:




1. Read all of the instruction included in this manual.
2. Make sure that the oven is unplugged and the **Timer control** is in the “OFF” position.
3. Wash all the accessories in hot, soapy water or in the dishwasher.
4. Thoroughly dry all accessories and re-assemble in the oven. Plug the oven into outlet and you are ready to use your new toaster oven.
5. After re-assembling your oven, we recommend that you run it at the highest temperature (450°F) on the  function for approximately 15 minutes to eliminate any packing residue that may remain after shipping. This will also remove all traces of odor initially present.

**Please Note:** Initial start-up operation may result in minimal smell and smoke (about 15 minutes). This is normal and harmless. It is due to burning of the protective substance applied to the heating elements in the factory.

### Using your electric oven

You can use the Luby oven for broil, bake and toast.

**Please familiarize yourself with the following oven functions and accessories prior to first use:**

- **Temperature Control:** Choose the desired temperature from **150°F** to **450°F** for baking, broiling or toasting.
- **Function Control:** There're four stages switch heating selector: Off/  Upper heating/   
Bottom heating /  Upper heating + Bottom heating
- **Timer Control:** To choose your cooking time, and there is a bell rings at the end of the programmed time. Also control the Convection and Lamp turn-on and turn-off at the same time.
- **Power “ON” neon light:** It's illuminated whenever the oven is turned on.
- **Bake Tray:** For use in broiling and roasting meat, poultry, fish and various other foods.
- **Tray Handle:** Allows you to pick up the wire rack, and bake tray when they are hot.
- **Crumb tray:** Use to catch the drippings, bread crumbs, etc.
- **Wire Rack:** Use for bake cake, meat and various other foods.

## CONVECTION and Lamp

Convection Fan and Lamp are operating when the timer is turn-on and stopping when the timer is turn-off.



**CAUTION:** Always use extreme care when removing bake tray, wire rack or any hot container from a hot oven. Always use the rack handle, or an oven mitt when removing hot items from the oven.

## Care & Cleaning

**Warning: Be sure to unplug the oven and allow it to cool before cleaning.**

Any spattering that occurs while cooking and comes into contact with the cavity surface is

oxidized while the oven is in operation. If desired, wipe the walls with a damp sponge, cloth or nylon scouring pad and mild detergent. **DO NOT USE STEEL WOOL SCOURING PADS, ABRASIVE CLEANERS OR SCRAPE THE WALLS WITH A METAL UTENSIL, AS ALL OF THESE METHODS MAY DAMAGE CAVITY SURFACE AND CAUSE RUST.**

All accessories should be washed in hot soapy water or can be cleaned in a dishwasher. The door can be wiped with a damp sponge and wiped dry with a paper or cloth towel. Clean the outside with a damp sponge. **DO NOT USE AN ABRASIVE CLEANER AS IT MAY DAMAGE THE EXTERIOR FINISH AND CAUSE TO BE RUST.**

**DO NOT USE AN ABRASIVE CLEANER OR STEEL WOOL SCOURING PAD ON THE DRIP PAN AS IT MAY DAMAGE THE PORCELAIN ENAMEL FINISH. LET ALL PARTS AND SURFACES TO BE DRY THOROUGHLY BEFORE PLUGGING OVEN IN AND USING.**

Due to continuous product improvement, specifications subject to change without prior notice.

## **WARNING!**

The appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

1. Never use the device unsupervised! Switch off the device whenever you are not using it, even if this only for short while.
2. This appliance is not intended to be operated by means of an external timer or separate remote-control system.
3. If the supply cord is damaged, it must be replaced by the manufacturer, it's service agent or similarly qualified persons in order to avoid a hazard.
4. Do not immerse this product in liquid.

**\*\*\*This appliance shall not be used by children. Please must keep the appliance away and its cord out of reach of children. \*\*\***



**Caution: Hot surfaces!**

**The surfaces of oven are getting hot when the appliance is operating.**



