


Video Door Phone Quick Installation Guide




① Package Contents

	i32V Video Door Phone		Connector
	Quick Installation Guide		Mounting Template
	RFID Cards		Screw and tool

② Physical specification


Device size	195 x 120 x 34 (mm)
--------------------	----------------------------

1) Panel

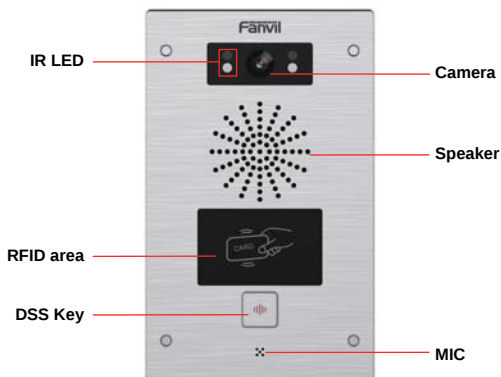

2) Interface description

Open the rear case of the device, there is a row of terminal blocks for connecting the power supply, electric lock control, etc. The connection is as follows:

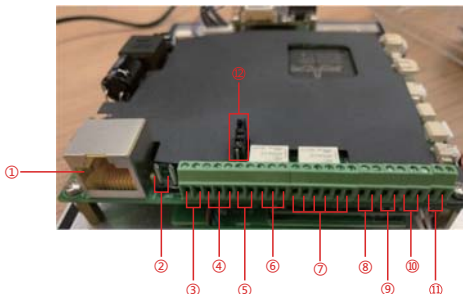


Serial number	Description
1	Ethernet interface: standard RJ45 interface, 10/100M adaptive, it is recommended to use five or five types of network cable
2	Power interface: 12V/1A input left positive, right grounded
3、5	Two sets of short-circuit input detection interfaces: for connecting switches, infrared probes, door magnets, vibration sensors and other input devices
4、6	Two sets of short-circuit output control interface: used to control electric locks, alarms, etc.
7	Wiegand interface
8、9	Two sets of door magnetic detection
10	Recording output interface: Mix the device and the sound of the far-end call. One is the recording signal line, and the other is the ground line (be sure to ground the line, otherwise there will be noise)
11	External active speaker interface: external active speakers for audio power amplification. One is the audio signal line, and the other is the ground line (be sure to ground the line, otherwise there will be noise)
12	JP1 jumper

JP1 Jumper

There are two modes for power supply of electric-lock as shown in the picture below.
(The default is " Passive Mode: ").

Passive Mode: When the electric-lock starting current is more than 12V/500mA, need to use the external drive mode, the electric lock interface for short circuit output control.

Active Mode : When the electric-lock starting current is less than 12V/500mA, can use the internal drive mode, the electric lock interface is 12V DC output.

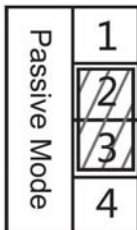


3) Wiring instructions:

NO: Normally Open Contact

COM: Common Contact

NC: Normally Close Contact


Driving Mode		Electric-lock Mode		JP1 Jumper	Connections
Active	Passive	No electricity when open	Electricity when open		
✓		✓		Active Mode 	
✓			✓	Active Mode 	
	✓	✓		Passive Mode 	
	✓		✓	Active Mode 	

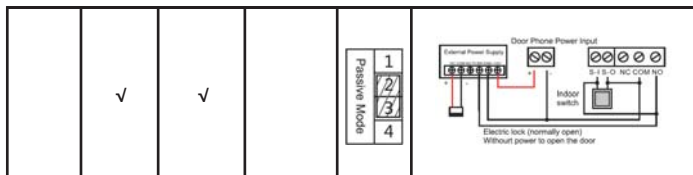

3 Installation Diagram

Wall-mounted:

- 1) Use built-in screw tool to remove the surface shell;
- 2) Based installation dimensions, mounting hole in the wall to draw, use an electric drill holes lay;
- 3) The white rubber plugged into the wall and the bottom fixed with screws to the wall;
- 4) After connecting the power cord and network cable, screw the surface shell fixed.

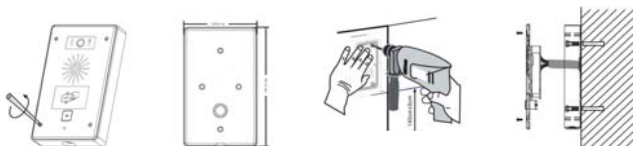


4 Searching Door Phone

There are two methods as shown below to search the device.

Method 1:

Open the iDoorPhone Network Scanner. Press the Refresh button to search the device and find the IP address.

(Download address <http://download.fanvil.com/tool/iDoorPhoneNetworkScanner.exe>)

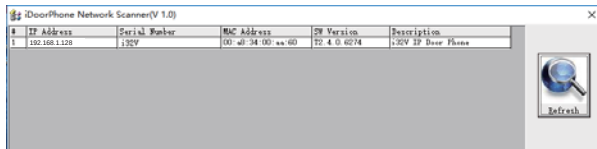

Method 2:

Long press DSS key for 10 seconds(after power-on for 30 seconds), and when the speaker beeps rapidly, press DSS key again quickly, the beeps stop ,the intercom will report the IP address by itself.

In addition, device provides the device surface DSS key operation to switch IP address acquisition mode:

Long press the DSS key for 10 seconds, to be issued by the speaker Beep, and then press the DSS key three times, the beep stops. Wait 10 seconds, after the success of the system automatically broadcast the current IP address.

5 IP Door Phone Setting

Step 1: Log in the door phone

Input IP address (e.g. http://192.168.1.128) into address bar of PC's web browser.
The default user name and password are both admin.

A login form with a red header bar. It contains three input fields: 'User:' with 'admin' entered, 'Password:' with '*****' entered, and 'Language:' with a dropdown menu showing 'English'. Below these fields is a 'Logon' button.

Step 2: Add the SIP account.

Set SIP server address, port, user name, password and SIP user with assigned SIP account parameters.
Select "Activate", and then click Apply to save this setting.

The 'SIP' configuration page with tabs for 'SIP', 'Basic Settings', 'Dial Plan', and 'SIP Network'. The 'Basic Settings' tab is active. It shows 'Line' set to 'SIP 1'. Under 'Basic Settings >>', there are fields for 'Line Status' (set to 'Enable'), 'Phone number' (2005), 'Display name' (2005), 'Authentication Name' (2005), 'Authentication Password' (****), and 'Activate' (checked). To the right, there are fields for 'SIP Proxy Server Address' (192.168.1.128), 'SIP Proxy Server Port' (5060), 'Backup Proxy Server Address' (blank), 'Backup Proxy Server Port' (blank), 'Outbound proxy address' (blank), and 'Outbound proxy port' (blank). Below these are 'Cachern Settings >>' and 'Advanced Settings >>' sections. An 'Apply' button is at the bottom.

Step 3: Setting DSS key

Set the DSS key as shown below for a quick start. Click "Apply" to save this setting.

Type: Hot Key

Number 1: The DSS Key will dial to this Number 1.

Number 2: If Number 1 is unavailable, it will be forwarded to Number 2.

Line: Working line

Subtype: Speed dial

The 'Function Key Settings' page. It has a table with columns: 'Key', 'Type', 'Number 1', 'Number 2', 'Line', and 'Subtype'. Two rows are shown: 'DSS Key 1' with 'Hot Key', '192.168.1.128', '5060', 'SIP', and 'Speed Dial'; and 'DSS Key 2' with 'None', '1', '5060', 'SIP', and 'Speed Dial'. Below the table, under 'Advanced Settings', there are checkboxes for 'Use Function Key to Answer' (checked), 'Enable Speed Dial Hangup' (checked), 'Hot Key (Dial Mode Select)' (set to 'One Night'), 'Call Switched Time' (set to '3--9:55:00am(1)'), 'Day Start Time' (set to '00:00--23:59'), and 'Day End Time' (set to '00:00--23:59'). An 'Apply' button is at the bottom.

Step 4: Door Phone Setting

Common Settings

Switch Mode: **Remotely**

Switch-On Duration: **5** [1-600(Second)]

Second Switch Mode: **Remotely**

Second Switch-On Duration: **5** [1-600(Second)]

Second Door Open Mode: **Independence**

Delay Time For Async Mode: **5** [1-60(Second)]

Enable Card Reader: **Enable**

Card Reader I/O Card Data Reverse: **Automatic**

Card Reader Working Mode: **Normal**

Wiegand Data Reverse: **Automatic**

Card Reader I/O Card Effective Date: **Automatic**

Link Talk Duration: **Enable**

Talk Duration: **1.00** [0.00-600(Second)]

Remote Password: ********

Local password: ********

Enable Indoor Open: **Enable**

Enable Access Table: **Enable**

Description: **12V IP Door Phone**

Open Log Server: **Enable**

Address of Open Log Server: **0.0.0.0**

Port of Open Log Server: **814**

Door Unlock Indication: **Long Beep**

Remote Code Check Length: **4** [1-12]

Keypad Mode: **Card and Password**

Local Access Code Open Door Mode: **Location+Access Code**

Default Input Mode: **Password**

Apply

6 Door Unlocking Setting

RFID Card

Step 1: Go to **EGS Access** → Enter the Name and ID Number (Only Front 10 yards)

→ Press **Add** to Access Table.

Step 2: Use pre assigned RFID cards to unlock the door by touching RFID area of device.

Access Table

Import File: **Browse** | Download Data: **Update**

Access Table <>

Total: 1 | Page: 1 | First | Last

Click here to Add Access Table

Index	Name	ID	Department	Position	Location Number	Ref. Access Number	Access Code	Auth. Type	Issuing Date	Valid Date
1	00012	0001174576							2018/01/02	99/02/99

Add Access Rule

Name: **00012**

ID: **0001174576**

Card State: **Enable**

Department:

Position:

Type: **Card**

Location:

Number:

Card Number:

Access Code:

Double Auth: **Disable**

Profile: **None**

Add | **Modify**

Profile Setting

Remote Password

Step 1: Go to **EGS Setting** → **Features** → Set **Remote Password** (The default is "****").

Step 2: To answer the call made by visitor via SIP phone, press the "****" key to unlock the door the visitor.

Common Settings

Switch Mode: **Remotely**

Switch-On Duration: **5** [1-600(Second)]

Second Switch Mode: **Remotely**

Second Switch-On Duration: **5** [1-600(Second)]

Second Door Open Mode: **Independence**

Delay Time For Async Mode: **5** [1-60(Second)]

Enable Card Reader: **Enable**

Card Reader I/O Card Data Reverse: **Automatic**

Card Reader Working Mode: **Normal**

Wiegand Data Reverse: **Automatic**

Card Reader I/O Card Effective Date: **Automatic**

Link Talk Duration: **Enable**

Talk Duration: **1.00** [0.00-600(Second)]

Remote Password: ********

Local password: ********

Enable Indoor Open: **Enable**

Enable Access Table: **Enable**

Description: **12V IP Door Phone**

Open Log Server: **Enable**

Address of Open Log Server: **0.0.0.0**

Port of Open Log Server: **814**

Door Unlock Indication: **Long Beep**

Remote Code Check Length: **4** [1-12]

Keypad Mode: **Card and Password**

Local Access Code Open Door Mode: **Location+Access Code**

Default Input Mode: **Password**

Apply



Fanvil Technology Co., Ltd

Add: 4F, Block A, Building 1#, GaoXinQi Hi-Tech Park (Phase-II),
67th District, Bao'An, Shenzhen, China P.C:518101

Tel:0755-2640-2199 Fax:0755-2640-2618 Email:sales@fanvil.com