




12Kg Top Load Washing Machine

OWNER'S MANUAL

Original instructions
TWM120TDVAW

READ AND SAVE THESE INSTRUCTIONS

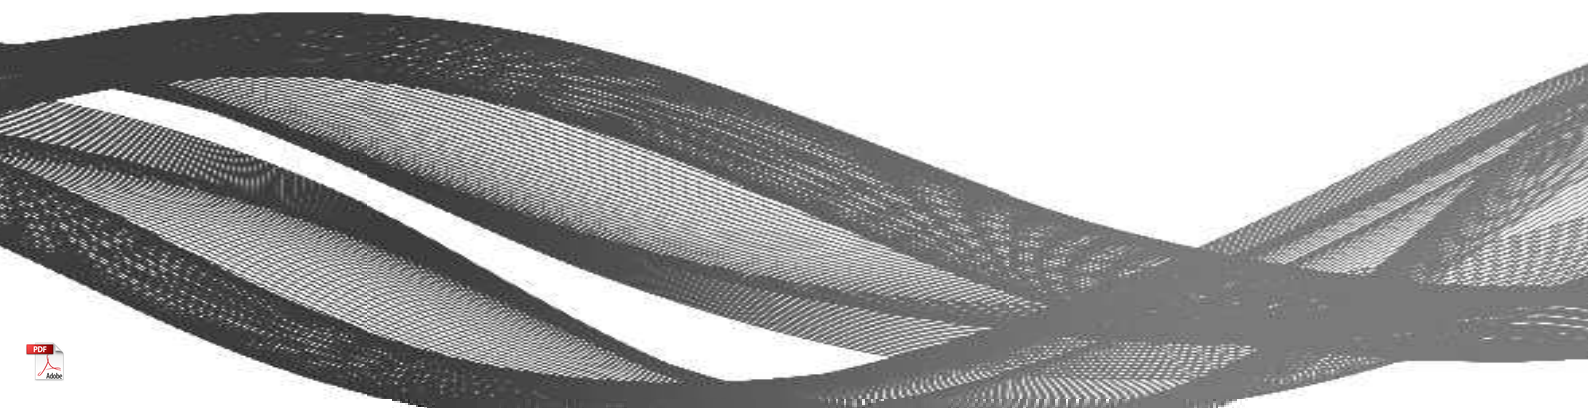

Contents

1. Before you begin	3
2. For your safety	4
3. Product overview	9
4. Installation	10
5. Control panel	12
6. Troubleshooting	18

1. Before you begin

1.1 PRODUCT DESCRIPTION

Our powerful 12kg top load clothes washer is a great laundry solution for any size family and individuals, providing excellent results wash after wash. It's energy and water efficient, helping to reduce power and water usage. With a host of features and programs, TECO clothes washers can tackle everything from delicates to large and heavily soiled fabrics. Water level and speed selector, means total control is at your finger tips.

Child lock ensures curious little fingers won't disrupt a cycle and add item function, means those last second clothes don't miss out.

1.2 SYMBOLS FROM THE UNIT AND USER MANUAL



Read the USER MANUAL carefully before operation.



Further information is available in the USER MANUAL, SERVICE MANUAL, and the like.



Service personnel are required to carefully read the USER MANUAL and SERVICE MANUAL before operation.

2. For your safety

YOUR SAFETY IS THE MOST IMPORTANT THING WE ARE CONCERNED ABOUT.



WARNING

Please read this manual carefully and fully understand before operating your appliance.

2.1 OPERATIONAL PRECAUTIONS

WARNING- to reduce the risk of fire, electric shock or to prevent property damage, personal injury or loss of life:

Explanation of the symbols:

Warning!

This combination of symbol and signal word indicates a potentially dangerous situation which may result in death or serious injuries unless it's avoided.

Caution!

This combination of symbol and signal word indicates a potentially dangerous situation which may result in slight or minor injuries or damage to property and the environment.

Note!

This combination of symbol and signal word indicates a potentially dangerous situation which may result in slight or minor injuries.

Warning!

The electric shock!

- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- The openings must not be obstructed by carpet.
- This appliance is for indoor use only.
- Do not put washing machine at humid place.

2. FOR YOUR SAFETY

- Hands shall not be inserted into running spin-dry tub.
- If the spin-dry tub does not stop within 15 seconds after opening the cover , please stop using the machine and have it repaired.
- The new hose-sets supplied with the appliance are to be used and that old hose-sets should not be reused.
- Before any maintenance the device, unplug the appliance from the mains.
- Always unplug the machine and turn off the water supply after use. The max. inlet water pressure, in pascals. The min. inlet water pressure, in pascals.
- To ensure your safety, power plug must be inserted into an earthed three-pole socket. Check carefully and make sure that your socket is properly and reliably earthed.
- Make sure that the water and electrical devices must be connected by a qualified technician in accordance with the manufacturer's instructions and local safety regulations.

Risk to children!

- EN countries: the appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- IEC countries: This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

2. FOR YOUR SAFETY

SAFETY PRECAUTIONS ON SERVICING

- Children should be supervised to ensure that they do not play with appliance.
- Animals and children may climb into the machine. Check the machine before every operation.
- Young children should be supervised that they do not play with the appliance.
- Machine may be very hot during the operation. Keep kids and pets far away from the machine during the operation very wet rooms as well as in the rooms with explosive or caustic gas.
- Remove all packages before using the appliance. Otherwise, serious damage may result. 2.2.8 Checks to the refrigeration equipment.
- The washing machine with single inlet valve only can connected to the cold water supply. The product inlet valves should be correctly connected and cold water supply.
- Plug must be accessible after installation.

Risk of explosion!

- Do not wash or dry articles that have been cleaned in, washed in, soaked in, or dabbed with combustible or explosive substances(such as wax, oil, paint, gasoline, degreasers, dry-cleaning solvents, kerosene, etc). This may result in fire or explosion.
- Before hand thoroughly rinse items of washing by hand.



CAUTION - Installing the product!

This washing machine is for indoor use only.

- It isn't intended to be built-in using.
- The openings must not be obstructed by a carpet.
- Washing machine shall not be installed in bath room or very wet rooms as well as in the rooms with explosive or caustic gases.
- Remove all packages and transport bolts before using the appliance. Otherwise, serious damage may result.
- The washing machine with single inlet valve only can be connected to the cold water supply. The product with double inlet valves should be correctly connected to the hot water and cold water supply.
- Plug must be accessible after installation.

2. FOR YOUR SAFETY

RISK OF DAMAGING APPLIANCE!

- Your product is only for home use and is only designed for the textiles suitable for machine washing.
- Do not climb up and sit on top cover of the machine.
- Do not lean against machine door.
- Cautions during Handling Machine:
 1. Transport bolts shall be reinstalled to the machine by a specialized person.
 2. The accumulated water shall be drained out of the machine.
 3. Handle the machine carefully. Never hold each protruded part on the machine while lifting. Machine door can not be used as the handle during the conveyance.
- This appliance is heavy. Transport with care.
- Please do not close the door with excessive forces.
- It is forbidden to wash carpets.

Operating the appliance!

- Before washing the clothes at first time, the product shall be operated in one round of the whole procedures without the clothes inside.
- Flammable and explosive or toxic solvents are forbidden.
- Gasoline and alcohol etc. Shall not be used as detergents.
- Please only select the detergents suitable for machine washing, especially for drum.
- Make sure that all pockets are emptied. Sharp and rigid items such as coin, brooch, nail, screw or stone etc. may cause serious damages to this machine.
- Please check whether the water inside the drum has been drained before opening its door. Please do not open the door if there is any water visible.
- Be careful of burning when the product drains hot washing water.
- Never refill the water by hand during washing.
- After the program is completed, Please wait for two minutes to open the door.


2. FOR YOUR SAFETY

Packaging/Old appliance

- Contact your local authorities for correct method of disposal. Dispose of all packaging in a responsible manner in accordance with local regulations.
- Dispose of old appliances in accordance with local regulations. Remove the doors, cut off the main cable, break or remove spring or bolt catches if fixed to prevent children getting trapped or involve themselves in other dangers.


3. Product overview

3.1 PRODUCT DIAGRAM - NAME OF PARTS AND ACCESSORIES

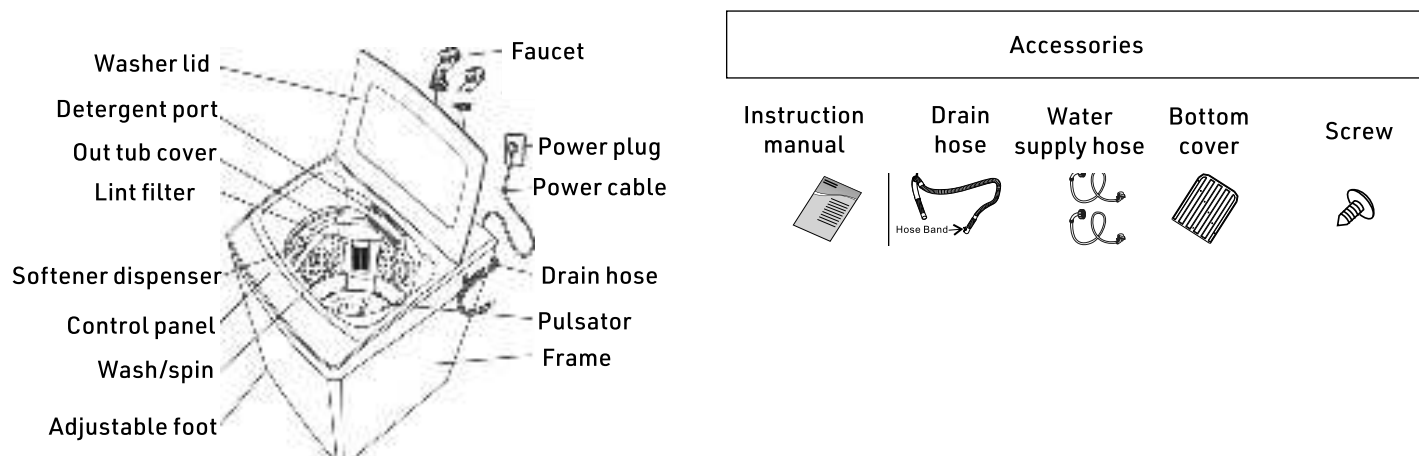

INSTALLATION INSTRUCTIONS - Installing the Bottom Cover

1. Unplug the Power Cord of the washer.
2. Gently lay down the backside of washer on a soft mat or cushion. (Be careful not to dent the Frame.)
3. Insert the attached Bottom Cover into the hooks of Leg by straightly pushing until it reaches into the back hooks.
4. Fasten the Bottom Cover with a screw.
5. Gently set the washer upright.

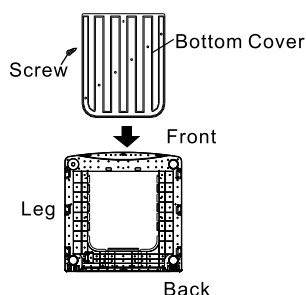


Location of Washer

1. Choose a dry location out of sunlight for the washer.
2. Install the washer on a stable and level surface.
3. Adjust the adjustable leg of washer if necessary to make the washer level as shown in the figure. The Maximum permissible inclination of the supporting surface is 2 °.



CAUTION:


Do not block the ventilation openings on the bottom of washer by carpeting when the washer is installed on a carpeted floor.

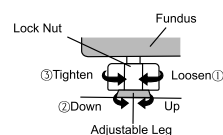

4. INSTALLATION INSTRUCTIONS

Connect the Inlet Hose:

1. Check that sealing washers are firmly seated.
2. Attach the curved end of the hose to the inlet valve of the washing machine, Tighten the coupling nuts securely by hand.
3. Attach straight end of the hose to the tap. Tighten the coupling nuts securely by hand.
4. Turn on the taps and check for leaks. Tighten the coupling nuts firmly if there is any leakage. If water pressure is strong, close the water tap completely then open it slightly.


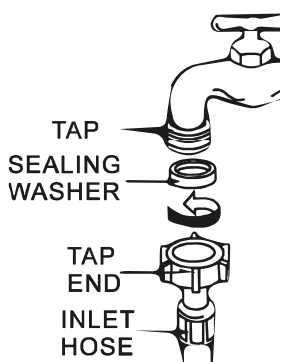


CAUTIONS:

- Do not use water which is hotter than 60 °c.
- If your faucet is not suitable, please consult your dealer.

Installing Water Supply Hose to the Washer

- Turn the nut clockwise till the nut turned tight while holding the hose.
- Turn the nut counterclockwise after turning the faucet off when you want to detach the water supply hose.

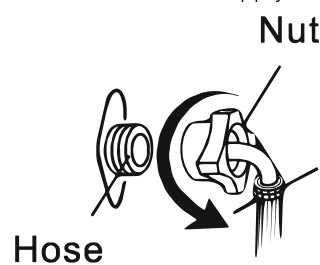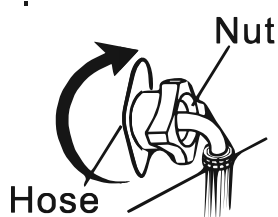


How to Installing the Drain Hose:

1. Pinching the two bands of the clamp on the drain hose, connect it to the pump (rear to cabinet) and fix the hose band.
2. Pull the Drain Hose upward and fix it to the hose clip on back over of cabinet.
3. Hang the drain hose to the hole on right side of top frame when the washer is not working. And put the drain hose to drain spout when washer start working.



CAUTIONS:

1. Please make sure the height of drain hose is not less than 800 mm during operating, otherwise, the washer won't work well, or the water may flow out in the course of washing. And no more than 1200 mm, otherwise the washer will not drain water well.
2. Never lay down the drain hose, as water will discharged.
3. Be sure the drain hose is properly routed so it will not kink or lift from the sink.

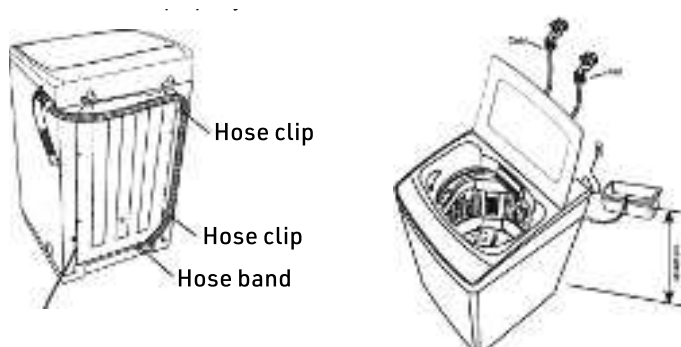

THE USE AND NOTE OF ROLLER


- Using the roller will help you to move the washing machine more easy Make the washing machine about 30 degrees tilt push forward or pull backward with the hand holding washing machine on two frame side
- The roller is not suitable for uneven ground, which easily causes damage to the roller.
- Please don't tilt the washing machine too hard, which easily causes personal injury



5. CONTROL PANEL

THE PREPARATION OF OF LAUNDRY BEFORE WASHING

- Make sure that nothing is remained in pocket. (Pin, coin or something like possibly damage clothes or washing machine, and the extra noise occurred may cause trouble to washing mach.
- Wool items like women underwear, articles with embroider, nylon etc, should be placed in a laundry net for extra protection.
- Close the fastener and tie loose laces.
- Put light clothes down. Please pause operation and put it into water when it floats up.
- Please separate white clothes from coloured clothes, coats from underwear.

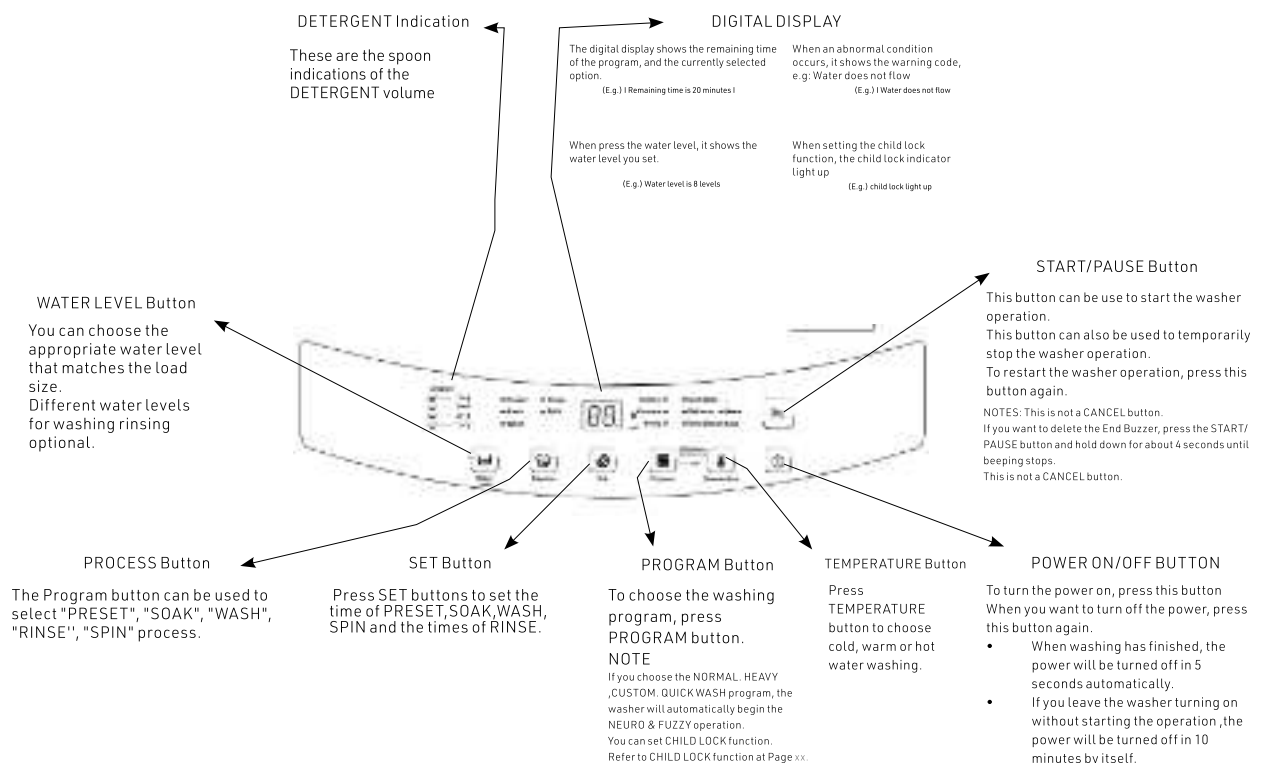

Normal Usage

1. Preparation
 - 1) Make sure to fit the Drain hose.
 - 2) Connect the cold , water supply hose to the faucet and turn the faucet on.
 - 3) Plug the Power Cord into a socket.
 - 4) Put clothes inside.
2. Press POWER ON/OFF button.
3. Use recommended amount of detergent as shown in chart.
4. Press START / PAUSE button
 - Sensor tests the clothes weight automatically. (For NORMAL/CUSTOM/HEAVY/**QUICK WASH**)
 - Auto choose water level, wash/spin time ,water flow.

HOW TO USE COURSE AND PROGRAM

- Preparation: Fit the Drain hose, turn the water supply faucet on, plug the Power Cord into a socket, put clothes inside
- Press POWER ON/OFF button
- Press PROGRAM button to choose the program you need according to the clothes.

Please refer to below chart for program choosing.

HOW TO USE COURSE AND PROGRAM

Program	Description	Operation Status For The Program			Capacity (kg)
		Washing Time(min.)	Rinse Times	Spin Time (min)	
NORMAL	Normal clothes	10	Rinse 2 times	5	15
CUSTOM	Kinds of clothes	10	Rinse 2 times	5	15
QUICK WASH	Not very dirty clothes for daily wash	5	Rinse 1 times	3	3
DELICATE	Suitable for gentle washing of fine fabrics	6	Rinse 2 times	2	3
HEAVY	Dirty Clothes like working coat	12	Rinse 2 times	8	10
DRUM CLEAN	Wash the tub to keep the freshness, do not add the clothe	85	Rinse 1 times	3	0

4. Press PROCESS buttons to choose PRESET, SOAK, WASH, RINSE time, SPIN times.

● PRESET time indicating

6 → 7 → 24 → 0 → 1 → 2(hours) → 3 → 4 → 5

● SOAK time indicating

0 → 10 → 20 → 30 → 40 minutes (This function is not available for QUICK WASH / DELICATE / DRUM CLEAN)

● WASH time indicating

0 → 1 → 2 . . . → 9 → 10 . . . 20 minutes

QUICK WASH / DELICATE time indicating

0 → 1 → 2 . . . → 9 → 10 . . . 15 minutes

● RINSE times indicating

0 → 1 → 2 → 3 → 4 (The number means times)

QUICK WASH times indicating

0 → 1 → 2 → 3 (The number means times)

● SPIN time indicating

0 → 1 → 2 . . . 5 → 6 . . . 9 minutes (NORMAL, CUSTOM, HEAVY)

0 → 1 → 2 → 3 → 4 → 5 minutes (QUICK WASH, DELICATE)

Note: "DRUM CLEAN" is the fixed program, "WASHING TIME" / "RINSE TIMES" / "SPIN TIME", not adjustable.

HOW TO USE COURSE AND PROGRAM

Single process setting: Press the PROGRAM button, select "NORMAL", "HEAVY" program, and then press "PROCESS" set single-wash, single-rinse or single-spin function directly.

5. Press WATER LEVEL button to choose proper water level and then put detergent.
6. Press START/PAUSE button.
7. Close the washer lid.

If you want to change PROGRAM or PROCESS during operation, please switch off power, restart power and choose your needed course or program.

VARIOUS FUNCTIONS

DELICATE

- Before washing wool, fiber and other material clothes, please confirm the mark.
- When this program is set, the water level is 6 automatically. But you could change the water level to 3-8 according to the size of your fleece clothes.

Order of operations

1. Open the washer lid and press POWER ON/OFF button.
 2. Press the PROGRAM button till the light of DELICATE turn on.
 3. Pour into the liquid detergent, dissolve it into a 5L warm water (about 30°C) if the detergent is used, then pour it into the laundry slowly.
 4. Put the wool cloth into the washing machine.
 5. Press the WATER LEVEL button. (adjusting the water level accordingly)
 6. Cover the washer lid.
- It will stop automatically before spin if the washer lid is not settled perfectly.
 - After one washing program, the buzzer will work and the power will be shut down 5s later.
 - Turn off the tap and wash the filter after washing.

NOTE

- The washing capacity should be under 3.0kg.
- Take off the clothes and hang out after the program. Or it will be out of shape after a long time stay.
- The water temperature should be under 30 in order to less harm the clothes.
- Please separate the light color clothes with the deep one.
- The washing performance will be better if special purpose detergent is used.
- And do less harm to the clothes.

VARIOUS FUNCTIONS

PRESET

1. Turn the faucet on and load the laundry into the washer, make sure to fit the Drain Hose.
 2. Press POWER ON/OFF button.
 3. Select your needed PROGRAM, PROCESS, WATER LEVEL function.
 4. Press SET button to select your needed preset time (the time washing finished).
 - PRESET Indicate: 6-7-..... 24- 0 - 1 -2(hours) -3 -4-5
 5. Press START/PAUSE button.
 6. Put the detergent into the washer and close washer lid.
- All the lights except PRESET will be lighted off in about one minute later.(If you set the CHILD LOCK, CHILD LOCK light will be on.)

LIQUID DETERGENT

Put Liquid detergent into "Liquid detergent port" before washing

- In order to avoid residual , please clean box every 2-3 months.

VARIOUS FUNCTIONS

TWO CLEAN STEPS FUNCTION

The washer will start washing when water to the level below 2 levels as set. By this, the washer starts working with more density of detergent.

- This function will not be available if selection of water level is 1 or 2.
- DELICATE don't have this function.
- When SOAK is selected, this function will not be effected after soaking.

INTELLIGENT MEMORY

When you choose "Normal"/"Custom"/"Heavy" program, the machine will memory this program. In next time, press the "Power", press the "START/PAUSE", the machine will start the same program. Custom program will memory the process, for example "Soak", "Wash", "Rinse", "Spin", but will not the memory the preset time and water level. This function is not available for Delicate, Drum Clean and Quick Wash program.

CHILD LOCK FUNCTION

The Washer will stop working automatically and alarm if washer lid opened 5 seconds during operation.
Method of Child Lock Set:

- Press POWER ON/OFF button to switch on the power.
- Press PROGRAM button for 4 seconds till Buzzer sounds. To restore it, repeat above.

DELETE THE END BUZZER

Press POWER ON/OFF button to switch on the power and press START/PAUSE button for 4 seconds till a sound from buzzer. To restore it, repeat above.

6. TROUBLE SHOOTING GUIDE

TROUBLE SHOOTING GUIDE

When the following problems occur, the microcomputer will detect the abnormal condition and an electronic buzzer sounds for approximately 10 seconds and the indicators flash as shown below.

Kind of Trouble	Trouble Indication	Where to Check
The washer does not work at all		<ul style="list-style-type: none"> • Check the POWER ON/OFF button. • Check the START/PAUSE button. • Check whether under PRESET condition. • Check the power cord whether is securely plugged in. • Check whether power failure occurs. • Check whether the fuse or circuit breaker has been activated.
Water does not flow into tub or water flow is slim	E1	<ul style="list-style-type: none"> • Turn on the water supply faucet. • Check whether water supply has been cut off. • Check whether the metal filter in water inlet is clogged. • Check whether washer has been freezing. • Check whether water pressure is too low. • the height of drain hose is less than 800mm.
Water does not drain out	E2	<ul style="list-style-type: none"> • the height of drain hose is more than 1200mm. • Put down the drain hose from the hookhole. • Check the drain hose for any obstructions. • Check whether the drain hose is clogged. • Check whether the drain rises too high off the ground.
The washer does not spin	E3	<ul style="list-style-type: none"> • Check whether the laundry is clumped on one side of tub. • Check whether the washer is on the level surface.
	E4	<ul style="list-style-type: none"> • Close the washer lid.
Does not wash	E5	<ul style="list-style-type: none"> • Check whether the washer is under Child Lock. • Check whether the washer lid is open.
Other troubles	EA	<ul style="list-style-type: none"> • Press the POWER ON/OFF button to turn off the power, call the local service-person or dealer.
	EC	

NOTE: The Trouble indicators can be released by pressing the START/PAUSE button once if you want to release the emergency stop. Then press the START/PAUSE button again to restart the operation.

NO TROUBLE CONDITIONS

1. During Washing or Rinsing, there is still Water inletting. This is possibly automatic water adding due to water level decrease.
2. Spin tub turns or stops timely at the beginning of spinning. This is intermittent spinning for better spin effect.
3. Water is inletting and rinsing sometimes during spinning. This is automatic lean-correction due to clothe is not equally inside.
4. There is sound like water flow after spinning. This is the sound of balance liquid in Balance Ring. It is for reducing vibration of spinning.
5. Control panel keeps warm after power off, this is caused by Remembering circuitry working.

12Kg Top Load Washing Machine

OWNER'S MANUAL

Original instructions
TWM120TDVAW

HEAD OFFICE AUSTRALIA

TECO Australia Pty Limited

335-337 Woodpark Road,
Smithfield NSW 2164

P: +61 2 9765 8118

F: +61 2 9765 8185

E: hadsales.central@teco.com.au

W: www.teco.com.au

VIC/SA/TAS

TECO Australia Pty Limited

16 Longstaff Road,
Bayswater VIC 3153

P: +61 3 9720 4411

E: hadsales.central@teco.com.au

WA

TECO Australia Pty Limited

18 Hazelhurst Street,
Kewdale WA 6105

P: +61 8 9479 4879

E: hadsales.wa@teco.com.au

QLD

TECO Australia Pty Limited

50 Murdoch Circuit,
Acacia Ridge QLD 4110

P: +61 7 3373 9600

E: hadsales.central@teco.com.au