



# MORRIS

## T72413ETN

### USER MANUAL

### REFRIGERATOR-FREEZER

Please read this manual carefully before use this product

# CONTENTS

|                                    |    |
|------------------------------------|----|
| IMPORTANT SAFETY INSTRUCTIONS----- | 02 |
| PRODUCT OVERVIEW -----             | 06 |
| PRODUCT INSTALLATION-----          | 07 |
| OPERATION INSTRUCTIONS-----        | 13 |
| CLEANING AND MAINTENANCE-----      | 17 |
| TROUBLESHOOTING -----              | 19 |
| APPENDIX-----                      | 21 |

## Before switching on the appliance for the first time read the following safety hints!

- > This appliance is intended to be used in household and similar applications such as staff kitchen areas in shops, offices and other working environments; farm houses and by clients in hotels, motels and other residential type environments; bed and breakfast type environments; catering and similar non-retail applications.
- > This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

## Explanation of terms/symbols

|                                                                                   |                                                                                                                                                |
|-----------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <b>DANGER</b><br>This symbol indicates that there are dangers to the life and health of persons due to extremely flammable gas.                |
|  | <b>WARNING</b><br>The signal word indicates a hazard with a medium level of risk which, if not avoided, may result in death or serious injury. |
|  | <b>CAUTION</b><br>The signal word indicates a hazard with a low degree of risk which, if not avoided, may result in minor or moderate injury.  |
|  | <b>ATTENTION</b><br>The signal word indicates important information (e.g. damage to property), but not danger.                                 |

**IMPORTANT:** Pay particular attention to messages that contain the words **DANGER**, **WARNING** or **CAUTION**. These words are used to alert you to a potential hazard that can seriously injure you and others.

The instructions will tell you how to reduce the chance of injury and let you know what can happen if the instructions are not followed.

**ATTENTION:** These operating instructions are general. This means that certain functions apply to your refrigerator/freezer, while others do not.

We are constantly working on the further development and improvement of our appliance types and models. Therefore, we reserve the right to make changes to the design, equipment and accessories of all types and models without prior notice.

# IMPORTANT SAFETY INSTRUCTIONS

## READ AND SAVE THESE INSTRUCTIONS!



### **WARNING: Risk of fire / flammable material**

Refrigerant and cyclopentane foaming material used for the appliance are flammable. Therefore, when the appliance is scrapped, it shall be kept away from any fire source and be recovered by a special recovering company with corresponding qualification other than be disposed by combustion, so as to prevent damage to the environment or any other harm



## **WARNING**

### **General Safety**

- > Children should be supervised to ensure that they do not play with the appliance.
- > If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- > Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- > The appliance has to be unplugged after use and before carrying out user maintenance on the appliance.
- > **WARNING:** Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- > **WARNING:** Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- > **WARNING:** Do not damage the refrigerant circuit.
- > **WARNING:** Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- > **WARNING:** Please abandon the refrigerator according to local regulators for its use flammable blowing gas and refrigerant.
- > **WARNING:** When positioning the appliance, ensure the supply cord is not trapped or damaged.
- > **WARNING:** Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.
- > Do not use extension cords or ungrounded (two prong) adapters.
- > To avoid a hazard due to instability of the appliance, it must be fixed in accordance with the instructions.
- > The refrigerator must be disconnected from the source of electrical supply before attempting the installation of accessory. Ensure that the power cable is not trapped by the refrigerator. Do not step on the power cable.
- > For a freestanding appliance: this refrigerating appliance is not intended to be used as a built-in appliance.



## CAUTION

### Daily use

- > Do not pull the power cord when pulling the power plug of the refrigerator. Please firmly grasp the plug and pull out it from the socket directly.
- > To ensure safe use, do not damage the power cord or use the power cord when it is damaged or worn.
- > Please use a dedicated power socket and the power socket shall not be shared with other electrical appliances.
- > The power plug should be firmly contacted with the socket or else fires might be caused.
- > Please ensure that the grounding electrode of the power socket is equipped with a reliable grounding line.
- > Please turn off the valve of the leaking gas and then open the doors and windows in case of leakage of gas and other flammable gases.
- > Do not unplug the refrigerator and other electrical appliances considering that spark may cause a fire.
- > Do not use electrical appliances on the top of the appliance, unless they are of the type recommended by the manufacturer.
- > The gaps between refrigerator doors and between doors and refrigerator body are small, be noted not to put your hand in these areas to prevent from squeezing the finger. Please be gentle when close the refrigerator door to avoid falling articles.
- > Do not pick foods or containers with wet hands in the freezing chamber when the refrigerator is running, especially metal containers in order to avoid frostbite.
- > Do not allow any child to get into or climb the refrigerator; otherwise suffocation or falling injury of the child may be caused.
- > Do not place heavy objects on the top of the refrigerator considering that objectives may fall when close or open the door, and accidental injuries might be caused.
- > Do not put flammable, explosive, volatile and highly corrosive items in the refrigerator to prevent damages to the product or fire accidents.
- > Do not place flammable items near the refrigerator to avoid fires.
- > The refrigerator is intended for household use, such as storage of foods; it shall not be used for other purposes, such as storage of blood, drugs or biological products, etc.
- > Do not store beer, beverage or other fluid contained in bottles or enclosed containers in the freezing chamber of the refrigerator; or otherwise the bottles or enclosed containers may crack due to freezing to cause damages.



## WARNING

- > Connect to potable water supply only. (Suitable for ice cube maker) (\*)
- > To prevent children from being entrapped, the keys must be kept out of reach of children and not in the vicinity of chest freezer (or refrigerator) (suitable for products with locks).(\*)

**(\*): This feature varies depending on the model purchased.**



## WARNING

For EU standard:

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

**To avoid contamination of food, please respect the following instructions:**

- Opening the door for long periods can cause a significant increase of the temperature in the compartments of the appliance.
- Clean regularly surfaces that can come in contact with food and accessible drainage systems.
- Clean water tanks if they have not been used for 48h; flush the water system connected to a water supply if water has not been drawn for 5 days. **(Note 1)(\*)**
- Store raw meat and fish in suitable containers in the refrigerator, so that it is not in contact with or drip onto other food.
- Two-star frozen-food compartments are suitable for storing pre-frozen food, storing or making ice-cream and making ice cubes. **(Note 2)(\*)**
- 1 star, 2 star and 3 star compartments are not suitable for the freezing of fresh food. **(note 3)(\*)**
- For appliances without a 4-star compartment: this refrigerating appliance is not suitable for freezing foodstuffs. **(note 4)(\*)**
- If the refrigerating appliance is left empty for long periods, switch off, defrost, clean, dry, and leave the door open to prevent mould developing within the appliance.

**Note 1,2,3,4: Please confirm whether it is applicable according to your product compartment type.**

**(\*): This feature varies depending on the model purchased.**



"4 star" symbol: Freezer at -18 °C or colder, and it has the ability of quick freezing a certain amount of food



"3 star" symbol: Freezer compartment at -18 °C or colder



"2 star" symbol: Freezer compartment at -12 °C or colder



"1 star" symbol: Freezer compartment with a target temperature and storage conditions of -6 °C



## CAUTION

**This product is not recommended for use with sockets or main switch with the AFCI/GFCI function, otherwise it may cause false tripping.**

1. It's not pose a safety risk when tripped.
2. If tripping persists, it is recommended to replace the sockets or main switch without AFCI/GFCI function.



## WARNING

**Risk of child entrapment. Before you throw away your old refrigerator or freezer:**

- > Take off the doors.
- > Leave the shelves in place so that children may not easily climb inside.

# ENVIRONMENTAL PROTECTION

## Disposing of old electrical devices in an environmentally-friendly manner



This crossed-out wheeled bin symbol indicates that waste electrical and electronic products (WEEE) should be disposed of separately from the municipal waste stream.

Old electrical products can contain hazardous substances so correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health. Your old appliance may contain reusable parts that could be used to repair other products, and other valuable materials that can be recycled to conserve limited resources.



### CAUTION

Refrigerant and cyclopentane foaming material used for the refrigerator are flammable. Therefore, when the refrigerator is scrapped, it shall be kept away from any fire source and be recovered by a special recovering company with corresponding qualification other than be disposed by combustion, so as to prevent damage to the environment or any other harm.

## Package information



Packaging materials of the product are manufactured from recyclable materials in accordance with our National Environment Regulations. Do not dispose of the packaging materials together with the domestic or other wastes. Take them to the packaging material collection points designated by the local authorities.

## Declaration of Conformity

Herewith, we state that this product complies with the requirements of below directives:


- EMC Directive: 14/30/E
- LVD Directive: 14/35/E
- ErP Directive: 09/125/E
- RoHS Directives: 11/65/EU & (EU) 15/86
- CE Marking Directive L 93/68/EE



The detailed Declaration Of Conformity can be found at [www.morris.gr](http://www.morris.gr)

# PRODUCT OVERVIEW

## Names of components

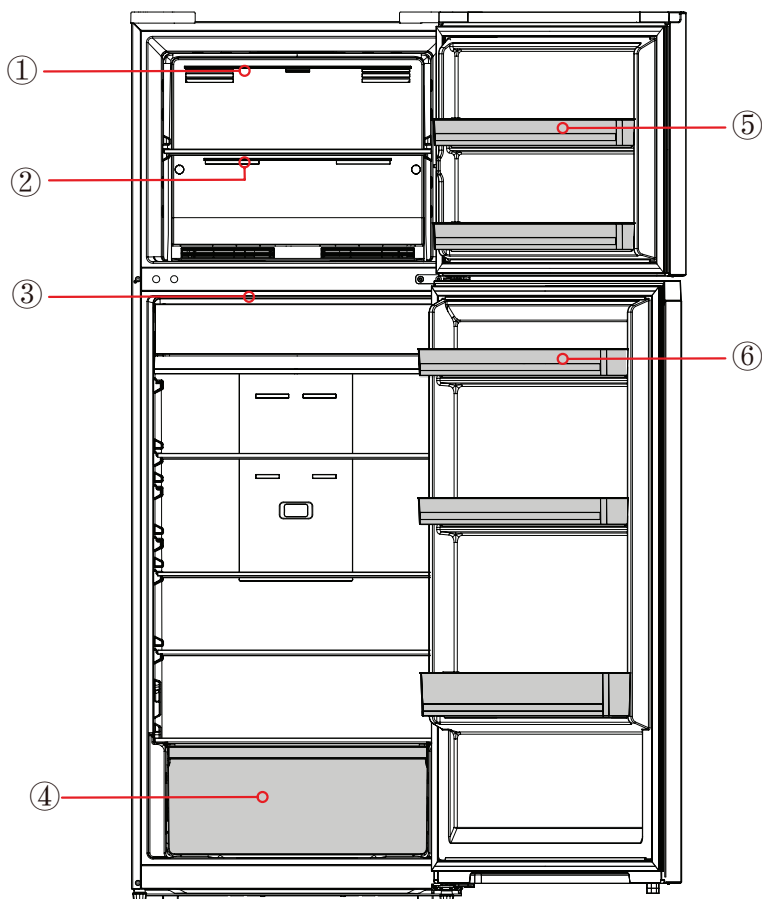

1 LED light

2 Shelf

3 Chill box

4 Fruits and vegetables box

5 Freezer door tray

6 Refrigerator door tray

### ATTENTION

The picture above is only for reference. The actual configuration will depend on the physical product or statement by the distributor.

# PRODUCT INSTALLATION

## Install Instruction


### For refrigerating appliances with climate class

- Depending on the climate class, This refrigerating appliance is intended to be used at ambient temperatures range as specified following table.
- The product may not operate properly at temperatures outside of the specific range.
- You can find the climate class on the product label.

| Class              | Symbol | Ambient temperature range °C |              |
|--------------------|--------|------------------------------|--------------|
|                    |        | IEC 62552 (ISO 15502)        | ISO 8561     |
| Extended temperate | SN     | + 10 to + 32                 | + 10 to + 32 |
| Temperate          | N      | + 16 to + 32                 | + 16 to + 32 |
| Subtropical        | ST     | + 16 to + 38                 | + 18 to + 38 |
| Tropical           | T      | + 16 to + 43                 | + 18 to + 43 |

### Dimensions and Clearances


- Too small of a distance from adjacent items may result in the degradation of freezing capability and increased electricity costs. the refrigerator both sides should be placed against the wall with a free distance more than 100mm, and the refrigerator back against the wall distance not more than 75 mm.

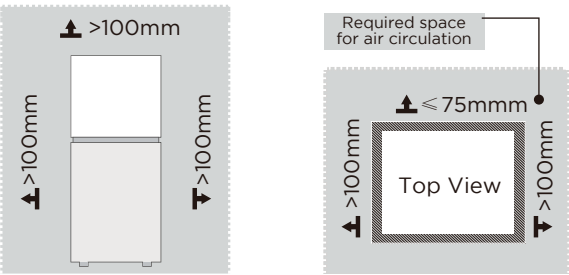

### ⚡ ATTENTION

The picture above is only for reference. The actual configuration will depend on the physical product or statement by the distributor

Space requirement diagram (when the door is open and when the door is closed)

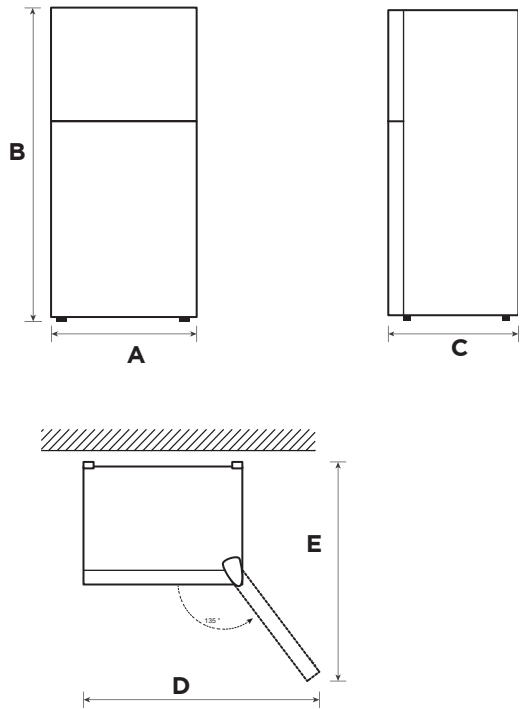

| Width | Overall Height | Depth | Width doors open 135° | Depth doors open 135° |
|-------|----------------|-------|-----------------------|-----------------------|
| A     | B              | C     | D                     | E                     |
| 700   | 1723           | 670   | 1085                  | 1252                  |

Notice: All dimensions in mm

## Doors reversal

Based on the location where you plan to use your refrigerator, you may find it more convenient to reverse the position of the door.

### CAUTION


CAUTION: To avoid injury to yourself or your property, we recommend that someone assist you during the door reversal process.

Preparing to reverse the door position


You will need: A standard screwdriver, a Phillips screwdriver, and the included Allen wrench.

- Make sure that your refrigerator is unplugged and empty.
- Have someone available to assist you in the process.
- Keep all of the parts you remove to reuse them later.


### Parts included with the hinge kit:




Left door self-locking



Plastic cover



Top left hinge



Left top hinge cover

### Parts already mounted on the door (as shipped):



Stopper



Limit block



Hole cap (4)



Hole cover




Upper hinge



Upper hinge cover



Middle hinge



Bottom hinge




Adjustable foot




Plastic support


1. Please power off this appliance before conduct this operation.
2. Remove the hinge cover and screws on the top right side of the box, as well as the upper hinge and the hole cover on the left side.

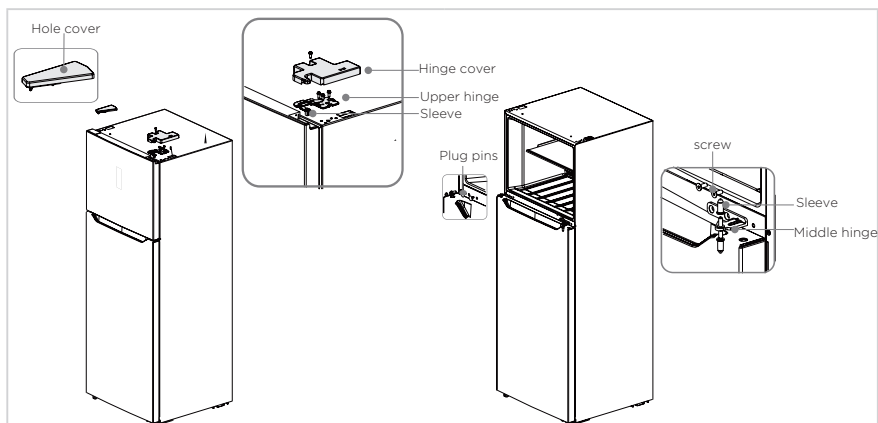


3. Unscrew the hinge screw, take off the middle hinge and the upper shaft sleeve, depart the two hinge hole covers (plug pins) on the middle hinge, and take out the door body of the refrigerator chamber upward.
4. Install the hinge shaft and shaft sleeve to the left hole of the lower hinge, and then the lower hinge to the left corner of the refrigerator, then adjusting foot A according to the position shown in the Figure, and finally the adjusting foot B to the right lower corner of the refrigerator.

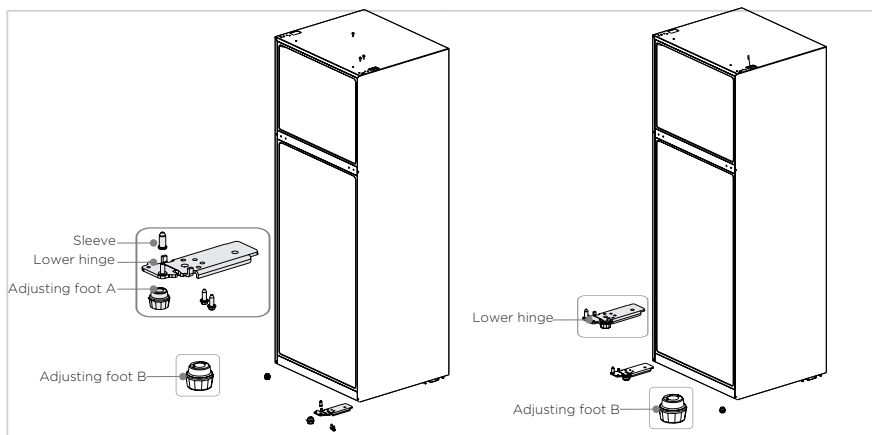

5. Dismantle the door stop of the two door bodies a lower hinge adjusting foot and the self-locking screws of right door, then take out the self-locking of left door from the accessory bag and install it to the left corner of the door body together with the door stop; take out the bottom plastic support of the door body of refrigeration chamber and install it to the lower left corner, Finally take out the hole plug and shaft sleeve for the door of refrigeration chamber and adjust their positions, and then install them into the door body. take out the right decorative cover on the door of refrigeration chamber, and take out the left decorative cover from the accessory bag and install it. take out the left decorative cover from the accessory bag and install it.

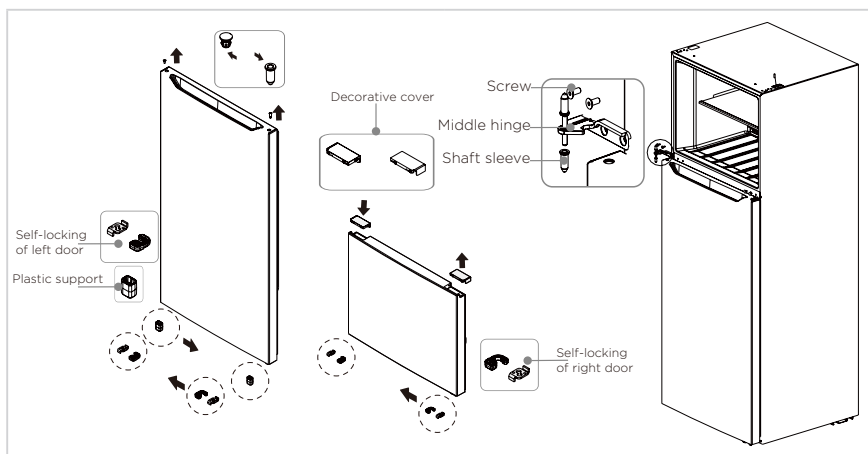

6. Install the door of refrigerator chamber on the lower hinge, the middle hinge on the left side of the refrigerator and tighten the screws, and place the shaft sleeve well. Install the plug pin in the hole on the middle beam at the other end.
7. Install the door of freezer on the middle hinge, take out the left upper hinge and the cover for the left upper hinge from the accessory bag, install the left hinge and tighten the screws, install the cover for the left upper hinge and tighten the screw, install the right sensor in the original left hole cover, and then fix the hole cover on the right box.
8. After completing the installation.

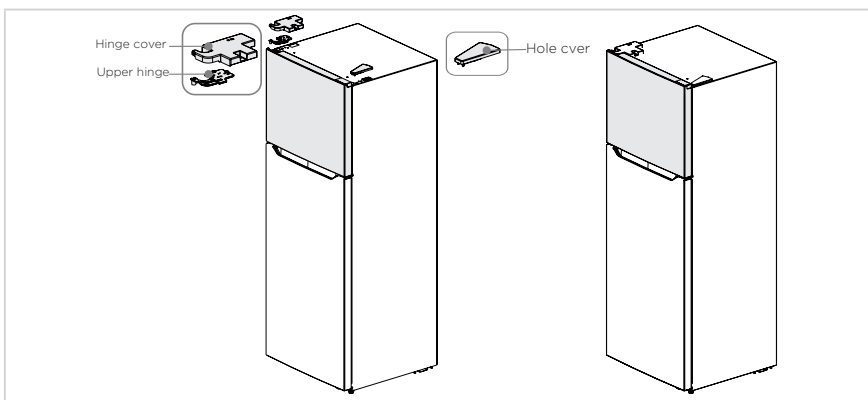

## **ATTENTION**

The picture above is only for reference. The actual configuration will depend on the physical product or statement by the distributor

## Leveling feet

To avoid vibration, the unit must be leveled.

If required, adjust the leveling screws to compensate for the uneven floor.

The front should be slightly higher than the rear to aid in door closing.

Leveling screws can be turned easily by tipping the cabinet slightly.

Turn the leveling screws counterclockwise  to raise the unit, clockwise  to lower it.

## Changing the light

- Any replacement or maintenance of the LED lamps is intended to be made by the manufacturer, its service agent or similar qualified person.
- This product contains two lights source of energy efficiency class (F).

## Connecting the appliance

After installing the appliance, connect the power plug into a socket outlet.

### ATTENTION


After connecting the power supply cord (or plug) to the outlet, wait 2 or 3 hours before you put food into the appliance. If you add food before the appliance has cooled completely, your food may spoil.

## Tips for energy saving

- Do not place the appliance near cookers, radiators or other heat sources. If the ambient temperature is high, the compressor will run more frequently and for longer, resulting in increased energy consumption.
- Ensure that there is sufficient ventilation at the base of the appliance, on the sides of the appliance and at the back of the appliance. Never cover ventilation openings.
- Please also observe the spacing dimensions in the chapter "Installation".
- The arrangement of drawers, shelves and racks as shown in the illustration offers the most efficient use of energy and should therefore be retained as far as possible. All drawers and shelves should remain in the appliance to keep the temperature stable and save energy.
- To obtain a larger storage space (e.g. for large refrigerated/frozen goods), the middle drawers can be removed. The top and bottom drawers and shelves should be removed last if necessary.
- An evenly filled refrigerator/freezer compartment contributes to optimal energy use. Therefore, avoid empty or half-empty compartments.
- Allow warm food to cool before placing it in the refrigerator/freezer. Food that has already cooled down increases energy efficiency.
- Allow frozen food to defrost in the refrigerator. The coldness of the frozen food reduces the energy consumption in the refrigerator compartment and thus increases the energy efficiency.
- Open the door only as briefly as necessary to minimise cold loss. Opening the door briefly and closing it properly reduces energy consumption.
- The door seals of your appliance must be perfectly intact so that the doors close properly and energy consumption is not increased unnecessarily.

# OPERATION INSTRUCTIONS

## Control panel

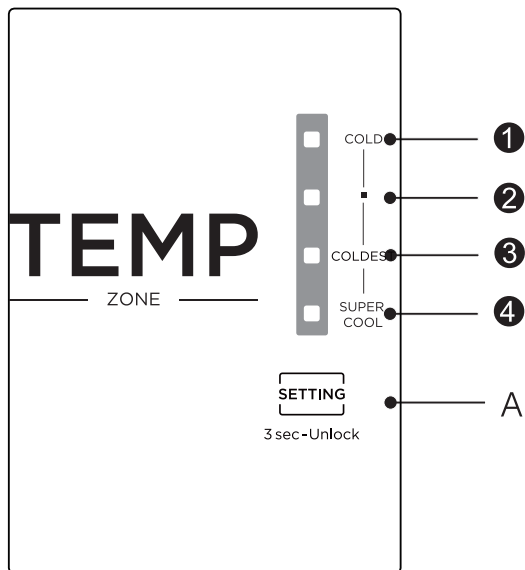

|   | Display                |   | Button                                                 |
|---|------------------------|---|--------------------------------------------------------|
| 1 | Setting 1 (COLD)       | A | Temperature setting button of refrigerator compartment |
| 2 | Setting 2 (MID)        |   |                                                        |
| 3 | Setting 3 (COLDER)     |   |                                                        |
| 4 | Setting 4 (SUPER COOL) |   |                                                        |

### Display


when electrify the refrigerator for first time,the display screen shines fully for 3 seconds, and then the refrigerator runs according to setting 3. In case of a failure, the corresponding LED blinks. In case of no failures, it shows the temperature setting of refrigerator.

The actual control panel may differ from model to model.

Temperature setting

Each time the temperature setting button A is pressed once,the temperature setting changes one time. After the temperature setting has been completed, the refrigerator will run according to the set value after 15s.

The shift regulation is:



Lock/Unlock

When the temperature control panel is in lock state, it needs to long press temperature setting key for 3 seconds for unlocking the panel, all LEDs will blink for 2 seconds when panel is unlocked. When the temperature control panel is in unlock state, if there is no operation on control panel within 15 seconds, it will enter into lock state automatically.

Opening alarm control


- If the door is not closed more than two minutes, the buzzer will sound untill the door is closed. Press any one button to stop the buzzer alarm.

Fault indication

- The following warnings appearing on the display indicate corresponding faults of the refrigerator. Though the refrigerator may still have cold storage function with the following faults, the user shall contact a maintenance specialist for maintenance, so as to ensure optimized operation of the appliance.

| Fault Code                        | Fault Description               |
|-----------------------------------|---------------------------------|
| Indicator setting 4 and setting 3 | Refrigerator temperature sensor |
| Indicator setting 4 and setting 2 | Freezer defrost sensor          |
| Indicator setting 4 and setting 1 | Ambient temperature sensor      |

Damper adjusting slider

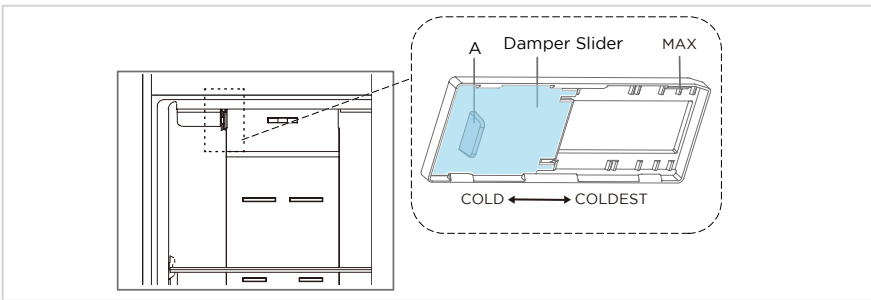

- The temperature inside the freezer can be adjusted by changing the position of the damper slider.The initial position of the damper slider is at position A.If lower temperature inside the freezer is required, you can adjust the damper slider from the position A to left side.
- For better use of the refrigerator , it is recommended to keep the damper slider at initial position.

## Tips on storing food

### Freezer compartment

- The freezer is designated for the storage of food frozen at very low temperature, long-term storage of frozen food, and for the production of ice.
- Only use the shelves in the door of the freezer to store frozen food, not for storing hot food designated for freezing.
- Do not put fresh and frozen food next to each other. The frozen food may thaw.
- When freezing fresh food (such as meat, fish or chopped meat), cut them into parts that can be used at the same time.
- Storing frozen food: instructions are usually stated on the packages, which must be followed. If there is no information on the packaging, food should not be stored for longer than three months from the date of purchase.
- When purchasing frozen food, make sure that it was frozen at a suitable temperature and that the packaging is not damaged.
- Frozen food should be kept in suitable packages to retain the quality and should be returned to the freezer compartment as soon as possible.
- If a package of frozen food shows moisture or abnormal bulging, it is probable that it was stored at the wrong temperature and the content is spoiled.
- The storage period for frozen food depends on the room temperature, the thermostat setting, the frequency of opening the door of the freezer, the type of food and the time of transporting the product from the shop to the household. Always follow the instructions printed on the packaging and never exceed the maximum storage time stated on the package.

### Cooling compartment

- To reduce moisture and subsequent ice build-up, never put liquid into the refrigerator in unsealed containers. Frost tends to concentrate in the coolest parts of the evaporator. Storing uncovered liquids results in a more frequent need for defrosting.
- Never put warm foods in the refrigerator. These should first cool down at room temperature and then be placed so as to ensure adequate air circulation in the refrigerator.
- Foods or food containers should not touch the back wall of the refrigerator because they could freeze to the wall. Do not keep regularly opening the door of the refrigerator.
- Meat and clean fish (packed in a package or plastic foil) can be placed in the refrigerator, which can be used in 1-2 days.
- Fruit and vegetables without packaging can be placed in the part designated for fresh fruit and vegetables.

### ATTENTION

The optimal temperature setting of each compartment depends on the ambient temperature. Above optimal temperature is based on the ambient temperature of 25 °C.

| Order | Compartments<br>TYPE                                                                                                 | Target storage<br>temp. [°C] | Appropriate food                                                                                                                                                                                                                                                                                       |
|-------|----------------------------------------------------------------------------------------------------------------------|------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1     | Fridge                                                                                                               | $+2 \leq x \leq +8$          | Eggs, cooked food, packaged food, fruits and vegetables, dairy products, cakes, drinks and other foods are not suitable for freezing.                                                                                                                                                                  |
| 2     | <br>Four-star<br>rating<br>frozen   | $x \leq -18$                 | With freezing capacity, fast freezing speed, can quickly freeze and store food. Suitable for frozen fresh food such as seafood (fish, shrimp, shellfish), freshwater aquatic products and meat products. Recommended for 3 ~ 6 months, the longer the storage time, the worse the taste and nutrition. |
| 3     | <br>Three-<br>star rating<br>frozen | $x \leq -18$                 | With freezing capacity. Suitable for frozen fresh food such as seafood (fish, shrimp, shellfish), freshwater aquatic products and meat products. Recommended no more than 3 months.                                                                                                                    |
| 4     | <br>Two-star<br>rating<br>frozen    | $x \leq -12$                 | Only suitable for medium-term storage of already frozen food, e.g. ice cream. Recommended no more than 1 month.                                                                                                                                                                                        |
| 5     | <br>One-star<br>rating<br>frozen    | $x \leq -6$                  | Only suitable for refrigeration, and short-term storage of small quantities of already frozen food. Recommended no more than 1 week.                                                                                                                                                                   |
| 6     | 0-star                                                                                                               | $-6 \leq x \leq 0$           | Fresh pork, beef, fish, chicken, some packaged processed foods, etc. (Recommended to eat within the same day, preferably no more than 3 days). Partially encapsulated processed foods (non-freezable foods).                                                                                           |
| 7     | Chill                                                                                                                | $-2 \leq x \leq +3$          | Fresh/ frozen pork, beef, chicken, freshwater aquatic products, etc. (7 days below 0°C and above 0°C is recommended for consumption within that day, preferably no more than 2 days).<br><br>Seafood less than 0 for 15 days, it is not recommended to store above 0°C.                                |
| 8     | Fresh food                                                                                                           | $0 \leq x \leq +4$           | Fresh pork, beef, fish, chicken, cooked food, etc. (Recommended to eat within the same day, preferably no more than 3 days)                                                                                                                                                                            |
| 9     | Wine                                                                                                                 | $+5 \leq x \leq +20$         | Red wine, white wine, sparkling wine, etc.                                                                                                                                                                                                                                                             |

### ATTENTION

Please note the manufacturer instructions on the packaging. Please store different foods according to the compartments or target storage temperature of your purchased.

# CLEANING AND MAINTENANCE

## Defrost

- The refrigerator is made based on the air-cooling principle and thus has automatic defrosting function. Frost formed due to change of season or temperature may also be manually removed by disconnection of the appliance from power supply or by wiping with a dry towel.

## Stop using

### Power failure:

In case of power failure, even if it is in summer, foods inside the appliance can be kept for several hours; during the power failure, the times of door opening shall be reduced, and no more fresh food shall be put into the appliance.

### Long-time nonuse:

The appliance shall be unplugged and then cleaned; then the doors are left open to prevent odor.


### Moving:

Before the refrigerator is moved, take all objects inside out, fix the glass partitions, vegetable holder, freezing chamber drawers and etc. with tape, and tighten the leveling feet; close the doors and seal them with tape. During moving, the appliance shall not be laid upside down or horizontally, or be vibrated; the inclination during movement shall be no more than 45°.

The appliance shall run continuously once it is started. Generally, the operation of the appliance shall not be interrupted; otherwise the service life may be impaired. Foods can be preserved for a couple of hours even in summer in case of power failure; it is recommended to reduce the frequency of opening door.


## Cleaning of door tray

- According to the direction arrow in the figure below, use both hands to squeeze the tray, and push it upward, then you can take it out.
- After washing the tray having been taken out, you can adjust its installing height in accordance with your requirement.

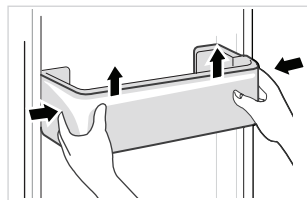


## Cleaning of glass shelf

- As the innermost part of the refrigerator liner where contacting the shelves has a backstop, you shall raise the shelves upward, then you can be able to take it out.
- Adjust or clean the shelves according to your requirement.

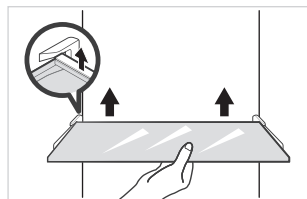

## Cleaning the Fruits and vegetables box

- Remove the contents of the Fruits and vegetables box. Hold the handle of the drawer and pull it out completely until it stops.
- Lift the drawer up and remove it by pulling it out.

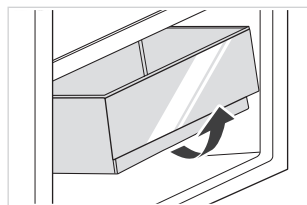

### ● ATTENTION

Soft towels or sponge dipped in water and non-corrosive neutral detergents are suggested for cleaning. The freezer of shall be finally cleaned with clean water and dry cloth. Open the door for natural drying before the power is turned on. Do not use hard brushes, clean steel balls, wire brushes, abrasives, such as toothpastes, organic solvents (such as alcohol, acetone, banana oil, etc.), boiling water, acid or alkaline items clean refrigerator considering that this may damage the fridge surface and interior.

# TROUBLESHOOTING

The following simple issues can be handled by the user. Please call the after-sale service department if the issues are not solved.

| Problem                               | Possible reason                                                                                                     |
|---------------------------------------|---------------------------------------------------------------------------------------------------------------------|
| Failed operation                      | • Check whether the appliance is connected to power or whether the plug is in well contact                          |
|                                       | • Check whether the voltage is too low                                                                              |
|                                       | • Check whether there is a power failure or partial circuits have tripped                                           |
| Odor                                  | • Odorous foods shall be tightly wrapped                                                                            |
|                                       | • Check whether there is any rotten food                                                                            |
|                                       | • Clean the inside of the refrigerator                                                                              |
| Long-time operation of the compressor | • Long operation of the refrigerator is normal in summer                                                            |
|                                       | • when the ambient temperature is high It is not suggestible having too much food in the appliance at the same time |
|                                       | • Food shall get cool before being put into the appliance                                                           |
|                                       | • The doors are opened too frequently                                                                               |
| Light fails to get lit                | • Check whether the refrigerator is connected to power supply and whether the illuminating light is damaged         |
|                                       | • Have the light replaced by a specialist                                                                           |
| Door can not be properly closed       | • The door is stuck by food packages Too much food is placed                                                        |
|                                       | • The refrigerator is tilted.                                                                                       |
| Loud noises                           | • Check whether the floor is level and whether the refrigerator is placed stably                                    |
|                                       | • Check whether accessories are placed at proper locations                                                          |

| Problem                               | Possible reason                                                                                                                                                                                                                                                                                                                                               |
|---------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Failed operation                      | <ul style="list-style-type: none"> <li>• Check whether the appliance is connected to power or whether the plug is in well contact .</li> <li>• Check whether the voltage is too low.</li> <li>• Check whether there is a power failure or partial circuits have tripped.</li> </ul>                                                                           |
| Odor                                  | <ul style="list-style-type: none"> <li>• Odorous foods shall be tightly wrapped.</li> <li>• Check whether there is any rotten food.</li> <li>• Clean the inside of the refrigerator.</li> </ul>                                                                                                                                                               |
| Long-time operation of the compressor | <ul style="list-style-type: none"> <li>• Long operation of the refrigerator is normal in summer when the ambient temperature is high.</li> <li>• It is not recommended having too much food in the appliance at the same time.</li> <li>• Food shall get cool before being put into the appliance.</li> <li>• The doors are opened too frequently.</li> </ul> |
| Light fails to get lit                | <ul style="list-style-type: none"> <li>• Check whether the refrigerator is connected to power supply and whether the illuminating light is damaged.</li> </ul>                                                                                                                                                                                                |
| Doors cannot be properly closed       | <ul style="list-style-type: none"> <li>• The door is stuck by food packages.</li> <li>• The refrigerator is tilted.</li> </ul>                                                                                                                                                                                                                                |
| Loud noise                            | <ul style="list-style-type: none"> <li>• Check whether the floor is level and whether the refrigerator is placed stably.</li> <li>• Check whether accessories are placed at proper locations.</li> </ul>                                                                                                                                                      |
| Door seal fails to be tight           | <ul style="list-style-type: none"> <li>• Remove foreign matters on the door seal.</li> <li>• Heat the door seal and then cool it for restoration (or blow it with an electrical drier or use a hot towel for heating).</li> </ul>                                                                                                                             |
| Water pan overflows                   | <ul style="list-style-type: none"> <li>• There is too much food in the chamber or food stored contains too much water,resulting in heavy defrosting.</li> <li>• The doors are not closed properly, resulting in frosting due to entry of air and increased water due to defrosting.</li> </ul>                                                                |
| Hot housing                           | <ul style="list-style-type: none"> <li>• Heat dissipation of the built-in condenser via the housing, which is normal.</li> <li>• When housing becomes hot due to high ambient temperature and storage of too much food,it is recommended to provide sound ventilation to facilitate heat dissipation.</li> </ul>                                              |
| Surface condensation                  | <ul style="list-style-type: none"> <li>• Condensation on the exterior surface and door seals of the refrigerator is normal when the ambient humidity is too high. Just wipe the condensate with a clean towel.</li> </ul>                                                                                                                                     |
| Abnormal noise                        | <ul style="list-style-type: none"> <li>• Buzz: The compressor may produce buzzes during operation, and the buzzes are loud particularly upon start or stop. This is normal.</li> <li>• Creak: Refrigerant flowing inside of the appliance may produce creak, which is normal.</li> </ul>                                                                      |

# APPENDIX

## Special for new European standard

The ordered parts in the following table can be acquired from Service provider channel (AMIRIDIS - SAVVIDIS SA)

| Ordered part           | Provided by                            | Minimum time required for Provision                              |
|------------------------|----------------------------------------|------------------------------------------------------------------|
| Thermostats            | Professional maintenance personnel     | At least 7 years after the last model is launched on the market  |
| Temperature sensors    | Professional maintenance personnel     | At least 7 years after the last model is launched on the market  |
| Printed circuit boards | Professional maintenance personnel     | At least 7 years after the last model is launched on the market  |
| Light sources          | Professional maintenance personnel     | At least 7 years after the last model is launched on the market  |
| Door handles           | Professional repairers and final users | At least 7 years after the last model is launched on the market  |
| Door hinges            | Professional repairers and final users | At least 7 years after the last model is launched on the market  |
| Trays                  | Professional repairers and final users | At least 7 years after the last model is launched on the market  |
| Baskets                | Professional repairers and final users | At least 7 years after the last model is launched on the market  |
| Door gaskets           | Professional repairers and final users | At least 10 years after the last model is launched on the market |

## Dear customer

1. If you want to return or replace the product, please contact the store where you buy.

(Remember to bring the purchase invoice)

2. If your product breaks down which needs to repair, please contact after-sales service provider.

## ATTENTION

The model information in the product database, as well as the model identifier, can be obtained through a weblink scanned by a QR code, if any, on the energy efficiency label of the product.

For more information about the energy efficiency of the appliance, visit <https://ec.europa.eu> and search using the model name.

The model name can be found on the rating label of the appliance.



**Kalliopi Karyda & Co., LP**  
87A. 17is Noemvriou str.  
55535, Pylea Greece  
Tel. 2316 006600  
[www.morris.gr](http://www.morris.gr)