


## Operating Instructions – Dishwasher Indesit DI620

### Control Panel

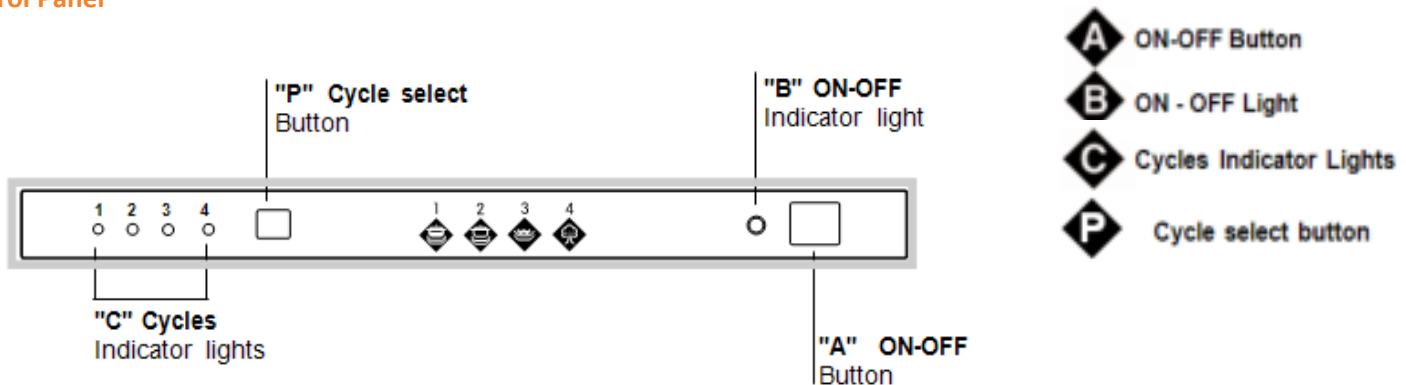

### Loading the dishwasher

- Place more difficult to clean items on the lower rack and lighter, more delicate items on the top rack.

### Starting the appliance

- Press the ON-OFF button "A": indicator light "B" comes on. Your appliance is now on and awaiting instructions.
- Select the wash cycle by pressing button "P". Each time this button is pressed, one of the indicator lights "C" will come on in sequence, select the wash cycle you deem most suitable for the type of dishes to wash (see table below). Close the appliance door and after a few seconds, you will hear a short beep: the wash cycle has begun.

### Cancelling or modifying a cycle while underway

- Premise: A cycle that is underway can only be modified if it has only been running for a short time.
- Open the appliance door carefully to avoid any hot water splashes, then keep button "P" pressed for approximately 5 seconds, until you hear 3 short beeps. Indicator light "C" will come off and at this point, all the settings will have been cancelled. You are now free to re-set the correct wash cycle.

### If you forget to load some of the dishes

- Interrupt the wash cycle by opening the appliance door with care, then insert the dish you had forgotten. When you shut the appliance door, the cycle will start up from where you interrupted it. It will restart at the point where it left off.

### At the end of the wash cycle

- The end of the wash cycle is indicated by a double beep and the flashing of the wash cycle indicator light "C".
- Open the dishwasher door, turn the appliance off by pressing button "A".

Cycle	Cycle section instructions	Cycle description	Detergent for pre-wash and wash	Rinse Aid	Wash cycle duration, Hrs. Min.
<b>Intensive</b>	Very dirty dishes, pots and pans (not to be used with delicate items).	Pre-wash with hot water at 40°C Wash at 65°C. 2 Rinses with cold water Rinse with hot water at 70°C. Drying.	30 + 5 gr.	*	2:00'
<b>Normal</b>	Normally dirty dishes, pots and pans. Standard daily cycle.	Pre-wash with cold water Wash at 50°C. Rinse with cold water Rinse with hot water at 70°C. Drying.	30 gr.	*	1:40'
<b>Soak</b>	Pre-wash of dishes, pots and pans while waiting for the load to be completed after the subsequent meal.	Short cold wash to prevent food residue from drying on the dishes.			12'
<b>Eco</b>	Environmentally-friendly cycle, with low energy consumption levels, suitable for normally dirty pans and dishes.	2 Cold pre-washes Wash at 50°C Hot rinse at 65°C Drying	5 + 25 gr.	*	2.25'