

IP Camera Quick Start Guide

©2020 Metra Electronics Corporation 460 Walker Street, Holly Hill, FL 32117-2699 Specifications are subject to change without notice. All trademarks are the property of their respective owners. 386-255-0234 • www.spyclopsusa.com

Please read this manual carefully and keep it properly before using our network camera products.

Statement

Thank you for using our products, please read this manual carefully before trying.

This manual is applicable to network series products.

This manual may contain information that is technically inaccurate, inconsistent in the product's function and operation, or in a typographical error. Our company will update the context in the manual according to the enhancement of product features. Updated content will be added in the new version of this manual without further notice.

- This equipment should be installed in a well-ventilated environment. Please keep proper space with the ground during installation
- This product can not withstand heavy loads. Do not place heavy objects or multi-layer overlays on this product.
- Power must be under safety certification, its output voltage, current, voltage polarity and operating temperature must comply with the
- power requirements of this equipment.
 When using this equipment in thunder and lightning conditions,
 please pay attention to install lightning protection device or cut off
- the power.
 In order to get high quality video and pictures, make sure your internet connection is stable and smooth.

1.Network Settings

IPv4 address of the PC needs to be in the same network segment as the IP address of the IP camera to allow connection. (Note: The default IP address of the IP Camera: 192.168.1.168.) . Specific settings in window system can refer to the following methods:

Method one:

① Check the IPv4 address of PC, click 【Start】 / 【Control Panel】 / 【Network and Internet】 / 【Network and Sharing Center】 / 【Local Network】 / 【Details】.



② Set the PC IPv4 address(E.g PC:192.168.1.165)



③ Or add PC and network cameras in a same network segment (E.q:192.168.1.165).



Note: The IPv4 address can not use an existing IP of another device when you add in LAN.

Method Two:

Use IP search tool, changing searched IP camera to the same network segment as the PC's. (Note: Default IP address of the IP Camera: 192.168.1.168. Default Username: admin, default password: admin; the changed URL can not conflict with the IP address of other devices in the LAN).




2.Ping device address

① Connect camera and PC by network cable in the same LAN, power on. Connecting as following (PoE switch, camera, PC connection photo).




© Left click window [Start] menu, input "cmd" in [Program/ file searcher] to open window command(or you can press shortcut "win+R" directly on keyboard to input "cmd"), from the Cursor blinking side, input "Ping "*** "arm press "Enter" (For example, when the camera II audress is 192.168.1.168, then input "ping 192.168.1.168" and press "Enter") to check the system connection information. For example as below photo, when system connection information is data package: sent=4, received=4, loss=0, <0% loss> means PC and camera signal communication is normal, you can login the camera by IE (Internet Explorer) web browser.

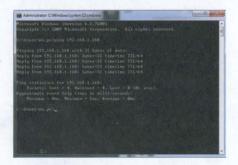

3. Connection and login

Please download and install OCX plugin the first time you connect to the camera, open 【IP Search 】 tool and click 【Search】, double click the camera you need to connect, webpage of login will come out, then click 【Download】 to download the OCX plugin and install. After installation, please clice refresh IE and input user and password (Default Factory setting user is admin, default password is admin, we strongly suggest you to change the user and password to higher safety level), details are shown as following photos:

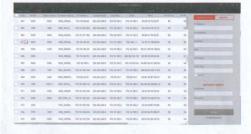



4.Real-time preview and parameter configuration

① Enter the user name and password of the device in the browser user interface and enter the real-time preview interface.



② Click 【Configuration】 to enter the device and other functions, including local configuration, system, local network, video, image and event configuration. Users can selectively set these features to achieve better performance based on the actual situation of the application scenario.



2

Drill Template



В

Hole A:for cables routed through the ceiling
Hole B:for cables routed through the side opening
Screw hole1:for Mounting Base

1

1

FLBC00079

В

MINI BULLET IP CAMERAS







SPYCLOPS SPY-MNBLT2WIP5 / SPY-MNBLT2GIP5 MINI BULLET IP CAMERAS

SALES 386-255-0234

• 2.8mm fixed Lens

AVAILABLE IN WHITE AND GRAY

- 5MP CMOS Sensor
- Supports 1080P/30, 4MP/25 & 5MP/20 Resolution
- IP67 Water Resistant
- Smart IR LEDs for up to 25 Meters Night Vision
- Supports H.264, H.264+, H.265 & H.265+
- Built in PoE

SPYCLOPS **IMPORTANT!! Please fill out this warranty card to register your new Spyclops Surveilance System within 30 days of purchase.

□ Mr. □ Mrs. □ Ms. □ Mis	SS.		
First name	Last Name		Initial
Company Name		Date of B	irth
Address	City	State	Zip
Phone No	Model#		
Store Name	Date of Purchase	Purchase Price \$	
□ Price / Value □ Sale	rchase a Spyclops Surveilance Sont Experience Brand name		
Education □ High School □ Some C	college Completed College	Graduate School	
Marital Status □ Married □ Single			
	r total household income? 000 ~ \$40,000 □ \$40,001 ~ \$60,00	00 □ Over \$60,	001
Thanks for your time to com	plete the questionnaire. Your answe	ers are important	to usll

PLACE
STAME
HERE



460 Walker Street Holly Hill, FL 32117