


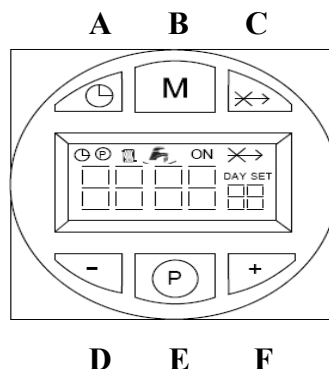

## HE Programmer instructions

### Programmer overview

- A:** Clock adjustment button  
**B:** Operating mode button  
**C:** Override button  
**D:** - Button  
**E:** Programming button  
**F:** + Button



### Setting the time and day

1. Press the button.
2. The Day and clock symbol will flash on the display using the + and – buttons set the Day (1= Monday 7= Sunday)
3. Press the button.
4. The hour and clock symbol will flash using + and – buttons set the correct hour (this is a 24 hour clock)
5. Press the button.
6. The minutes and the clock symbol will flash using the + and – buttons set the correct minutes.
7. Press the button the time and day are now set.

### Pre Set programmes

1. Central heating.

The timer is Pre programmed with 3 on and 3 off times. Set the same for each day.  
These are: The 2<sup>nd</sup> on/off time will not allow the boiler to fire.

6:30	-	8:30
12:00	-	12:00
16:30	-	22:30


2. Domestic hot water ECO/Comfort

The timer is fitted with a function that will time the boilers hot water pre heat.  
The pre heat will keep the hot water inside the boiler at its set temperature.  
The timer is pre programmed with 1 on and off time. Set the same for each day.  
This time is 6:30-22:30.


If these are suitable no programming is required and the C/H and the hot water comfort will be on for these times. (The C/H 12:00-12:00 programme will not fire the boiler.)

### Operating mode


By pressing the **M** button you can select: heating continuous, heating timed and heating off. When in these modes the display will show.



Heating continuous



Heating timed





Heating off

## Setting Programmes

1. Enter the programme mode by pressing **P**.
2. By using the + and – buttons you can select the day or days you want to programme.

The display will scroll through the days or group of days you want to programme.

1,2,3,4,5,6,7 (Monday to Sunday so you can different programmes for each day) 15 days 1-5, 67 days 6-

7,16 days 1-6 and 17 days 1-7 (the display will be flashing the radiator symbol ) Day 17 with the tap symbol flashing  for ECO/Comfort programming.

3. When you have reached the day or group of days you wish to programme press **P**.

4. The display will show the first **ON** time, set the on time using + and – buttons.


5. Press the **P** button, the display will show the first **OFF** time.

6. You can programme 4 on times and 4 off times using the procedure above.


If you don't want to use all the on/off times make sure they are set showing the same times.

Programming group days will override and single day settings.

If you wish to exit programming at any point press **P** for 3 seconds.

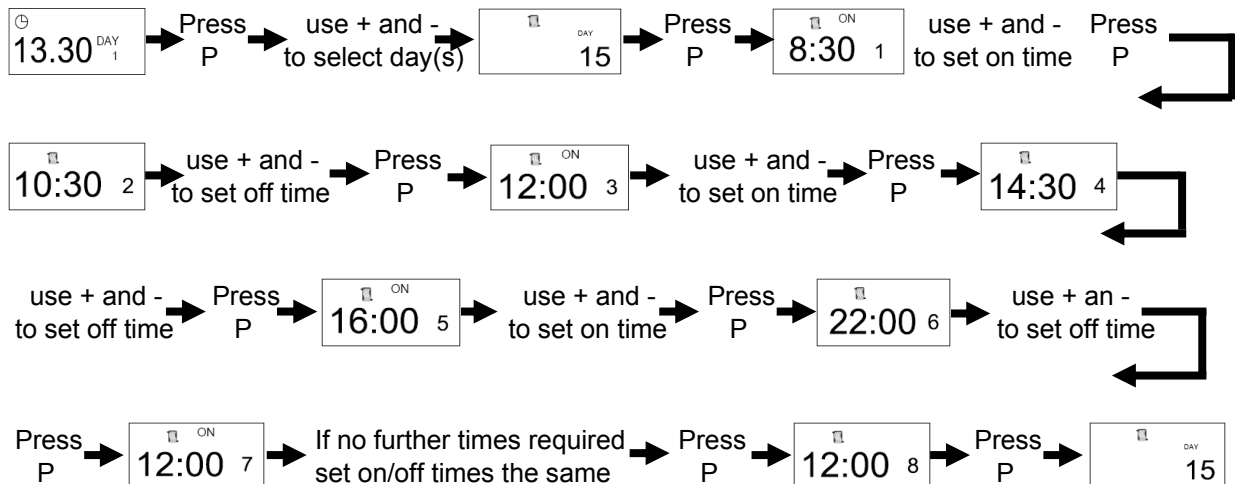

## Override

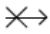By pressing the  button the central heating will be over ridden.

So if the central heating is off it will be turned on, and if the central heating is on it will be turned off. This will stay in this mode until the programmer reaches its next timed setting.