


Product Type  
POW-LVM3K-24V-H

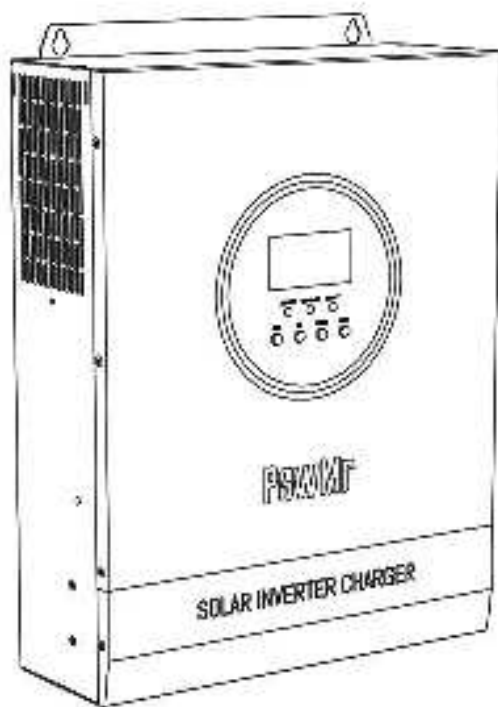

# POWMr

HYBRID INVERTER  
User Manual

# Important Safety Instructions

---

Please save these instructions for future use!

This manual contains all safety, installation and operating instructions for the POW-LVM3K Series all-in-one solar charge inverter.

**Please read all instructions and precautions in the manual carefully before installation and use.**

- Non-safety voltage exists inside the all-in-one solar charge inverter. To avoid personal injury, users shall not disassemble the all-in-one solar charge inverter themselves. Contact our professional maintenance personnel if there is a need for repair.
- Do not place the all-in-one solar charge inverter within the reach of children.
- Do not install the all-in-one solar charge inverter in harsh environments such as moist, oily, flammable or explosive, or heavily dusty areas.
- The mains input and AC output are high voltage, so please do not touch the wiring terminals.
- The housing of the all-in-one solar charge inverter is hot when it is working. Do not touch it.
- Do not open the terminal protective cover when the all-in-one solar charge inverter is working.
- It is recommended to attach proper fuse or circuit breaker to the outside of the all-in-one solar charge inverter.
- Always disconnect the fuse or circuit breaker near the terminals of PV array, mains and battery before installing and adjusting the wiring of the all-in-one solar charge inverter.
- After installation, check that all wire connections are tight to avoid heat accumulation due to poor connection, which is dangerous.
- The all-in-one solar charge inverter is off-grid. It is necessary to confirm that it is the only input device for load, and it is forbidden to use it in parallel with other input AC power to avoid damage.

# Table of Contents

|                                            |           |
|--------------------------------------------|-----------|
| <b>Important Safety Instructions.....</b>  | <b>1</b>  |
| <b>Production Instructions.....</b>        | <b>4</b>  |
| Features .....                             | 5         |
| Basic System Introduction.....             | 6         |
| Production Overview.....                   | 7         |
| Dimension Drawing.....                     | 8         |
| <b>Installation.....</b>                   | <b>9</b>  |
| Installation Notice .....                  | 9         |
| Select the Mount Location.....             | 10        |
| Mount the Inverter.....                    | 10        |
| Preparation.....                           | 11        |
| <b>Connection .....</b>                    | <b>12</b> |
| Wiring Specification and Breaker Type..... | 12        |
| AC Input/Output Wiring .....               | 13        |
| PV Input Wiring.....                       | 14        |
| Battery Wiring.....                        | 15        |
| Final Assembly .....                       | 16        |
| Start Up the Inverter .....                | 16        |
| <b>Operation Mode.....</b>                 | <b>17</b> |
| Charging Mode .....                        | 17        |
| Output Mode.....                           | 18        |
| <b>Operation Instruction.....</b>          | <b>19</b> |
| Operation and Display Panel .....          | 19        |
| Introduction to LCD Screen.....            | 20        |
| Real-time Data Viewing Method.....         | 22        |
| Setting Parameter.....                     | 23        |
| Battery Type Parameters .....              | 32        |
| <b>Other Functions .....</b>               | <b>34</b> |
| Dry Node .....                             | 34        |
| RS485 Communication Port.....              | 34        |

|                                   |           |
|-----------------------------------|-----------|
| CAN Communication Function .....  | 34        |
| USB communication port .....      | 34        |
| <b>Protection .....</b>           | <b>35</b> |
| Protections Provided .....        | 35        |
| Fault Code Meaning .....          | 37        |
| Troubleshooting .....             | 39        |
| <b>System maintenance .....</b>   | <b>40</b> |
| <b>Technical parameters .....</b> | <b>41</b> |

# Production Instructions

POW-LVM3K series is a new all-in-one hybrid solar charge inverter, which integrates solar energy storage & means charging energy storage and AC sine wave output. Thanks to DSP control and advanced control algorithm, it has high response speed, high reliability and high industrial standard. Four charging modes are optional, i.e. Only Solar, Mains Priority, Solar Priority and Mains & Solar hybrid charging; and two output modes are available, i.e. Inverter and Mains, to meet different application requirements.

The solar charging module applies the latest optimized MPPT technology to quickly track the maximum power point of the PV array in any environment and obtain the maximum energy of the solar panel in real time.

Through a state of the art control algorithm, the AC-DC charging module realizes fully digital voltage and current double closed loop control, with high control precision in a small volume. Wide AC voltage input range and complete input/output protections are designed for stable and reliable battery charging and protection.

Based on full-digital intelligent design, the DC-AC inverter module employs advanced SPWM technology and outputs pure sine wave to convert DC into AC. It is ideal for AC loads such as household appliances, power tools, industrial equipment, and electronic audio and video equipment. The product comes with a segment LCD display design which allows real-time display of the operating data and status of the system. Comprehensive electronic protections keep the entire system safer and more stable.

## ■ Features


- Full digital voltage and current double closed loop control, advanced SPWM technology, output of pure sine wave.
- Two output modes: Mains bypass and inverter output; Uninterrupted power supply.
- Available in 4 charging modes: Only Solar, Mains Priority, Solar Priority and Mains and Solar hybrid charging.
- Advanced MPPT technology with an efficiency of 99.9%.
- Designed with a LCD screen and 3 LED indicators for dynamic display of system data and operating status.
- ON/OFF rocker switch for AC output control.
- Power saving mode available to reduce no-load loss.
- Intelligent variable speed fan to efficiently dissipate heat and extend system life.
- Lithium battery activation by PV solar or mains, allowing access of lead-acid battery and lithium battery.
- 360 ° all-round protection with a number of protection functions.
- Complete protections, including short circuit protection, over voltage and under voltage protection, overload protection, reverse protection, etc.

## ■ Basic System Introduction


The figure below shows the system application scenario of this product. A complete system consists of the following parts:

1. **PV module:** Convert light energy into DC power, and charge the battery through the all-in-one solar charge inverter, or directly invert into AC power to drive the load.
2. **Mains or generator:** Connected at the AC input, to power the load while charging the battery. If the mains or generator is not connected, the system can also operate normally, and the load is powered by the battery and PV module.
3. **Battery:** Provided to ensure normal power supply to the system loads when solar energy is insufficient and the Mains is not connected.
4. **Household load:** Allow connection of various household and office loads, including refrigerators, lamps, TVs, fans and air conditioners.
5. **All-in-one solar charge inverter:** The energy conversion unit of the whole system.

Specific system wiring method depends on the actual application scenario.

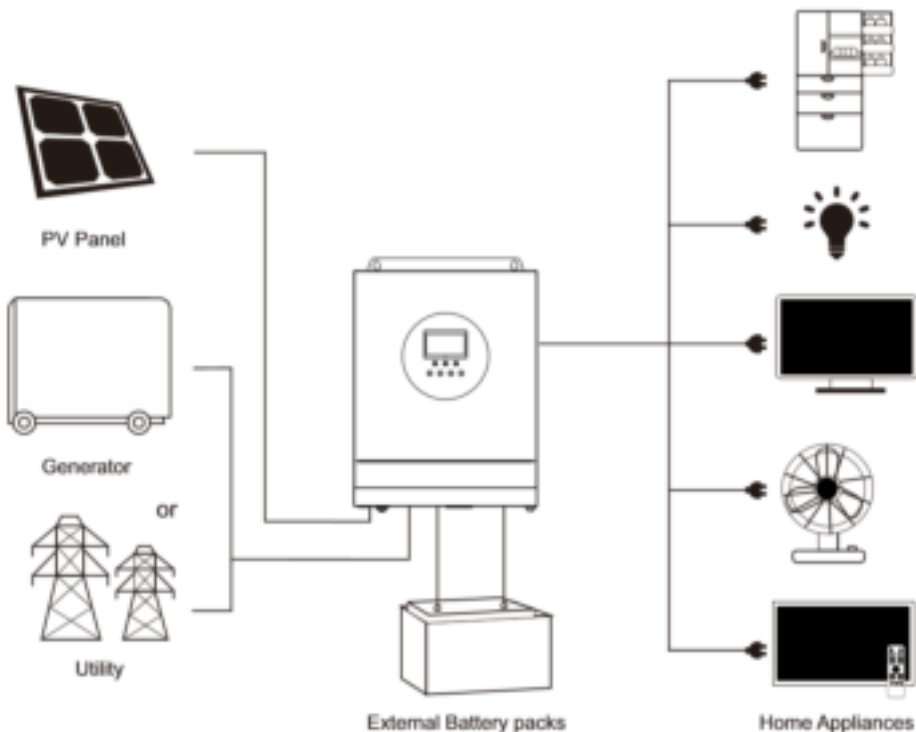


■ Production Overview

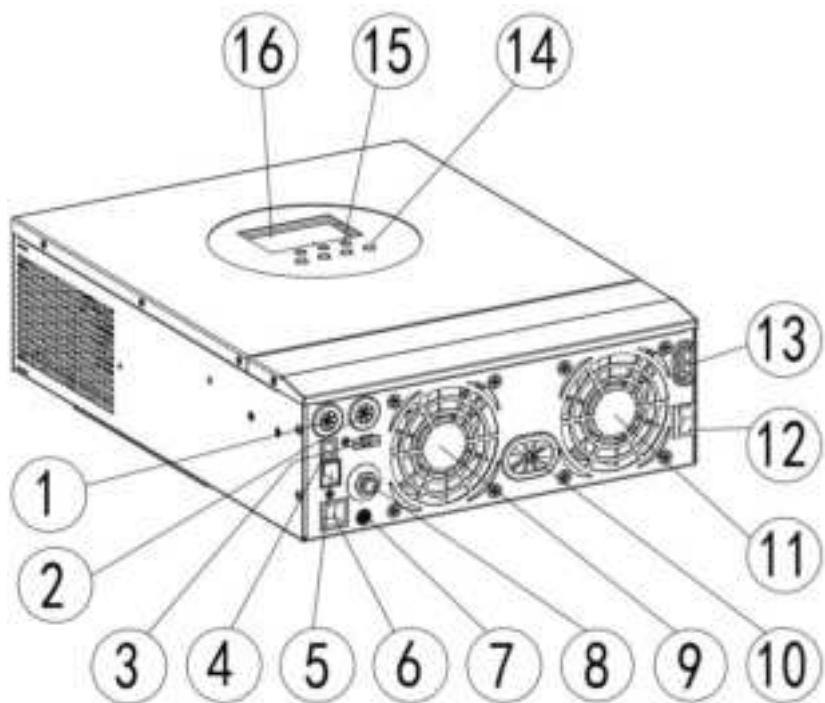

|   |                          |   |                       |
|---|--------------------------|---|-----------------------|
| ① | AC input port            | ⑨ | Cooling fan           |
| ② | AC output port           | ⑩ | Battery port          |
| ③ | CAN communication port   | ⑪ | Cooling fan           |
| ④ | USB communication port   | ⑫ | ON/OFF rocker switch  |
| ⑤ | RS485 communication port | ⑬ | PV port               |
| ⑥ | Dry contact port         | ⑭ | Touch the key lightly |
| ⑦ | Grounding screw hole     | ⑮ | LED Indicator         |
| ⑧ | Overload protector       | ⑯ | LCD screen            |



## ■ Dimension Drawing

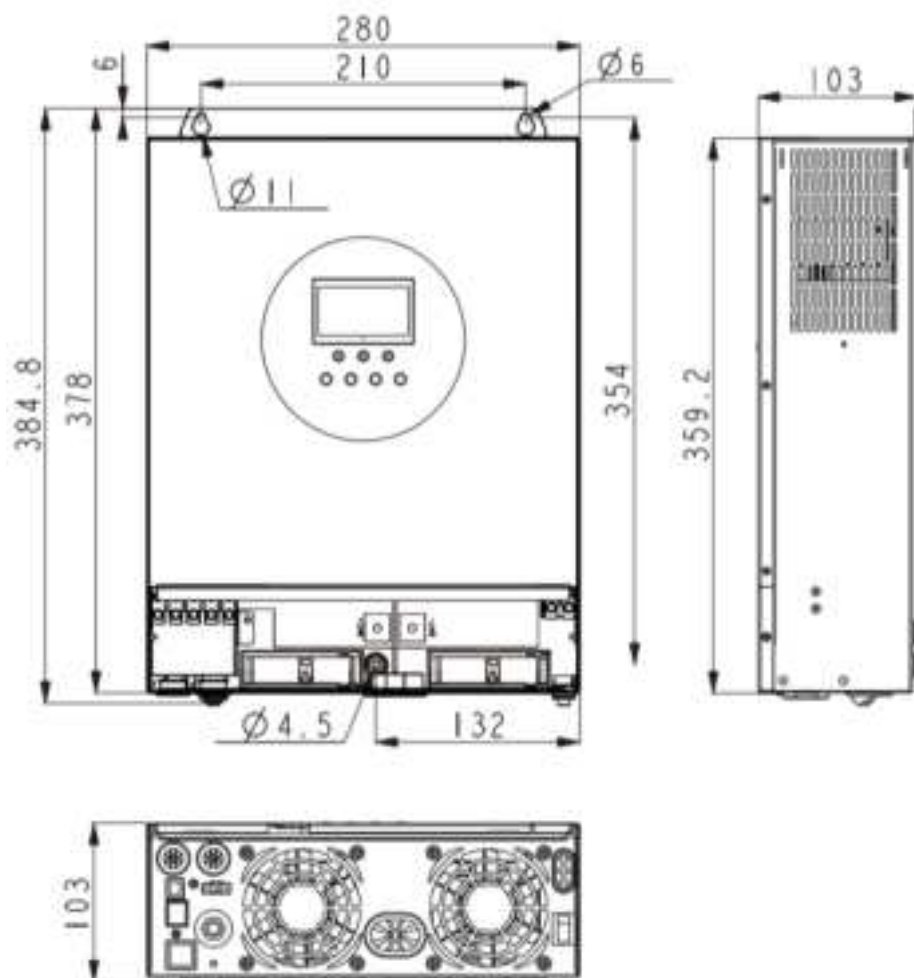

# Installation

## ■ Installation Notice


Please read this manual carefully prior to installation to familiarize yourself with the installation steps.

- Be very careful when installing the battery. Wear safety goggles when installing a lead-acid liquid battery. Once coming into contact with the battery acid, rinse with clean water timely.
- Do not place metal objects near the battery to prevent short-circuit of the battery.
- Acid gas may be generated when the battery is charged. So, please ensure good ventilation.
- When installing the cabinet, be sure to leave enough space around the all-in-one solar charge inverter for heat dissipation. Do not install the all-in-one solar charge inverter and lead-acid battery in the same cabinet to avoid corrosion by acid gas generated during battery operation.
- Only the battery that meets the requirements of the all-in-one unit can be charged.
- Poorly connected connections and corroded wires may cause great heat which will melt the wire insulation, burn the surrounding materials, and even cause fires. So, make sure the connectors have been tightened, and the wires are secured with ties to avoid looseness of connections caused by shaking of wires during mobile application.
- The system connection wires are selected according to a current density of not more than 5 A/mm<sup>2</sup>.
- Avoid direct sunlight and rainwater infiltration for outdoor installation.
- Even after the power is turned off, there is still high voltage inside the unit. Do not open or touch the internal components, and avoid related operations until the capacitor completely discharges.
- Do not install the all-in-one solar charge inverter in harsh environments such as moist, oily, flammable or explosive, or heavily dusty areas.
- Polarity at the battery input end of this product shall not be reversed, otherwise it may damage the device or cause unpredictable danger.
- The mains input and AC output are high voltage, so please do not touch the wiring terminals.
- When the fan is working, do not touch it to prevent injury.
- Load equipment input power needs to confirm that this all-in-one solar charge inverter is the only input device, and it is forbidden to use in parallel with other input AC power to avoid damage. It is necessary to confirm that the solar charge inverter is the only input device for load equipment, and it is forbidden to use it in parallel with other input AC power to avoid damage.

## ■ Select the Mount Location

**Determine the installation position and the space for heat dissipation.**

- Determine the installation position of the all-in-one solar charge inverter, such as wall surface;
- When installing the all-in-one solar charge inverter, ensure that there is enough air flowing through the heat sink, and space of at least 200mm to the left and right air outlets of the inverter shall be left to ensure natural convection heat dissipation. Refer to the installation diagram of the whole machine as above.

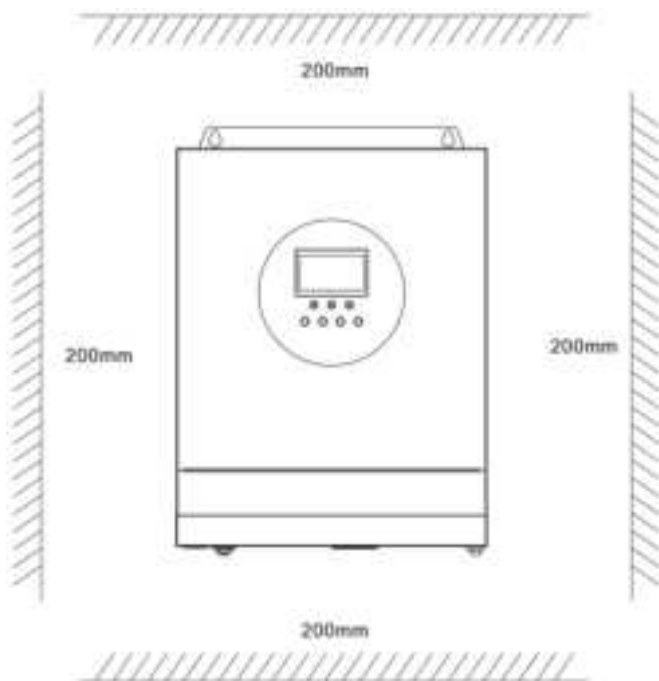

### **WARNING**


- Danger of explosion! Never install the all-in-one solar charge inverter and lead-acid battery in the same confined space! Also do not install in a confined place where battery gas may collect.

## ■ Mount the Inverter

Install the unit by screwing two screws. It's recommended to use M5 screws.

## ■ Preparation

Before connecting all wirings, please take off bottom cover by removing two screws as shown below.

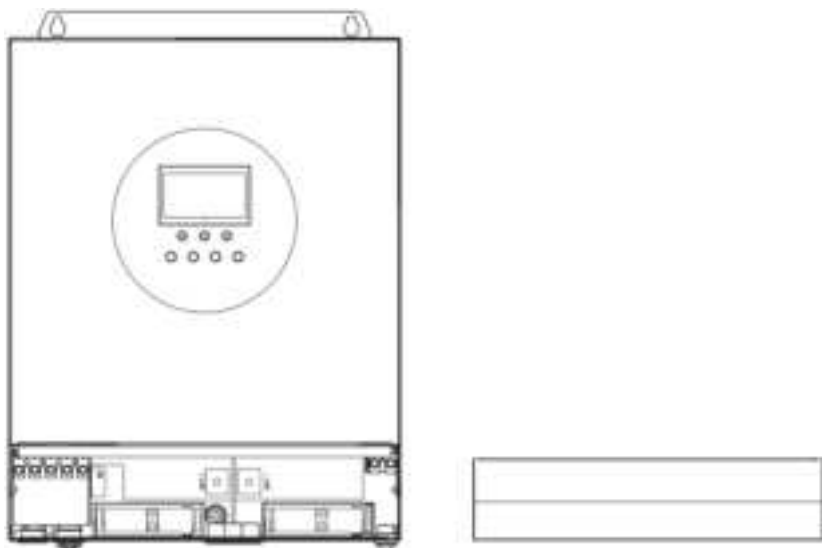

# Connection

## ■ Wiring Specification and Breaker Type

**Wiring and installation must comply with national and local electrical codes.**

Recommended PV array wiring specifications and circuit breaker selection: Since the output current of the PV array is affected by the type, connection method and illumination angle of the PV module, the minimum wire diameter of the PV array is calculated according to its short-circuit current; refer to the short-circuit current value in the PV module specification (the short-circuit current is constant when the PV modules are connected in series; the short-circuit current is the sum of the short-circuit currents of all PV modules connected in parallel); the short-circuit current of the PV array shall not exceed the maximum input current.

➤ **Please refer to the table below for PV input wire diameter and switch:**

| Model           | Wire Diameter             | Max. PV input current | Circuit breaker Spec |
|-----------------|---------------------------|-----------------------|----------------------|
| POW-LVM3K-24V-H | 3.5mm <sup>2</sup> /12AWG | 13A                   | 2P—25A               |

**Note:** The voltage in series shall not exceed the maximum PV input open circuit voltage.

➤ **Please refer to the table below for recommended AC input wire diameter and switch:**

| Model           | Wire Diameter           | Max. bypass input current | Circuit breaker Spec |
|-----------------|-------------------------|---------------------------|----------------------|
| POW-LVM3K-24V-H | 6mm <sup>2</sup> /10AWG | 40A                       | 2P—40A               |

**Note:** There is already a corresponding breaker at input connection point of mains supply. Therefore, it is not necessary to add one more.

➤ **Recommended input wire diameter and switch type for battery:**

| Model           | Wire Diameter           | Rated Battery Discharge Current | Max. Charge Current | Circuit Breaker Spec |
|-----------------|-------------------------|---------------------------------|---------------------|----------------------|
| POW-LVM3K-24V-H | 30mm <sup>2</sup> /2AWG | 135A                            | 80A                 | 2P—160A              |


➤ **Recommended wire specification and breaker type for AC output:**

| Model           | Wire diameter           | Rated Inverter AC Output current | Max. bypass output current | Circuit Breaker Spec |
|-----------------|-------------------------|----------------------------------|----------------------------|----------------------|
| POW-LVM3K-24V-H | 6mm <sup>2</sup> /10AWG | 27.5A                            | 40A                        | 2P—40A               |

**Note:** The wire diameter is only for reference. In case of long distance between photovoltaic array and all-in-one inverter or between all-in-one inverter and battery, use thicker wire to reduce voltage drop and improve system performance.

## NOTICE

- Above wire diameter and breaker are only for reference. Please select appropriate wire diameter and breaker based on practical condition.

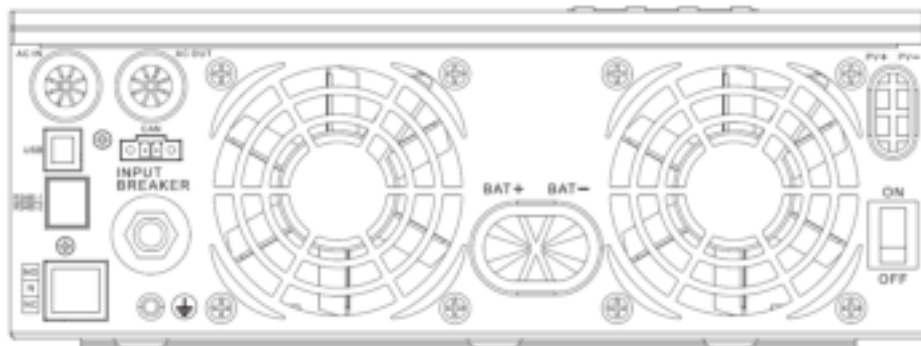


## ■ AC Input/Output Wiring


1. Prior to AC input/output wiring, disconnect the external circuit breaker and confirm that the wire used is thick enough. Please refer to Section “Wiring Specification and Breaker Type”;
2. Properly connect the AC input wire according to the wire sequence and terminal position shown in the figure below. Please connect the ground wire first, and then the live wire and the neutral wire;



: Ground    L: Live    N: Neutral

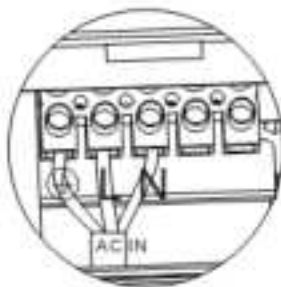

- Properly connect the AC output wire according to the wire sequence and terminal position shown in the figure below. Please connect the ground wire first, and then the live wire and the neutral wire. The ground wire is connected to the grounding screw hole on the cabinet through the O-type terminal.

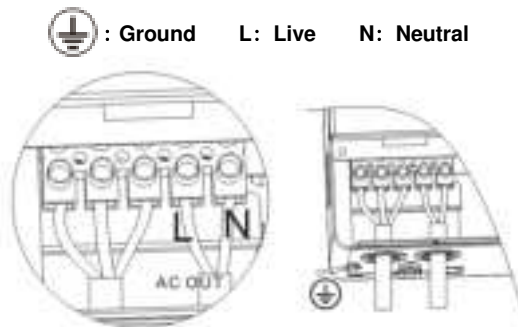


**NOTICE**

- The grounding wire shall be as thick as possible (cross-sectional area is not less than 4mm<sup>2</sup>). The grounding point shall be as close as possible to the all-in-one solar charge inverter. The shorter the grounding wire, the better.

### ■ PV Input Wiring

- Before wiring, disconnect external breaker at first, and confirm whether the used cable is thick enough. Please refer to section “Wiring Specification and Breaker Type”;
- Correctly connect PV input wire in accordance with cable sequence and terminal position shown in the figure below.

**PV+: positive input pole      PV-: negative input pole**

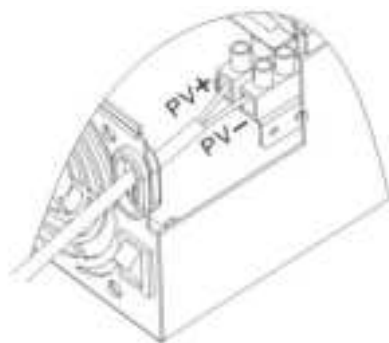

## ■ Battery Wiring

1. Prior to wiring, disconnect the external circuit breaker and confirm that the wire used is thick enough. Please refer to Section "Wiring Specification and Breaker Type". The BAT wire needs to be connected to the machine through the O-type terminal. The O-type terminal with an inner diameter of 5 mm is recommended. The O-type terminal shall firmly press the BAT wire to prevent excessive heat generation caused by excessive contact resistance;
2. Properly connect the BAT wire according to the wire sequence and terminal position shown in the figure below.

**BAT+:** positive battery pole

**BAT-:** negative battery pole




### **WARNING**

- Mains input, AC output and PV array will generate high voltage. So, before wiring, be sure to disconnect the circuit breaker or fuse;
- Be very careful during wiring; do not close the circuit breaker or fuse during wiring, and ensure that the "+" and "-" pole leads of each component are connected properly; a circuit breaker must be installed at the battery terminal. Refer to Section "Wiring Specification and Breaker Type" to select a right circuit breaker. Before wiring, be sure to disconnect the circuit breaker to prevent strong electric sparks and avoid battery short circuit; if the all-in-one solar charge inverter is used in an area with frequent lightning, it is recommended to install an external lightning arrester at the PV input terminal.



## ■ Final Assembly

1. After wiring, inspect whether the wires are correctly and firmly connected, especially whether the positive and negative input poles of the battery are correct, whether the positive and negative input poles of PV are correct, whether AC input is inaccurately connected to AC output terminal.
2. After ensuring that the wiring is reliable and the wire sequence is correct, install the terminal protection cover in place.

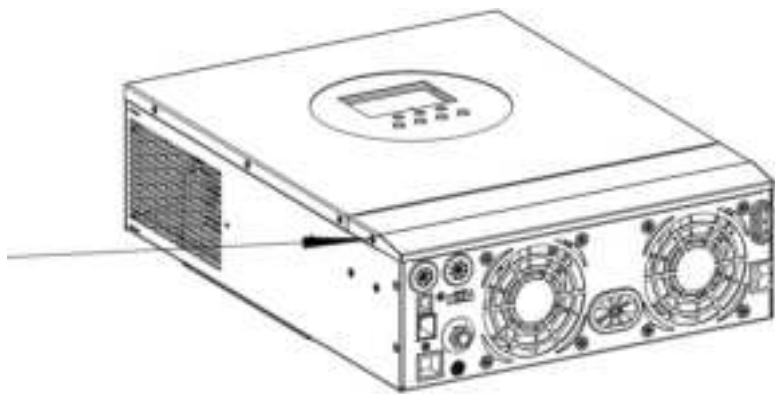

## ■ Start Up the Inverter

1. At first close the breaker at the battery end, and then press the rocker switch at the lower left side of the machine to “ON” state, “AC/INV” indicator light flashes, indicating normal operation of inverter.
2. Afterwards, close breakers of photovoltaic array and mains supply.
3. In the end, after AC output is normal, turn on AC load one by one to avoid protection action generated by great instant impact owing to simultaneous turn on the loads. The inverter operates normally in accordance with set mode.




### **NOTICE**

- If power is supplied to different AC loads, it is recommended to first turn on the load with a large surge current. After the load is stable, turn on the load with a small surge current.
- If the all-in-one solar charge inverter does not work properly or the LCD or indicator is abnormal, refer to section “Troubleshooting” to handle the exceptions.


# Operation Mode

## ■ Charging Mode


1. **PV priority:** PV module will charge the battery preferentially, and the battery is charged by the Mains only when the PV system fails. During the day, solar energy is fully used to charge, while at night, it converts to the Mains. This can maintain battery level, and is ideal for areas where the grid is relatively stable and electricity price is relatively high.

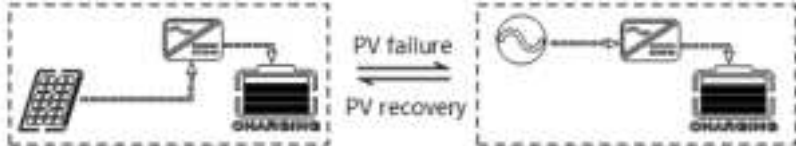


2. **Mains priority:** The Mains supply is preferentially used to charge the battery. Only when the Mains fails, the PV charging can be activated.

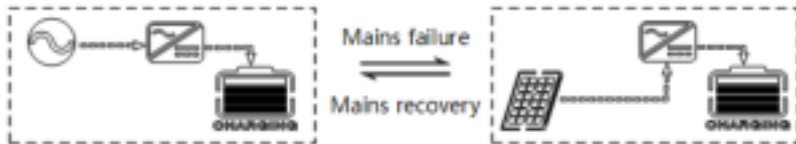

3. **Hybrid charging:** PV and mains hybrid charging. PV MPPT charging is a priority, and when PV energy is insufficient, the mains supply supplements. When the PV energy is sufficient again, the mains stops charging. This is the fastest charging mode, suitable for the areas where power grid is unstable, providing sufficient backup power supply at any time.

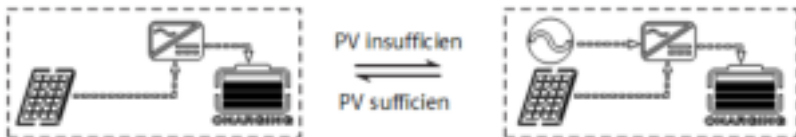


4. **Only Solar (Only Solar):** Only PV charging, without Mains charging. This is the most energy-efficient way in which battery is charged only by solar panels, and is usually used in areas with good lighting conditions.

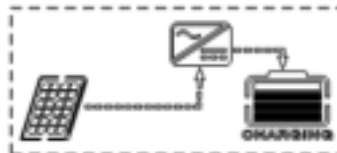

## ■ Output Mode


1. **PV priority mode:** Switch to mains supply when the PV charging fails. This mode maximizes the use of solar energy while maintaining battery power, suitable for use in the areas with relatively stable grid.

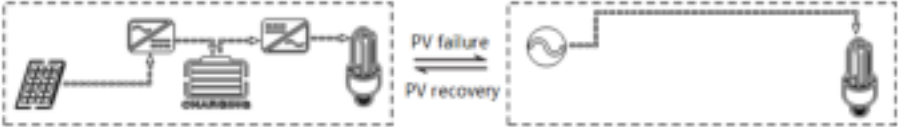


2. **Mains priority mode:** Switch to inverter only when the mains fails (when there was mains power, switch to mains power for charging and power supply). Then, the unit is equivalent to a backup UPS, suitable for areas with unstable grid. Switching does not affect PV charging.



3. **Inverter priority mode:** Switch to mains supply only when the battery discharge undervoltage is lower than the set point (item 04). When the charging battery is higher than the set point of (05 setting item), switch to the battery discharge mode. This can cycle the battery charge and discharge. This mode maximizes the use of DC power and is used in the area with stable grid. Switching does not affect PV charging.

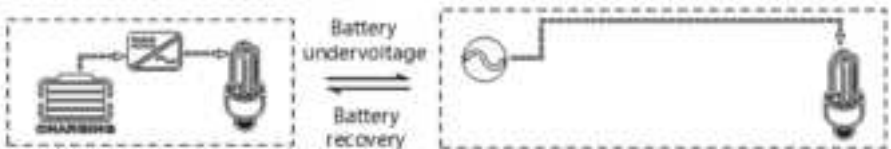


4. **Mixed functions mode:** When the battery is not available or the battery is fully charged, the load is provided by PV and commercial power, PV maximum output power output.

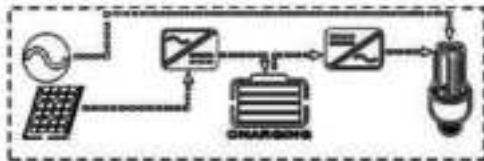

# Operation Instruction

## ■ Operation and Display Panel

The operation and display panel is as shown below, including 1 LCD screen, 3 indicators and 4 operation buttons.

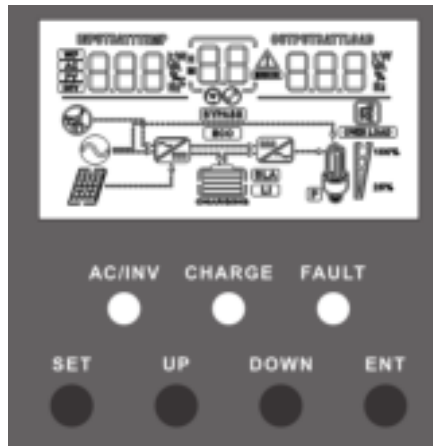


### ● Touchable Keys

| Function buttons | Description                                   |
|------------------|-----------------------------------------------|
| SET              | Enter/Exit Settings menu                      |
| UP               | Previous choice                               |
| DOWN             | Next choice                                   |
| ENT              | Confirm/Enter Options under the settings menu |

### ● LED Indicators

| Indicators | Colors | Description                   |
|------------|--------|-------------------------------|
| AC/INV     | Yellow | Steady on: Mains output       |
|            |        | Flash: Inverter output        |
| CHARGE     | Green  | Flash: Battery charging       |
|            |        | Steady on: Charging completed |
| FAULT      | Red    | Flash: Fault state            |

## ■ Introduction to LCD Screen

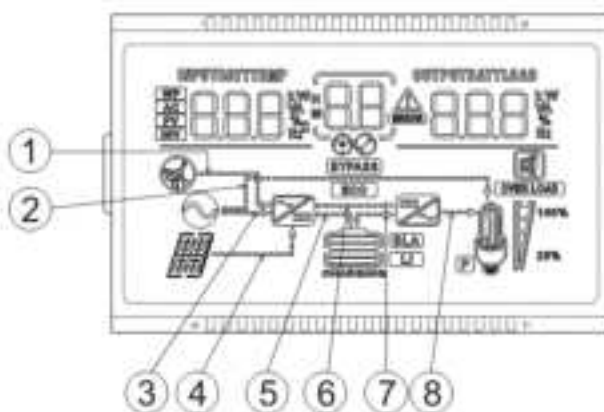

| Icon                                                                                | Function                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       | Icon                                                                                | Function                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|-------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|    | Indicating that AC input end has been connected to power grid                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |    | Indicating that inverter circuit is in working.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|    | Indicates that the AC input mode in APL mode (wide voltage range)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |    | Indicating that the machine is in mains supply bypass work mode                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|    | Indicating that PV input end has been connected to solar battery panel                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |    | Indicating that AC output is in overload state                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|  | Indicating that machine has been connected to battery,<br> indicating 0%~24% battery remaining capacity;<br> indicating 25%~49% battery remaining capacity;<br> indicating 50%~74% battery remaining capacity;<br> indicating 75%~100% battery remaining capacity. |  | Indicating percentage of AC output load,<br> indicating 0%~24% load percentage;<br> indicating 25%~49% load percentage;<br> indicating 50%~74% load percentage;<br> indicating ≥75% load percentage. |

|                                                                                   |                                                                        |                                                                                   |                                                                                                                                                                                                       |
|-----------------------------------------------------------------------------------|------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | Indicating that present battery type of the machine is lithium battery |  | Indicating that buzzer is not enabled                                                                                                                                                                 |
|  | Indicating that current battery type of machine is lead-acid battery   |  | Indicating alarm of machine                                                                                                                                                                           |
|   | Indicating that the battery is in charge state.                        |  | Indicating that the machine is in fault state.                                                                                                                                                        |
|  | Indicating that AC/PV charge circuit is in working                     |  | Indicating that the machine is in setting mode.                                                                                                                                                       |
|  | Indicating that AC output end has AC voltage output                    |  | The parameters displayed in the middle of the screen:<br>1. In the non-setup mode, the alarm or fault code is displayed.<br>2. In the setup mode, the currently set parameter item code is displayed. |

#### Parameter display at left side of screen: Input Parameter

|                                                                                    |                                                                                                                                                                                                       |
|------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|    | Indicating AC input                                                                                                                                                                                   |
|    | Indicating PV input                                                                                                                                                                                   |
|    | Indicating inverter circuit                                                                                                                                                                           |
|    | The icon is not displayed                                                                                                                                                                             |
|  | Displaying battery voltage, total charge current of battery, charge power of mains supply, AC input voltage, AC input frequency, PV input voltage, temperature of internal radiator, software version |

#### Parameter display at right side of screen: Output Parameter

|                                                                                    |                                                                                                                                                                                                                                      |
|------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | Indicating output voltage, output current, output active power, output apparent power, battery discharge current, software version;<br>In setting mode, displaying the setting parameter under the parameter item code set currently |
|------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

#### Arrow display

|   |                                            |   |                                                              |
|---|--------------------------------------------|---|--------------------------------------------------------------|
| ① | The arrow is not displayed                 | ⑤ | Indicates the charging circuit charging the battery terminal |
| ② | Indicating power grid power supply to load | ⑥ | The arrow is not displayed                                   |

|   |                                                      |   |                                                                        |
|---|------------------------------------------------------|---|------------------------------------------------------------------------|
| ③ | Indicating power grid power supply to charge circuit | ⑦ | Indicates the battery terminal supplying power to the inverter circuit |
| ④ | Indicating PV power supply to charge circuit         | ⑧ | Indicating power supply from inverter circuit to load                  |

## ■ Real-time Data Viewing Method

On the LCD main screen, press the “UP” and “DOWN” buttons to scroll through the real-time data of the machine.

| Page | Left Parameter of Screen                                             | Middle Parameter of Screen | Right Parameter of Screen                    |
|------|----------------------------------------------------------------------|----------------------------|----------------------------------------------|
| 1    | INPUT BATT V<br>(Battery input voltage)                              | Fault code                 | OUTPUT LOAD V<br>(Output load voltage)       |
| 2    | PV TEMP °C<br>(PV charger heatsink temperature)                      |                            | PV OUTPUT KW<br>(PV output power)            |
| 3    | PV INPUT V<br>(PV input voltage)                                     |                            | PV OUTPUT A<br>(PV output current)           |
| 4    | INPUT BATT A<br>(Input battery current)                              |                            | OUTPUT BATT A<br>(Battery output current)    |
| 5    | INPUT BATT KW<br>(Battery input power)                               |                            | OUTPUT BATT KW<br>(Battery output power)     |
| 6    | AC INPUT Hz<br>(AC input frequency)                                  |                            | AC OUTPUT LOAD Hz<br>(AC output frequency)   |
| 7    | AC INPUT V<br>(AC input voltage)                                     |                            | AC OUTPUT LOAD A<br>(AC output load current) |
| 8    | INPUT V<br>(For maintain)                                            |                            | OUTPUT LOAD KVA<br>(Load apparent power)     |
| 9    | INV TEMP °C<br>(AC charge or battery discharge heatsink temperature) |                            | INV OUTPUT LOAD KW<br>(Load active power)    |
| 10   | APP software version                                                 |                            | Bootloader software version                  |
| 11   | Model Battery Voltage Rating                                         |                            | Model Output Power Rating                    |
| 12   | Model PV Voltage Rating                                              |                            | Model PV Current Rating                      |

## ■ Setting Parameter

Buttons operation instructions: Press the “SET” button to enter the setup menu and exit the setup menu. After entering the setup menu, the parameter number [00] will flash. At this point, press the “UP” and “DOWN” buttons to select the code of parameter item to be set. Then, press the “ENT” button to enter the parameter editing mode, and the value of the parameter is flashing. Adjust the value of the parameter with the “UP” and “DOWN” buttons. Finally, press the “ENT” button to complete the parameter editing and return to the parameter selection state.

| No. | Description            | Selectable option        |                                                                                                                                                                                                                                                                              |
|-----|------------------------|--------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 00  | Exit setting menu      | [00] ESC                 | Exit the setup menu                                                                                                                                                                                                                                                          |
| 01  | Output source priority | [01] SOL                 | PV priority mode, switching to the Mains when the PV fails or the battery is lower than the set value of parameter [04].                                                                                                                                                     |
|     |                        | [01] UTI <b>default</b>  | Mains priority mode, switching to inverter only when the mains fails.                                                                                                                                                                                                        |
|     |                        | [01] SBU                 | Inverter priority mode, switching to the mains only when the battery is under voltage or lower than the set value of parameter [04].                                                                                                                                         |
| 02  | Output Frequency       | [02] 50.0                | Bypass self-adaptation; when the mains is connected, it automatically adapts to the mains frequency; when the mains is disconnected, the output frequency can be set through this menu. The default output frequency of the 230V machine is 50Hz, and the 120V machine 60Hz. |
|     |                        | [02] 60.0 <b>default</b> |                                                                                                                                                                                                                                                                              |
| 03  | AC Input Voltage Range | [03] APL                 | Mains input voltage range of 120V machine: 90~140V                                                                                                                                                                                                                           |
|     |                        | [03] UPS <b>default</b>  | Mains input voltage range of 120V machine: 90~140V                                                                                                                                                                                                                           |



| No. | Description                       | Selectable option         |                                                                                                                                                                                                                                                                                                                                                                                           |
|-----|-----------------------------------|---------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 04  | Battery Power to Utility Setpoint | [04] 21.8V <b>default</b> | When the parameter [01] =SOL/SBU, the battery voltage is lower than the set value, and the output is switched from the inverter to the mains. Setting range: 20V~26V. Cannot exceed the value of [14] settings.                                                                                                                                                                           |
| 05  | Utility to Battery Power Setpoint | [05]28.8V <b>default</b>  | When the parameter [01] =SOL/SBU, the battery voltage is higher than the set value, and the output is switched from the mains to the inverter. Setting range: 24V~30V. Cannot be lower than the value of [04] / [35] settings.                                                                                                                                                            |
| 06  | Charger source priority           | [06] CSO                  | PV priority charging; only when the PV charging fails, the mains charging is started.                                                                                                                                                                                                                                                                                                     |
|     |                                   | [06] CUB                  | Mains priority charging; only when the mains charging fails, the PV charging is started.                                                                                                                                                                                                                                                                                                  |
|     |                                   | [06] SNU <b>default</b>   | PV and Mains hybrid charging; PV charging is a priority, and when the PV energy is insufficient, the Mains charging supplements. When the PV energy is sufficient, the Mains charging stops.<br><b>Note:</b> Only when the Mains bypass output is loaded, the PV charging and the mains charging can work at the same time. When the inverter works, only the PV charging can be started. |
|     |                                   | [06] OSO                  | Only PV charging, with the Mains                                                                                                                                                                                                                                                                                                                                                          |

| No. | Description                  | Selectable option         |                                                                                                                                                                                                                                                                                                                                                            |
|-----|------------------------------|---------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|     |                              |                           | charging not activated.                                                                                                                                                                                                                                                                                                                                    |
| 07  | Max charger current          | [07] 60A <b>default</b>   | Max charger current (AC charger + PV charger). Setting range: 0~80A;                                                                                                                                                                                                                                                                                       |
| 08  | Battery Type                 | [08] USE                  | User-defined; all battery parameters can be set.                                                                                                                                                                                                                                                                                                           |
|     |                              | [08] SLd                  | Sealed lead-acid battery; constant-voltage charge voltage: 28.8V, floating charge voltage: 27.6V.                                                                                                                                                                                                                                                          |
|     |                              | [08] FLd                  | Vented lead-acid battery; constant-voltage charge voltage: 29.2V, floating charge voltage: 27.6V.                                                                                                                                                                                                                                                          |
|     |                              | [08] GEL <b>default</b>   | Colloidal lead-acid battery; constant-voltage charge voltage: 28.4V, floating charge voltage: 27.6V.                                                                                                                                                                                                                                                       |
|     |                              | [08] LF07/LF08/LF09       | Lithium iron phosphate battery LF07/LF08/LF09, corresponding to 7 strings ,8 strings and 9 strings of lithium iron phosphate battery; for 7 strings, default constant-voltage charge voltage is 24.8V; for 8 strings, default constant-voltage charge voltage is 28.4V; for 9 strings, default constant-voltage charge voltage is 31.8V; allow adjustable. |
|     |                              | [08] NCA                  | Ternary lithium battery; the default constant-voltage charge voltage is 28.4V, which is adjustable.                                                                                                                                                                                                                                                        |
| 09  | Battery boost charge voltage | [09] 28.8V <b>default</b> | Boost charge voltage setting; the setting range is 24V~31.6V, with step of 0.2V; it is valid for user-defined                                                                                                                                                                                                                                              |

| No. | Description                                | Selectable option         |                                                                                                                                                                                                                                                                                         |
|-----|--------------------------------------------|---------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|     |                                            |                           | battery and lithium battery.                                                                                                                                                                                                                                                            |
| 10  | Battery boost charge time                  | [10] 120 <b>default</b>   | Boost charge maximum time setting, which means the maximum charging time to reach the set voltage of parameter [09] during constant-voltage charging. The setting range is 5min~900min, with a step of 5 minutes. It is valid for user-defined battery and lithium battery.             |
| 11  | Battery floating charge voltage            | [11] 27.6V <b>default</b> | Floating charge voltage, setting range: 24V~31.6V, step: 0.2V, valid when battery type is user-defined.                                                                                                                                                                                 |
| 12  | Battery over discharge voltage (delay off) | [12] 21V <b>default</b>   | Over-discharge voltage: when the battery voltage is lower than this judgment point, delay the time set by parameter [13] and turn off inverter output. Setting range is 20V~28V, with a step of 0.2V. It is valid for user-defined battery and lithium battery.                         |
| 13  | Battery over discharge delay time          | [13] 5S <b>default</b>    | Over-discharge delay time: when the battery voltage is lower than the parameter [12], the inverter output will be turned off after the time set by this parameter is delayed. The setting range is 5s~50s, with a step of 5s. It is valid for user-defined battery and lithium battery. |
| 14  | Battery under voltage alarm                | [14] 22V <b>default</b>   | Battery undervoltage alarm point: when the battery voltage is lower than the point, an undervoltage alarm is                                                                                                                                                                            |

| No. | Description                     | Selectable option         |                                                                                                                                                                                                                                         |
|-----|---------------------------------|---------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|     |                                 |                           | given, and the output is not turned off; the setting range is 20V~28V, with a step of 0.2V. It is valid for user-defined battery and lithium battery.                                                                                   |
| 15  | Battery discharge limit voltage | [15] 20V <b>default</b>   | Battery discharge limit voltage: When the battery voltage is lower than the point, the output is turned off immediately; the setting range is 20V~27.2V, with a step of 0.2V. It is valid for user-defined battery and lithium battery. |
| 16  | Battery equalization enable     | [16] DIS                  | Equalizing charge is disabled                                                                                                                                                                                                           |
|     |                                 | [16] ENA <b>default</b>   | Equalizing charge is enabled, only valid for vented lead-acid battery and sealed lead-acid battery                                                                                                                                      |
| 17  | Battery equalization voltage    | [17] 29.2V <b>default</b> | Equalizing charge voltage: Setting range: 24V~31.6V, with a step of 0.2V; valid for vented lead-acid battery and sealed lead-acid battery                                                                                               |
| 18  | Battery equalized time          | [18] 120 <b>default</b>   | Equalizing charge time: Setting range: 5min~900min, with a step of 5 minutes; valid for vented lead-acid battery and sealed lead-acid battery                                                                                           |
| 19  | Battery equalized time out      | [19] 120 <b>default</b>   | Equalizing charge delay: Setting range: 5min~900min, with a step of 5 minutes; valid for vented lead-acid battery and sealed lead-acid battery                                                                                          |
| 20  | Battery equalization interval   | [20] 30 <b>default</b>    | Equalizing charge derating time, 0~30days, with a step of 1 day; valid for vented lead-acid battery and                                                                                                                                 |

| No. | Description                      | Selectable option       |                                                                                                                                                                                                                             |
|-----|----------------------------------|-------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|     |                                  |                         | sealed lead-acid battery                                                                                                                                                                                                    |
| 21  | Battery equalization immediately | [21] DIS                | Stop equalizing charge immediately.                                                                                                                                                                                         |
|     |                                  | [21] ENA <b>default</b> | Start equalizing charge immediately.                                                                                                                                                                                        |
| 22  | Power saving mode                | [22] DIS <b>default</b> | Power saving mode disabled.                                                                                                                                                                                                 |
|     |                                  | [22] ENA                | After the power saving mode is enabled, if the load is null or less than 50W, the inverter output is turned off after a delay for a certain period of time. When the load is more than 50W, the inverter automatic restart. |
| 23  | Restart when over load           | [23] DIS                | Automatic restart when overload is disabled. If an overload occurs and the output is turned off, the machine will not restart.                                                                                              |
|     |                                  | [23] ENA <b>default</b> | Automatic restart when overload is enabled. If an overload occurs and the output is turned off, the machine will restart after a delay of 3 minutes. After it reaches 5 cumulative times, the machine will not restart.     |
| 24  | Restart when over temperature    | [24] DIS                | Automatic restart when over temperature is disabled. If an over-temperature shutdown occurs, machine will not restart to turn the output on.                                                                                |
|     |                                  | [24] ENA <b>default</b> | Automatic restart when over temperature is enabled. If an over-temperature shutdown occurs, the machine will restart when the temperature drops.                                                                            |

| No. | Description                               | Selectable option                                                                                                                                                      |                                                                                      |
|-----|-------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------|
| 25  | Alarm enable                              | [25] DIS                                                                                                                                                               | Alarm is disabled                                                                    |
|     |                                           | [25] ENA <b>default</b>                                                                                                                                                | Alarm is enabled                                                                     |
| 26  | Beeps while primary source is interrupted | [26] DIS                                                                                                                                                               | Alarm beep is disabled when the status of the main input source changes              |
|     |                                           | [26] ENA <b>default</b>                                                                                                                                                | Alarm beep is enabled when the status of the main input source changes               |
| 27  | Bypass output when over load              | [27] DIS                                                                                                                                                               | It is disabled to automatically switch to the Mains when the inverter is overloaded. |
|     |                                           | [27] ENA <b>default</b>                                                                                                                                                | It is enabled to automatically switch to the Mains when the inverter is overloaded.  |
| 28  | Max AC charger current                    | [28] 40A <b>default</b>                                                                                                                                                | Max AC charger current. Setting range: 0~40A.                                        |
| 30  | RS485 Address                             | [30] 1 <b>default</b>                                                                                                                                                  | Setting range: 1~255                                                                 |
| 32  | BMS communication function                | [32] DIS <b>default</b>                                                                                                                                                | No communication with BMS                                                            |
|     |                                           | [32] 485                                                                                                                                                               | Communicate with the battery via the BMS RS485 interface.                            |
|     |                                           | [32] CAN                                                                                                                                                               | Communicate with the battery via the BMS CAN interface.                              |
| 33  | Battery BMS communication protocol        | When the parameter [32] setting item =BMS, you can choose to match the battery manufacturer's BMS protocol to communicate with BMS for the lithium battery protection. |                                                                                      |
|     |                                           | PAC=PACE, RDA=Ritar, AOG=ALLGRAND BATTERY, OLT=OLITER, HWD=SUNWODA, DAQ=DAKING, WOW=SRNE, PYL=PYLONTECH, UOL=WEILAN                                                    |                                                                                      |

| No. | Description                                                     | Selectable option          |                                                                                                                                                                                                                                                                                                                                                            |
|-----|-----------------------------------------------------------------|----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 34  | Hybrid output function                                          | [34] DIS <b>default</b>    | Disable this function.                                                                                                                                                                                                                                                                                                                                     |
|     |                                                                 | [34] Lod                   | Hybrid output function, in UTI mode, the PV first only charges for battery, the left energy will power on the load, but not feed back to the grid.                                                                                                                                                                                                         |
| 35  | Battery undervoltage recovery point                             | [35] 26V <b>default</b>    | When the battery voltage is under voltage, the battery voltage needs to recover more than this set value before the inverter starts the output                                                                                                                                                                                                             |
| 36  | Max. PV charging current                                        | [36] 80A <b>default</b>    | Solar Max. Charging Current Setting: 0~80A                                                                                                                                                                                                                                                                                                                 |
| 37  | Battery fully charged recovery point                            | [37] 26V <b>default</b>    | After the battery is fully charged, it needs to be lower than this set voltage before it can be recharged                                                                                                                                                                                                                                                  |
| 38  | AC output voltage setting (only can be set in the standby mode) | [38] 120Vac <b>default</b> | Allow to set to 100Vac/ 105Vac/ 110Vac/ 120Vac. The rated output power will be reduced = (Power Rate)*(Vset/120)                                                                                                                                                                                                                                           |
| 40  | Select upgrade target                                           | [40] NUL <b>default</b>    | <p><b>Note:</b> Insert the U disk before setting, and make sure there is an upgrade file in the U disk, as well as the upgrade file into the root directory; otherwise, you need to power off and restart the inverter, and operate again according to the above steps.</p> <p>NUL: No action; STN :Communication board upgrade; DSP: Inverter upgrade</p> |
| 57  | Stop charging current                                           | [57] 2A <b>default</b>     | Charging stops when the default charging current is less than this setting                                                                                                                                                                                                                                                                                 |

| No. | Description                            | Selectable option        |                                                                                                                                  |
|-----|----------------------------------------|--------------------------|----------------------------------------------------------------------------------------------------------------------------------|
| 58  | Discharge alarm SOC setting            | [58] 15% <b>default</b>  | SOC alarm when capacity is less than this set value (valid when BMS communication is normal)                                     |
| 59  | Cut-off discharge SOC Settings         | [59] 5% <b>default</b>   | Stops discharging when the capacity is less than this setting (valid when BMS communication is normal)                           |
| 60  | Cut-off charge SOC Settings            | [60] 100% <b>default</b> | Stops charging when capacity is greater than or equal to this setting (valid when BMS communication is normal)                   |
| 61  | Switch to mains SOC Settings           | [61] 10% <b>default</b>  | Switch to mains when capacity is less than this setting (valid when BMS communication is normal)                                 |
| 62  | Switch to inverter output SOC Settings | [62] 100% <b>default</b> | Switches to inverter output mode when capacity is greater than or equal to this setting (valid when BMS communication is normal) |



## ■ Battery Type Parameters

For Lead-acid Battery:

| Battery type<br>Parameters                                                  | Sealed lead acid battery (SLD)  | Colloidal lead acid battery (GEL) | Vented lead acid battery (FLD) | User-defined (User)        |
|-----------------------------------------------------------------------------|---------------------------------|-----------------------------------|--------------------------------|----------------------------|
| Overvoltage disconnection voltage                                           | 30.0V                           | 30.0V                             | 31.0V                          | 24~31.6V                   |
| Battery fully charged recovery point (setup item 37)                        | 26V<br>(Adjustable)             | 26V<br>(Adjustable)               | 26V<br>(Adjustable)            | 26V<br>(Adjustable)        |
| Equalizing charge voltage                                                   | 29.2V                           | -                                 | 29.6V                          | 24~31.6V<br>(Adjustable)   |
| Boost charge voltage                                                        | 28.8V                           | 28.4V                             | 29.2V                          | 24~31.6V<br>(Adjustable)   |
| Floating charge voltage                                                     | 27.6                            | 27.6V                             | 27.6V                          | 24~31.6V<br>(Adjustable)   |
| Undervoltage alarm voltage (01 fault)                                       | 22V                             | 22V                               | 22V                            | 20~28V<br>(Adjustable)     |
| Undervoltage alarm voltage recovery point (01 fault)                        | Undervoltage alarm voltage+0.4V |                                   |                                |                            |
| Low voltage disconnection voltage (04 fault)                                | 21.0V                           | 21.0V                             | 21.0V                          | 20~28V<br>(Adjustable)     |
| Low voltage disconnection voltage recovery point (04 fault) (setup item 35) | 26V<br>(Adjustable)             | 26V<br>(Adjustable)               | 26V<br>(Adjustable)            | 26V<br>(Adjustable)        |
| Discharge limit voltage                                                     | 20.0V                           | 20.0V                             | 20.0V                          | 20~27.2V<br>(Adjustable)   |
| Over-discharge delay time                                                   | 5s                              | 5s                                | 5s                             | 5~50s<br>(Adjustable)      |
| Equalizing charge duration                                                  | 120 mins                        | -                                 | 120 mins                       | 5~900 mins<br>(Adjustable) |
| Equalizing charge interval                                                  | 30 days                         | -                                 | 30 days                        | 0~30 days<br>(Adjustable)  |
| Boost charge duration                                                       | 120 mins                        | 120 mins                          | 120 mins                       | 5~900 mins<br>(Adjustable) |

**For Lithium Battery :**


| <div> <div>Battery Type</div> <div>Parameters</div> </div>                  | Ternary lithium battery (N07)   | Ternary lithium battery (N08) | Lithium iron phosphate battery (LF07) | Lithium iron phosphate battery (LF08) | Lithium iron phosphate battery (LF09) |
|-----------------------------------------------------------------------------|---------------------------------|-------------------------------|---------------------------------------|---------------------------------------|---------------------------------------|
| Overvoltage disconnection voltage                                           | 31.6V                           | 33V                           | 30V                                   | 30V                                   | 33V                                   |
| Battery fully charged recovery point (setup item 37)                        | 27.4V<br>(Adjustable)           | 30.4V<br>(Adjustable)         | 23.2V<br>(Adjustable)                 | 26.8V<br>(Adjustable)                 | 29.8V<br>(Adjustable)                 |
| Equalizing charge voltage                                                   | 28.8V<br>(Adjustable)           | 31.6V<br>(Adjustable)         | 24.6V<br>(Adjustable)                 | 28.4V<br>(Adjustable)                 | 31.6V<br>(Adjustable)                 |
| Boost charge voltage                                                        | 28.8V<br>(Adjustable)           | 31.6V<br>(Adjustable)         | 24.6V<br>(Adjustable)                 | 28.4V<br>(Adjustable)                 | 31.6V<br>(Adjustable)                 |
| Floating charge voltage                                                     | 28.8V<br>(Adjustable)           | 31.6V<br>(Adjustable)         | 24.6V<br>(Adjustable)                 | 28.4V<br>(Adjustable)                 | 31.6V<br>(Adjustable)                 |
| Undervoltage alarm voltage (01 fault)                                       | 23.4V<br>(Adjustable)           | 26.8V<br>(Adjustable)         | 21.6V<br>(Adjustable)                 | 24.8V<br>(Adjustable)                 | 27.8V<br>(Adjustable)                 |
| Undervoltage alarm voltage recovery point (01 fault)                        | Undervoltage alarm voltage+0.4V |                               |                                       |                                       |                                       |
| Low voltage disconnection voltage (04 fault)                                | 21.0V<br>(Adjustable)           | 24.0V<br>(Adjustable)         | 21.0V<br>(Adjustable)                 | 24.4V<br>(Adjustable)                 | 27.0V<br>(Adjustable)                 |
| Low voltage disconnection voltage recovery point (04 fault) (setup item 35) | 26V<br>(Adjustable)             | 29.6V<br>(Adjustable)         | 23.8V<br>(Adjustable)                 | 27.2V<br>(Adjustable)                 | 30.6V<br>(Adjustable)                 |
| Discharge limit voltage                                                     | 19.6V                           | 22.4V                         | 20.4V                                 | 23.2V                                 | 26.2V                                 |
| Over-discharge delay time                                                   | 30s<br>(Adjustable)             | 30s<br>(Adjustable)           | 30s<br>(Adjustable)                   | 30s<br>(Adjustable)                   | 30s<br>(Adjustable)                   |
| Equalizing charge duration                                                  | -                               | -                             | -                                     | -                                     | -                                     |
| Equalizing charge interval                                                  | -                               | -                             | -                                     | -                                     | -                                     |
| Boost charge duration                                                       | 120 mins                        | 120 mins                      | 120 mins                              | 120 mins                              | 120 mins                              |

## Other Function

### ■ Dry Node

Working principle: This dry node can control the ON/OFF of the diesel generator to charge the battery.


- ① Normally, the terminals are that the NC-N point is closed and the NO-N point is open;
- ② When the battery voltage reaches the low voltage disconnection point, the relay coil is energized, and the terminals turn to that the NO-N point is closed while NC-N point is open. At this point, NO-N point can drive resistive loads: 125VAC/1A, 230VAC/1A, 30VDC/1A.

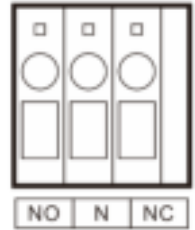

### ■ RS485 Communication Port

**This port is an RS485 communication port which comes with two functions:**

- ① It allows direct communication with the optional host computer developed by our company through this port, and enables monitoring of the equipment running status and setting of some parameters on the computer;
- ② It also allows direct connection with the optional RS485 to WiFi/GPRS communication module developed by our company through this port. After the module is selected, you can connect the all-in-one solar charge inverter through the mobile phone WiFi/GPRS APP, on which you can view the operating parameters and status of the device.

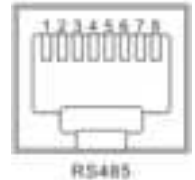

**As shown in the figure:**


Pin 1 is 5V power supply, Pin 2 is GND, Pin 5 is RS485-A2, Pin 6 is B2, Pin 7 is RS485-A1, and Pin 8 is RS485-B1.

### ■ CAN Communication Function

Function of connecting lithium battery communication.

**As shown in the figure:**

Pin 1 is CAN-L, and Pin 2 is CAN-H.



### ■ USB communication port

This is a USB communication port, which can be used for USB communication with the optional PC host software. To use this port, you should install the corresponding "USB to serial chip CH340T driver" and APP in the computer.



# Protection

## ■ Protections Provided

| No. | Protections                           | Description                                                                                                                                                                                               |
|-----|---------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1   | PV current/power limiting protection  | When charging current or power of the PV array configured exceeds the PV rated, it will charge at the rated.                                                                                              |
| 2   | PV night reverse-current protection   | At night, the battery is prevented from discharging through the PV module because the battery voltage is greater than the voltage of PV module.                                                           |
| 3   | Mains input over voltage protection   | When the mains voltage exceeds 140V (120V model), the mains charging will be stopped and switched to the inverter mode.                                                                                   |
| 4   | Mains input under voltage protection  | When the mains voltage is lower than 90V (120V model or APL mode), the mains charging will be stopped and switched to the inverter mode.                                                                  |
| 5   | Battery over voltage protection       | When the battery voltage reaches the overvoltage disconnection point, the PV and the mains will be automatically stopped to charge the battery to prevent the battery from being overcharged and damaged. |
| 6   | Battery low voltage protection        | When the battery voltage reaches the low voltage disconnection point, the battery discharging will be automatically stopped to prevent the battery from being over-discharged and damaged.                |
| 7   | Load output short circuit protection  | When a short-circuit fault occurs at the load output terminal, the AC output is immediately turned off and turned on again after 1 second.                                                                |
| 8   | Heat sink over temperature protection | When the internal temperature is too high, the all-in-one machine will stop charging and discharging; when the temperature returns to normal, charging and discharging will resume.                       |

|    |                                       |                                                                                                                                                                                                                                                                     |
|----|---------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 9  | Overload protection                   | Output again 3 minutes after an overload protection, and turn the output off after 5 consecutive times of overload protection until the machine is re-powered. For the specific overload level and duration, refer to the technical parameters table in the manual. |
| 10 | PV reverse polarity protection        | When the PV polarity is reversed, the machine will not be damaged.                                                                                                                                                                                                  |
| 11 | AC reverse protection                 | Prevent battery inverter AC current from being reversely input to Bypass.                                                                                                                                                                                           |
| 12 | Bypass over current protection        | Built-in AC input overcurrent protection circuit breaker.                                                                                                                                                                                                           |
| 13 | Battery input over current protection | When the discharge output current of the battery is greater than the maximum value and lasts for 1 minute, the AC input would switch to load.                                                                                                                       |
| 14 | Battery input protection              | When the battery is reversely connected or the inverter is short-circuited, the battery input fuse in the inverter will blow out to prevent the battery from being damaged or causing a fire.                                                                       |
| 15 | Charge short protection               | When the external battery port is short-circuited in the PV or AC charging state, the inverter will protect and stop the output current.                                                                                                                            |

## ■ Fault Code Meaning

| Fault Code | Fault Name       | Affecting Output or Not | Description                                                       |
|------------|------------------|-------------------------|-------------------------------------------------------------------|
| 【01】       | BatVoltLow       | Yes                     | Battery undervoltage alarm                                        |
| 【02】       | BatOverCurrSw    | Yes                     | Battery discharge average current overcurrent software protection |
| 【03】       | BatOpen          | Yes                     | Battery not-connected alarm                                       |
| 【04】       | BatLowEod        | Yes                     | Battery undervoltage stop discharge alarm                         |
| 【05】       | BatOverCurrHw    | Yes                     | Battery overcurrent hardware protection                           |
| 【06】       | BatOverVolt      | Yes                     | Charging overvoltage protection                                   |
| 【07】       | BusOverVoltHw    | Yes                     | Bus overvoltage hardware protection                               |
| 【08】       | BusOverVoltSw    | Yes                     | Bus overvoltage software protection                               |
| 【09】       | PvVoltHigh       | No                      | PV overvoltage protection                                         |
| 【10】       | PvBuckOCSw       | No                      | Buck overcurrent software protection                              |
| 【11】       | PvBuckOCHw       | No                      | Buck overcurrent hardware protection                              |
| 【12】       | bLineLoss        | No                      | Mains power down                                                  |
| 【13】       | OverloadBypass   | Yes                     | Bypass overload protection                                        |
| 【14】       | OverloadInverter | Yes                     | Inverter overload protection                                      |
| 【15】       | AcOverCurrHw     | Yes                     | Inverter overcurrent hardware protection                          |
| 【17】       | InvShort         | Yes                     | Inverter short circuit protection                                 |
| 【19】       | OverTemperMppt   | No                      | Buck heat sink over temperature protection                        |
| 【20】       | OverTemperInv    | Yes                     | Inverter heat sink over temperature protection                    |
| 【21】       | FanFail          | Yes                     | Fan failure                                                       |
| 【22】       | EEPROM           | Yes                     | Memory failure                                                    |
| 【23】       | ModelNumErr      | Yes                     | Model setting error                                               |
| 【26】       | RlyShort         | Yes                     | Inverted AC Output Backfills to Bypass AC Input                   |

|             |                                    |     |                                                                                                                                                 |
|-------------|------------------------------------|-----|-------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>【29】</b> | BusLow                             | Yes | Internal battery boost circuit failure                                                                                                          |
| <b>【32】</b> | BatCapacityLowStop                 | Yes | Inverter stops when battery capacity is low (setting BMS to enable validity)                                                                    |
| <b>【34】</b> | CanCommFault                       | Yes | CAN communication fault in parallel operation                                                                                                   |
| <b>【58】</b> | BMS communication error            | NO  | Check whether the communication line is connected correctly and whether [33] is set to the corresponding lithium battery communication protocol |
| <b>【59】</b> | BMS alarm                          | NO  | Check the BMS fault type and troubleshoot battery problems                                                                                      |
| <b>【60】</b> | BMS battery low temperature alarm  | NO  | BMS alarm battery low temperature                                                                                                               |
| <b>【61】</b> | BMS battery over temperature alarm | NO  | BMS alarm battery over temperature                                                                                                              |
| <b>【62】</b> | BMS battery over current alarm     | NO  | BMS alarm battery over current                                                                                                                  |
| <b>【63】</b> | BMS low battery alarm              | NO  | BMS alarm low battery                                                                                                                           |
| <b>【64】</b> | BMS battery over voltage alarm     | NO  | BMS alarm battery over voltage                                                                                                                  |

## ■ Troubleshooting

| Fault code   | Faults                                                   | Handling measures                                                                                                                                                                                                                                                     |
|--------------|----------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Display      | No display on the screen                                 | Check if the battery air switch or the PV air switch has been closed; if the switch is in the "ON" state; press any button on the screen to exit the screen sleep mode.                                                                                               |
| 【06】         | Battery overvoltage protection                           | Measure if the battery voltage exceeds rated, and turn off the PV array air switch and Mains air switch.                                                                                                                                                              |
| 【01】<br>【04】 | Battery undervoltage protection                          | Charge the battery until it returns to the low voltage disconnection recovery voltage.                                                                                                                                                                                |
| 【21】         | Fan failure                                              | Check if the fan is not turning or blocked by foreign object.                                                                                                                                                                                                         |
| 【19】<br>【20】 | Heat sink over temperature protection                    | When the temperature of the device is cooled below the recovery temperature, normal charge and discharge control is resumed.                                                                                                                                          |
| 【13】<br>【14】 | Bypass overload protection, inverter overload protection | ① Reduce the use of power equipment;<br>② Restart the unit to resume load output.                                                                                                                                                                                     |
| 【17】         | Inverter short circuit protection                        | ① Check the load connection carefully and clear the short-circuit fault points;<br>② Re-power up to resume load output.                                                                                                                                               |
| 【09】         | PV overvoltage                                           | Use a multimeter to check if the PV input voltage exceeds the maximum allowable input voltage rated.                                                                                                                                                                  |
| 【03】         | Battery missed alarm                                     | Check if the battery is not connected or if the battery circuit breaker is not closed.                                                                                                                                                                                |
| 【26】         | Inverted AC Output Backfills to Bypass AC Input          | Disconnect the AC input, PV input and battery input. After the screen is off, only connect the battery and start up. If fault 26 is reported, it indicates that the AC input relay switch is short-circuited, and you need to contact the manufacturer to replace it. |



# System Maintenance

➤ **In order to maintain the best long-term performance, it is recommended to conduct following checks twice a year.**

1. Make sure that the airflow around the unit is not blocked and remove any dirt or debris from the heat sink.
2. Check that all exposed wires are damaged by exposure to sunlight, friction with other objects around them, dryness, bite by insects or rodents, etc., and the wires shall be repaired or replaced if necessary.
3. Verify for the consistency of indication and display with the operation of the device. Please pay attention to the display of any faults or errors, and take corrective actions if necessary.
4. Check all wiring terminals for corrosion, insulation damage, signs of high temperature or burning/discoloration, and tighten the screws.
5. Check for dirt, nesting insects and corrosion, and clean up as required.
6. If the arrester has failed, replace in time to prevent lightning damage to the unit or even other equipment of the user.

## **WARNING**

- Danger of electric shock! When doing the above operations, make sure that all power supplies of the all-in-one machine have been disconnected, and all capacitors have been discharged, and then check or operate accordingly!

➤ The company does not assume any liability for damage caused by:

- ① Improper use or use in improper site.
- ② Open circuit voltage of the PV module exceeds the maximum allowable voltage rated.
- ③ Temperature in the operating environment exceeds the limited operating temperature range.
- ④ Disassemble and repair the all-in-one solar charge inverter without permission.
- ⑤ Force majeure: Damage that occurs in transportation or handling of the all-in-one solar charge inverter.

# Technical Parameter

| Models                                   | POW-LVM3K-24V-H                                                                                                                                                                                                                                                      |
|------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>AC mode</b>                           |                                                                                                                                                                                                                                                                      |
| Rated input voltage                      | 110/120Vac                                                                                                                                                                                                                                                           |
| Input voltage range                      | (90Vac-140Vac) $\pm 2\%$                                                                                                                                                                                                                                             |
| Frequency                                | 50Hz/ 60Hz (Auto detection)                                                                                                                                                                                                                                          |
| Frequency Range                          | 47 $\pm 0.3$ Hz ~ 55 $\pm 0.3$ Hz (50Hz);<br>57 $\pm 0.3$ Hz ~ 65 $\pm 0.3$ Hz (60Hz);                                                                                                                                                                               |
| Overload/short circuit protection        | Circuit breaker                                                                                                                                                                                                                                                      |
| Efficiency                               | >95%                                                                                                                                                                                                                                                                 |
| Conversion time<br>(bypass and inverter) | 10ms (typical)                                                                                                                                                                                                                                                       |
| AC reverse protection                    | Available                                                                                                                                                                                                                                                            |
| Maximum bypass overload current          | 40A                                                                                                                                                                                                                                                                  |
| <b>Inverter mode</b>                     |                                                                                                                                                                                                                                                                      |
| Output voltage waveform                  | Pure sine wave                                                                                                                                                                                                                                                       |
| Rated output power (VA)                  | 3000                                                                                                                                                                                                                                                                 |
| Rated output power (W)                   | 3000                                                                                                                                                                                                                                                                 |
| Power factor                             | 1                                                                                                                                                                                                                                                                    |
| Rated output voltage (Vac)               | 120Vac                                                                                                                                                                                                                                                               |
| Output voltage error                     | $\pm 5\%$                                                                                                                                                                                                                                                            |
| Output frequency range (Hz)              | 50Hz $\pm 0.3$ Hz; 60Hz $\pm 0.3$ Hz                                                                                                                                                                                                                                 |
| Maximum Efficiency                       | >92%                                                                                                                                                                                                                                                                 |
| Overload protection                      | (102% < load < 110%) $\pm 10\%$ : report error and turn off the output after 5 minutes;<br>(110% < load < 125%) $\pm 10\%$ : report error and turn off the output after 10 seconds;<br>Load >125% $\pm 10\%$ : report error and turn off the output after 5 seconds; |

|                                                                                     |                                                                                                           |
|-------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------|
| Peak power                                                                          | 6000VA                                                                                                    |
| Loaded motor capability                                                             | 2HP                                                                                                       |
| Rated battery input voltage                                                         | 24V (Minimum starting voltage 22V)                                                                        |
| Battery voltage range                                                               | Undervoltage alarm/ shutdown voltage/ overvoltage alarm / overvoltage recovery... settable on LCD screen) |
| Power saving mode                                                                   | Load $\leq$ 50W                                                                                           |
| <b>AC charging</b>                                                                  |                                                                                                           |
| Battery type                                                                        | Lead acid or lithium battery                                                                              |
| Maximum charge current<br>(can be set)                                              | 0-40A                                                                                                     |
| Charge current error                                                                | $\pm 5\text{A}_{dc}$                                                                                      |
| Charge voltage range                                                                | 20 – 33Vdc                                                                                                |
| Short circuit protection                                                            | Circuit breaker and blown fuse                                                                            |
| Circuit breaker specifications                                                      | 40A                                                                                                       |
| Overcharge protection                                                               | Alarm and turn off charging after 1 minute                                                                |
| <b>PV charging</b>                                                                  |                                                                                                           |
| Maximum PV open circuit voltage                                                     | 450Vdc                                                                                                    |
| PV operating voltage range                                                          | 120~450Vdc                                                                                                |
| MPPT voltage range                                                                  | 120~400Vdc                                                                                                |
| Battery voltage range                                                               | 20~33Vdc                                                                                                  |
| Maximum input power                                                                 | 4000W                                                                                                     |
| PV charging current range<br>(can be set)                                           | 0~80A                                                                                                     |
| Charging short circuit protection                                                   | Blown fuse                                                                                                |
| Wiring protection                                                                   | Reverse polarity protection                                                                               |
| <b>Hybrid charging Max charger current specifications (AC charger + PV charger)</b> |                                                                                                           |
| Max charger current (can be set)                                                    | 0~80A                                                                                                     |

| Certified specifications    |                                           |
|-----------------------------|-------------------------------------------|
| Certification               | CE(IEC 62109-1)/FCC/SAA                   |
| EMC certification level     | EN61000, C2                               |
| Operating temperature range | -10°C ~ 55°C                              |
| Storage temperature range   | -25°C ~ 60°C                              |
| Humidity range              | 5% to 95% (Conformal coating protection)  |
| Noise                       | ≤60dB                                     |
| Heat dissipation            | Forced air cooling, variable speed of fan |
| Communication interface     | USB/CAN/RS485(WiFi/GPRS)/Dry node control |
| Size (L*W*D)                | 378mm*280mm*103mm                         |
| Weight (kg)                 | 8                                         |



# POWMr

**SHENZHEN HEHEJIN INDUSTRIAL CO.,LTD**

Tel/Fax: +86 755-28219903

Email: [support@powmr.com](mailto:support@powmr.com)

Web: [www.powmr.com](http://www.powmr.com)

Add: Henggang Street, Longgang District, Shenzhen, Guangdong, China